




**Installation and Assembly:
Media Storage Shelf for FPZ-600 and DS-VWS546-2X2**

Model: ACC340

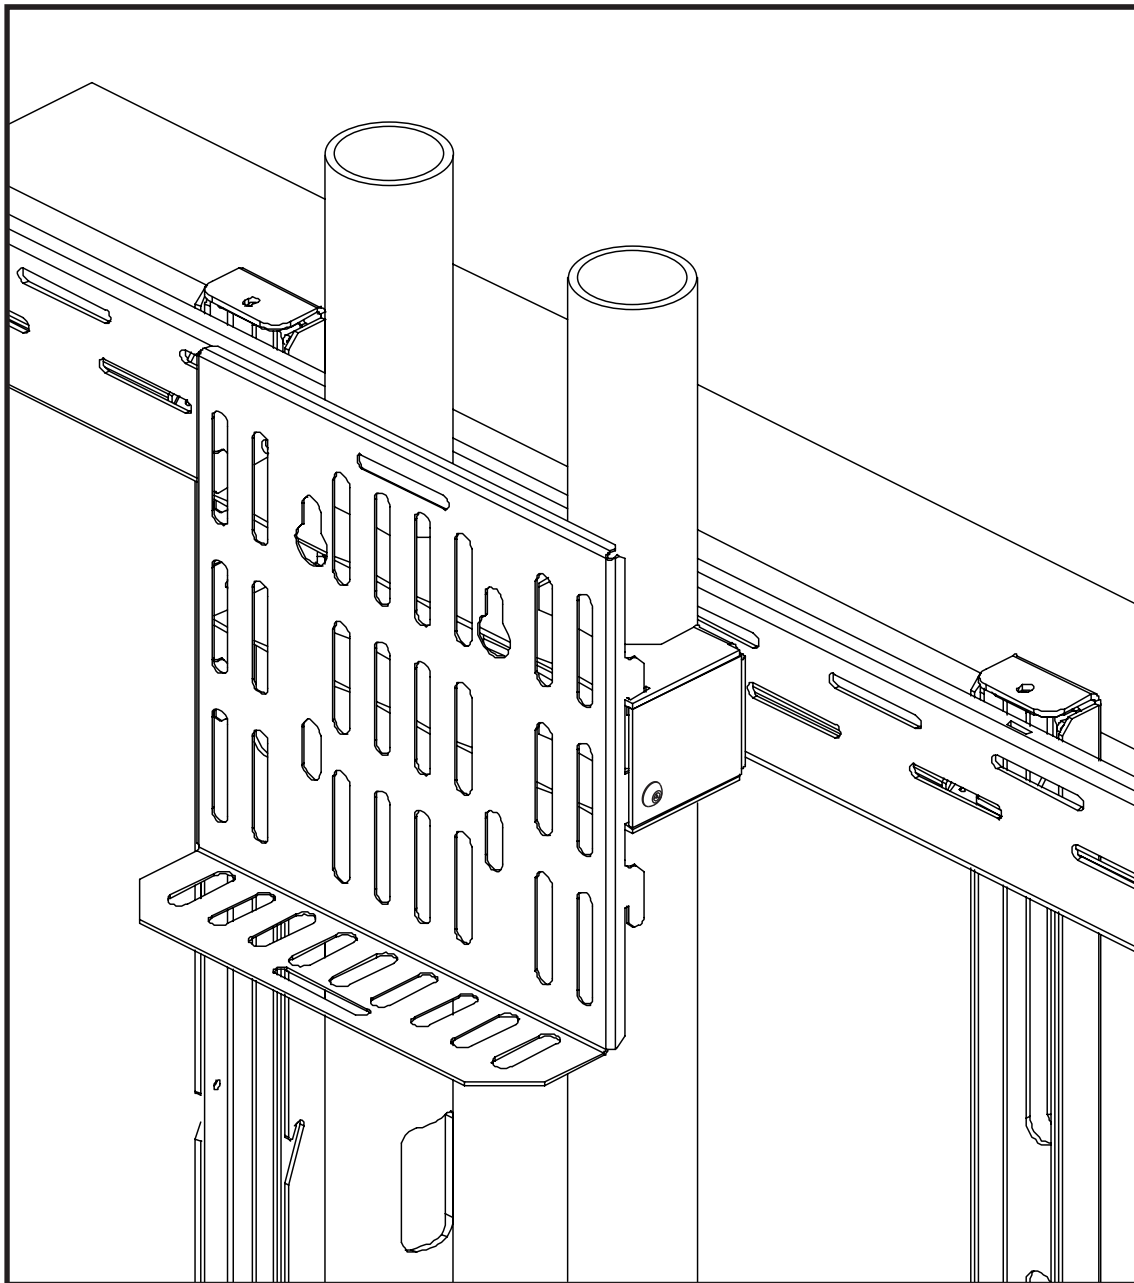

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Use of this product outdoors could lead to product failure and personal injury.

Tools Needed for Assembly

- Allen wrench (supplied)

Accessories

- ACC604


Table of Contents

PARTS LIST	2
SAFETY BELT	3,4
MEDIA SHELF	5

Parts List


Part Description	Quantity	Part Number
A media shelf	1	145-1732
B M5 x 10mm screw	2	520-1063
C allen wrench	1	560-9646
D safety belt	1	ACC316

Before beginning, make sure you have all parts shown below

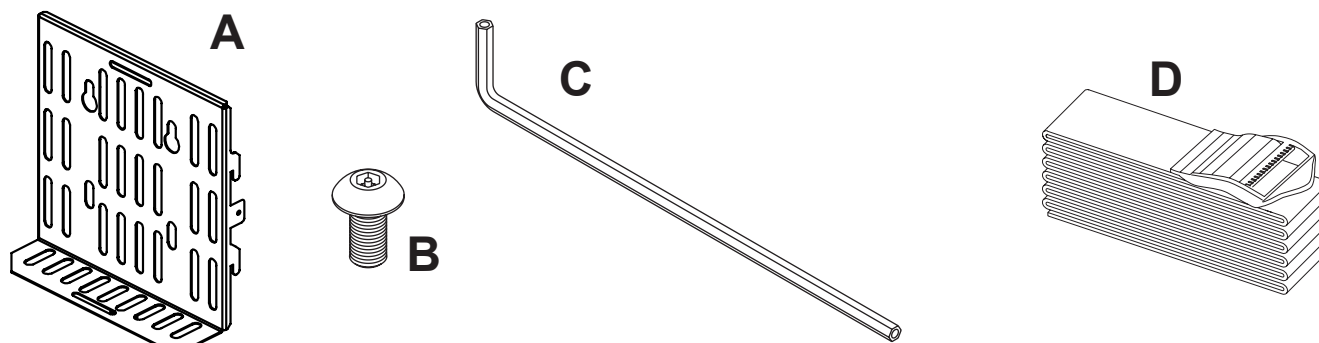

SAFETY BELT


- 1.1** Connect belt with buckle to belt without buckle.

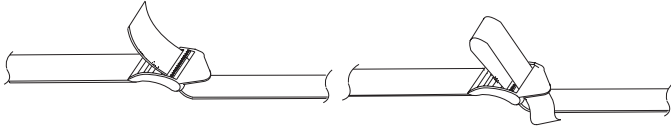


- 1.2** Continue by sliding one belt guide and one tri-bar belt clip on each side of the buckle. Refer to drawing below.



- 1.3** Place belt assembly over electronic component.
- Note:** keep buckle closer to left side of the electronic component to allow for movement when tightening belt assembly.
- Trim off the end of the belt if necessary, then lightly burn the end of the belt to prevent fraying. Repeat for the opposite end electronic component.

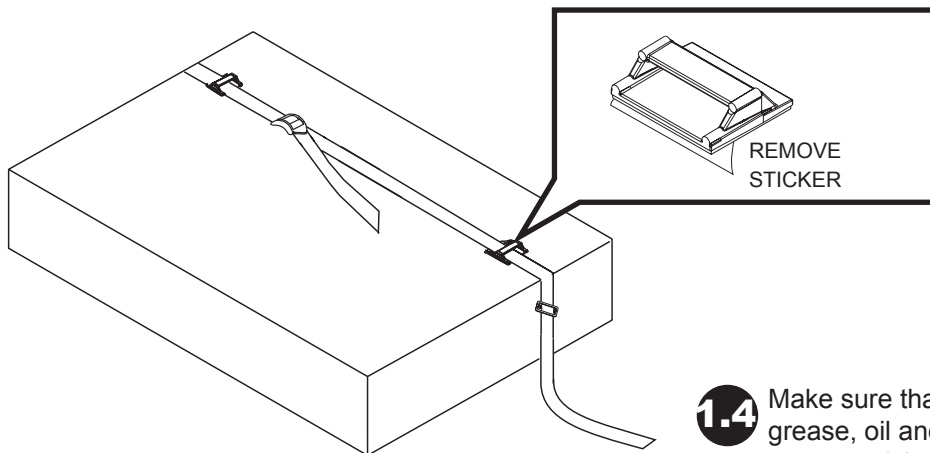


- 1.4** Make sure that electronic component surface is clean of grease, oil and dust. Once all components are in place, remove sticker from bottom of belt guides and firmly press them onto the electronic component.

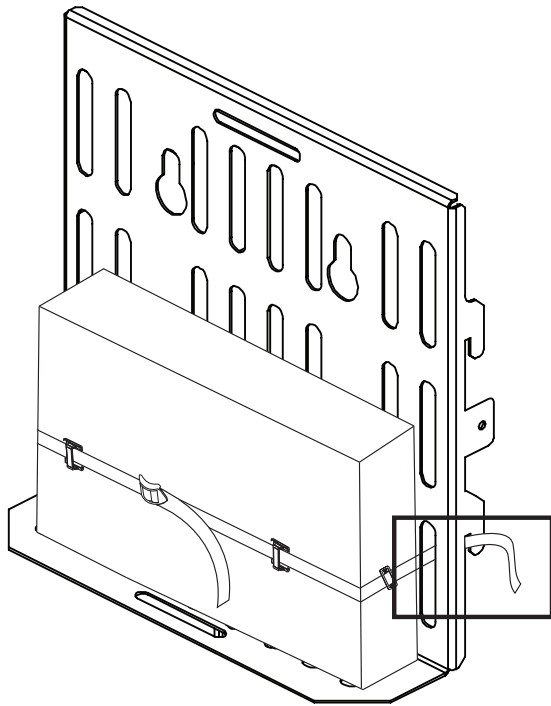

1.5

Take belt and hold it so that the tri-bar belt clip (**A**) is facing as illustrated. Feed belt through the slot you have chosen. Now feed belt through belt clip as shown. Repeat on other side of tray using other belt.




Tighten belt by pulling on loose end.

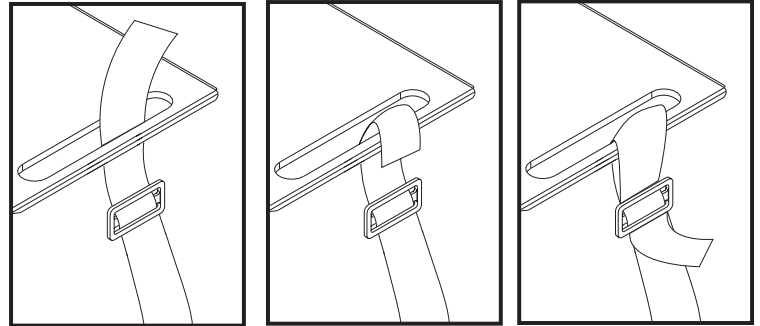

MEDIA SHELF ATTACHMENT

2.1

Secure media shelf (A) to mount using two M5 x 10mm screws (B).

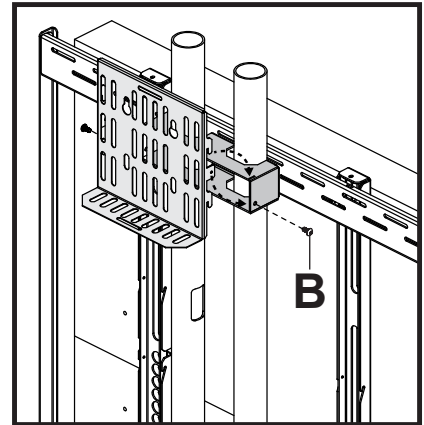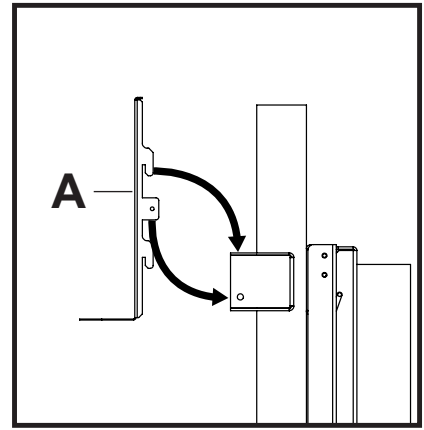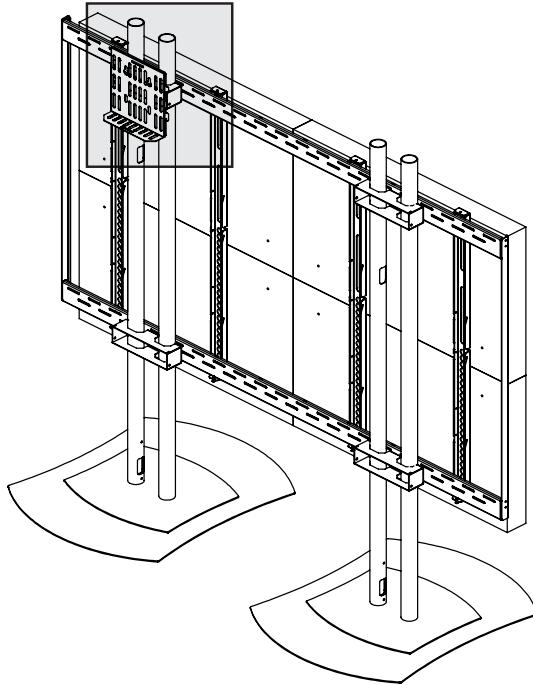

MEDIA SHELF ATTACHMENT TO ACC604

2.2

Secure media shelf (A) to ACC604 (supplied separately) using two M5 x 10mm screws (B) as shown.

ACC604 NOT SUPPLIED

