




Installation and Assembly:

Security Fastener Pack for Universal Tablet Mount

Models: ACC954

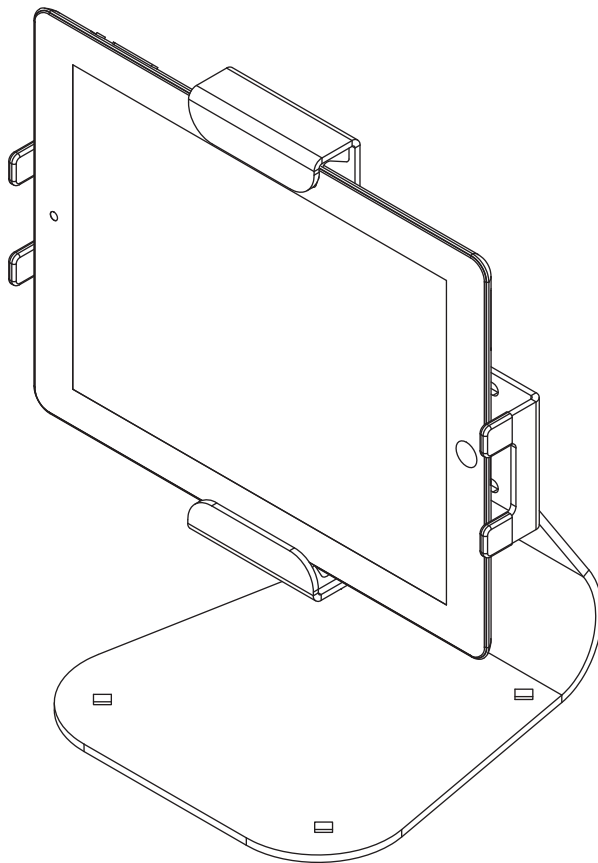

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Use of this product outdoors could lead to product failure and personal injury.

Tools Needed for Assembly

- 5/8" open box wrench
- phillips screwdriver
- 17/64" drill bit

Table of Contents


Parts List.....	3
Disassembling Tablet Mount.....	4-5
Installing Tablet Mount to Mounting Surface.....	7

Before you begin, make sure all parts shown are included with your product.


Parts List

Description	Qty.	Part #
A M5 x 10mm penta pin screw	4	505-9010
B M5 x 10mm socket pin screw	7	520-1063
C M5 x 8mm socket pin screw	4	520-2038
D black 1/4-20 x 1 3/4" carriage bolt	4	520-1017
E white 1/4-20 x 1 3/4" carriage bolt	4	520-2017
F 1/4-20 slope nut	5	530-0035
G plastic cap	4	590-1294
H 4mm security allen wrench	1	560-9646
I M5 penta pin driver	1	520-9249


Parts may appear slightly different than illustrated.

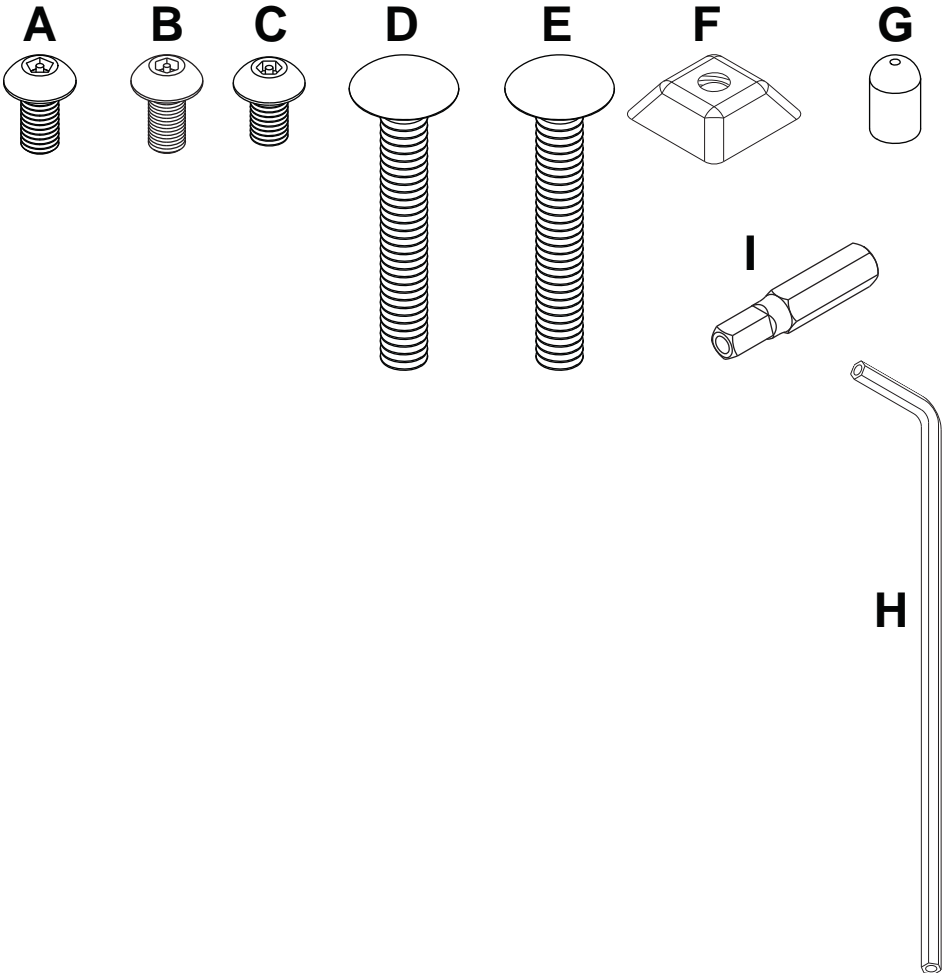


- 1 Remove four M5 x 8mm screws.

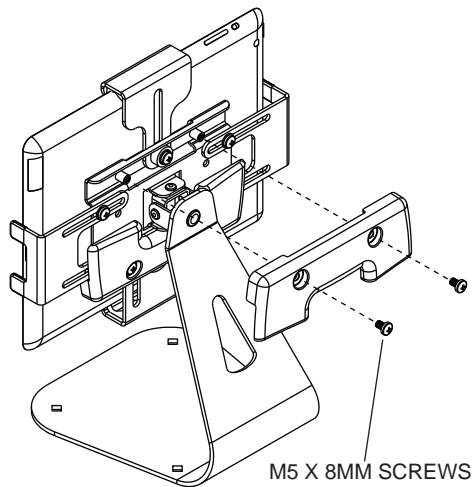


- 2 Loosen seven M5 x 8mm screws and remove tablet from stand.

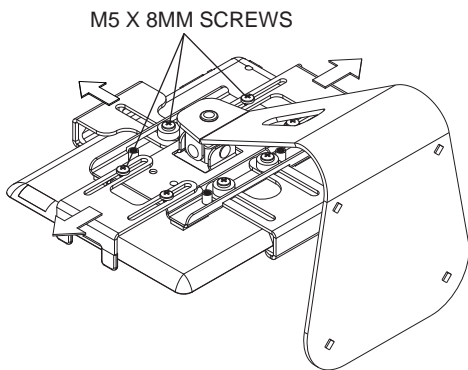


- 3 Remove four M5 x 8 mm screws and four washers to remove side clamps

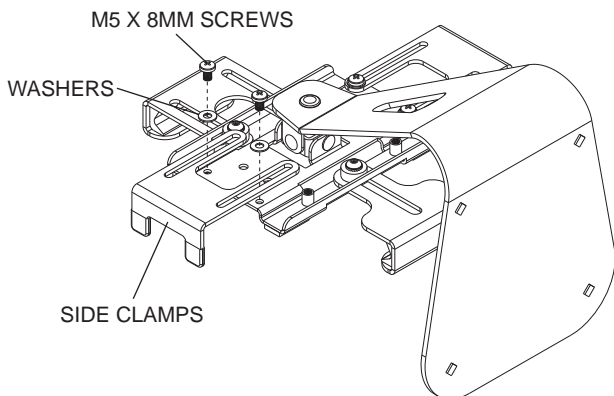

- 4 Rotate bracket then remove three M5 x 8mm screws, three 1/4" spacers, and three washers to remove top and bottom clamps.

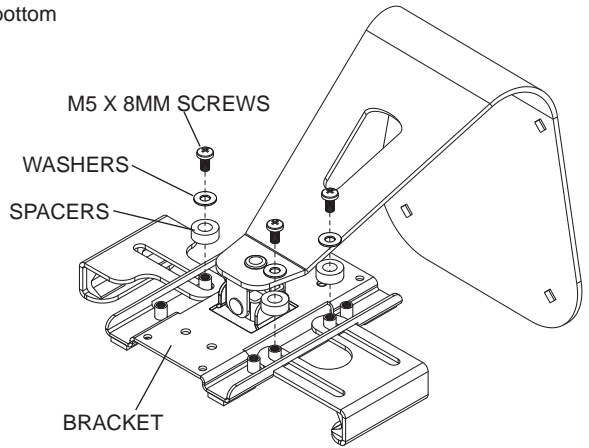


- 5 **FOR PTM400 MODELS:** Use universal tablet stand as a template to mark location of holes. Drill four 17/64" dia. holes through mounting surface.

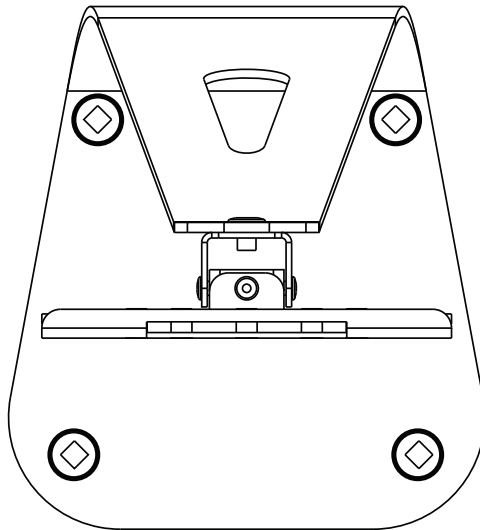


- 6** Replace top and bottom brackets into universal tablet stand. Secure with three spacers, three washers and three M5 x 10mm screws (**B**).

Do not tighten screws.

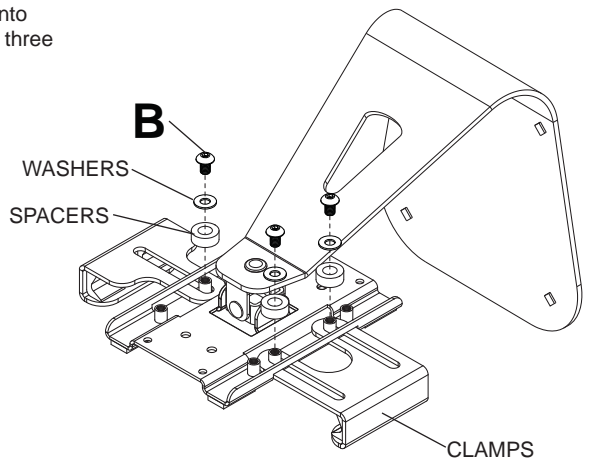


- 7** Secure two side clamps to back of universal tablet stand with four washers and four M5 x 8mm penta pin screws (**A**).


Do not tighten screws.

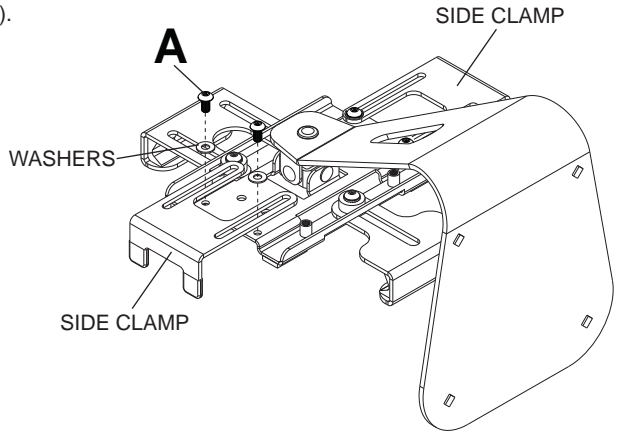

- 8** To prevent scratching the tablet, set a cloth on a flat, level surface. Place tablet face side down, adjust clamps around tablet, then tighten all seven screws using allen wrench (**H**) and penta-pin driver (**I**).

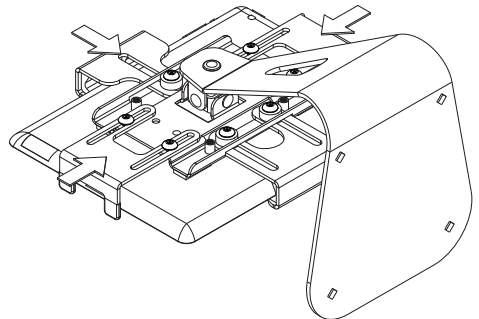


- 9 Install two plastic covers to back of universal tablet stand with four M5 x 10mm screws (B) or M5 x 8mm screws (C).

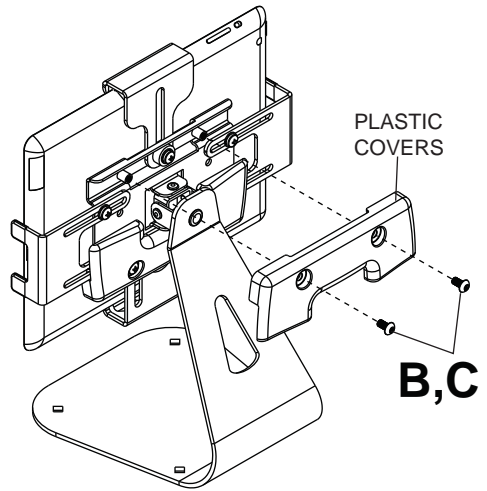

- 10 FOR PTM400 MODELS: Insert four 1/4-20 carriage bolts (D or E) through mounting holes and align bolts to holes in mounting surface as shown below.

Hand tighten four slope nuts (F) onto the 1/4-20 carriage bolts (D or E) until snug against bottom of mounting surface. Thread another slope nut (F) upside-down, about two turns from first slope nut as shown in detail 1. Insert a 5/8" open box wrench between both slope nuts and tighten.

NOTE: Avoid jamming both slope nuts (F) together, doing so may make it difficult to remove slope nut used for tightening. After slope nut is secure remove bottom slope nut.

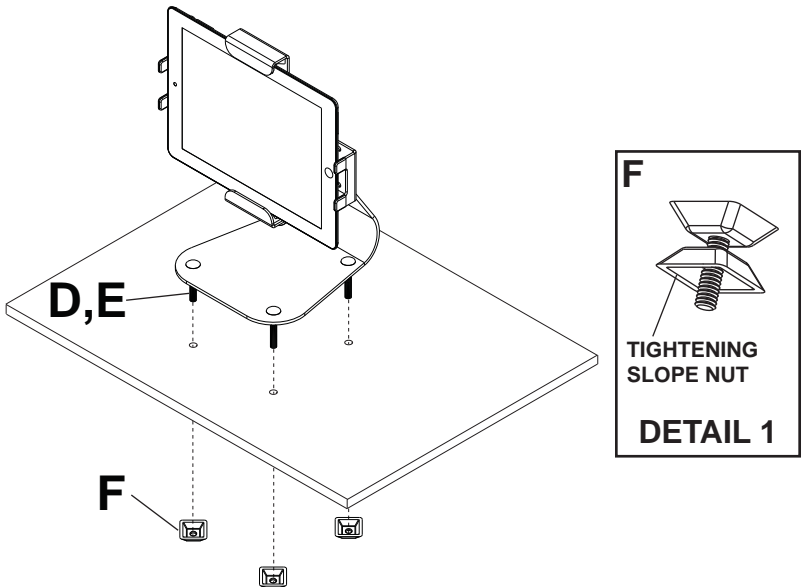

LIMITED FIVE-YEAR WARRANTY

Peerless Industries, Inc. ("Peerless") warrants to original end-users of Peerless® products will be free from defects in material and workmanship, under normal use, for a period of five years from the date of purchase by the original end-user (but in no case longer than six years after the date of the product's manufacture).

At its option, Peerless will repair or replace, or refund the purchase price of, any product which fails to conform with this warranty.

In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless' instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third party actions and force majeure.

In no event shall Peerless be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless® product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, expressed or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless in connection with the sale of any Peerless® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.

peerless  AV

www.peerless-av.com

© 2012 Peerless Industries, Inc.