**ClearOne** 

# **COLLABORATE® Live 900** Quick-Start Guide



# COLLABORATE LIVE 900 COMPONENTS INCLUDED

COLLABORATE Live 900		
	COLLABORATE Live codec with power supply, COLLABORATE Remote control with dongle, and HDMI cable.	
	910-2100-003	
	UNITE 200 PTZ camera, power supply, HDMI cable and RS232 Serial Control cable.	
	Note: The remote control inside the camera box is only for any advanced configuration in the camera, if required.	
	For the camera's control, use the COLLABORATE Codec Appliance's remote control.	
. =- C	CONVERGE Pro 2 48V Mixer, Beamforming Microphone Array 2, cables and power supplies.	
C	Note: The Beamforming Microphone Array 2 mounting kit must be ordered separately.	

### QUICK-START GUIDE

## MAKING THE CONNECTIONS

Connect the Beamforming Microphone Array 2 to the CONVERGE Pro 2 48V. Then, connect the CONVERGE Pro 2 48V, UNITE 200 camera, Ethernet, and monitor(s) to the COLLABORATE Live codec as shown.



Amplifier

# COLLABORATE LIVE 900 CONNECTING THE REMOTE CONTROL DONGLE

The Remote Control includes a dongle that plugs into the FRONT USB port on the codec.



### QUICK-START GUIDE

# **CONFIGURING DISPLAY SETTINGS**

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Live is loaded – you will see your local camera video on your screen.

Using the remote control, navigate to the display settings:

### Settings > Advanced > Display

Settings	Display	
General	Display Mode	Duel Mode
Calls	Display Remote On Main	Enabled
Audio & Video	Keep Aspect Ratio	Enabled
Presentation	Secondary Screen Used For Data Only	Disabled
Recording	Main Resolution	1920x1080
Streaming	Main Device	DisplayPort
Advanced	Secondary Resolution	1920x1080
Back		

According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

# COLLABORATE LIVE 900 CONFIGURING AUDIO SETTINGS

The COLLABORATE Live audio input and output is Converge Pro.

Verify this in COLLABORATE Settings > Audio & Video



# Microphone CONVERGE Pro Microphone Lavel 2 Speaker CONVERGE Pro Digital Delay Disabled Test Microphone > Test Speaker > Camera Selection HDMI Input 1 Cemera Model CONCORE

6

### **QUICK-START GUIDE**

# **CONFIGURING NETWORK SETTINGS**

Using your remote control, navigate into the network settings:

### Settings > Advanced > Network

Settings	Network		
General	Obtain Address From DHCP	Disabled O	
Calls	IP Address	10.80.16.173	
Audio & Video	Subnet Mask	255,255,255,0	
Presentation	Default Gateway	10,80,18,1	
Advanced	Ethernet Speed	1000.0 Mbps	
Back	Calculary DRD: Automaticality		
	DNS Server	10.80.11.118	
	Additional DNS Derver		
	DNS Suffix	clearone.com	
	NAT Mode	Disabled	
	NAT Aristinia	(Estury)	

The COLLABORATE Live obtains its IP automatically by default from the DHCP server.

Set "Obtain Address From DHCP" to "Disabled" to manually configure network settings.

# COLLABORATE LIVE 900 CLEARONE CONTACTS

#### Headquarters

5225 Wiley Post Way Suite 500 Salt Lake City, UT 84116

#### US & Canada

Tel: 801.975.7200 TollFree: 800.945.7730 Fax: 801.303.5711

#### International

Tel: +1.801.975.7200 e-mail: global@clearone.com

#### Sales

Tel: 801.975.7200 e-mail: sales@clearone.com

#### TechSupport Tel: 801.974.3760 e-mail: collaborate.support@clearone.com

#### Website

www.clearone.com

© 2019 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice. QSG-0071-001 Revision 1.0, February 2019