 
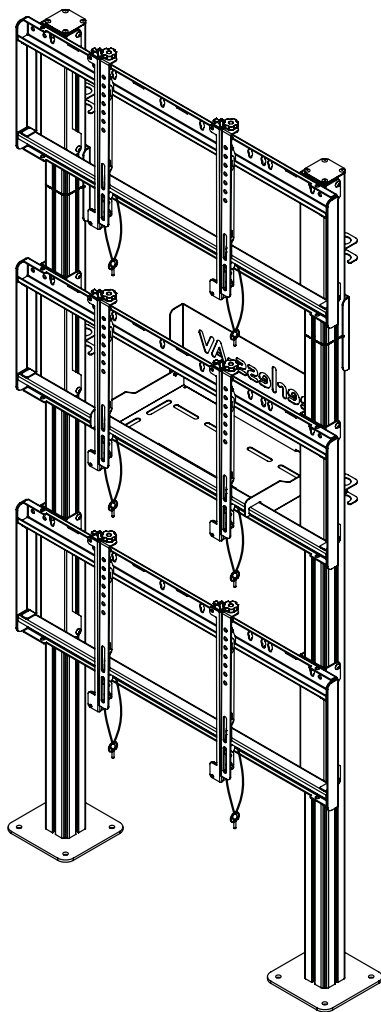 


# peerless-AV<sup>®</sup>

## DS-S560-1X3



This page intentionally left blank.

 
## ⚠ WARNING

Do not begin to install product until you have read and understood the instructions and warnings contained in this user guide. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product must be installed onto flat, hard, level surface to prevent tipping. The cart or stand is not affixed or secured to the floor, and may therefore tip over and/or fall if screen and/or stand is shaken or hit. Displays must be removed before moving cart. Not recommended for use in areas with heavy traffic. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.

### ENG Symbols




### ENG WARNING

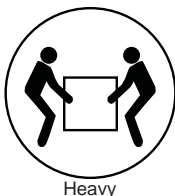

ENG Screws must get at least three full turns and fit snug.





 ENG Display center.

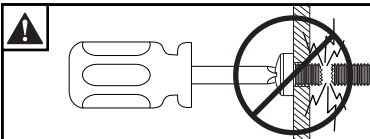


ENG Do not overtighten screws.

### ENG Tools Needed for Assembly.

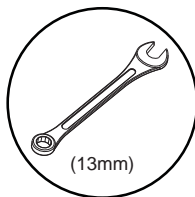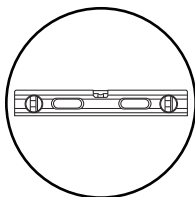  


To properly tighten screws: Tighten until screw head makes contact, then tighten another 1/2 turn. Do not overtighten screws.

 
1



2

 

3

 


4




Parts (Before beginning, make sure you have all parts shown below).

Parts List			
Description		Qty	Part #
A	pedestal	2	146-T1132
B	cover	2	145-T1809
C	adaptor bracket	6	145-T1792
D	vertical leg support	6	145-T1777
E	column	2	146-T1131
F	extension	2	145-T1778
G	cross support	3	145-T1816
H	computer cover	1	145-T1930
I	computer shelf	1	145-T1931
J	extension adaptor	2	145-T1935
K	cord bracket	4	146-T1321
L	knurled knob	4	560-1160
M	M8 x 16mm socket button screw	56	520-9527
N	M8 square nut	24	530-1066
O	cover clip	8	590-0317
P	M5 x 10mm type-f, socket pin screw	8	520-1164
Q	bar nut	4	146-1319
R	nylon shoulder washer	12	590-2233
S	M6 x 12mm socket pin screw	12	520-1050
T	1/4" power bit	1	560-0263
U	5mm allen wrench	1	560-9640
V	4mm allen wrench	1	560-9646
W	M6 x 35mm screw	8	520-0717
X	rawl bolt #6913	8	5M9-381-H03

 **A (2)**  
pedestal

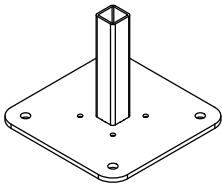


**B (2)**  
cover

 


**C (6)**  
adaptor bracket



 **D (6)**  
vertical support  
bracket




**E (2)**  
column

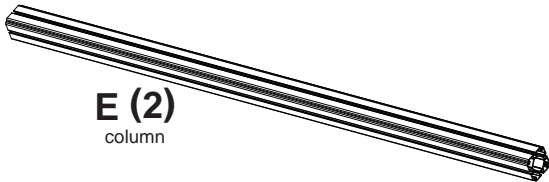 


**F (2)**  
extension



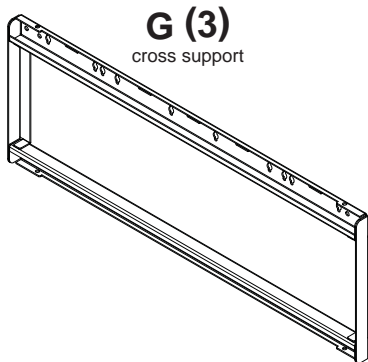 


**G (3)**

 cross support

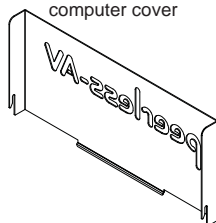


**H (1)**

 computer cover

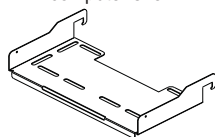


**I (1)**

 computer shelf




**J (2)**

 extension adaptor




**K (4)**

 cord bracket

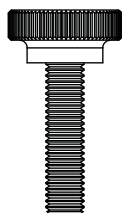


**L (4)**

 knurled knob




**M (56)**

 M8 x 16mm




**N (24)**

 M8 square nut




**O (8)**

 cover clip




**P (8)**

 M5 x 10mm




**Q (4)**

 bar nut




**R (12)**

 nylon shoulder washer




**S (12)**

 M6 x 12mm

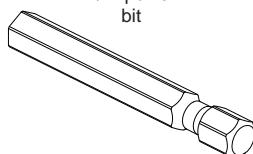


**T (1)**

 1/4" power bit

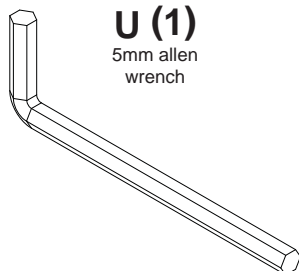


**U (1)**

 5mm allen wrench

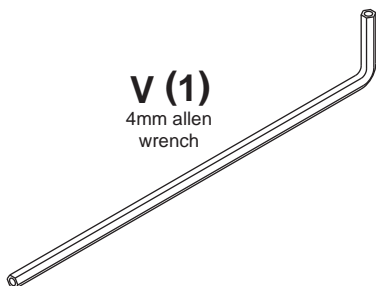


**V (1)**

 4mm allen wrench

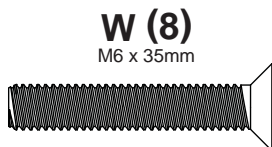

**W (8)**

 M6 x 35mm

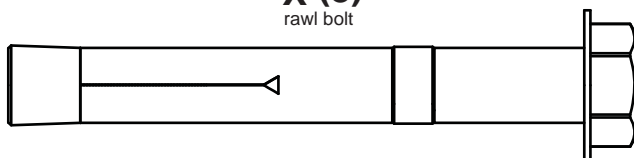


**X (8)**

rawl bolt


1

 x2

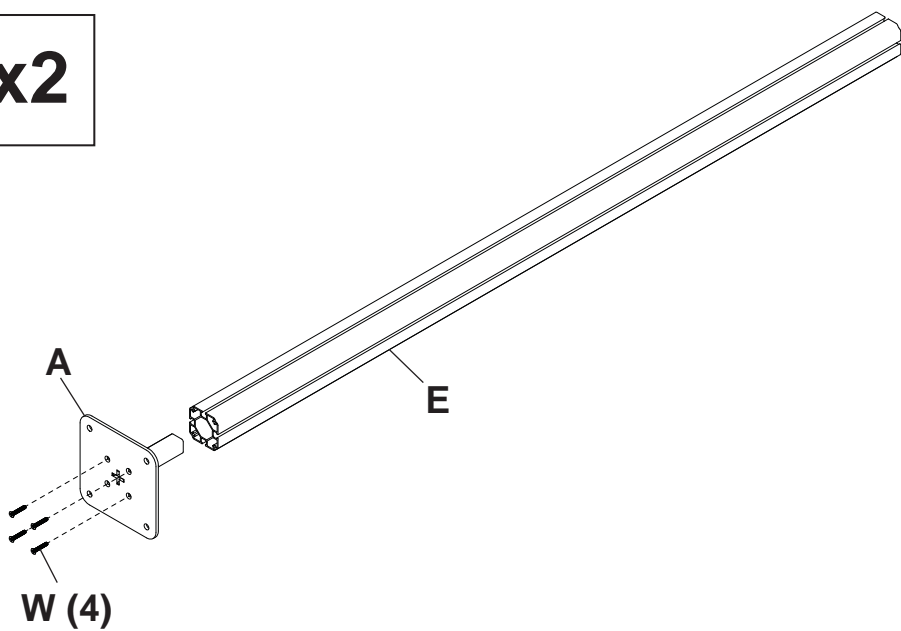


2-1

 x2

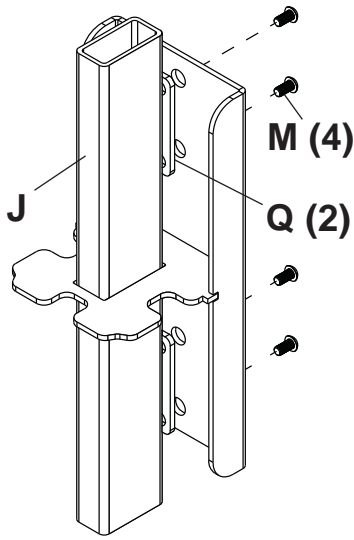

Do not fully tighten hardware

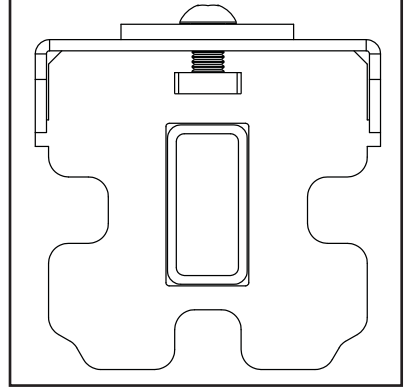 


2-2


x2




 
 TIGHTEN  
CONNECTING  
HARDWARE

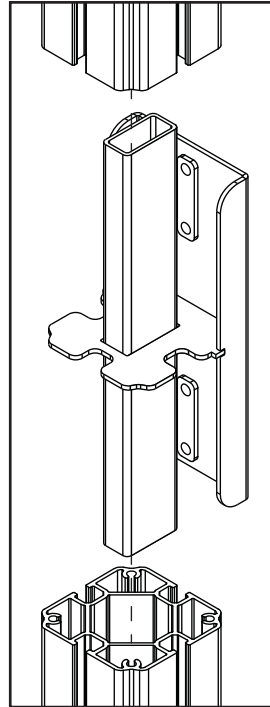

### 3-1


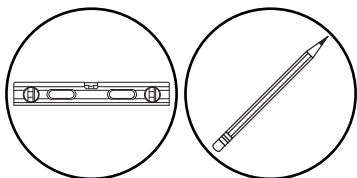 


  **ENG** Align base. Mark mounting holes.


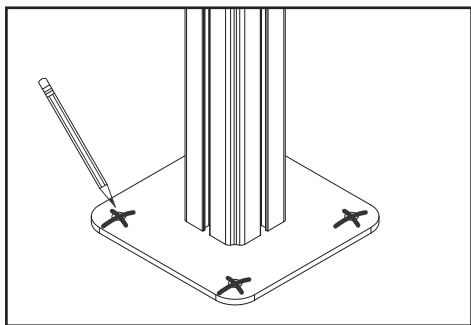


### 3-2

 
 
**ENG** Drill mounting holes into supporting surface (3" (76 mm) minimum depth required).

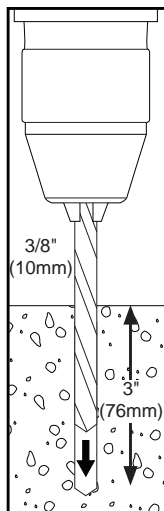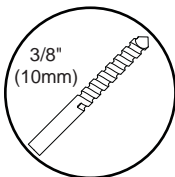

### 3-3

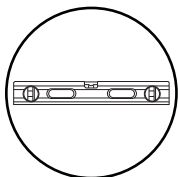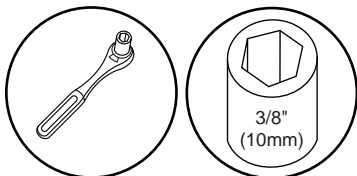  


 
 
**ENG** Align base. Install using concrete anchors provided.

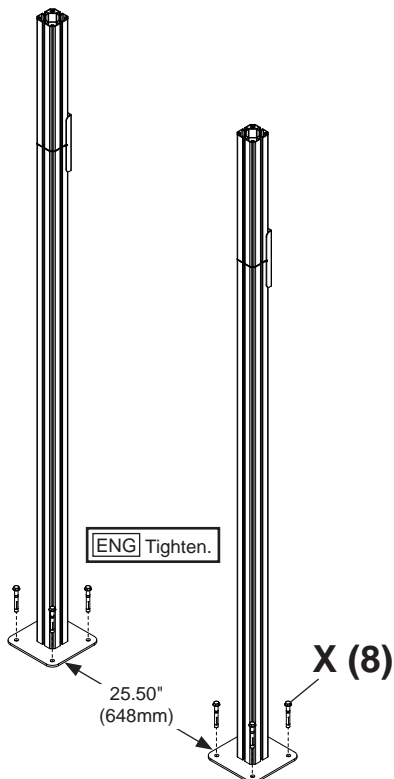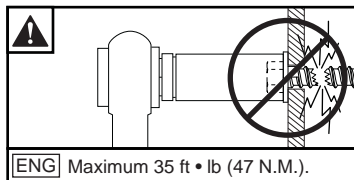



4-1

  
 
x6

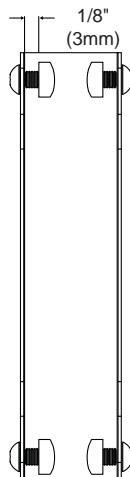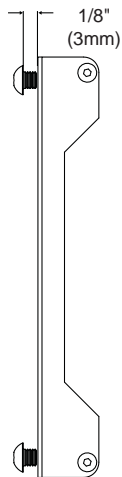
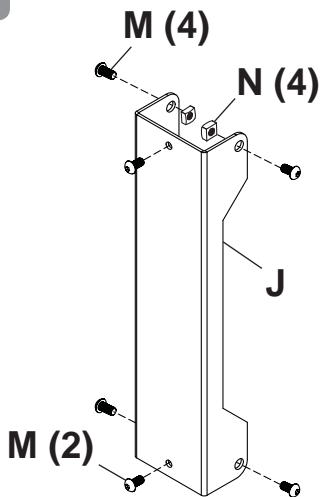




4-2



      TIGHTEN  
CONNECTING  
HARDWARE

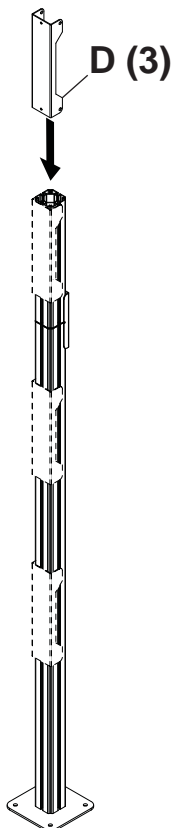
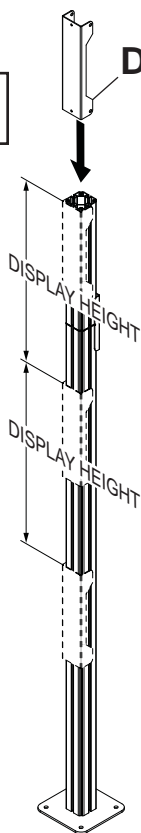


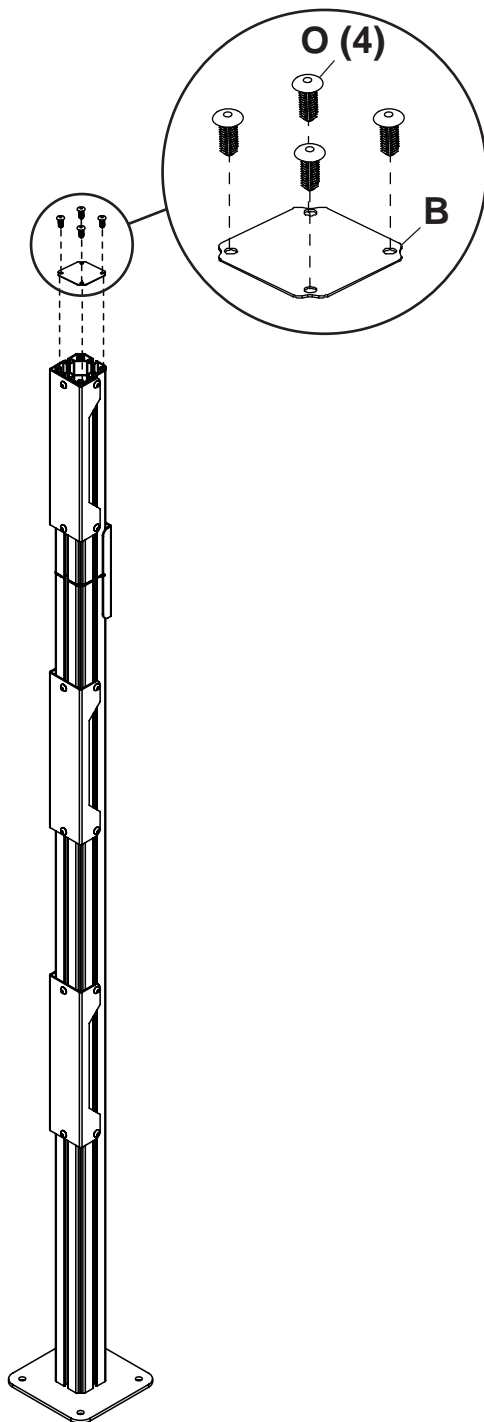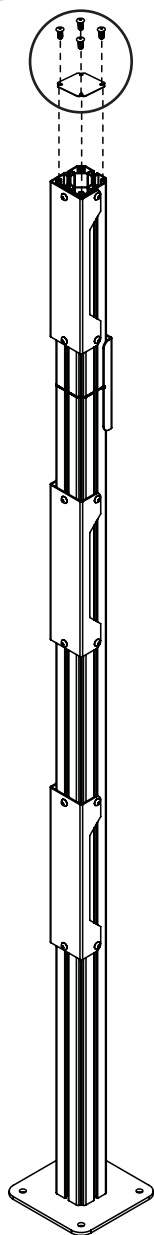

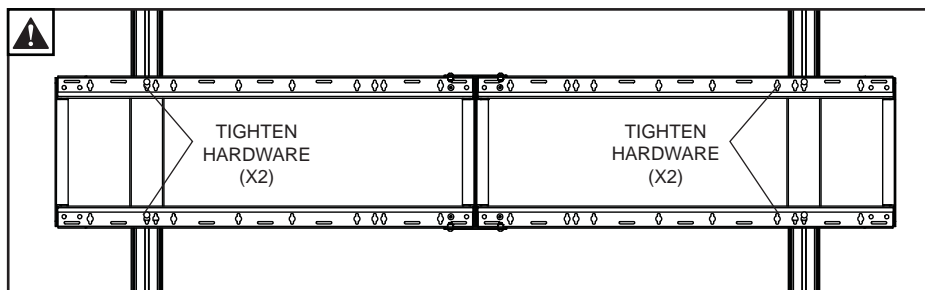
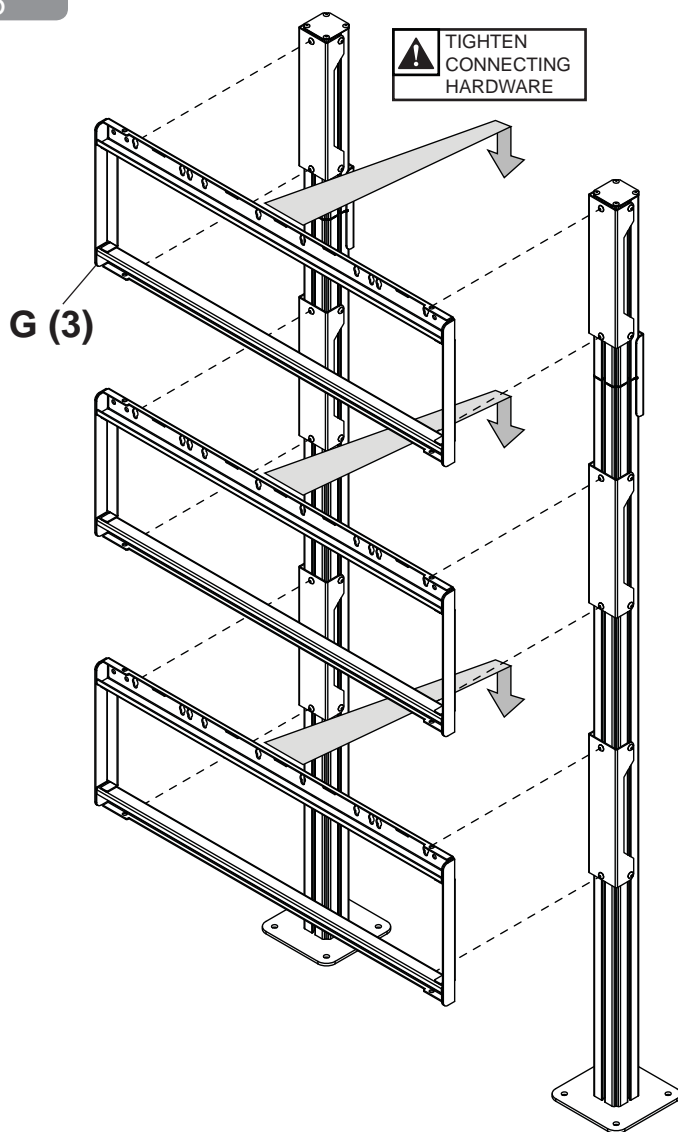


Cross supports must center on vertical leg supports.

  
Center adapter brackets vertically on back of screen.

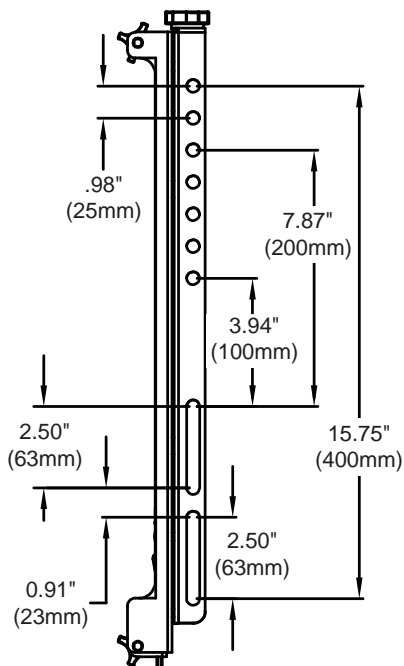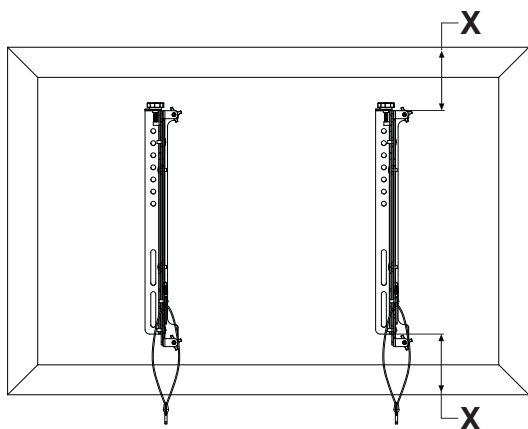

**x3**

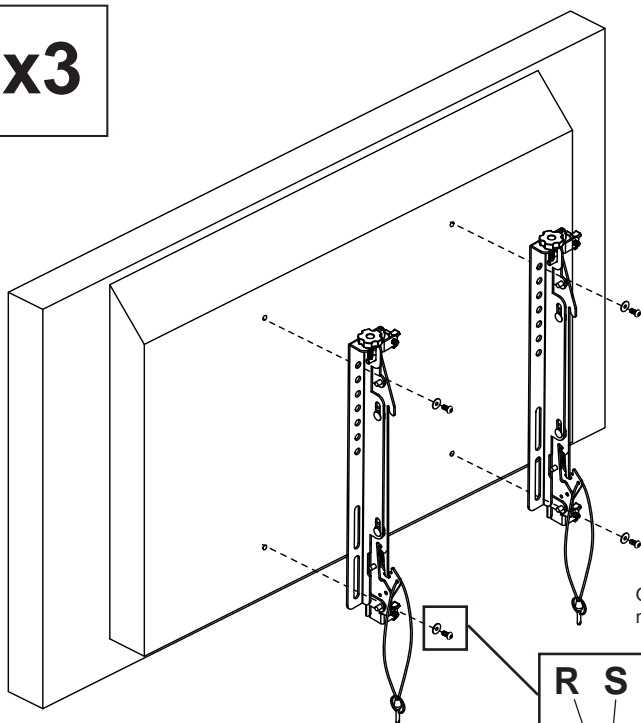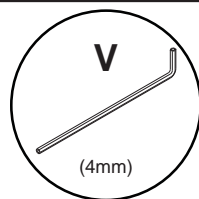  


 OPTIONAL: Use (S) to lock mechanism on adaptor bracket

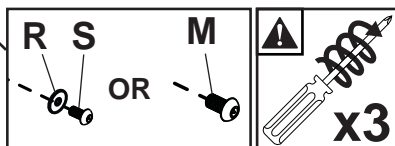




## 8-1

 Must hang displays on bottom row first;  
Secure pin in "locked" position.


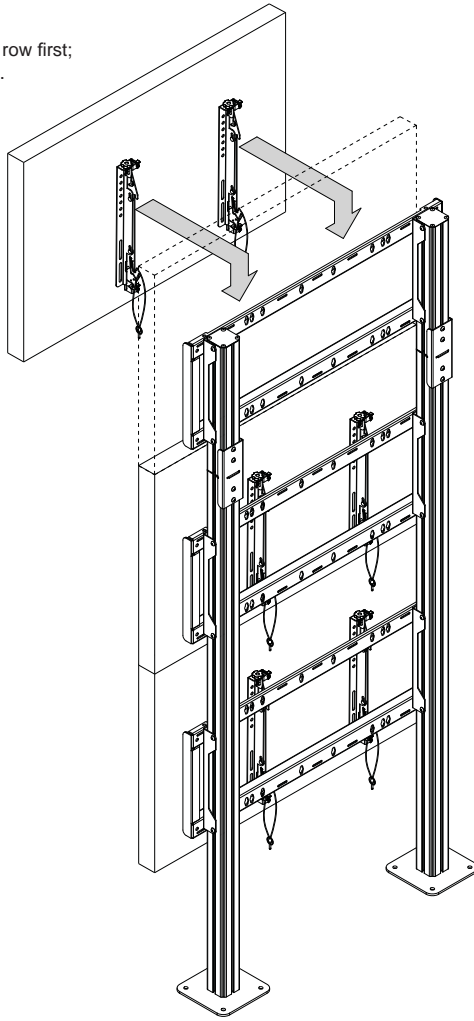





## 8-2

   OPTIONAL: Insert M5 x 10mm type-F socket pin screws  
(P) to lock latches.

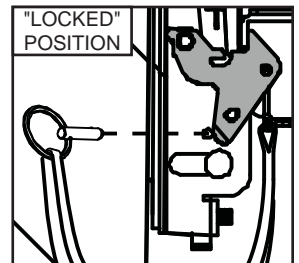
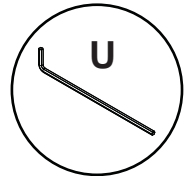
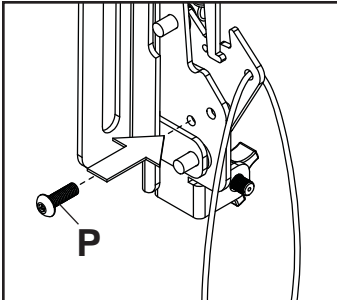


Display Adjustment


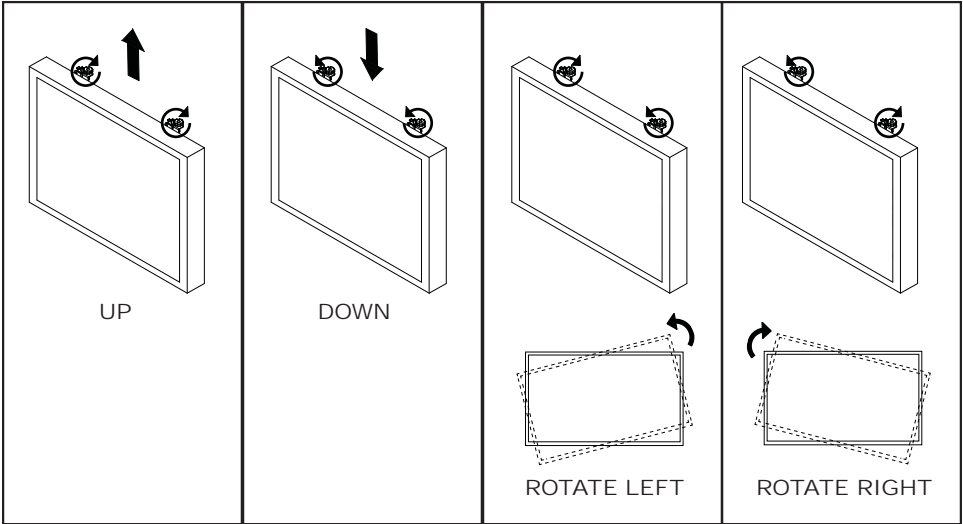 
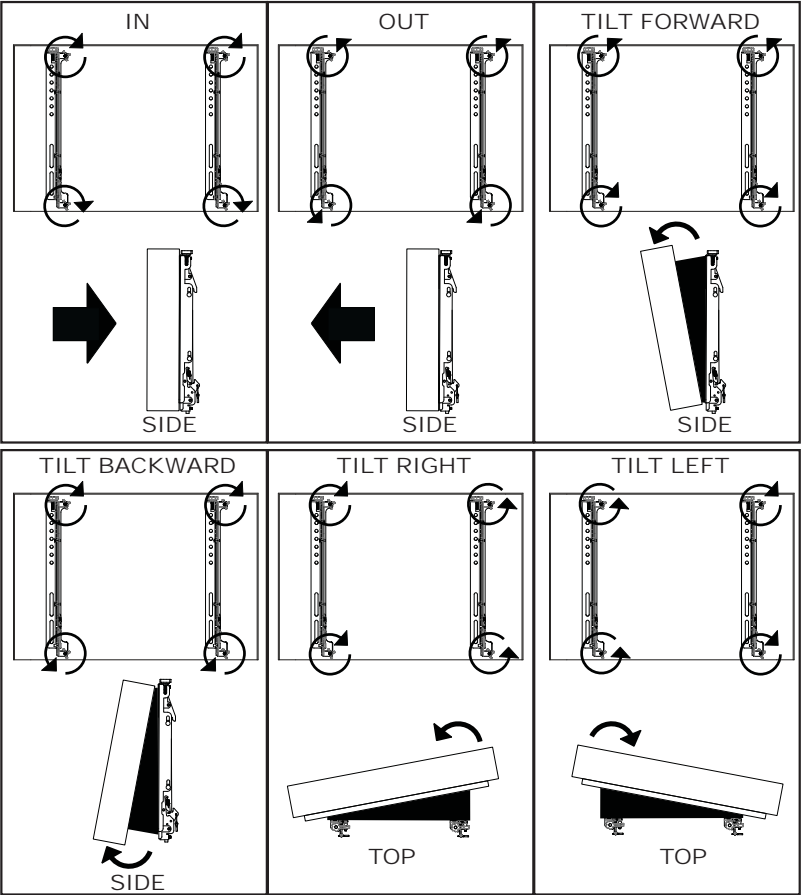 


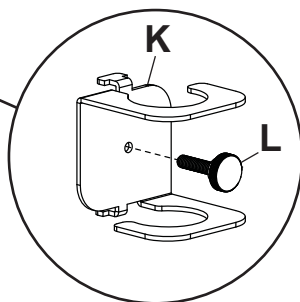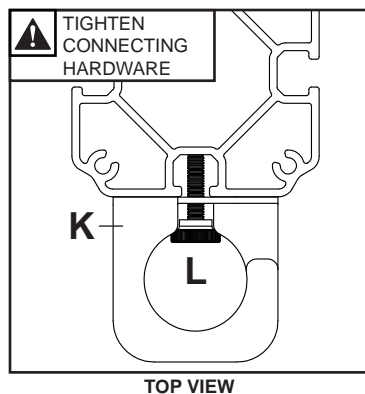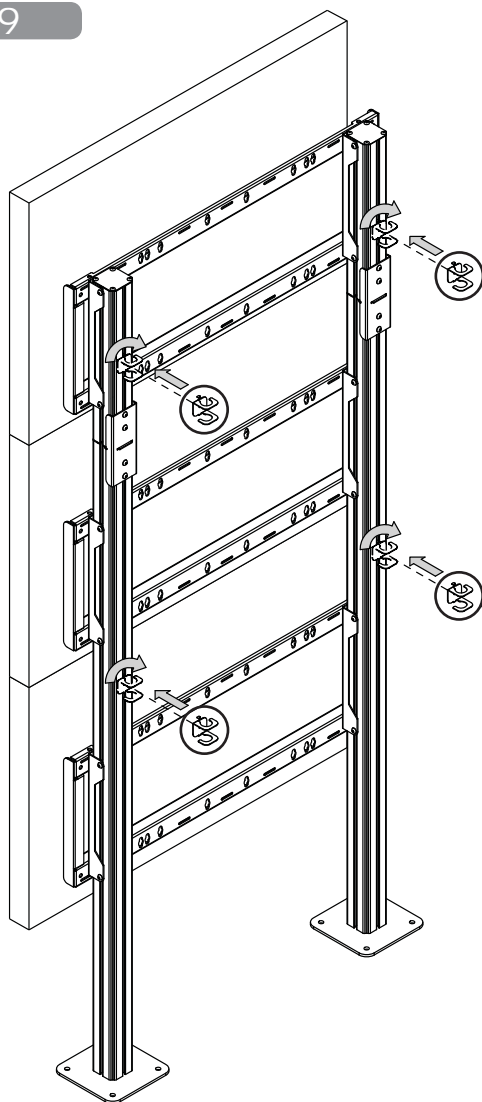   

10-1

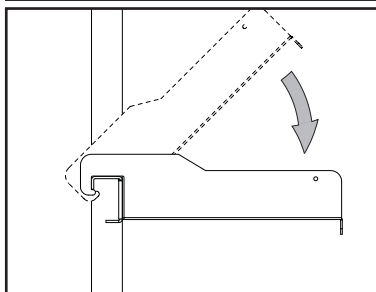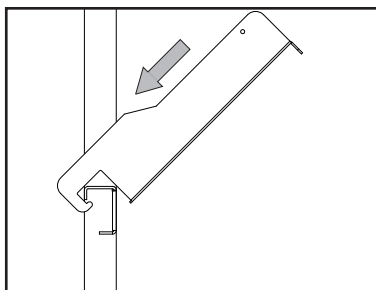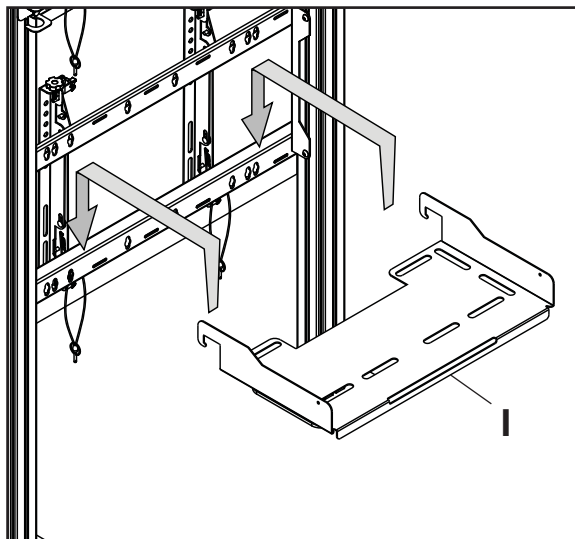   


10-2

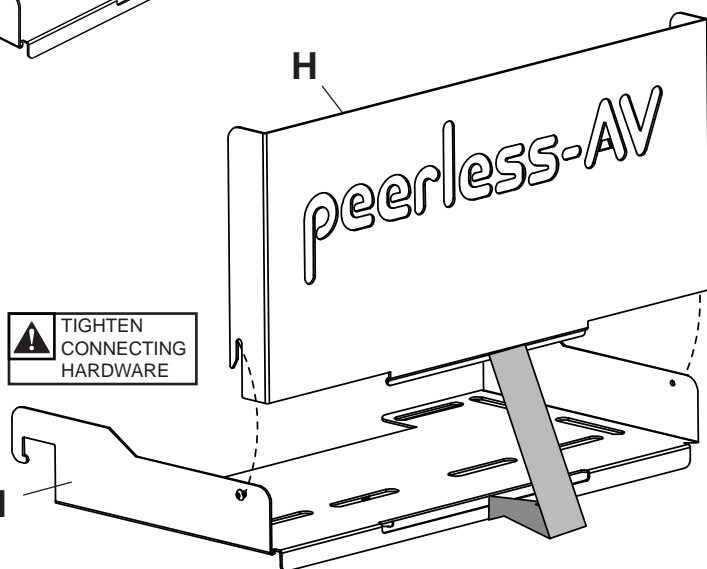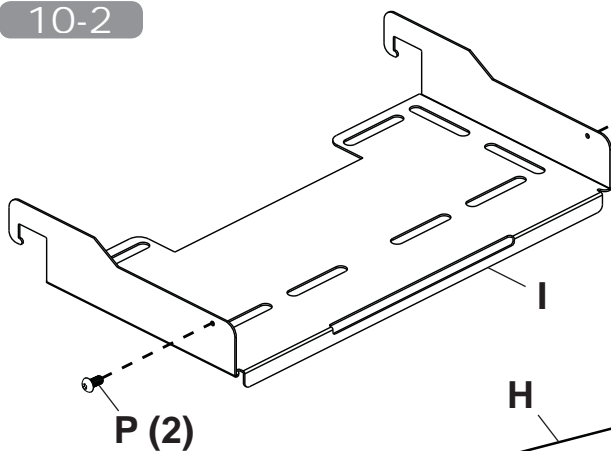   



Route cables through cord brackets.

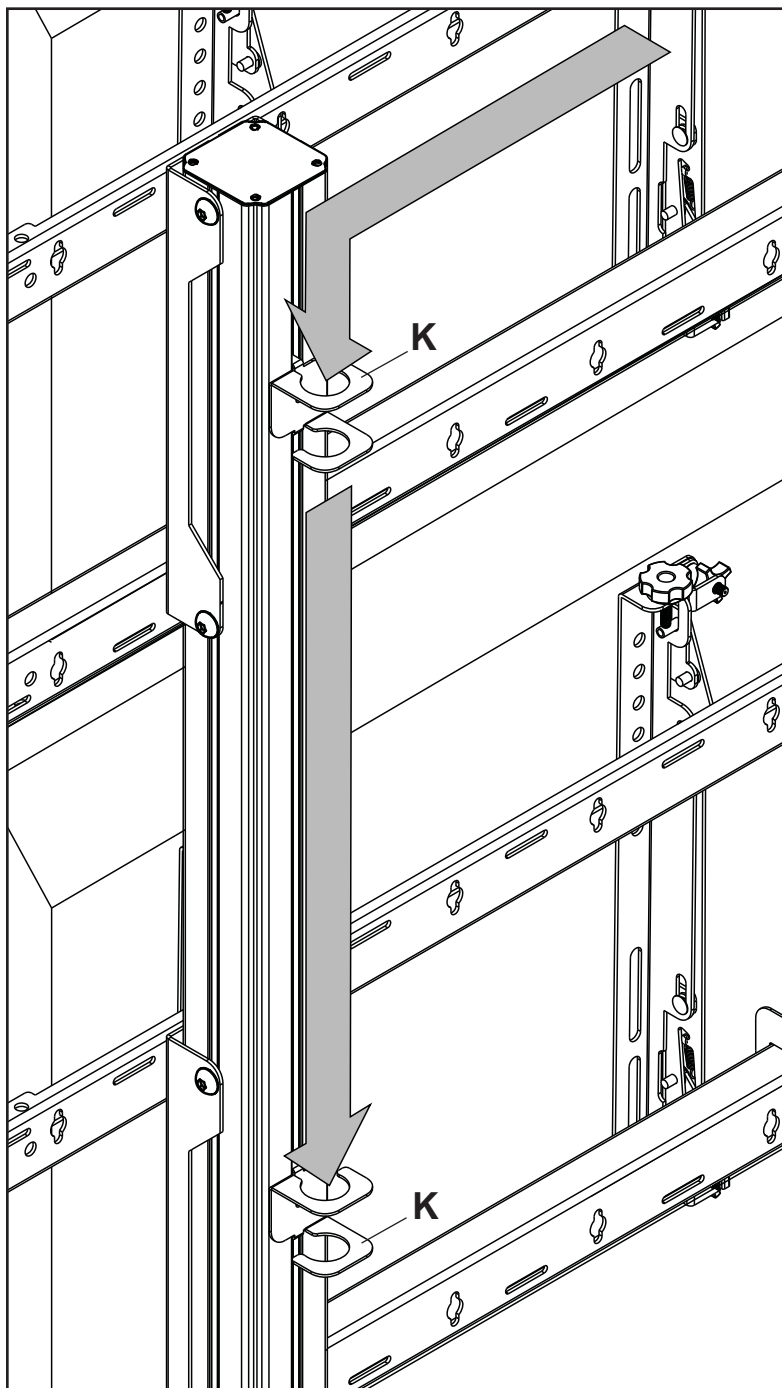 

This page intentionally left blank.

This page intentionally left blank.

## LIMITED FIVE-YEAR WARRANTY

Peerless Industries, Inc. ("Peerless") warrants to original end-users of Peerless® products will be free from defects in material and workmanship, under normal use, for a period of five years from the date of purchase by the original end-user (but in no case longer than six years after the date of the product's manufacture). At its option, Peerless will repair or replace, or refund the purchase price of, any product which fails to conform with this warranty.

**In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above.** Some states do not allow limitations on how long a implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless' instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third party actions and force majeure.

**In no event shall Peerless be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless® product.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, expressed or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless in connection with the sale of any Peerless® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.

The logo for Peerless-AV features the word "peerless" in a bold, lowercase, red sans-serif font. To its right is "-AV" in a red outline font, with a registered trademark symbol (®) to the upper right of the "V".

**Peerless-AV**  
2300 White Oak Circle  
Aurora, IL 60502  
Email: [tech@peerlessmounts.com](mailto:tech@peerlessmounts.com)  
Ph: (800) 865-2112  
Fax: (800) 359-6500  
[www.peerless-av.com](http://www.peerless-av.com)

© 2013, Peerless Industries, Inc.

**Peerless-AV Europe**  
Unit 3 Watford Interchange,  
Colonial Way, Watford, Herts,  
WD24 4WP, United Kingdom  
Customer Care  
44 (0) 1923 200 100  
[www.peerless-av.com](http://www.peerless-av.com)

© 2013, Peerless Industries, Inc.

**Peerless-AV de Mexico**  
Ave de las Industrias 413  
Parque Industrial Escobedo  
Escobedo N.L Mexico 66050  
Servicio al Cliente  
01-800-849-65-77  
[www.peerless-av.com](http://www.peerless-av.com)

© 2013, Peerless Industries, Inc.