

GefenW.

1:8 Multi Format Video Distribution over Ethernet

GTV-MFDA-148 User Manual

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100

(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday.

Write To:

Gefen, LLC c/o Customer Service 20600 Nordhoff St Chatsworth, CA 91311

www.gefentv.com support@gefentv.com

Notice

Gefen, LLC reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.

1:8 Multi Format Video Distribution over Ethernet

is a trademark of Gefen, LLC

© 2011 Gefen, LLC. All rights reserved. All trademarks are the property of their respective companies.

CONTENTS

1	Introduction
2	Operation Notes
3	Features
4	Sender Panel Layout
5	Sender Panel Descriptions
6	Receiver Panel Layout
7	Receiver Panel Descriptions
8	Connecting and Operating The Unit
8	Distribution of Video and Audio over CAT-5
9	Distribution of Video and Audio over LAN
10	Operation As a Switch
11	Wiring Diagrams
12	IR Backchannel Configuration
13	Video Input and Output Format Conversion Table
14	Specifications
15	Warranty

INTRODUCTION

Congratulations on your purchase of the 1:8 Multi Format Video Distribution over Ethernet. Your complete satisfaction is very important to us.

GefenTV

GefenTV is a unique product line catering to the growing needs for innovative home theater solutions. We specialize in total integration for your home theater, while also focusing on going above and beyond customer expectations to ensure you get the most from your hardware. We invite you to explore our distinct product line and hope you find your solutions. Don't see what you are looking for here? Please call us so we can better assist you with your particular needs.

The GefenTV 1:8 Multi Format Video Distribution over Ethernet

This versatile product is useful for PCs, digital signage applications, and educational institutions. VGA, Component, S-Video, or Composite video data is broadcast from the Sender up to 330 ft over CAT-5 to the Receiver. The Receiver provides VGA or Component output and can be daisy-chained. Additional features of this product allow video and audio distribution over a Local Area Network (LAN).

How It Works

The GefenTV 1:8 Multi Format Video Distribution over Ethernet is a Sender/Receiver system allowing broadcast of analog video and audio over Ethernet cable to a maximum of eight (8) Receivers. Distribution of video and audio over LAN can also be achieved by connecting a single Ethernet cable from the Sender unit to a LAN connection. See page 9 for details.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE 1:8 MULTI FORMAT VIDEO DISTRIBUTION OVER ETHERNET

- This product is Ethernet-based, not IP-based.
- It is recommended that a managed switch with multicast support be placed between the Sender Unit and Receiver Unit(s). The multicast function should be enabled on the switch.
- If a non-managed switch is used, VGA Sender multicast packets will be broadcast to all outputs of the switch. This unit uses about 80 Mbs to send audio and video.
- Once the Receiver Unit is connected to the same LAN, it will automatically link to the Sender Unit.
- Receivers Unit(s) cannot be placed outside of a LAN.
- Conforms to IEEE 802.3 standards.

FEATURES


Features

- Extend video and audio up to 330 ft (100 m) using CAT-5.
- Maximum Input Resolutions: 1080p@60Hz (Component), 1280x1024@60Hz (VGA), 480i@60Hz, 576i@50Hz (S-Video, Composite)
- Maximum Output Resolutions: 720p@60Hz (Component),
 1280x1024@60Hz (VGA), 480i@60Hz, 576i@50Hz (S-Video, Composite)
- Switch between four audio/video sources from the Sender location
- Plug-and-Play installation (with no special hardware or software configuration required)
- 2-Channel Stereo Analog Audio supported
- PCM Encoding is 48KHz 16-bit sampling


Package Includes

- (1) GefenTV 1:8 Multi Format Video Distribution over Ethernet Sender Unit
- (1) GefenTV 1:8 Multi Format Video Distribution over Ethernet Receiver Unit
- (1) 6 ft VGA Cable (M-M)
- (1) 12V DC Power Supplies
- (1) User Manual


Top Panel

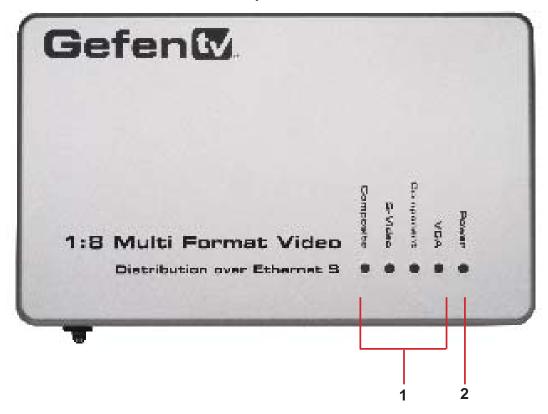

Front Panel

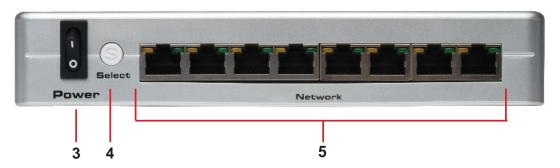

Back Panel

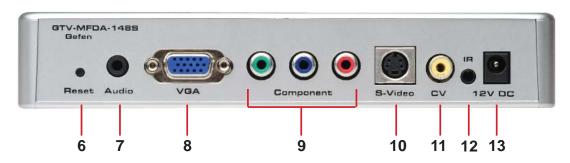

SENDER PANEL DESCRIPTIONS

1 Input Selection Indicators

Indicates the current input selection: Composite, S-Video, Component, or VGA

2 Power Indicator

This LED will glow blue when the power is on.

3 Power On/Off Switch

Turn the power on or off using this button

4 Selector Button

Switches between Component Video, S-Video, Composite and VGA

5 Ethernet (RJ-45) Input Connectors

Use this jack point to connect another receiver into the system

6 Reset Button

Reset the sender unit

7 Analog Stereo Audio Input

Use this input to connect a 3.5mm analog stereo audio line-in jack

8 VGA Video Input

Use this input to connect a VGA video input from a computer source

9 Component Video Inputs

Use this input to connect an Analog RCA Component

10 S-Video Input

Use this input to connect S-Video sources

11 Composite Video Input

Use this input to connect Composite video


12 IR Back-Channel Port

Use this port to connect an IR blaster cable (Gefen Part No. EXT-2IREMIT, not included)


13 12V DC Power Receptacle


Used to connect the included 12V DC power supply

Top Panel

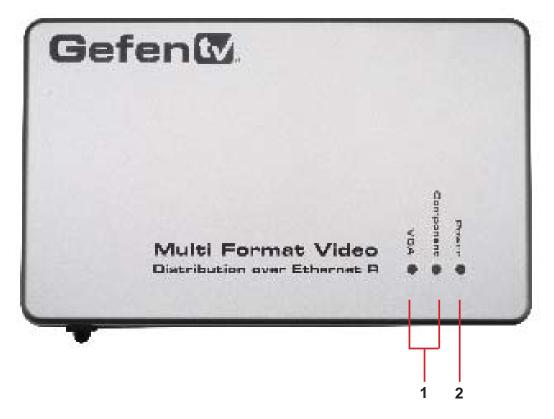

Front Panel

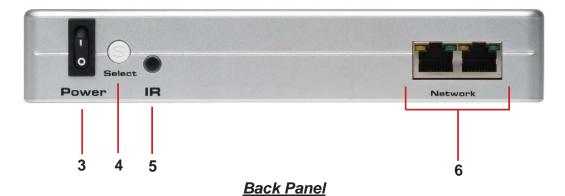

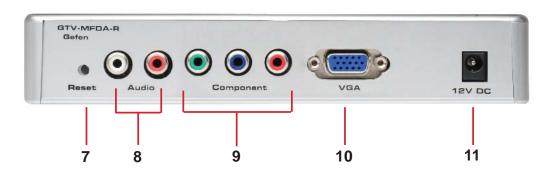

RECEIVER PANEL DESCRIPTIONS

1 Output Selection Indicator

Indicates the current output selection: Component or VGA

2 Power Indicator

This LED will glow blue when the Receiver is powered on

3 Power On/Off Switch

Turn the power on or off using this button

4 Selector Button

Switches between Component or VGA output

5 IR Sensor

Infrared lens senses signals from remote control

6 Ethernet (RJ-45) Output Connectors

Use this input to connect Ethernet cables

7 Reset Button

Resets the receiver unit

8 Analog Stereo Audio Output

Connect a stereo RCA cable to these outputs.

9 Component Video Output

Use this input to connect component video

10 VGA Output Connector

Use this to connect analog VGA displays

11 12V DC Power Receptacle

Used to connect the included 12V DC power supply

How to Connect the GefenTV 1:8 Multi Format Video Distribution over Ethernet (Direct Connection using Sender and Receiver)

- Connect the source(s) to the Sender unit using VGA, Component, Composite or S-Video cables. If audio is desired on the output, connect a 3.5mm mini stereo audio cable to the rear of the Sender unit. Connect the other end of the audio cable to the audio source.
- 2. Connect the Receiver to the display using a VGA and/or a Component cable.
- Attach one end of an Ethernet cable from the Sender unit to each Receiver.
 The Ethernet cable(s) connecting the Sender to the Receiver should be no longer than 100 meters (330 feet) in length.
- Using one of the included 12V DC power supplies, connect it to the power receptacle at the rear of the Sender unit. Connect the power adapter to an available wall outlet.
- 5. Connect the other 12V DC power supply to the Recevier unit then plug the adapter into an available wall outlet.
- 6. Use the SELECT button on the Sender unit (page 4) to select the desired input video source. Pressing the SELECT button on the Sender will cycle through each input on the Sender. The LED next to the selected output will be displayed on the Input Selection Indicator (page 4).
- 7. Use the SELECT button on the Receiver unit (page 6) to select between VGA or Component output. The LED next to the selected output will be displayed on the Output Selection Indicator (page 6).
- 8. Once the correct video input and output selections are made, video will appear on the connected display. If audio is used on the Sender and Receiver, audio should be heard clearly through the display.

Note: The maximum supported input and output resolution for VGA is 1280x1024 @ 60Hz. YPbPr (Component) output supports a maximum of 720p @ 60Hz.

Configuring the GefenTV 1:8 Multi Format Distribution Over Ethernet for Video / Audio over LAN

In addition to extending video and audio over Ethernet, the GefenTV 1:8 Multi Format Distribution Over Ethernet can be used to distribute Video and Audio over a Local Area Network (LAN).

- 1. Connect the source(s) to the Sender unit using VGA, Component, Composite or S-Video cables. If audio is desired on the output, connect a 3.5mm mini stereo audio cable to the rear of the Sender unit (page 4). Connect the other end of the audio cable to the audio source.
- 2. Connect an Ethernet cable from the Local Area Network to one of the Ethernet jacks on the front of the Sender.
- 3. Connect the Receiver to a display using VGA and/or Component cables.
- 4. Connect an Ethernet cable from the Local Area Network to one of the Ethernet jacks on the front of the Receiver.
- 5. Using one of the included 12V DC power supplies, connect it to the power receptacle at the rear of the Sender unit. Connect the power adapter to an available wall outlet.
- 6. Connect the other 12V DC power supply to the Recevier unit then plug the adapter into an available wall outlet.
- 7. Use the SELECT button on the Sender unit (page 4) to select the desired input video source. Pressing the SELECT button on the Sender will cycle through each input on the Sender. The LED next to the selected output will be displayed on the Input Selection Indicator (page 4).
- 8. Use the SELECT button on the Receiver unit (page 6) to select between VGA or Component output. The LED next to the selected output will be displayed on the Output Selection Indicator (page 6).
- 9. Once the correct video input and output selections are made, video should appear on the connected display. If audio is used on the Sender and Receiver, audio should be heard clearly through the display speakers.


Connecting additional computers using the GefenTV 1:8 Multi Format Video Distribution over Ethernet

In addition to distribution video and audio over LAN, computers can also be connected within the network.


- 1. Follow the steps on page 9 for Configuring the GefenTV 1:8 Multi Format Distribution Over Ethernet for Video / Audio over LAN.
- 2. Using an Ethernet cable, connect each computer to either the Sender or Receiver unit. The Sender functions as a switch and it is possible to connect multiple computers or Receiver units.
- The computers connected to the Sender or Receiver should now be able to access the LAN without any additional configuration. It should be noted that connecting computers to the Sender will minimize the number or Receivers that can be used with the Sender.

NOTE: The GefenTV 1:8 Multi Format Video Distribution over Ethernet can operate independently of an Ethernet switch. However, when configuring for video / audio and computers over LAN, it is suggested that an IGMP switch be used to manage the video / audio data and computer data. This will ensure the correct data is sent to the proper port and maintain optimal bandwidth.

Wiring Diagram for connecting directly using CAT-5:

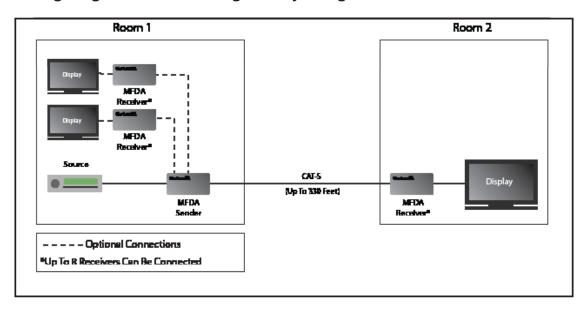

Wiring Diagram for connecting over LAN using CAT-5:

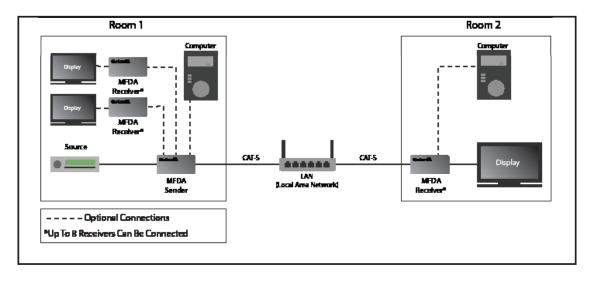

IR BACKCHANNEL CONFIGURATION

Controlling devices using the IR Backchannel

On the rear of the Sender unit is the IR backchannel port (see page 4, item 12). IR commands that are received through the IR receiver (see page 6, item 5) will be transmitted back to the source for output through the attached IR backchannel. The IR backchannel uses an infrared emitter referred to as an "IR Blaster" (Gefen Part No. EXT-2IREMIT, not included).

- 1. Connect the 3.5mm jack of the IR Blaster cable to the rear of the Sender unit (see page 4).
- 2. Place the IR emitter over the IR sensor of the source.

To control the source, direct the source remote at the Receiver unit as shown in *Fig. 1.1*. The IR commands from the source remote are transmitted over the CAT-5 and relayed to the source. In a LAN application, devices in different rooms (or floors) can be controlled as long as the Sender and Receiver are connected to the same network. The IR Backchannel can greatly increase the flexibilty when controlling the source, particularly at great distances.

Room 1 Room 2

Source IR Blaster MFDA CATS
Source Display

Becatyer Remote

Fig. 1.1: Controlling the source remotely, using an IR Blaster

VIDEO CONVERSION TABLE

The following table lists the input and output formats for the GefenTV 1:8 Multi Format Video Distribution over Ethernet. Note that some output timings may differ from input timings. This is a limitation of the hardware. For example, a Component input of 1080p 60Hz (at the Sender) is limited to 720p 60Hz on the output (at the Receiver).

Input and Output Formats							
Input F	requency	Output Frequency					
		VGA	YPbPr				
VGA	640x480 60Hz	640x480 60Hz	480p 60Hz				
	800x600 60Hz	800x600 60Hz	480p 60Hz				
	1024x768 60Hz	1024x768 60Hz	720p 60Hz				
	1280x768 60Hz	1280x768 60Hz	720p 60Hz				
	1280x1024 60Hz	1280x1024	720p 60Hz				
Component	480i 60Hz	640x480 60Hz	480p 60Hz				
	480p 60Hz	640x480 60Hz	480p 60Hz				
	576i 50Hz	800x600 75Hz	576p 50 Hz				
	576p 50Hz	800x600 75 Hz	576p 50Hz				
	720p 60Hz	1280x720 60Hz	720p 60Hz				
	720p 50Hz	1280x720 60Hz	720p 60Hz				
	1080i 60Hz	1280x720 60Hz	720p 60Hz				
	1080i 50Hz	1280x720 60Hz	720p 60Hz				
	1080p 60Hz	1280x720 60Hz	720p 60Hz				
	1080p 50Hz	1280x720 60Hz	720p 60Hz				
S-Video	480i 60Hz	640x480 60Hz	480p 60Hz				
	576i 50Hz	800x600 75Hz	576p 50Hz				
Composite	480i 60Hz	640x480 60Hz	480p 60Hz				
	576i 50Hz	800x600 75Hz	576p 50Hz				

SPECIFICATIONS

PCM Encoding2-channel 48KHz 16-bit sampling
Power Supply
Audio Inputs/Outputs
Video Inputs: VGA
Video Outputs: VGA
Communication ProtocolFull Duplex
Ethernet StandardIEEE 802.3
Network Bandwidth
Operating Temperature0-40 degrees C
Operating Humidity90% maximum (non-condensing)
Dimensions4.5"W x 1.3"H x 7.25"D (Sender / Receiver)

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

- 1. Proof of sale may be required in order to claim warranty.
- 2. Customers outside the US are responsible for shipping charges to and from Gefen.
- 3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Support section of the Gefen Web site at www.gefen.com.

PRODUCT REGISTRATION

Please register your product online by visiting the Register Product page under the Support section of the Gefen Web site.



20600 Nordhoff St., Chatsworth CA 91311
1-800-545-6900 818-772-9100 fax: 818-772-9120
www.gefen.com support@gefen.com











