

L 2015

Bedienungsanleitung
Instruction manual
Notice d'emploi
Istruzioni per l'uso
Instrucciones de manejo
Gebruiksaanwijzing



Important safety instructions

- Read these safety instructions and the instruction manual of the product.
- Keep these safety instructions and the instruction manual of the product. Always include all instructions when passing the product on to third parties.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- Only clean the product when it is not connected to the power supply system. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only operate the product from the type of power source specified in the chapter "Specifications" and indicated on the power supply unit.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- 13. Unplug the power supply unit from the wall socket,
- to completely disconnect the product from the power supply system,
- · during lightning storms,
- · when not using the product for long periods of time.

Important safety instructions

- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.
- 16. When using the supplied device feet, do not place the product on delicate surfaces. Delicate surfaces can become discolored or stained when they come into contact with the plastic of the device feet.
- 17. Always ensure that the power supply unit is
- in a safe operating condition and easily accessible,
- properly plugged into the wall socket,
- · only operated within the permissible temperature range,
- not covered or exposed to direct sunlight for longer periods of time in order to prevent heat accumulation.

Risk of fire due to overloading

Do not overload wall outlets and extension cables as this may result in fire and electric shock.

The product can be used for commercial purposes.

It is considered improper use when the product is used for any application not named in the corresponding instruction manual.

Sennheiser does not accept liability for damage arising from improper use or misuse of this product and its attachments/accessories.

Before putting the products into operation, please observe the respective country-specific regulations!

Sennheiser is not liable for damages resulting from the loss of connection due to flat or overaged (rechargeable) batteries or exceeding the transmission range.

Safety instructions for standard/rechargeable batteries

- Caution: Risk of explosion if you use or replace a battery by an incorrect type.
- ▷ Do not short-circuit a cell or battery.
- Do not expose cells or batteries to heat or fire. Avoid storage in sunlight.
- Do not subject cells or batteries to mechanical shock.
- ▶ Do not touch leaking/defective batteries unprotected.
- ▷ Observe correct polarity.
- Do not use different battery types.
- Charge rechargeable batteries at ambient temperatures between +10 °C and +40 °C (+50 °F and +104 °F).

핌

E

E

ន្ទ

COMPLIANCE

The L 2015 quick charger

The L 2015 quick charger

The L 2015 quick charger must only be used for automatically charging BA 2015 accupacks – individual rechargeable battery cells or primary cells cannot be charged! The BA 2015 accupack is suitable for units of the Sennheiser ew G2, ew G3, ew G4 series, 2000er series, the system Tourguide 1039 and the System 2015.


The bodypack receivers (EK) and transmitters (SK) of the Sennheiser ew G2, ew G3, ew G4 series and the System 2015 have special charging contacts, i.e. these units can be charged with the accupack inserted. When placed into the charger, the SK and EK automatically switch off (exception: the EK 300 IEM G2, EK 300 IEM G3 and EK IEM G4 must be switched off manually).

The handheld transmitters (SKM) can be charged using the LA 2 adapter.

Delivery includes

- L 2015 quick charger
- · Instructions for use

Suitable mains units are available as accessories (see "Accessories" on page 29).

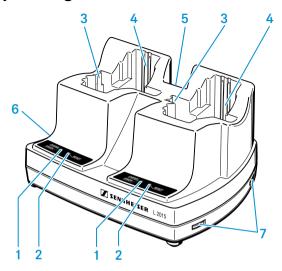

- 1 Red LED CHARGE/ERROR (2 x)
- 2 Green LED READY (2 x)
- 3 Charging compartment for BA 2015 accupack (2 x)
- 4 Charging compartment for SK/EK (2 x)
- 5 Air vents
- 6 DC socket for connection of mains unit
- 7 Guiding slot with internal rail (2 x)

DE

EN

Œ

ES

Ŋ

COMPLIANCE

Operating controls

LED indications


Each charging compartment has two LEDs which indicate the following operating states:

No LED lit	The charging compartment is ready for operation (provided that the charger is connected to the mains), no accupack is identified.
All LEDs briefly light up one after the other	The charger has been connected to the mains and is carrying out a self test.
Red LED 1 lit	The accupack is being charged.
Red LED 1 flashing	A problem has occurred (see "If a problem occurs" on page 27).
Green LED 2 lit	The accupack is fully charged and the charger has switched to trickle charging.

Cascading several chargers

- ▶ Make sure that the charger is disconnected from the mains.
- Unscrew the two screws 8 at the right bottom side of the charger.
- Slide the two rails 7 out of the guiding slots and screw them tight using the two screws 8.
- Unscrew the two screws 9 at the left bottom side of the second charger.
- Slide the second charger onto the rails of the first charger and screw the rails tight using the two screws 9.
 - Up to three chargers can be cascaded together with the rails and can by powered by a common mains unit.

Operating controls

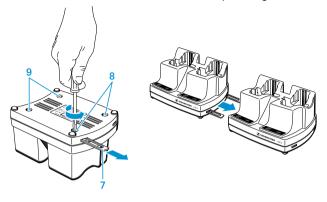

Numbers of chargers	Mains unit required		
1	NT 1-1		
up to 3	NT 3-1		

DE

EN

Æ

ES

¥

COMPLIANC

Setting up the charger

Setting up the charger

The charger has four plastic feet to ensure that it cannot slip on the surface on which it is placed.

NOTICE


RISK OF STAINING OF FURNITURE SURFACES!

Some furniture surfaces have been treated with varnish, polish or synthetics which might cause stains when they come into contact with other synthetics.

- Do not place the charger on delicate surfaces.
- ▶ Place the charger on a flat, even surface.

Switching the charger on or off

- To switch the charger on, insert the hollow jack plug on the cable of the mains unit (mains unit must be ordered separately) into socket 6.
- Connect the mains unit to the mains.All LEDs briefly light up one after the other.

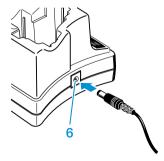


Charging the BA 2015 accupack

▷ Insert the accupack 10 into one of the two charging compartments 3 as shown. The red LED 1 at the occupied charging compartment lights up.

Charging a completely discharged accupack takes approx. 2% hours at room temperature. It is normal for the accupacks to get warm during charging.

After the accupack has been fully charged, the green LED 2 lights up.

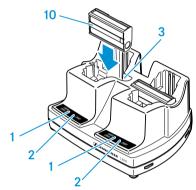

However, the charging process may take longer if:

- the accupack is deep-discharged and first has to be reconditioned by a deep discharge recovery charge,
- the ambient temperature is close to or over 40 °C, since, in order to protect the accupack, the charging process will be interrupted until the accupack temperature has fallen to an admissible value.

ЭE

EN

ES =

ᆗ


OMPLIANCE

Setting up the charger

For safety reasons, the charging process will be interrupted and the red LED 1 will start flashing if:

- · excessively hot accupacks cannot cool down,
- an accupack cannot be fully charged within the max. charging time of 6 hours, e.g. due to overaged cells.

Charging the BA 2015 accupack in the SK/EK/SKM

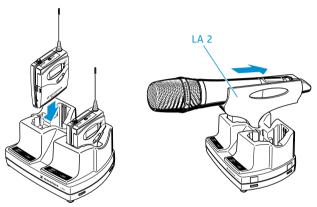

If a problem occurs

If a red LED starts flashing, one of the following errors has occurred at the corresponding charging compartment:

Possible cause	Possible solution
No contact with the accu- pack (contacts are dirty or accupack is not inserted correctly)	Clean the contacts or insert the accupack correctly.
Accupack is defective (overaged or defective rechargeable battery cells)	Replace the accupack.
Accupack temperature is too low or too high	Always charge the accupack at room temperature.
Batteries (primary cells) or individual rechargeable batteries have been inserted	Only charge the BA 2015 accupack.

Cleaning and maintenance

CAUTION

LIQUIDS CAN DAMAGE THE PRODUCTS' ELECTRONICS.

Liquids entering the product housing can cause a short-circuit and damage the electronics.

- Do not use any solvents or cleansing agents.

Specifications

- Disconnect the products from the power supply system and remove rechargeable batteries and batteries before you begin cleaning.
- ▷ Clean all products only with a soft, dry cloth.
- Use a brush or similar to remove dust from the charging compartments.

Specifications

Input voltage	12 V via hollow jack socket		
Input current	max. 750 mA		
Charging voltage	2 x 2.9 V		
Charging current	2 x 700 mA		
Charging prin- ciple	-ΔU method Deep discharge recovery charge Trickle charge Accupack temperature monitoring Over/undercharge detection Charging time limit (max. 6 h)		
BA 2015 battery type	2 x 1,2 V 1500 mAh, NiMH		
Charging time	approx. 2.5 h with a totally discharged accupack and at room temperature, automatic security switch-off after 6 h at the latest		
Operating tem- perature	0 – 40 °C		
Dimensions	approx. 145 x 80 x 110 mm		
Weight	approx. 310 g		

Accessories

		Art. No.
BA 2015	Accupack for powering units of the Sennheiser ew G2, ew G3, ew G4 series, 2000er series, the system Tourguide 1039 and the System 2015	009950
NT 1-1	Mains unit for powering a single L 2015 charger	503158
NT 3-1-EU	Mains unit for powering up to three cascaded L 2015 chargers; EU variant	503159
NT 3-1-US	Mains unit for powering up to three cascaded L 2015 chargers; US variant	503876
NT 3-1-UK	Mains unit for powering up to three cascaded L 2015 chargers; UK variant	503877
LA 2	Charging adaptor for handheld transmitters (SKM)	503162

Manufacturer Declarations

Manufacturer Declarations

Information about approvals and certifications can be found in the "Compliance" section.

Warranty

Sennheiser electronic GmbH & Co. KG gives a warranty of 24 months on these products.

For the current warranty conditions, please visit our website at www.sennheiser.com or contact your Sennheiser partner.

FOR AUSTRALIA ONLY

Sennheiser goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to other rights or remedies under law. Nothing in this warranty excludes, limits or modifies any liability of Sennheiser which is imposed by law, or limits or modifies any remedy available to the consumer which is granted by law.

To make a claim under this warranty, contact

Sennheiser Australia Pty Ltd, Unit 3, 31 Gibbes Street Chatswood NSW 2067, AUSTRALIA.

Phone: (02) 9910 6700, email: service@sennheiser.com.au.

All expenses of claiming the warranty will be borne by the person making the claim.

The Sennheiser International Warranty is provided by Sennheiser Australia Pty Ltd (ABN 68 165 388 312), Unit 3, 31 Gibbes Street Chatswood NSW 2067 Australia.

WEEE Directive (2012/19/EU)

Battery Directive (2006/66/EC & 2013/56/EU)

In compliance with the following requirements



Z

핌

⊨ S

╛

OMPLIANCE

Notes on disposal

The symbol of the crossed-out wheeled bin (imprint available depending on national requirements) on the product, the battery/rechargeable battery (if applicable) and/or the packaging indicates that these products must be disposed of separately at the end of their operational lifetime in accordance with the national legislation. For packaging disposal, please observe the legal regulations on waste segregation applicable in your country.

The separate collection of waste electrical and electronic equipment, batteries/rechargeable batteries (if applicable) and packagings is used to promote the reuse and recycling and to prevent negative effects caused by e.g. potentially hazardous substances contained in these products. Herewith you make an important contribution to the protection of the environment and public health.

EU Declaration of conformity

RoHS Directive (2011/65/EU)

Hereby, Sennheiser electronic GmbH & Co. KG declares that the radio equipment type (accessory) L 2015 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address: www.sennheiser.com/download.

Manufacturer Declarations Statements regarding the FCC and Industry Canada rules

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with the Canadian ICES-003.

Europe





USA



Canada

CAN ICES-3 (A)/NMB-3(A)

Australia





Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany www.sennheiser.com Printed in Germany, Publ. 07/18, 093903/A02