

Public Address Amp
COM3/6

AUDAC

PROFESSIONAL AUDIO EQUIPMENT

Public Address Amplifier COM3 / COM6

User Manual & Installation Guide

AUDAC PROFESSIONAL AUDIO EQUIPMENT

User Manual & Installation Guide

© AUDAC
<http://www.audac.eu>
info@audac.eu

Index

INTRODUCTION	3
ENVIRONMENT	4
SAFETY REQUIREMENTS	5
CAUTION – SERVICING	5
OVERVIEW FRONT AND REAR PANEL OF THE COM3/6	6
FRONT	6
REAR	6
DETAILS FRONT AND REAR PANEL OF THE COM3/6	7
FRONT PANEL CONTROLS	7
REAR PANEL	7
GETTING STARTED	8
CONNECTIONS	10
OPERATION	12
BLOCK DIAGRAM	13
ADDITIONAL INFORMATION COM3/6	14
PERSONAL NOTES	15

Introduction

This section briefly describes the possibilities of the COM3/6 public address amplifier.

The COM3/6 public address amplifier was developed as an easy to use, flexible solution for flexible solution for multifunctional use.

During the development of the COM3/6, the AUDAC-engineers wanted to achieve four goals:

- Delivering a flexible audio solution to control multiple functions
- Easy to use
- Excellent sound quality
- Modern and advanced design

The COM3/6 has 1 Telephone paging input with EURO block terminal, 3 microphone and 2 line inputs with 1/4 inch phone and RCA jacks, a 30W(COM3)/60W(COM6) rated power output, an acceptable wide range input level (up to 44dB), 2-layer priority muting, a protection system which detects over current and provides current limiting and thermal protection, a built-in user selectable preannounce chime, 2 band tone controls and a low distortion and low noise level. Thanks to its external brackets, the COM3/6 can be mounted on a desktop or in a 19 inch rack.

The COM3/6 can be used in commercial applications such as restaurants, hotels, shops, warehouses, professional offices, public buildings, ...

A simple example: when installed in a shop, you could connect: a tuner to play your favorite radio-station, a microphone to make announcements, a telephone pager, ... and off course the doorbell of the shop.

Environment

Do not place this unit in an enclosed environment such as a bookshelf or closet. Ensure that there is adequate ventilation to cool the unit. Do not block the ventilation openings.

Do not place the unit in environments which contain high levels of dust, heat, moisture or vibration.

Do not use the unit near water or other liquids. Make sure no water or other liquids can be spilled, dripped or splashed on the unit.

This unit was developed for indoor use only. Do not use it outdoors.

Do not place objects on top of the unit.

Place the unit on a stable base.

Safety Requirements

Always handle the unit with care.

Only use a grounded socket outlet and a power cord with grounding plug to plug in the unit.

This unit is not a toy. It should not be operated by children.

Do not stick objects through the openings of the COM3/6.

Do not open the unit (risk for electrical shock).

The COM3/6 contains several < jumpers > which can be set. These settings may only be done by qualified people.



CAUTION – SERVICING

This unit contains no user serviceable parts. Refer all servicing to qualified service personnel. Do not perform any servicing unless you are qualified to do so.

Note

This product conforms to the following European Standards: EN 50081-1: 1992, EN 50082-1: 1992, EN 60065: 199

Overview front and rear panel of the COM3/6

FRONT




REAR




Details front and rear panel of the COM3/6

FRONT PANEL

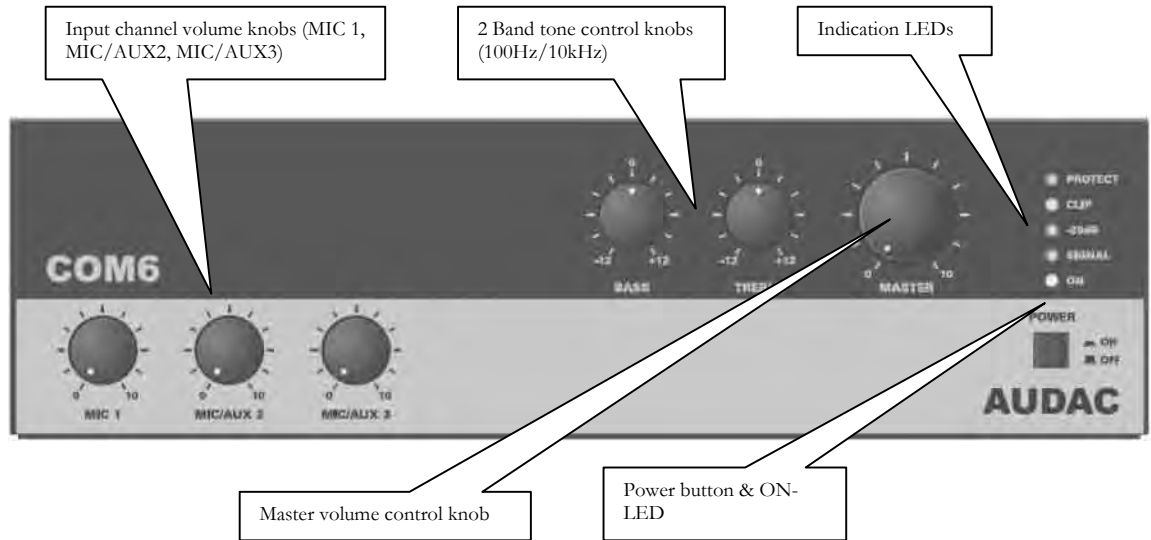

REAR PANEL

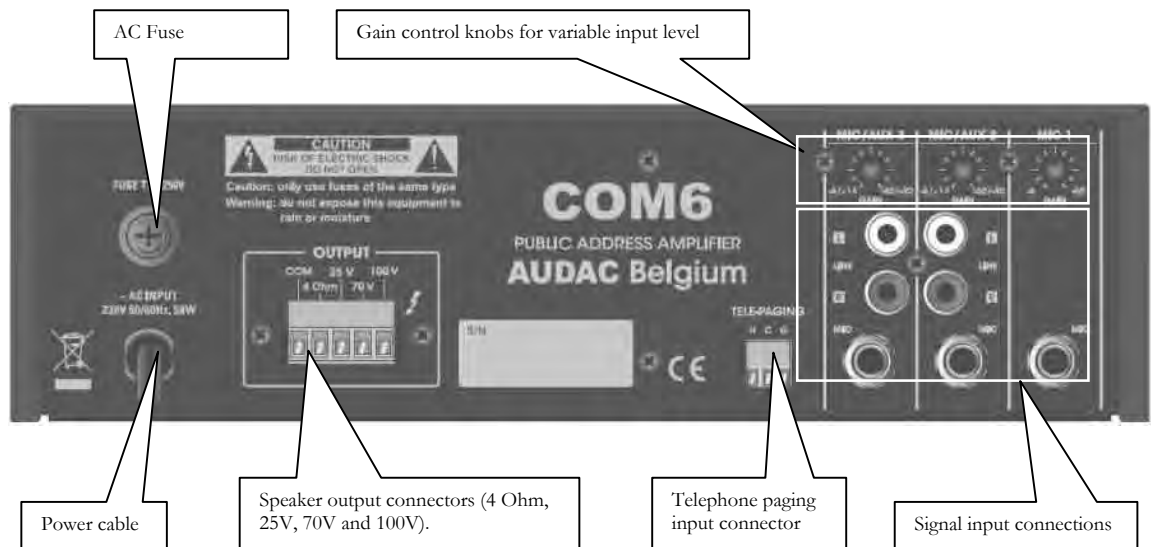

Getting Started


Before you install the COM3/6 amplifier, make sure you disconnect it: put the power button in the 'OFF' position and turn all level controls down by turning them counterclockwise. When installed, the COM3/6 public address amplifier can be switched on by pressing the power button on the front panel. The blue <ON> led will light up if the device is powered-up.

WIRING

Select the input wire and the connectors.

The use of pre-built or professionally wired balanced line 22 to 24 gauge cables is recommended.

The figure on the next page shows the connector pin assignments for wiring. You can also use the RCA input connections for unbalanced inputs.

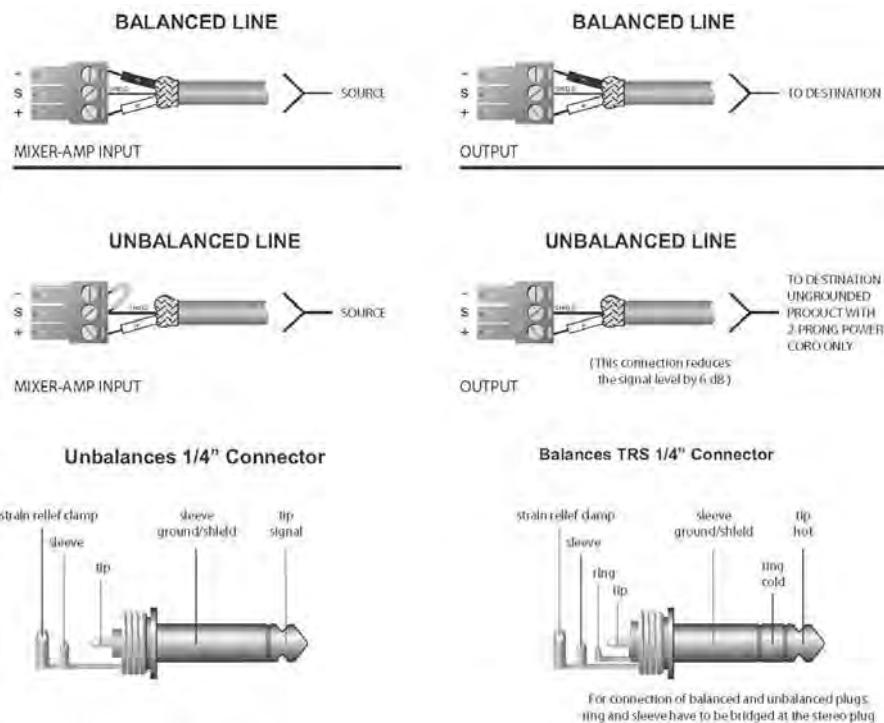

Select the output wire and the connectors.

For the output connectors of the amplifier, the use of pre-built or professionally wired, high-quality and heavy gauge speaker wires is recommended. EURO blocks can be used for the output connectors. Prevent short circuits: wrap or insulate exposed loudspeaker cable connectors.

Use the guidelines below to select the appropriate wire size, based on the distance from the amplifier to the speaker. The wire sizes apply to the 4 Ohm tap.

Distance	Wire size
Up to 25 ft.	16 AWG
26~40 ft.	14 AWG
41~60 ft.	12 AWG
61~100 ft.	10 AWG
101~150 ft.	8 AWG
151~200 ft.	6 AWG

Note: Leave custom wiring to qualified personnel. Class 2 wiring is required.

Caution: NEVER use shielded cable for output power wiring.

Connections

Select the input wire and the connectors

INPUT

Connect microphones or balanced line-level sources to the balanced inputs of the mixer-amplifier. Set the Gain Volume accordingly. Connect unbalanced line-level signals to RCA input connectors.

OUTPUT

Maintain proper polarity on the output connectors.


For each output channel, you connect the output EURO block terminals to the loudspeaker loads. Use terminals that are marked with COM and 4Ω for a 4 Ohm loudspeaker load, or use terminals marked with COM and 25V, 70V or 100V for constant-voltage loudspeaker loads.

Connect the COM terminal to the speaker negative (-) lead. Connect one of the other terminals to the speaker positive (+) lead.

Impedance and output voltage:


COM3	COM6
4 Ω / 11V	4 Ω / 15.5V
21 Ω / 25V	10.5 Ω / 25V
163 Ω / 70V	81.6 Ω / 70 V
333 Ω / 100V	166 Ω / 100V

The impedances as indicated above represent the total speaker system impedances. The speaker connection is shown in the figure below.

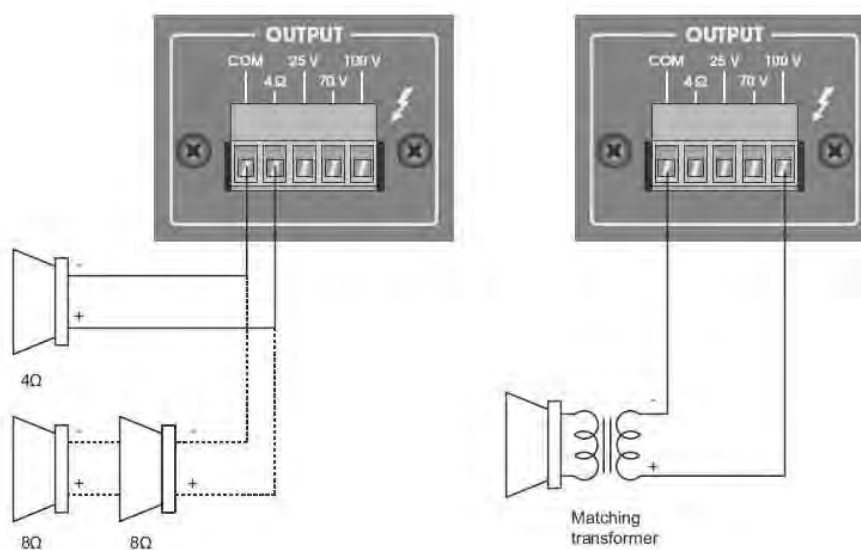

Caution: Never use both the Low-Z (4Ω) and Hi-Z (25V, 70V and 100V) terminals at the same time.


Following image shows a **WRONG** connection.

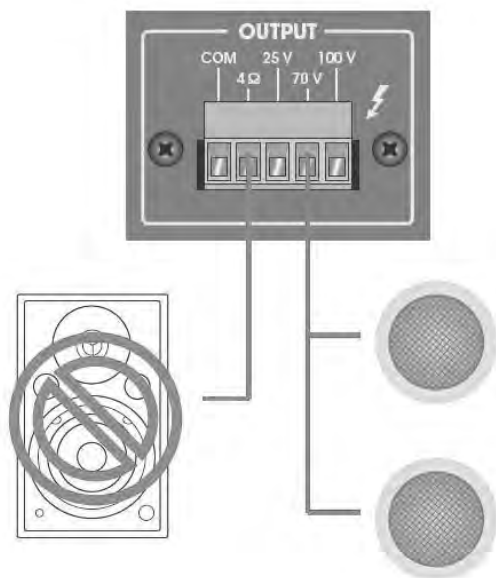

Operation

TELEPHONE PAGING

Connect the TELE-PAGING connector of the mixer-amplifier to the telephone interface unit/PBX like telephone pager. Announcing by telephone is possible, after you've dialled up to telephone interface unit/PBX.

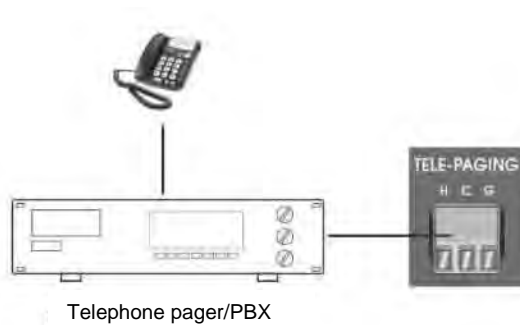

SIGNAL INPUT GAIN CONTROL

The COM3/6 public address amplifiers are able to accept a variable and wide range of input signals with trim pot. To accept variable external equipment, you adjust the trim pot in a range of 44dB. Following image shows the acceptable input sensitivity per channel.




PRIORITY CONTROL

The COM3/6 has a 2-layer priority mute function. When a higher level source is activated, other input signals are muted automatically, except for the same priority level source.

MIC2~CH3, AUX1~AUX2 > MIC1, Telephone Paging, Chime

BLOCK DIAGRAM

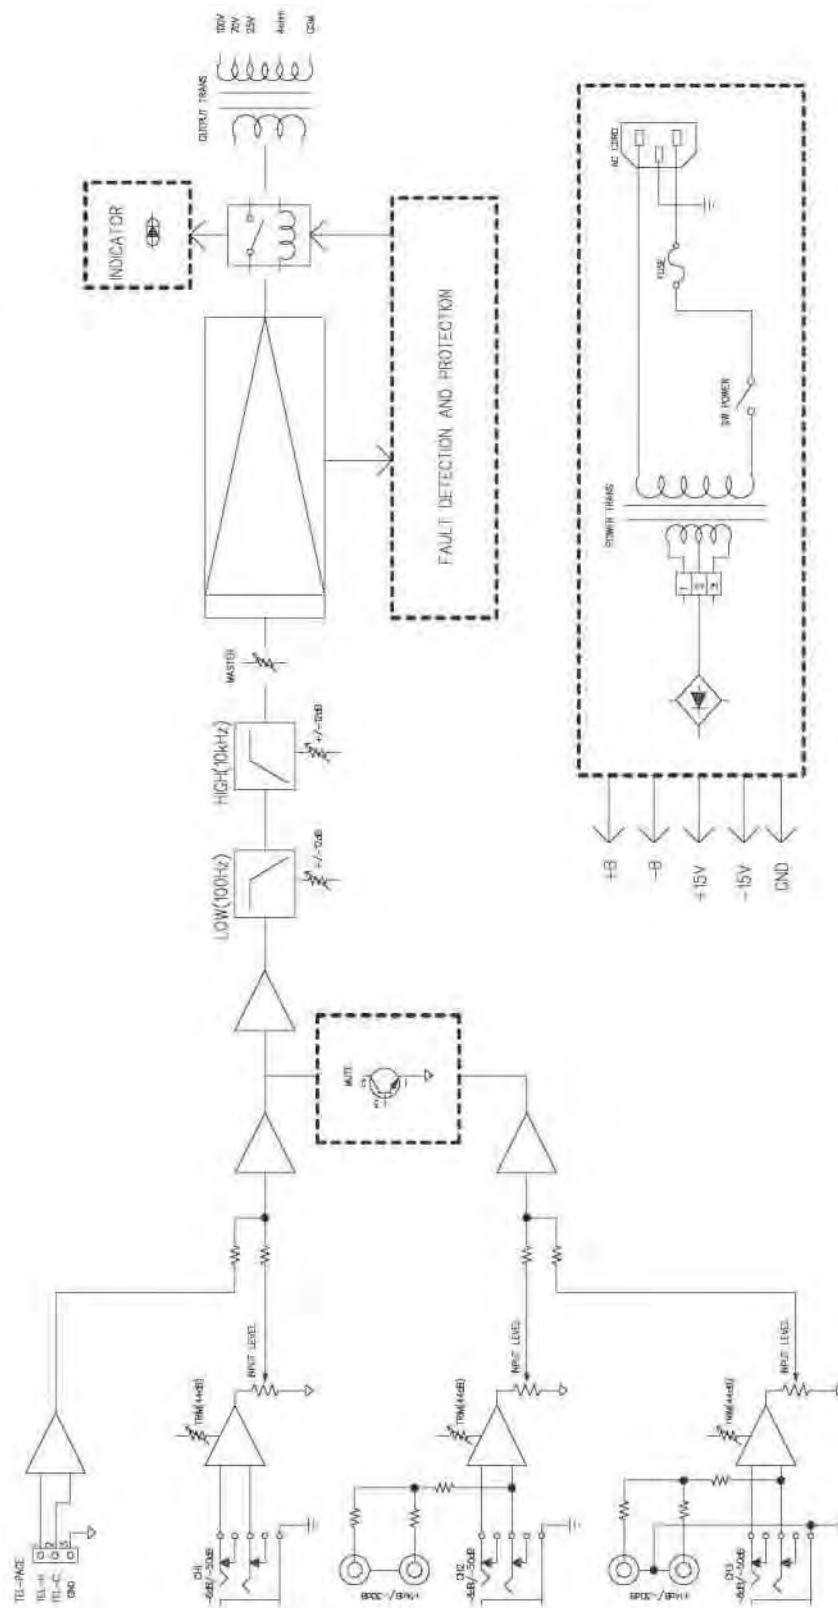

Additional information COM3/6

TECHNICAL SPECIFICATIONS

PERFORMANCE		
Input sensitivity		
	COM3	COM6
Balanced microphone channels	-50dB \pm 3dB	
Unbalanced AUX channels	-30dB \pm 3dB	
Tele-Paging	-21dB \pm 3dB	
At 1W from speaker out tap, 80Hz ~ 18kHz	+1.5/-3dB	
Tone Controls		
100Hz, 10kHz	\pm 12dB \pm 3dB	
Signal to Noise Ratio at rated power output	Less than 90dB	
Crosstalk at all control maximum	-70dB at 1kHz	
Rated output power at THD 0.5%	30 W	60 W
Total Harmonic Distortion (THD) at 1kHz rated power	Less than 0.5%	
Power Band width at 1 kHz from speaker out tap	80Hz ~ 18kHz with less than 0.5% THD	
DC Output Offset	Less than \pm 3mV	
Operating Temperature/Humidity at non-condensing	0° ~ 40° C at 95% humidity	
Output Voltage and Impedance		
4 Ω	11V	15.5 V
25V	21 Ω	10.5 Ω
70V	163 Ω	81.6 Ω
100V	333 Ω	166 Ω

CONSTRUCTION		
	COM3	COM6
Cooling	Convection Cooled	
Dimensions (W x H x D)	270 mm x 76 mm x 230 mm	
Net Weight	4.5 Kg	5.1 Kg
Power Consumption	42 W	85 W

Personal notes