KRAMER





PT-102VN Quick Start Guide

This guide helps you install and use your PT-102VN for the first time.

Go to www.kramerav.com/downloads/PT-102VN to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box


Y PT-102VN 1:2 Video DA


1 Power supply (12V DC)

4 Rubber feet

1 Quick start guide

Step 2: Get to know your PT-102VN

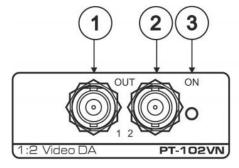

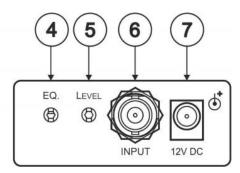

#	Feature	Function
1	OUT 1 BNC Connector	Connects to composite video acceptor 1
2	OUT 2 BNC Connector	Connects to the composite video acceptor 2
3	ON LED	Illuminates when receiving power
4	EQ. Trimmer	Adjusts the cable compensation equalization level (using a small screwdriver)
5	LEVEL Trimmer	Adjusts the video signal level for outputs 1 and 2 (using a small screwdriver)
6	INPUT BNC Connector	Connects to the composite video source
7	12V DC	+12V DC connector for powering the unit

Step 3: Mount PT-102VN

Install PT-102VN using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- Mount the unit in a rack using the recommended rack adapter (see www.kramerav.com/product/PT-102VN).



- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- · Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.




PT-102VN Quick Start

P/N: 2900-301276QS

Step 4: Connect inputs and outputs

Always switch OFF the power on each device before connecting it to your PT-102VN.

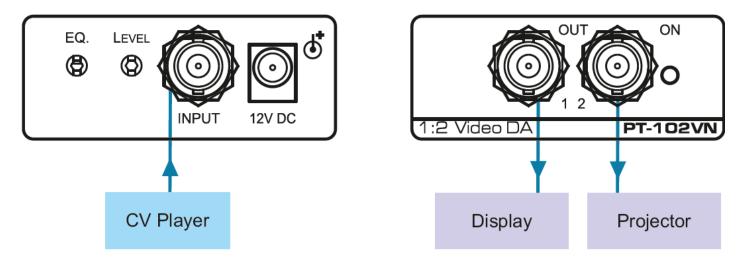



To achieve specified extension distances, use the recommended Kramer cables available at www.kramerav.com/product/PT-102VN. Using third-party cables may cause damage!

Step 5: Connect power

Connect the power cord to PT-102VN and plug it into the mains electricity.

Safety Instructions (See www.kramerav.com for updated safety information)

Caution:



- For products with relay terminals and GPI\O ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.

Narning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.

Step 6: Operate PT-102VN

Using a small screwdriver, adjust the EQ. and LEVEL as needed.



CE

