

# KRAMER



## USER MANUAL

MODEL:

**VP-772**

Presentation Matrix Switcher / Dual Scaler



Scan for full manual

## VP-772 Quick Start Guide


This guide helps you install and use your **VP-772** for the first time.

Go to [www.kramerav.com/downloads/VP-772](http://www.kramerav.com/downloads/VP-772) to download the latest user manual and check if firmware upgrades are available.


### Step 1: Check what's in the box

- VP-772** Presentation Matrix Switcher / Dual Scaler
- 1 Set of rack ears
- 4 Rubber feet
- IR remote control transmitter with batteries
- 1 Power cord
- 1 Quick start guide
- 2 DVI (M) to 15-pin HD (F) (AD-DM/GF)
- 2 DVI-A (M) to 5 BNC (F) adapter cables (ADC-DMA/5BF-1)

### Step 2: Get to know your VP-772

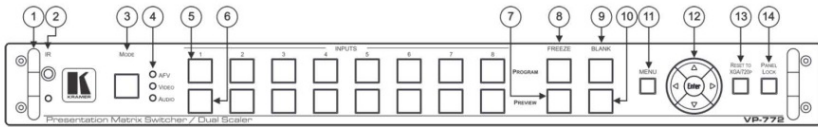


#	Feature	Function
1	Metal handles (x2)	Rigid handles
2	IR Receiver IR LED	Accepts IR remote commands Lights red when the unit accepts IR remote commands
3	MODE Button	Select the operation mode: AFV (audio follow video), Video or audio
4	Mode LED indicators	Indicate the operation mode, as selected via the MODE button
5	INPUT Selector Buttons	PROGRAM Press to select the DVI input (from 1 to 8) to switch to the PROGRAM output
6	Buttons	PREVIEW Press to select the DVI input (from 1 to 8) to switch to the PREVIEW output
7	FREEZE Buttons	PREVIEW Press to freeze/unfreeze the PREVIEW output video image
8	Buttons	PROGRAM Press to freeze/unfreeze the PROGRAM output video image
9	BLANK Buttons	PROGRAM Press to toggle between a blank screen (black) and the PROGRAM display
10	Buttons	PREVIEW Press to toggle between a blank screen (black) and the PREVIEW display
11	MENU Button	Press to access/exit the OSD menu. When browsing the Program OSD menu, a long press on the MENU button to jump to the Preview menu and vice versa
12	Navigation Buttons	<  // VOLUME Button Press to move to the previous level in the OSD screen. When not within the OSD menu: in the transition mode, press to decrease the Audio OUT 2 Program volume; in the Overlay mode, press to decrease the general volume
△ // VOLUME Button Press to move up the menu list values and to increase numerical values. When in the transition mode and not within the OSD menu mode, press to increase the Audio OUT 1 Preview volume		
▽ // VOLUME Button Press to move down the menu list and to decrease numerical values. When in the transition mode and not within the OSD menu mode, press to decrease the Audio OUT 1 Preview volume		
> // VOLUME Button Press to move to the next level in the OSD screen. When not within the OSD menu: in the transition mode, increase the Audio OUT 2 Program volume; in the Overlay mode, press to increase the general volume		
ENTER Button Press to enter sub-menu items, and save. When in the transition mode and not within the OSD menu, performs as the TAKE button		
13	RESET TO XGA/720P Button	Press to reset the video output resolution to XGA or 720p. Press and hold for about 3 seconds to toggle between reset to XGA and reset to 720p detached
14	PANEL LOCK Button	Press and hold for about 3 seconds to lock/unlock the front panel buttons

 

#	Feature	Function
15	INPUT DVI Connector	Connect to the video / embedded audio source (from 1 to 8)
16	AUDIO IN Terminal Block Connectors	Connect to the balanced stereo audio source (from 1 to 8)
17	PREVIEW OUT DVI Connector	Connect to the Preview acceptor
18	PROGRAM OUT DVI Connector	Connect to the Program acceptor
19	ETHERNET Connector	Connect to the PC or other Controller through computer networking
20	SW UPGRADE USB Port	Connects to a USB memory stick to upgrade the firmware
21	RS-232 (G, Rx, Tx) 3-pin Terminal Block Connector	Connect to the PC or other serial controller
22	AUDIO OUT 1 terminal Block Connectors	Connect to the Preview balanced stereo audio acceptor
23	AUDIO OUT 2 terminal Block Connectors	Connect to the Program balanced stereo audio acceptor
24	RS-485 Port and TERM Switch	Connect to an RS-485 controller (for example, a future optional T-bar control). Pin G is for the Ground connection; pins B (-) and A (+) are for RS-485. Set the TERM switch down if the VP-772 is the last unit on the RS-485 line. The ground connection is sometimes connected to the shield of the RS-485 cable.
25	Power Connector with Fuse	AC connector, enabling power supply to the unit
26	POWER Switch	Switch for turning the unit on or off


### Step 3: Install the VP-772

To rack mount the machine attach both ear brackets to the machine (by removing the three screws from each side of the machine and replacing those screws through the ear brackets) or place the machine on a table.

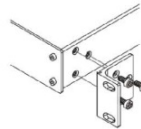

### Step 4: Connect the inputs and outputs


Always switch OFF the power on each device before connecting it to your VP-772. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to the VP-772.

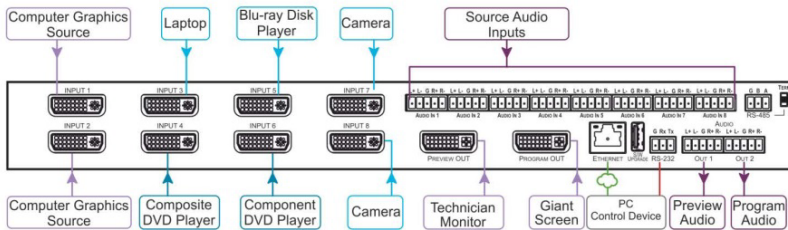

Note that you can connect DVI-U to an analog (VGA, composite or component video) or digital (HDMI or DVI) source.

### RJ-45 Pinout:

For the Ethernet and HDBaseT connectors, see the proper wiring diagram below

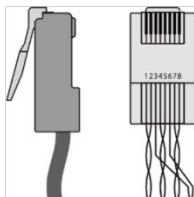

PIN EIA /TIA 568B	
PIN	Wire Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

### Connect the audio input:

From a balanced source




From an unbalanced source




### Connect the audio output:


To a balanced acceptor

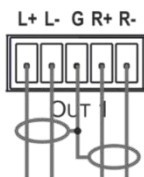

To an unbalanced acceptor

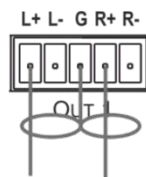

### DVI-U Pinout

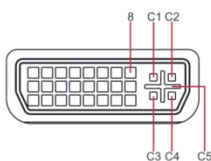

PIN	Wire Color
C1	Red / Pb
C2	Green / Y / CV
C3	Blue / Pr
C4	Horizontal sync (TTL)
C5	Common return
8	Vertical sync (TTL)

## Step 5: Connect the power

Connect AC power to the rear of the **VP-772**, switch on its power and then switch on the power on each device.

## Step 6: Set operation parameters via OSD menu

Enter the OSD menu via the MENU button on the front panel or the IR remote control transmitter. Select a menu item and set parameters as required.

If you cannot see any video output, verify that the display, TV, or projector is in good working order and is connected to the **VP-772**. Verify that the **VP-772** is selected as the source. If you still cannot see any video output, press and hold the RESET TO XGA/720P button for 3 seconds to reset the output to XGA or 720p resolution.


Menu Item	Function
Inputs	Sets the parameters for each input connector such as input type, native resolution, color depth, Modeline setup, HDCP mode, color space and audio input level
Layout	Sets the display mode, transition settings (transition speed, mode, effects, direction), T-Bar control and overlay settings (single window and PIP types), as well as output resolution and other output settings
Program / Preview	Sets the parameters for the Program / Preview output including the source, aspect ratio, overscan settings, zooming, window customization, picture and color settings, de-interlacing, noise reduction, projection, power save settings, test patterns, audio settings and so on
Misc	Displays the information, OSD settings, keying settings, FW upgrade and factory reset

## Step 7: Operate via the front panel buttons and via the:

IR remote controller:



Web Pages:

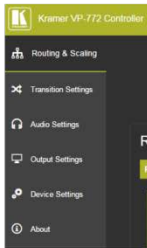

RS-232 and Ethernet:

RS-232			
Protocol 3000 (Default)			
Baud Rate:	115,200	Stop Bits:	1
Data Bits:	8	Parity:	None
Example (decrease the volume on input 5):		#Y 0,115,-<CR>	
TCP/IP Parameters			
IP Address:	192.168.1.39	UDP Port #:	50000
Subnet mask:	255.255.000.000	Max. UDP Connections:	Unlimited
Default gateway:	192.168.0.1	Max. TCP Connections:	Unlimited
TCP Port #:	5000		
Full Factory Reset			
OSD	Factory Reset through the Misc menu item		
Protocol 3000	Including ETH: use Factory Reset command "Including ETH" or #Y 0,561,1<CR> Excluding ETH: use Factory Reset command "Excluding ETH" or #Y 0,562,1<CR>		
Front panel buttons	Including ETH: power up the device with the "RESET TO XGA/720P" key pressed		

## Technical Specifications:

Inputs:	8 DVI-U inputs (DVI-D, HDMI, PC, YPbPr and CV) on DVI-I connectors 8 balanced stereo audio on 5-pin terminal block connectors
Outputs:	2 DVI-I outputs (DVI-D, HDMI and PC) on DVI-I connectors 2 balanced stereo audio on 5-pin terminal block connector
Compliance with HDMI Standard:	Supports HDMI (deep color) and HDCP
Output Resolutions:	640x480@60, 640x480@75, 800x600@50, 800x600@60, 800x600@75, 1024x768@50, 1024x768@60, 1024x768@75, 1280x768@50, 1280x768@60, 1280x800@60, 1280x1024@50, 1280x1024@60, 1280x1024@75, 1360x768@60, 1366x768@50, 1366x768@60, 1400x1050@50, 1400x1050@60, 1600x900@60, 1600x1200@50, 1600x1200@60, 1680x1050@60, 1920x1200@60RB, 480p60, 576p50, 720p50, 720p59.94, 720p60, 1080p23.976, 1080p24, 1080p25, 1080p29.97, 1080p30, 1080p50, 1080p59.94, 1080p60, 1080i50, 1080i60, 2k50, 2k60, 4k2k@30
Controls:	Front panel buttons, OSD, IR remote control, RS-232 on a 9-pin D-sub connector, Ethernet
Operating Temperature:	0° to +40°C (32° to 104°F)
Storage temperature:	-40° to +70°C (-40° to 158°F)
Humidity:	10% to 90%, RH (non-condensing)
Power Consumption:	100-240V AC, 38VA max.
Dimensions:	19" (W), 9.3" (D) 1U (H) rack mountable
Shipping Dimensions:	52.5cm x 33cm x 10.7cm (20.7" x 13" x 4.2") W, D, H
Weight:	4.3kg (9.5lbs) approx.
Shipping Weight:	5.3kg (11.7lbs) approx.
Included Accessories:	Power cord, rack "ears", IR remote control 2 DVI-A (M) to 5 BNC (F) Adapter Cables (ADC-DMA/5BF-1) 2 DVI (M) to 15-pin HD (F) Adapters (AD-DM/GF)
Specifications are subject to change without notice. For the most updated resolution list, go to our Web site at <a href="http://www.kramerav.com">www.kramerav.com</a>	

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>2</b>
2.1	Achieving the Best Performance	2
2.2	Safety Instructions	2
2.3	Recycling Kramer Products	3
<b>3</b>	<b>Overview</b>	<b>4</b>
3.1	HDCP Compliance for HDMI inputs	6
3.2	Defining the VP-772 Presentation Matrix Switcher / Dual Scaler	6
<b>4</b>	<b>Installing in a Rack</b>	<b>9</b>
<b>5</b>	<b>Connecting the VP-772</b>	<b>10</b>
5.1	Wiring the RJ-45 Connectors	12
5.2	Connecting the Balanced Stereo Audio Input and Outputs	13
<b>6</b>	<b>The OSD Menu</b>	<b>14</b>
6.1	OSD Menu Operation Example	14
6.2	Inputs Menu	16
6.3	Layout Menu	17
6.4	Program / Preview Menus	19
6.5	Misc Menu	26
<b>7</b>	<b>Layout</b>	<b>28</b>
7.1	Transition Mode	28
7.2	Overlay Mode	30
<b>8</b>	<b>Controlling the VP-772</b>	<b>33</b>
8.1	Controlling via the Front Panel Buttons	33
8.2	Controlling via the OSD Menu	38
8.3	Controlling via the Infrared Remote Control Transmitter	43
<b>9</b>	<b>Using the Embedded Web Pages</b>	<b>45</b>
9.1	Browsing the VP-772 Web Pages	45
9.2	Routing & Scaling the Image	47
9.3	Transition Settings Page	54
9.4	Audio Settings Page	57
9.5	Output Settings Page	58
9.6	Device Settings Page	59
9.7	About Page	61
<b>10</b>	<b>Firmware Upgrade</b>	<b>62</b>
10.1	The Firmware Upgrade Process	62
10.2	Rollback	64
<b>11</b>	<b>Technical Specifications</b>	<b>65</b>
11.1	Default Communication Parameters	66
11.2	Input Resolutions	67
11.3	Output Resolutions	68
<b>12</b>	<b>The VP-772 RS-232 Communication Protocol</b>	<b>69</b>
12.1	Using the Communication Protocol	69
12.2	Communication Protocol: Mimicking OSD	69
12.3	Protocol Table: Mimicking Remote and Front Panel Buttons	78
12.4	The Protocol 3000 Common Operation Commands	78

# Figures

Figure 1: VP-772 Presentation Matrix Switcher / Dual Scaler Front Panel	7
Figure 2: VP-772 Presentation Matrix Switcher / Dual Scaler Rear Panel	8
Figure 3: Connecting the VP-772 Presentation Matrix Switcher / Dual Scaler	11
Figure 4: TP PINOUT	12
Figure 5: Balanced Stereo Audio Output Connection	13
Figure 6: Unbalanced Stereo Audio Output Connection	13
Figure 7: Balanced Stereo Audio Input Connection	13
Figure 8: Unbalanced Stereo Audio Input Connection	13
Figure 9: OSD Menu Example	14
Figure 10: Input Menu	16
Figure 11: Layout Menu	17
Figure 12: Program/Preview Menus	19
Figure 13: Changing the Size of the Window	22
Figure 14: Increasing the Width	23
Figure 15: Increasing the Height	23
Figure 16: Positioning the Window	24
Figure 17: Moving the PiP Window	24
Figure 18: Misc Menu	26
Figure 19: VGA superimposed over HDMI	32
Figure 20: RS-232 Connection	38
Figure 21: Local Area Connection Properties Window	39
Figure 22: Internet Protocol Version 4 Properties Window	40
Figure 23: Internet Protocol Version 6 Properties Window	41
Figure 24: Internet Protocol Properties Window	42
Figure 25: Infrared Remote Control Transmitter	43
Figure 26: Routing and Scaling Page with Navigation List on Left	46
Figure 27: Routing and Scaling Page	48
Figure 28: Routing and Scaling Page – PROGRAM – ZOOM Window	50
Figure 29: Routing and Scaling Page – Transition Take	51
Figure 30: Routing and Scaling Page – Changing the Image Size	52
Figure 31: Routing and Scaling Page – Selecting the Layout	52
Figure 32: Routing and Scaling Page – Setting the Layout	53
Figure 33: Routing and Scaling Page – Customized Dual Layout	53
Figure 34: Transition Settings Page	54
Figure 35: Audio Settings Page	57
Figure 36: Output Settings Page	58
Figure 37: Device Settings Page	59
Figure 38: Device Settings Page – DHCP Window	60
Figure 39: Device Settings Page Info Window	60
Figure 40: About Page	61
Figure 41: Firmware Upgrade – list of Files to Upgrade	63
Figure 42: Firmware Upgrade – Upgrade Process	63
Figure 43: Firmware Upgrade – Upgrade Complete	64
Figure 44: Firmware Upgrade – list of Files to Rollback	64

---

# 1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront video, audio, presentation, and broadcasting professionals on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better!

Our 1,000-plus different models now appear in 14 groups that are clearly defined by function: GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Video Products; GROUP 12: Digital Signage; GROUP 13: Audio; and GROUP 14: Collaboration.

Congratulations on purchasing your Kramer **VP-772** Presentation Matrix Switcher / Dual Scaler. This product, which incorporates HDMI™ technology, is ideal for:

- Live events
- Presentation applications that require a preview option
- Projection systems in conference rooms, boardrooms, auditoriums, hotels and churches, production studios, rental and staging
- Any application where high quality conversion and switching of multiple and different video signals to graphical data signals is required for projection purposes
- Presentations requiring seamless switching between inputs, using special effects, cuts and fades



---

## 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual



Go to [www.kramerav.com/downloads/VP-772](http://www.kramerav.com/downloads/VP-772) to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

### 2.1 Achieving the Best Performance

To achieve the best performance:

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighbouring electrical appliances that may adversely influence signal quality
- Position your Kramer **VP-772** away from moisture, excessive sunlight and dust



This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.

### 2.2 Safety Instructions



**Caution:** There are no operator serviceable parts inside the unit

**Warning:** Use only the power cord that is supplied with the unit

**Warning:** Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only

**Warning:** Disconnect the power and unplug the unit from the wall before installing

## 2.3 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at [www.kramerav.com/support/recycling/](http://www.kramerav.com/support/recycling/).

---

## 3 Overview

The Kramer **VP-772** is an eight input high quality dual scaler with special effect transitions for the Rental and Staging and the Live Events market, and for other applications where a dual scaler is needed. It features DVI-U inputs (including analog, DVI and HDMI support) and stereo balanced audio signals. The **VP-772** can also be configured as 4K single output scaler. The **VP-772** scales and processes the selected video and audio inputs, and outputs to 2 independent DVI-I outputs (Program and Preview) together with two balanced stereo audio outputs.

The **VP-772** features:

- Pix Perfect™ Scaling Technology - Kramer's extremely high performance, State-of-the-Art scaling technology with extensive high-quality pull-down and de-interlacing algorithms, and full up-and down-scaling of the video inputs
- K-IIT XL™ Picture-in-Picture Image Insertion Technology for ultra-stable picture-in-picture, picture-and-picture and split screen capability
- Seamless video switching with cuts or built-in special effect transitions, including horizontal, vertical, diagonal, circle, and chessboard wipes, cross-fading, and more, including virtual T-bar control to carry out the transition
- Dual scalers—for “live” seamless transitions from one source to another—with two independent outputs: a PREVIEW OUTPUT and a PROGRAM OUTPUT. The PREVIEW output—including an OSD menu for making adjustments—can be used to determine how the scaled output will look before being displayed live during a presentation
- Features 8 PREVIEW input buttons for switching a selected input to the PREVIEW output and 8 PROGRAM input buttons for switching a selected input to the PROGRAM output
- Output Resolutions – UHD (3840x2160) resolution (in the Single Window mode) as well as HDTV and computer graphics resolutions with selectable refresh rates
- Selectable HDMI, VGA, YUV or CV on each DVI-U input and VGA or HDMI on each DVI-I output
- Audio-Follow-Video (AFV) and breakaway options

- Advanced deinterlacing functions - including 3D comb filtering, film mode, diagonal correction and motion detection
- Features advanced EDID management (native resolution, Modeline and color depth) per input
- Multiple Aspect Ratio Selections
- Built-in Proc-Amp with enhanced functions such as color correction, gamma, dither and noise reduction
- Embedded HDMI audio support as well as eight balanced stereo audio inputs and two balanced stereo outputs
- Input and output audio level adjustment and audio DSP functions
- HDCP Compliance

In addition, the **VP-772**:

- Features luma- and chroma-keying
- Includes built-in test patterns for screen setup and alignment
- Features Image zooming and image shifting
- Includes various selectable projection modes
- Analyses the connected output's EDID for optimal scaling
- Provides input and output color space control
- Supports HDMI deep color for outputs
- Provides user delay options for auto sync off
- Comes with an On-Screen Display (OSD) for easy setup and adjustment
- Has a non-volatile memory that retains the settings
- Supports firmware upgrade via USB port (using USB memory stick)

Control your **VP-772**:

- Directly, via the front panel push buttons
- Via the Ethernet (using the embedded Web pages)
- By RS-485 (allowing future optional T-bar control)

- Remotely, from the infrared remote control transmitter
- By RS-232 serial commands transmitted by a touch screen system, PC, or other serial controller

The **VP-772** is housed in a 19" 1U rack mountable enclosure, with handles and rack "ears" included, and is fed from a 100-240 VAC universal switching power supply.

### 3.1 **HDCP Compliance for HDMI inputs**



If an HDMI signal is HDCP protected, it can only appear on HDMI outputs that are connected to HDCP compliant displays.

The **VP-772** will not output a picture on an HDMI display that is not HDCP compliant; instead it will show a green screen.

In the PiP mode (see [Section 7.2](#)), even if only one of the inputs is HDCP protected, and is output to a non-compliant display, it will affect the entire screen and turn it green.

When using a VGA output display, the screen will turn black.

### 3.2 **Defining the VP-772 Presentation Matrix Switcher / Dual Scaler**

This section defines the **VP-772**.

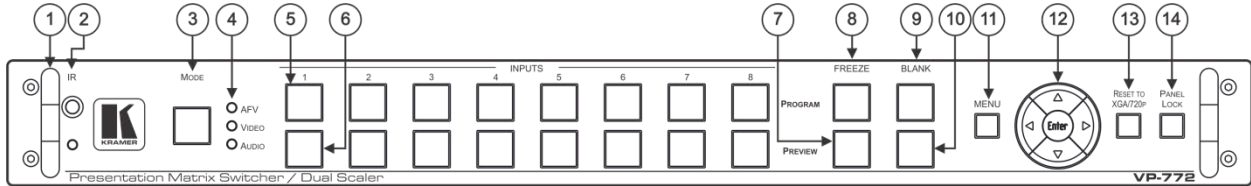


Figure 1: VP-772 Presentation Matrix Switcher / Dual Scaler Front Panel

#	Feature	Function	
1	Metal handles (x2)	Rigid handles	
2	IR Receiver	Accepts IR remote commands	
	IR LED	Lights red when the unit accepts IR remote commands	
3	MODE Button	Select the operation mode: AFV (audio follow video), Video or audio	
4	Mode LED indicators	Indicate the operation mode, as selected via the MODE button	
5	INPUT Selector Buttons	PROGRAM	Press to select the DVI input (from 1 to 8) to switch to the PROGRAM output
6		PREVIEW	Press to select the DVI input (from 1 to 8) to switch to the PREVIEW output
7	FREEZE Buttons	PREVIEW	Press to freeze/unfreeze the PREVIEW output video image
8		PROGRAM	Press to freeze/unfreeze the PROGRAM output video image
9	BLANK Buttons	PROGRAM	Press to toggle between a blank screen (black) and the PROGRAM display
10		PREVIEW	Press to toggle between a blank screen (black) and the PREVIEW display
11	MENU Button	Press to access/exit the OSD menu (see <a href="#">Section 8.1.1</a> ) When browsing the Program OSD menu, a long press on the MENU button to jump to the Preview menu and vice versa	
12	Navigation Buttons	◀ Button// VOLUME Button	Press to move to the previous level in the OSD screen (see <a href="#">Section 8.1.1</a> ). When not within the OSD menu: in the transition mode, press to decrease the Audio OUT 2 Program volume; in the Overlay mode, press to decrease the general volume
		▲// VOLUME Button	Press to move up the menu list values (see <a href="#">Section 8.1.1</a> ) and to increase numerical values. When in the transition mode and not within the OSD menu mode, press to increase the Audio OUT 1 Preview volume
		▼// VOLUME Button	Press to move down the menu list (see <a href="#">Section 8.1.1</a> ) and to decrease numerical values. When in the transition mode and not within the OSD menu mode, press to decrease the Audio OUT 1 Preview volume
		▶ Button // VOLUME Button	Press to move to the next level in the OSD screen (see <a href="#">Section 8.1.1</a> ). When not within the OSD menu: in the transition mode, increase the Audio OUT 2 Program volume; ; in the Overlay mode, press to increase the general volume
		ENTER Button	Press to enter sub-menu items, and save (see <a href="#">Section 8.1.1</a> ). When in the transition mode and not within the OSD menu, performs as the TAKE button
13	RESET TO XGA/720P Button	Press to reset the video output resolution to XGA or 720p Press and hold for about 3 seconds to toggle between reset to XGA and reset to 720p detached	
14	PANEL LOCK Button	Press and hold for about 3 seconds to lock/unlock the front panel buttons	

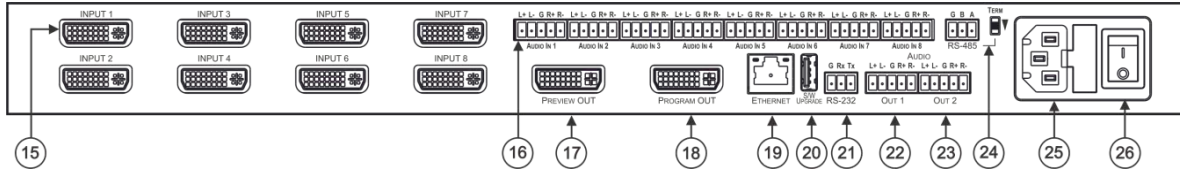


Figure 2: VP-772 Presentation Matrix Switcher / Dual Scaler Rear Panel

#	Feature	Function
15	INPUT DVI Connector	Connect to the video / embedded audio source (from 1 to 8)
16	AUDIO IN Terminal Block Connectors	Connect to the balanced stereo audio source (from 1 to 8)
17	PREVIEW OUT DVI Connector	Connect to the preview acceptor
18	PROGRAM OUT DVI Connector	Connect to the program acceptor
19	ETHERNET Connector	Connect to the PC or other Controller through computer networking
20	S/W UPGRADE USB Port	Connect to a USB memory stick to upgrade the firmware
21	RS-232 (G, Rx, Tx) 3-pin Terminal Block Connector	Connect to the PC or other serial controller
22	AUDIO OUT 1 terminal Block Connectors	Connect to the Preview balanced stereo audio acceptor
23	AUDIO OUT 2 terminal Block Connectors	Connect to the Program balanced stereo audio acceptor
24	RS-485 Port and TERM Switch	Connect to an RS-485 controller (for example, a future optional T-bar control). Pin G is for the Ground connection; pins B (-) and A (+) are for RS-485. Set the TERM switch down if the <b>VP-772</b> is the last unit on the RS-485 line. The ground connection is sometimes connected to the shield of the RS-485 cable.
25	Power Connector with Fuse	AC connector, enabling power supply to the unit
26	POWER Switch	Switch for turning the unit on or off

## 4 Installing in a Rack

This section provides instructions for rack mounting the unit.

**Before installing in a rack**, be sure that the environment is within the recommended range:

OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	-40° to +70°C (-40° to 158°F)
HUMIDITY:	10% to 90%, RHL non-condensing




### CAUTION!

When installing on a 19" rack, avoid hazards by taking care that:

1. It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.
2. Once rack mounted, enough air will still flow around the machine.
3. The machine is placed straight in the correct horizontal position.
4. You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.
5. The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to situations where electricity is supplied indirectly (when the power cord is not plugged directly into the socket in the wall), for example, when using an extension cable or a power strip, and that you use only the power cord that is supplied with the machine.

### To rack-mount a machine:

1. Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (3 on each side), and replace those screws through the ear brackets.

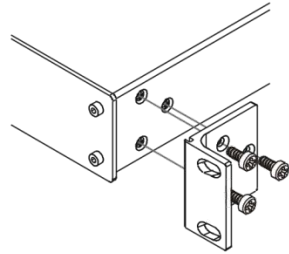

2. Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

#### Note:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions available from our Web site



---

## 5 Connecting the VP-772



Always switch off the power to each device before connecting it to your **VP-772**. After connecting your **VP-772**, connect its power and then switch on the power to each device.



You do not have to connect all the inputs and outputs, connect only those that are required.

To connect the **VP-772**, as illustrated in the example in [Figure 3](#), do the following:

1. Connect up to eight sources (for example, a PC, Blu-ray Disk Player, Composite DVD player and so on) to the DVI INPUT connectors, according to the Input OSD setup, see [Section 6.2](#).  
Use the ADC-DMA/5BF-1 and AD-DM/GF adapters provided with the package when connecting a YUV, VGA or CV input, as required
2. Connect the audio input signals to the AUDIO IN terminal block connectors, as required, see [Section 5.2](#) (not shown in [Figure 3](#)).
3. Connect the PREVIEW OUT DVI connector to a DVI acceptor (for example, an LCD display).
4. Connect the PROGRAM OUT DVI connector to a DVI acceptor (for example, a projector).



Note that when high output resolutions (such as 4k2k@30) we recommend that you use a DVI to HDMI cable (for example, the Kramer C-HM/DM 6' or 10').

For lower resolutions you can connect the HDMI connector on a device to the DVI connector on the **VP-772** via a HDMI-DVI adapter

5. Connect the AUDIO OUT 1 and OUT 2 Terminal Block connectors to up to two balanced analog audio acceptors, see [Section 5.2](#) (not shown in [Figure 3](#)).
6. If required, you can connect a PC and/or controller to the:
  - RS-232 terminal block (see [Section 8.2.1](#))
  - Ethernet connector (see [Section 8.2.2](#))

7. Connect the power cord (not shown in [Figure 3](#)).

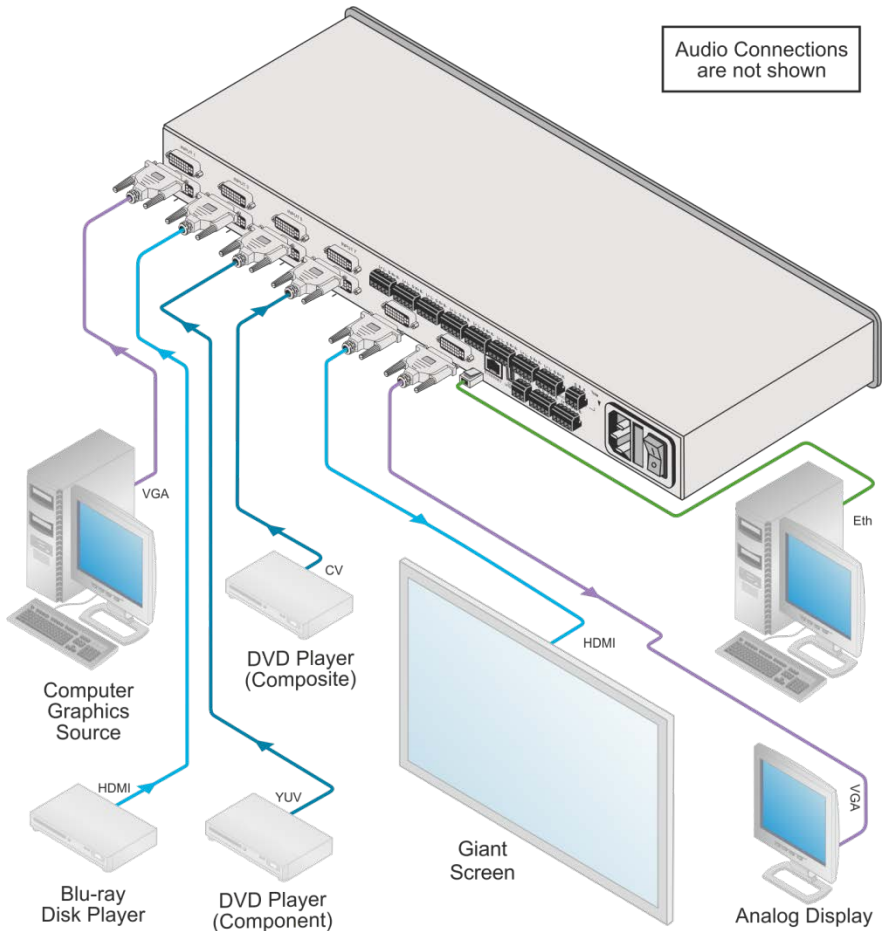



Figure 3: Connecting the VP-772 Presentation Matrix Switcher / Dual Scaler

## 5.1 Wiring the RJ-45 Connectors

This section defines the TP pinout, using a **straight** pin-to-pin cable with RJ-45 connectors.

EIA /TIA 568B	
PIN	Wire Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

Figure 4: TP PINOUT

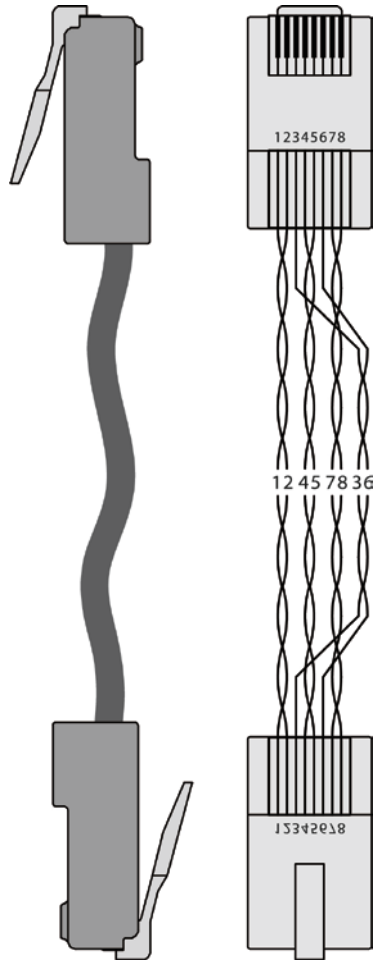

## 5.2 Connecting the Balanced Stereo Audio Input and Outputs

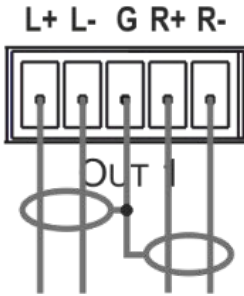


Figure 5: Balanced Stereo Audio Output Connection

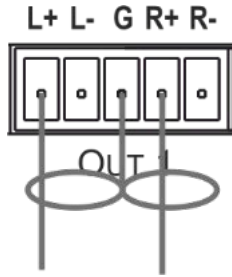


Figure 6: Unbalanced Stereo Audio Output Connection

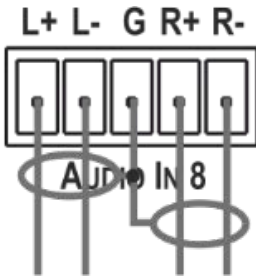


Figure 7: Balanced Stereo Audio Input Connection

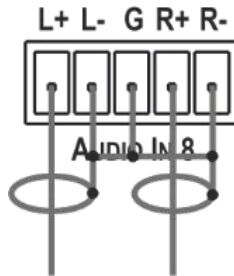


Figure 8: Unbalanced Stereo Audio Input Connection

---

## 6 The OSD Menu

The OSD menu lets you set the **VP-772** operation parameters.

The OSD sub-menu operations appear in the OSD title, as shown in the example in [Section 6.1](#):

- When in the main menu, the OSD title appears empty
- Level 1 lists the main menu items
- Level 2 includes the second hierarchy level, below level 1
- Level 3 includes the third hierarchy level, below level 2 (optional)
- Level 4 includes the fourth hierarchy level, below level 3 (optional)

And so on

- Function (last level), is the selectable parameter or numerical value and can appear either under level 2, 3 or 4

### 6.1 OSD Menu Operation Example

In the example illustrated below, the Program Aspect Ratio is set to Best Fit as illustrated in [Figure 9](#) (see OSD menu in [Section 6.4](#)).

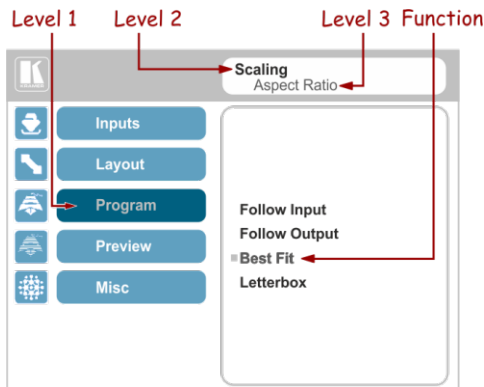


Figure 9: OSD Menu Example

The example in the table below shows function 321 (from the Protocol in [Section 12.2.2](#)):

- 3 in the hundreds, represents “Program” which is the 3<sup>rd</sup> menu item in the main list
- 2 in the tens, represents “Scaling” which is 2<sup>nd</sup> in the Scale menu
- 1 in the units, represents “Aspect Ratio” which is first in the Scaling menu

Level 1	Level 2	Level 3	Level 4 (Function)	Range	Function
Program (3)	Scaling (2)	Aspect Ratio (1)	Follow Input	0	321
			Follow Output	1	
			Best Fit	2	
			Letterbox	3	

Note that:

- Functions may also have 2 digits only (Select Input, for example, is 31), or on the other hand have an unlimited number of digits
- We recommend that you press Enter to save the changes to the memory immediately although exiting the menu saves the parameter to the memory
- Data is saved per window and per input (to a dedicated input + window memory), as applicable

The control buttons let you control the **VP-772** via the OSD menu. Press the:

- MENU button to enter the menu and exit the menu
- ◀ button when in the OSD menu, to move to the previous level and change menu settings in the OSD screen.
- ENTER (or ▶) button to access sub-menu items
- Arrow buttons to move through the OSD menu
- △ or ▽ arrows to change settings



Note that when exiting the menu, all the changes are automatically saved to the non-volatile memory.

The default OSD timeout for auto exit is set to 30 seconds and can be changed (see [Section 6.5](#)).



Note that some items appear red on the OSD menu indicating that they are disabled.

## 6.2 Inputs Menu

The Inputs menu lets you set each of the **VP-772** input connector parameters (from 1 to 8):

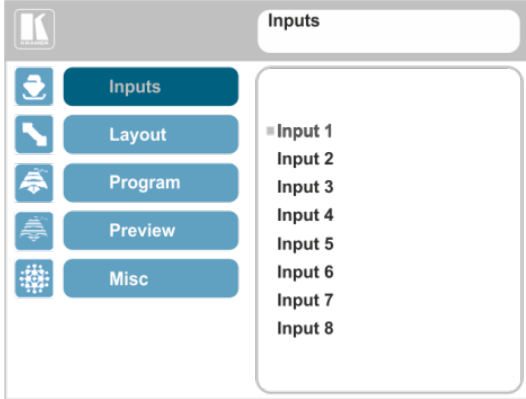


Figure 10: Input Menu

Setting	Function
<b>INPUT 1 to INPUT 8</b>	
Type	Set the input type to HDMI, YUV, VGA or CV
EDID Management	Set the native resolution for each input (and then select the color depth): 1024x768@60, 1280x800@60, 1280x1024@60, 1366x768@60, 1440x900@60, 1400x1050@60, 1600x900@60, 1600x1200@60, 1680x1050@60, 1920x1200@60RB, 720p50, 720p60, 1080p50, 1080p60, 2K50 and 2K60 Set Color Depth to 12bpp or 8bpp. Select the EDID mode: Native as Multiple Modelines – generating a group of resolutions in the detailed timing, including the native resolution), or Native as Single Modeline – generating only the native resolution in the detailed timing
HDCP Mode	Set the HDCP option for each HDMI type input to either <b>On</b> (the default) or <b>Off</b> . Setting HDCP mode to Off on that input allows the source to transmit a non-HDCP signal if required (for example, when working with a Mac computer). Note that if you did not get the source to transmit the desired result, make sure you have saved the change (by pressing the ENTER button) and then physically disconnect and reconnect the cable connecting the source to the DVI input
Color Space	Select the color space for each input to <b>RGB</b> , <b>YPbPr</b> or <b>Follow Input</b>
Volume	Set the audio level for each input

## 6.3 Layout Menu

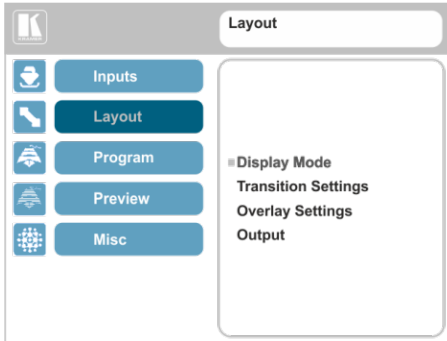




Figure 11: Layout Menu

Setting	Function	
Display Mode	Transition	Set to the Transition mode
	Overlay	Set to the Picture-in-Picture mode
Transition Settings	Speed	Set the transition speed
	Mode	Set the transition mode to either <b>Swap</b> (program and preview sources switch places) or <b>Follow</b> (the preview source follows the program)
	Effect	Select one of the following effects: <b>Cut, Fade, Diagonal, Wipe, Circle, Square, Diamond, Triangle, Curtain, Chessboard</b> or <b>Blinds</b>
	Direction	Select the point of entry of the transition (depending on the Effect that was selected in the previous item): <b>From Top Right / Left to Right / Inbound / Horizontal</b> <b>From Top Left / Right to Left / Outbound / Vertical</b> <b>From Bottom Right / Up / Random</b> <b>From Bottom Left / Down</b>
	Take	Select to carry out the transition
	T-Bar	Set T-Bar operation (from 0 to 100%): Set Soft touch to On or Off (see <a href="#">Section 9.3.1.2</a> ).  Note that when using the T-Bar, the OSD menus are disabled as well as the front panel, unless the T-Bar is set to 0 or 100.
Overlay Settings	Single Window	Set to a single window mode operation with one channel displayed
	Picture in Picture	(PiP) – dual window mode operation, a smaller window superimposed over a full screen image (see <a href="#">Section 7.2</a> )
	Picture + Picture	(PoP) – dual window mode operation, both images appear side-by-side and the aspect ratios of both images are maintained (see <a href="#">Section 7.2</a> )
	Split	(SbS) – dual window mode operation, both images are placed side-by-side with the same height (see <a href="#">Section 7.2</a> )
	Customized Single	Select the customized single window as set in Window Customization (see <a href="#">Section 6.4</a> )



Setting	Function	
	Customized Dual	Select the customized dual window as set in Window Customization (see <a href="#">Section 6.4</a> )
Output	Video Resolution	<p>Select the output resolution: Native, 640x480@60, 640x480@75, 800x600@50, 800x600@60, 800x600@75, 1024x768@50, 1024x768@60, 1024x768@75, 1280x768@50, 1280x768@60, 1280x800@60, 1280x1024@50, 1280x1024@60, 1280x1024@75, 1360x768@60, 1366x768@50, 1366x768@60, 1400x1050@50, 1400x1050@60, 1600x900@60, 1600x1200@50, 1600x1200@60, 1680x1050@60, 1920x1200@60RB, 480p60, 576p50, 720p50, 720p59.94, 720p60, 1080p23.976, 1080p24, 1080p25, 1080p29.97, 1080p30, 1080p50, 1080p59.94, 1080p60, 1080i50, 1080i60, 2k50, 2k60, 4k2k30</p> <p> Note that setting the output resolution to 4k2k30 will automatically change the window settings to Single Window in the Overlay mode.</p>
	Master Connection	<p>Set to <b>Program</b> or <b>Preview</b> to determine the Machine's behavior.</p> <p>If the native resolution is not supported by the selected Master Connection, the system searches for the best supported resolution. If the search fails (for example, if the master connection is disconnected or EDID is unreadable), the resolution will default to XGA.</p>
	Deep Color	Select <b>Off</b> or <b>Follow Output</b>
	Color Space	Select <b>RGB</b> , <b>YPbPr422</b> or <b>YPbPr444</b>
	HDCP Mode	<p>Define the output HDCP activation policy. Set to:</p> <p><b>Follow Output</b> (this option is recommended when the HDMI type output is connected to a splitter/switcher) – to activate the HDCP per output according to the setting of the HDMI acceptor to which it is connected; that is, if the HDMI acceptor is not HDCP compliant, the <b>VP-772</b> always outputs without HDCP and vice versa.</p> <p><b>Follow Input</b> – to activate the HDCP on all HDMI type outputs in the case that the video on the Main or PiP window is HDCP encrypted.</p> <p>Note that the <b>VP-772</b> will output a green screen if the output acceptor to which it is connected is not HDCP compliant, in the case that the video on the Main or PiP window is HDCP encrypted.</p>

## 6.4 Program / Preview Menus

The Program and Preview menus are identical.

Note that when browsing the Program OSD menu, use a long press on the MENU button to jump to the Preview menu and vice versa.

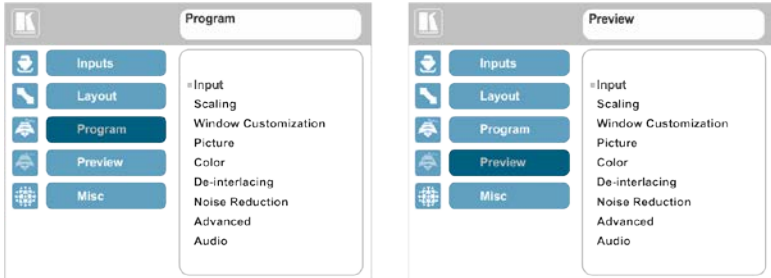


Figure 12: Program/Preview Menus

Setting	Function	
Input	Input 1 to Input 8	Select the Program/Preview source and then set the parameters below (which are specific per input)
Scaling	Aspect Ratio	Set (see <a href="#">Section 6.4.1</a> ) to: <b>Follow Input</b> – If the input resolution $\leq$ output resolution, display with a blank border. input > output is denied and the aspect ratio automatically changes to Follow Output <b>Follow Output</b> – If the input resolution < output resolution, scale up the picture. If the input resolution > output resolution, scale down the picture <b>Best Fit</b> – the best possible compromise between the input and the output aspect ratios <b>Letterbox</b> – to compress the top and bottom edges of the input signal, but fill the width of the screen
	Overscan	Set the Overscan to <b>Follow Input</b> , <b>Off</b> , <b>5%</b> or <b>10%</b>
	Zoom Shift Mode	Set to: <b>Auto</b> – to set zoom to 100% and fit the image to the display <b>Semi Auto</b> – to manually set the zoom and shift. Changes until the input resolution is changed <b>Customized</b> – to manually set the zoom and shift (H image shift and V Image Shift)
	H image Shift	Set the horizontal position of the image within the window (note that this is a volatile parameter when selecting Ratio Shift Mode > Auto)
	V image Shift	Set the vertical position of the image within the window (note that this is a volatile parameter when selecting Ratio Shift Mode > Auto)
Window Customization	Set H Position, Width, V Position and Height of the window (see <a href="#">Section 6.4.1.2</a> and <a href="#">Section 6.4.1.1</a> )	
Picture	Brightness	Set the brightness level

Setting	Function	
	Contrast	Set the contrast level
	H Sharpness	Select the horizontal sharpness level
Picture	V Sharpness	Select the vertical sharpness level
Color	Chroma	Set the color level
	Hue	Set the color hue
	Color Temperature	Set the color temperature to <b>6500K</b> or <b>9300K</b>
	Gamma Mode	Set the gamma correction factor to <b>Off, 0.4, 0.8, 1.2, 1.6, 2.0, 2.4</b> or <b>2.8</b> The higher the value, the darker the image
	Color Correction Blue	Set the blue color level from 0 to 4
	Color Correction Green	Set the green color level from 0 to 4
	Color Correction Flesh	Set the flesh color level from 0 to 4
	De-interlacing	Film Mode
PD Time		Set the pull down time
Motion Detection Sensitivity		Set (from <b>Level 1</b> to <b>Level 5</b> ) Select the motion detection sensitivity for filtering of interlaced images. Set a high value for video where there is generally a large amount of motion, or a low value for little motion
Diagonal Correction		Set the level of diagonal interpolation from 0 to 3. When set to the lower level, the diagonal image does not appear smooth
Noise Reduction	Horizontal NR	Reduces the horizontal noise
	Vertical NR	Reduces the vertical noise
	Temporal NR	The higher the level, the stronger the filtering of the image. Useful when the noise is visible to the eye
	Block NR	As the level is set higher, the block noise disappears and the image appears softer
	Mosquito NR	The higher the level, the stronger the filtering of the image
	Combing NR	Improves the quality of the subtitles
Advanced	Projection	Set to: <b>Front</b> – to place a projector in front of the screen <b>Back</b> – to place a projector behind the screen <b>Ceiling Front</b> – to suspend a projector from the ceiling upside-down in front of the screen <b>Ceiling Back</b> – to suspend a projector from the ceiling upside-down behind the screen

Setting		Function	
Advanced (continued)	Pause	<p>Set <b>Freeze</b> to <b>On</b> to freeze the window (freezing the window will also mute the audio output) Any change in the input source may cancel the freeze and blank settings</p> <p>Set <b>Blank</b> to <b>On</b> to display a blank window (blanking the window will also mute the audio output) Any change in the input source may cancel the freeze and blank settings</p> <p>Set <b>Mute</b> to <b>On</b> to mute the audio output A mute icon appears on screen</p>	
	Sync Off	Set to <b>Auto</b> (select enable or disable and set the timeout value) or select <b>Manual</b> (Once Manual is selected, a countdown appears (configured via the protocol Timeout command, see <a href="#">Section 12.2.2</a> ), letting you cancel the process and revert to the previous state by pressing the MENU or left arrow button).	
Advanced (continued)	Test Pattern	Set the Test pattern to <b>Slide Bar</b> (non-HDCP), <b>Color Bar</b> (HDCP) or <b>Off</b> . Each test pattern includes a sinusoid audio signal at 10dB @1kHz. We recommend that you set the Display Mode to Single Window and set the Output Resolution to 1080p.	
	No Signal	If there is no signal on the input set the output color to <b>Gray, Blue or Black</b>	
	Fade-thru	When switching inputs, select fade thru <b>Black</b> or fade thru <b>Freeze</b> .	
Audio	Source	Select the audio source to be: <b>AFV</b> for the audio to follow the video <b>Analog 1 to Analog 8</b> to select any of the analog audio inputs	
	AFV Source	When in the AFV mode, select <b>Embedded</b> for the embedded audio source to follow the video Select <b>Analog</b> for the analog audio source to follow the video	
	ProcAmp	Output Volume	Set the output volume level
		Bass	Set the bass level [dB]
		Mid	Adjust the midrange frequency
		Treble	Adjust the treble
		Balance	Adjust the balance
Lip Sync	Set the Lip Sync delay value [msec]		

### 6.4.1 Window Customization in the Overlay Mode

Window customization lets you change the size and position of a selected window. Make sure that you are setting the correct window (Window Customization in the Program OSD menu for the Main window and Window Customization in the Preview OSD menu for the PiP window).

In the following examples, the Preview OSD Menu is selected to set the PiP window size, but the same procedure applies to setting the Main window (via the Program OSD menu).



Note that you can also customize the window size and position via the “Y” commands (see [Section 12.2](#)) and Web pages (see [Section 9.2](#)).

### 6.4.1.1 Changing the Size of the Main and/or PiP Window

Use the H Width and V Height to change the size of the window using the + and – buttons on the front panel or remote control transmitter (as illustrated in [Figure 13](#)).

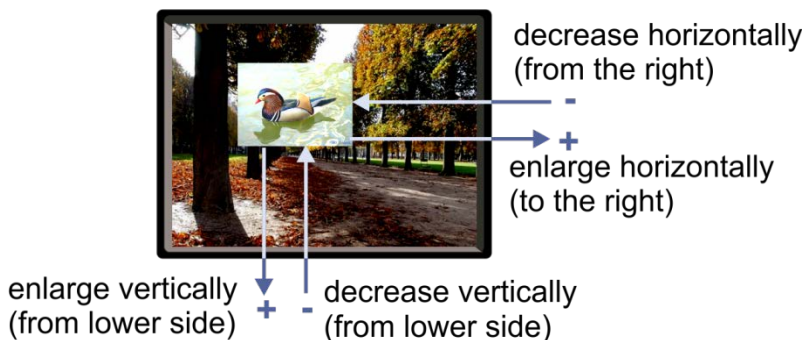


Figure 13: Changing the Size of the Window

To change the size of the window, do the following:

1. Check that the window is set to the Overlay mode (see [Section 6.3](#)).
2. Select Program or Preview Window Customization (see [Section 6.4](#)).
3. Select H width (an OSD slide bar appears) and press + to increase the width, or – to decrease the width, see [Figure 14](#).

The following example shows how to increase the width of the PiP window

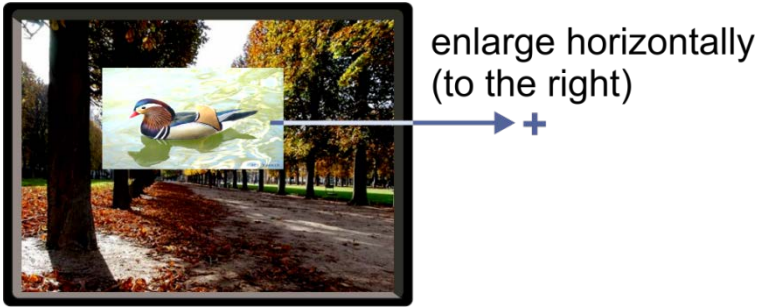


Figure 14: Increasing the Width

4. Select V Height (an OSD slide bar appears) and press + to increase the height, or – to decrease the height, see [Figure 15](#).

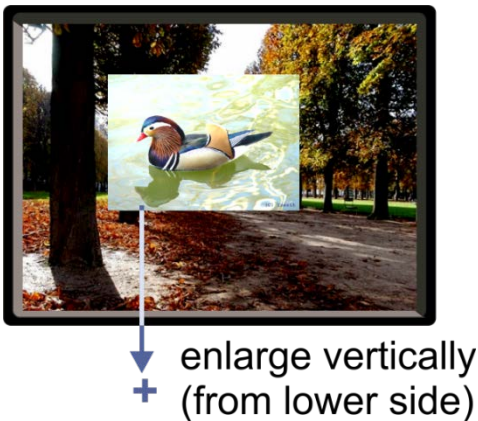


Figure 15: Increasing the Height

#### 6.4.1.2 Moving the Position of the Main and/or PiP Window

Use the H Position and V Position items in the OSD to change the position of the window using the + and – buttons on the front panel or remote control transmitter (as illustrated in [Figure 16](#)).

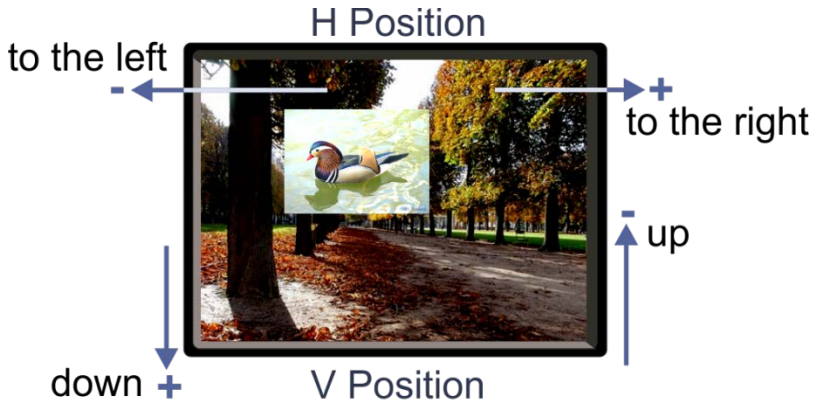


Figure 16: Positioning the Window

To move the position of the window, do the following:

1. Check that the window is set to the Overlay mode (see [Section 6.3](#)).
2. Select Program or Preview Window Customization (see [Section 6.4](#)).
3. To move the picture to the right, select H Position.  
An OSD slide bar appears:
4. Press the +/- buttons to move the PiP window horizontally.  
Use the V Position menu item in the same way to move the PiP vertically, see [Figure 17](#).



Figure 17: Moving the PiP Window



Note that the sequence in which you change the size and position of the window is insignificant, as long as you make sure that the resized image does not go beyond the window boundaries.

## 6.4.2 Selecting the Correct Aspect Ratio

You can configure the aspect ratio of any output image to fit your application. The **VP-772** offers four different aspect ratio settings: Follow Input, Follow Output, Best Fit and Letterbox. Here is how each of these settings works.

**FOLLOW INPUT** – The aspect ratio and resolution of the input video or graphics signal are both preserved (no scaling). For example, a composite video image with a 4:3 aspect ratio will appear with the same aspect ratio on a 1080p (16:9) output image, surrounded by black bars



**FOLLOW OUTPUT** – The aspect ratio and resolution of the input signal is re-sized to precisely match the aspect ratio and resolution of the **VP-772** output signal. This may result in some distortion to the input signal images



**BEST FIT** – This setting re-sizes the video or graphics input signal to “best fit” the output resolution while maintaining the aspect ratio of the input signal. For example, a composite video signal (4:3 aspect ratio) will “best fit” to the top and bottom of a widescreen output image, resulting in black pillars on either side.



**LETTERBOX** – This setting compresses the top and bottom edges of the input signal, but fills the width of the screen. For example, to preserve a widescreen film image on a 4:3 display. When not using a 4:3 resolution, this mode is identical to Best Fit





## 6.5 Misc Menu

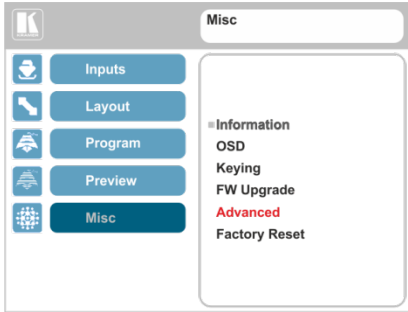





Figure 18: Misc Menu

Setting	Function	
Information	Program	Displays the Program settings: selected input, input resolution, frequency and output resolution
	Preview	Displays the Program settings: selected input, input resolution, frequency and output resolution
	FW Versions	Shows the different FW versions
	Network	Displays the network information: IP address, Netmask, Gateway and DHCP
OSD	H Position	Set the horizontal position of the OSD
	V Position	Set the vertical position of the OSD
	Transparent	Set the transparency to On or Off
	Gain	Set the transparency level (once set to transparent)
	Bias	Set the transparency level
	Timeout	Set to <b>30</b> seconds before OSD timeout, <b>60</b> seconds before OSD timeout or <b>Off</b> (Off means that that the OSD appears continuously)
Keying	Chroma Keying Red	Set the threshold value of the red components for chroma keying
	Chroma Keying Green	Set the threshold value of the green components for chroma keying
	Chroma Keying Blue	Set the threshold value of the blue components for chroma keying
		Note that the combination of threshold values (for red, green and blue) determines the chroma keying threshold. Any image with combined values of red, green and blue that are below this threshold will become transparent when chroma keying is enabled (see below).
	Chroma Keying	Set to <b>On</b> or <b>Off</b> to enable/disable chroma keying Note that this feature is available in overlay mode dual windows
	Luma Keying	To turn the keying on the PiP window <b>On</b> or <b>Off</b> (see <a href="#">Section 6.5.1</a> ) Note that this feature is available in overlay mode dual windows

Setting	Function	
Keying (continued)	 Note that either chroma keying or luma keying can be enabled. If one is set to <b>On</b> , the other will be <b>Off</b> .	
FW upgrade	Upgrade	Select to upgrade the firmware (see <a href="#">Section 10.1</a> )
	Rollback	Select to return to the previous firmware revision (see <a href="#">Section 10.2</a> )
<b>Advanced</b>	N/A	
Factory Reset	Reset to factory default values (see <a href="#">Section 11.1</a> ). Select <b>Including ETH</b> to perform a full factory reset or <b>Excluding ETH</b> to reset without ETH parameters. Once Factory Reset is selected, a countdown appears, letting you cancel the process and revert to the previous state  <b>DO NOT</b> turn the machine off during the factory reset process. The factory reset process takes up to 3 minutes in which all the front panel button lights turn off (except for the PANEL LOCK button) and then turn on again; the image on the displays reappears and only then you can turn the machine off if required	

### 6.5.1 The Luma Keying Feature

The luma keying feature lets you display the Preview window (the key image) as semi-transparent over the Program window. This feature can be used to have the Preview window display a static or dynamic logo, for example, which will appear on a transparent background.

To apply the luma keying feature, first set the Preview window to the desired size and location and then turn luma keying On. The Preview image will show without its background.

The lower the luminance in the Preview window, the more transparent it becomes, thus letting the Program window image show. The higher the luminance, the less transparent it becomes, not letting the Program window show through. To use this feature it is recommended to set the Preview image as follows: use low-luminance colors for the background (the key image portion) and high-luminance colors for the logo.

---

# 7 Layout

The **VP-772** can function in two modes, the:

- Transition mode
- Overlay (Picture in Picture) mode

The operation modes are set by selecting the display Mode via the Layout menu (see [Section 6.3](#)).

## 7.1 Transition Mode

In the transition mode you can setup the input, view it via the preview output and then switch it to the PROGRAM output.

The **VP-772** has two outputs: a PREVIEW output, and a PROGRAM output. Each of these outputs functions independently. An input is routed to the PROGRAM OUTPUT by pressing that PROGRAM INPUT front panel button. In the same way pressing a PREVIEW INPUT front panel button will route that input to the PREVIEW OUTPUT.

Use the PREVIEW output to:

- See how the scaled output looks before displaying live during a presentation
- Harmonize the transition to the PROGRAM output after determining the look and feel when in the PREVIEW output
- Use the OSD menu to make adjustments and choose the settings

When in the transition mode, you can set the speed of the transition, and determine the type and direction of the transition via the OSD menu and the Web pages (see, [Sections 6.3](#) and [9.3](#), respectively).

For example, select **Cut** for an instantaneous transition from the PREVIEW output to the PROGRAM output or select **Chessboard** for a chessboard transition effect and check **Swap** to interchange the preview with the program.

To switch the inputs in the transition mode via the OSD menu, you need to set the audio signal, define the effects and select the input:

1. In the Preview>Advanced>Audio menu, set the Audio signal:
  - Set either AFV for the audio to follow the video, or an analog input from 1 to 8
  - If AFV was selected, set that audio signal to be embedded or analog
  - Set the output volume, bass, mid, treble, balance and lip sync
2. In the Layout menu, set the display mode (for example, Transition).
3. Define the transition settings: Speed, Mode, Effect and Direction.
4. In the Preview menu, select an Input.
5. In the Layout menu select Take to carry out the transition.

To switch the inputs in the transition mode via the front panel buttons:

1. In the Preview>Advanced>Audio menu, set the Audio signal:
  - Set either AFV for the audio to follow the video, or an analog input from 1 to 8
  - If AFV was selected, set that audio signal to be embedded or analog
  - Set the output volume, bass, mid, treble, balance and lip sync
2. In the Layout menu, set the display mode (for example, Transition).
3. Define the transition settings: Speed, Mode, Effect and Direction.
4. Press the desired PREVIEW INPUT front panel button.
5. Press ENTER to carry out the transition.

To set the Program input, repeat the above procedures using the Program menu

If the transition mode is set to Swap, the Preview and Program inputs switch places. If Follow was selected, the Program input setting will follow the Preview setting and both will display the same input.



All the above actions can be performed via the Transition Settings Web page, [Section 9.3](#).

## 7.2 Overlay Mode


In the Overlay mode both outputs are identical and can display a single image (single window display mode), two images one over the other or two images side by side (dual window display mode).

A selected Program input appears as the main image in a dual window display mode (such as PiP) or as the only image in a single window display mode. A selected Preview input will appear as the PiP window in the dual window display mode and will not appear at all in the single window display mode.


The overlay settings item in the Layout menu (see [Section 6.3](#)) lets you set a Single Window, Picture in Picture (PiP), Picture + Picture (PoP) or Split images. For example, you can show a live video window on top of a graphic background, or show two images on screen of the same input channel. The PiP window appears even if no input signals are connected. In this case the PiP window appears in dark gray and the main window appears in light gray.

The preset PiP configurations are available:

**Picture-in-Picture**, with a smaller PiP window superimposed over a full main window image

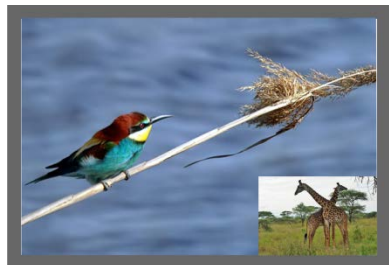

**Picture + Picture**, where both images appear side-by-side and the aspect ratios of both images are maintained

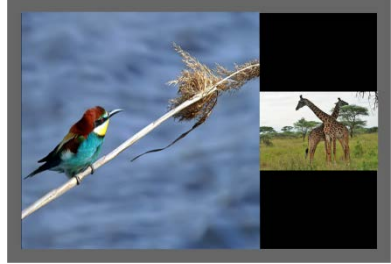

**Split**, where both images are placed side-by-side with the same height



You can superimpose any input type over any or the same input.

If the HDMI signal is HDCP protected, it can appear on HDMI and HDBT outputs that are connected to supported HDCP compliant displays. However, it cannot appear on a display that is not HDCP compliant and will show a green screen instead.

### 7.2.1 Setting the PiP

To set the PiP window in the Overlay mode:

1. In the Layout menu select Overlay Settings.  
When in the Overlay display mode
2. Select the type of image you want displayed: Picture in Picture, Picture + Picture, Split or Single Window.

### 7.2.1.1 Selecting the PiP Source via the Front Panel Buttons

When in the Overlay mode (set via the OSD menu and the Web page, see [Section 6.3](#) and [9.2.1](#), respectively), select the main window by pressing a Program input front panel button and select the PiP window by pressing a Preview front panel button (see [Figure 19](#)).



Figure 19: VGA superimposed over HDMI

### 7.2.1.2 Selecting the PiP Source via the IR Remote Control Transmitter

Press a Program button (from 1 to 8) to select the main window and press ENTER. Press a Preview button (from 1 to 8) to select the PiP window (see [Section 8.3](#)).

### 7.2.1.3 Selecting the Program/Preview Source via the OSD Menu



You can select an input source only after you set the Display mode to the Overlay mode (see [Section 6.3](#)).

To set the Program/Preview source via the OSD menu, do the following:

1. Press the MENU button to access the OSD menu.
2. In the Layout menu set Display Mode to Overlay.
3. In Overlay Settings set the image display to any of the dual window options or to single window.
4. In the Program/Preview menu, select Source.
5. Select an input (from 1 to 8).
6. Press the ENTER button.
7. Press the MENU a few times until you exit the OSD menu (changes are saved upon exit).

---

## 8 Controlling the VP-772

The **VP-772** can be controlled via:

- The front panel buttons (see [Section 8.1](#))
- The OSD menu (see [Section 8.2](#))
- The infrared remote control transmitter (see [Section 8.3](#))
- The embedded Web pages (see Section 9)

### 8.1 Controlling via the Front Panel Buttons

The **VP-772** includes the following front panel buttons:

- Mode button to select AFV, Video or Audio switching (see [Section 8.1.1](#))
- Program and Preview input selector buttons (see [Section 8.1.1](#))
- FREEZE and BLANK buttons (note, these buttons illuminate green when selected)
- MENU and ENTER buttons, up, down, left and right arrow buttons to navigate through the OSD menu (see Section 6)
- Enter button functions as TAKE when in the transition mode to carry out a transition
- Program output volume up (▷) and down (◁) buttons (when not in the OSD mode)
- Preview output volume up (△) and down (▽) buttons (when not in the OSD mode)
- RESET TO XGA/720p and PANEL LOCK buttons



### 8.1.1 Using the Mode Buttons

Press the MODE button to toggle between the AFV (green LED) mode, the VIDEO (orange LED) mode and the Audio (red LED) mode. When selected, each mode defines the function of the Program and Preview front panel buttons when next pressing the front panel buttons. That is, when in the:

- AFV mode, press an INPUT button to select the video together with its audio signal
- VIDEO mode, to select the video inputs only
- AUDIO mode to select the audio inputs only



Note that the MODE button indicates the status for the next press on the front panel input buttons only.

The input buttons light in accordance with the selected modes:



A bright green button indicates that both the audio and video signals of that input are selected (AFV with **embedded** audio signal)



A medium green button indicates that both the audio and video signals of that input are selected (AFV with **analog** audio signal)



An orange button indicates that only the video signal of that input is selected



 
A red button indicates that only the audio signal of that input is selected




A dim button indicates an ineffective signal (for all button colors)

The following example shows how to use the front panel buttons to switch inputs:


Program INPUT 6 and Preview INPUT 5 are selected. The AFV mode is selected (Program-embedded audio signal; Preview analog audio signal).



 
Press the MODE button to set it to the VIDEO mode. This will affect the next press of input buttons



 Press Program INPUT 4 – the video only switches to INPUT 4 and the audio remains in INPUT 6.




 Press Preview INPUT 8 – the video only switches to INPUT 8 and the audio remains in INPUT 5



Press the MODE button to set it to the AUDIO mode. This will affect the next press of input buttons

 
Press Program INPUT 1 – the audio only switches to INPUT 1 and the video remains in INPUT 4.




Press Preview INPUT 8 – the audio only switches to INPUT 8 and the video remains in INPUT 8 so that audio follows video and the button light green

### 8.1.2 Button Behavior in the Transition Mode


When in the Transition mode, pressing the ENTER front panel button in the Swap mode will swap the Preview and Program inputs as follows, from:

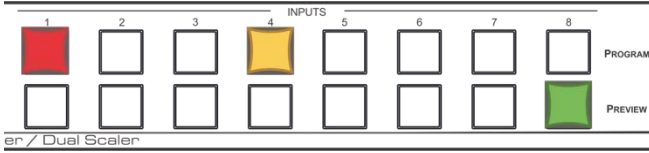


**TO**

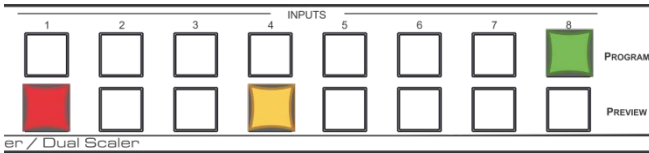

When in the Transition mode, pressing the ENTER front panel button in the Follow mode will switch the Program inputs to follow the Preview inputs:

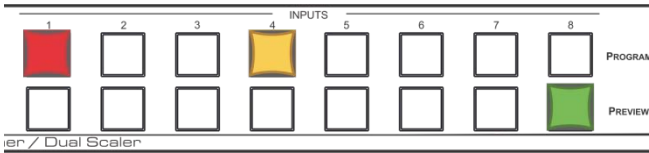


**TO**

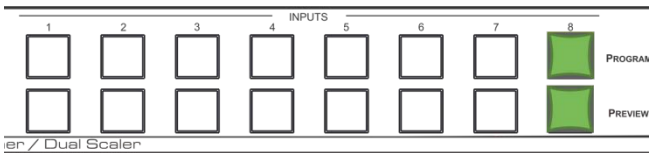


### 8.1.3 Button Behavior in the Overlay Mode

When in the overlay mode, the **VP-772** does not pass the Preview audio to the output.


In the Overlay dual mode the preview audio input button is dimmed:

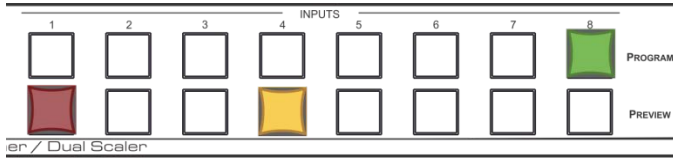

When in the Overlay mode, in the Single Window setting (see [Section 6.3](#)), the Preview buttons (Audio, Video and AFV) appear dim, as illustrated in the following examples:

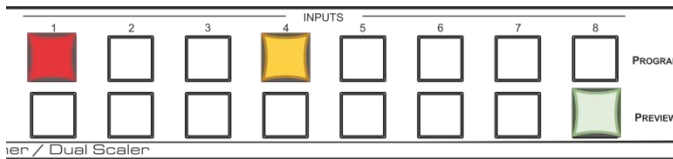

Or

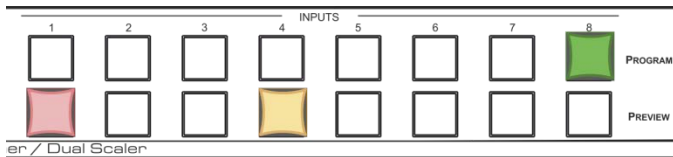

If you want to adjust the image of a selected input in a window, press that input button again (up to 3 times) for fast tuning. Pressing that input button for the fourth time initiates full tuning of the window.

## 8.2 Controlling via the OSD Menu

You can change Preview/PiP Window parameters, Program/Main window parameters and entire system parameters via the OSD menu, as described in [Section 6](#).

### 8.2.1 Connecting to the VP-772 via RS-232

You can connect to the **VP-772** via an RS-232 connection using, for example, a PC. To connect the RS-232 terminal block on the rear panel of the **VP-772** to a PC/controller connect the RS-232 9-pin D-sub port on your device to controller as shown in [Figure 20](#), connect the **VP-772** RS-232 terminal block:

- TX pin to Pin 2
- RX pin to Pin 3
- GND pin to Pin 5

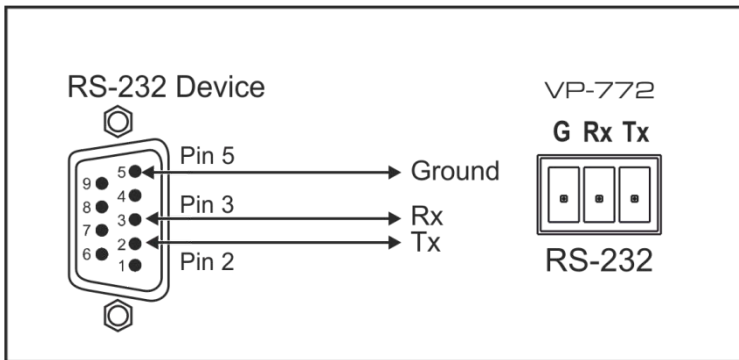


Figure 20: RS-232 Connection

### 8.2.2 Connecting the VP-772 via the ETHERNET Port

You can connect to the **VP-772** via Ethernet using either of the following methods:

- Directly to the PC using a crossover cable (see [Section 8.2.2.1](#))
- Via a network hub, switch, or router, using a straight-through cable (see [Section 8.2.2.2](#))

**Note:** If you want to connect via a router and your IT system is based on IPv6, speak to your IT department for specific installation instructions.

### 8.2.2.1 Connecting the Ethernet Port Directly to a PC

You can connect the Ethernet port of the **VP-772** directly to the Ethernet port on your PC using a crossover cable with RJ-45 connectors.



This type of connection is recommended for identifying the **VP-772** with the factory configured default IP address.

After connecting the **VP-772** to the Ethernet port, configure your PC as follows:

1. Click **Start > Control Panel > Network and Sharing Center**.
2. Click **Change Adapter Settings**.
3. Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**.

The Local Area Connection Properties window for the selected network adapter appears as shown in [Figure 21](#).

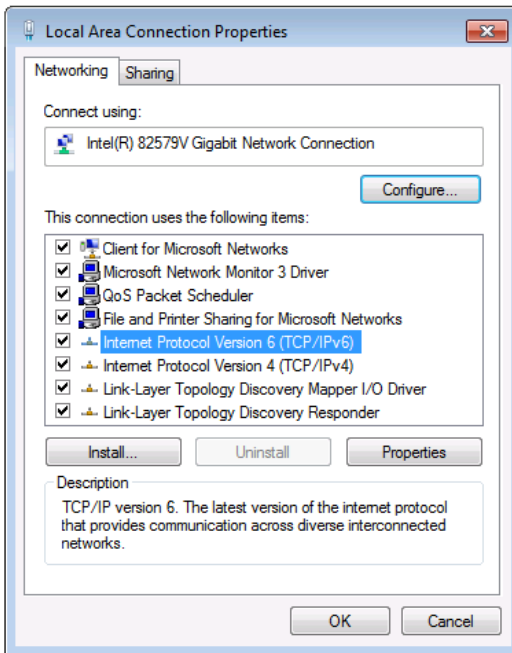


Figure 21: Local Area Connection Properties Window

4. Highlight either **Internet Protocol Version 6 (TCP/IPv6)** or **Internet Protocol Version 4 (TCP/IPv4)** depending on the requirements of your IT system.
5. Click **Properties**.

The Internet Protocol Properties window relevant to your IT system appears as shown in [Figure 22](#) or [Figure 23](#).

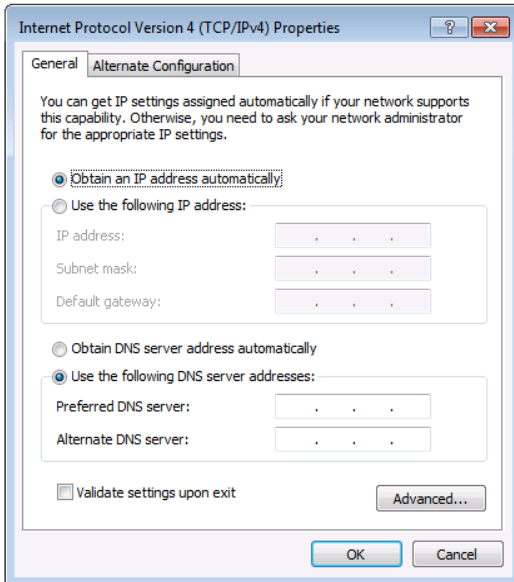


Figure 22: Internet Protocol Version 4 Properties Window

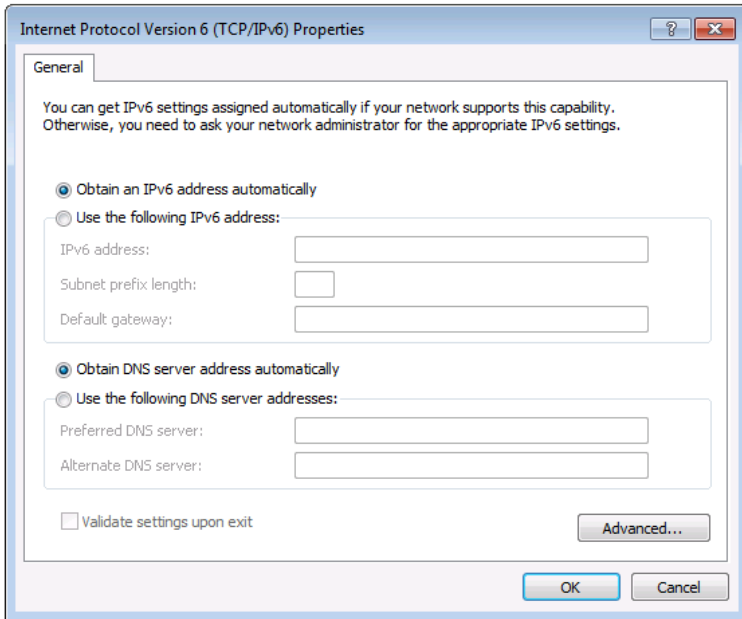


Figure 23: Internet Protocol Version 6 Properties Window

6. Select **Use the following IP Address** for static IP addressing and fill in the details as shown in [Figure 24](#).  
For TCP/IPv4 you can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.39) that is provided by your IT department.



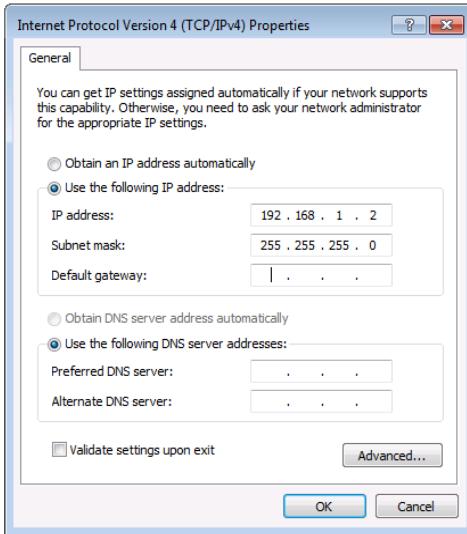


Figure 24: Internet Protocol Properties Window

7. Click **OK**.
8. Click **Close**.

### 8.2.2.2 Connecting the Ethernet Port via a Network Hub or Switch


You can connect the Ethernet port of the **VP-772** to the Ethernet port on a network hub or using a straight-through cable with RJ-45 connectors.

### 8.3 Controlling via the Infrared Remote Control Transmitter

You can control the **VP-772** from the infrared remote control transmitter:



Figure 25: Infrared Remote Control Transmitter

Keys		Function
POWER		Toggle the power save mode ON or OFF
RESET		Press to reset to the default resolution (toggles between RESET TO XGA and 720p)
PROGRAM	FREEZE	Freeze/unfreeze the output video image
	BLANK	Toggle between a blank screen black screen and the display
	MUTE	Toggle between muting (blocking out the sound) and enabling the audio output
	INPUTS	Select an input from 1 to 8
		Press ENTER to access menu levels (when in the OSD) Use the up and down arrows to adjust numerical values and adjust the output volume level (when not within the OSD)
MENU		Enter/Exit the OSD menu and return to the previous menu level
LOCK		Lock the front panel buttons
PREVIEW	FREEZE	Freeze/unfreeze the output video image
	BLANK	Toggle between a blank screen black screen and the display
	MUTE	Toggle between muting (blocking out the sound) and enabling the audio output
	INPUTS	Select an input from 1 to 8

### 8.3.1 Using the IR Transmitter

You can use the IR transmitter to control the machine via the built-in IR receiver on the front panel or, instead, via an optional external IR receiver (Model: C-A35M/IRR-50). The external IR receiver can be located up to 15 meters away from the machine. This distance can be extended to up to 60 meters when used with three extension cables (Model: C-A35M/A35F-50).

Before using the external IR receiver, be sure to arrange for your Kramer dealer to insert the internal IR connection cable (P/N: 505-70434010-S) with the 3.5mm connector that fits into the REMOTE IR opening on the rear panel. Connect the external IR receiver to the REMOTE IR 3.5mm connector.

---

## 9 Using the Embedded Web Pages

The **VP-772** can be operated remotely using the embedded Web pages. The Web pages are accessed using a Web browser and an Ethernet connection.

Before attempting to connect:

- Perform the procedures in [Section 8.2.2](#).
- Ensure that your browser is supported
- The following Web browsers are supported:

<b>Windows 7 and higher:</b>	
Chrome: from version 20 and higher	IE: from 10 and higher
Firefox: from 28 and higher	Edge: from 14 and higher
<b>Mac (PC) Yosemite 10 and higher:</b>	
Chrome: from version 20 and higher	Safari: from 7.1 and higher
<b>iOS 8.0 and higher:</b>	
Chrome: from version 20 and higher	Safari: from 7.1 and higher
Firefox: from 28 and higher	
<b>Android OS 4.4 and higher:</b>	
Chrome: from version 20 and higher	Native

- Make sure that the Web client device (for example, a tablet) resolution supports width > 1000 and height > 615

### 9.1 Browsing the VP-772 Web Pages

There are six Web pages:

- The Routing & Scaling page (see [Section 9.2](#))
- The Transition Settings page (see [Section 9.3](#))
- The Audio Settings page (see [Section 9.4](#))
- The Output Settings page (See [Section 9.5](#))
- The Device Settings page (see [Section 9.6](#))
- The About page (see [Section 9.7](#))

To browse the **VP-772** Web pages:

1. Open your Internet browser.
2. Type the IP address of the device in the Address bar of your browser. For example, the default IP address:



The Routing & Scaling Web page appears.

[Figure 26](#) shows the Routing & Scaling page that is also the first Web page. The navigation list on the left shows the available Web pages.

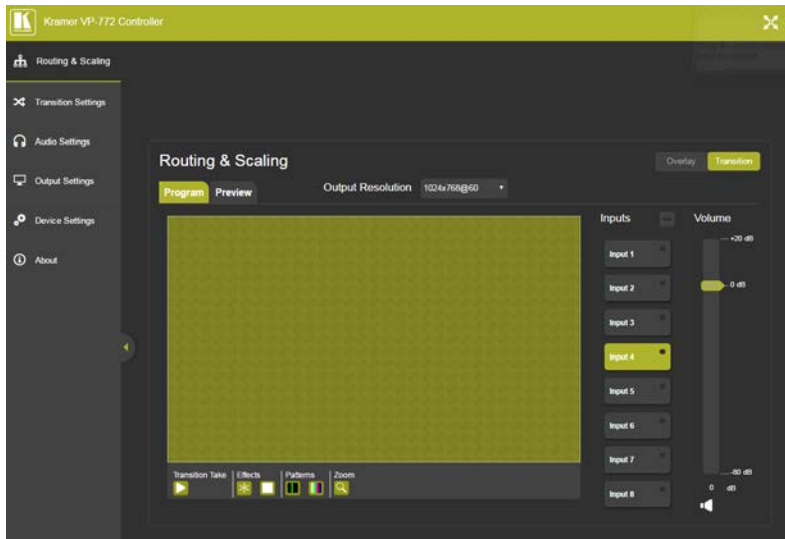




Figure 26: Routing and Scaling Page with Navigation List on Left

Click the arrow to hide the navigation list on the left (note that the page icons remain visible allowing you to select a Web page even if the list is hidden).

Click the  button to view the Web pages in full screen and click  to exit.

## 9.2 Routing & Scaling the Image

The Routing & Scaling Web page enables performing of the following functions which apply to both the Overlay and Transition modes:

- Setting to Overlay or Transition mode (see [Section 9.2.1](#)).
- Selecting an input (see [Section 9.2.2](#)).
- Selecting the output resolution (see [Section 9.2.3](#)).
- Selecting Effects and Test Patterns (see [Section 9.2.4](#)).
- Zooming the image (see [Section 9.2.5](#)).
- Setting or muting the output volume (see [Section 9.2.6](#))

Functions that are specific to the Transition or Overlay modes are specified in sections [9.2.7](#) and [0](#), respectively.

### 9.2.1 Setting the Operation Mode

The Routing & Scaling page enables you to set the **VP-772** either to the Transition mode (see [Section 7.1](#)) or the Overlay mode (see [Section 7.2](#)).

**To set the operation mode:**

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears:


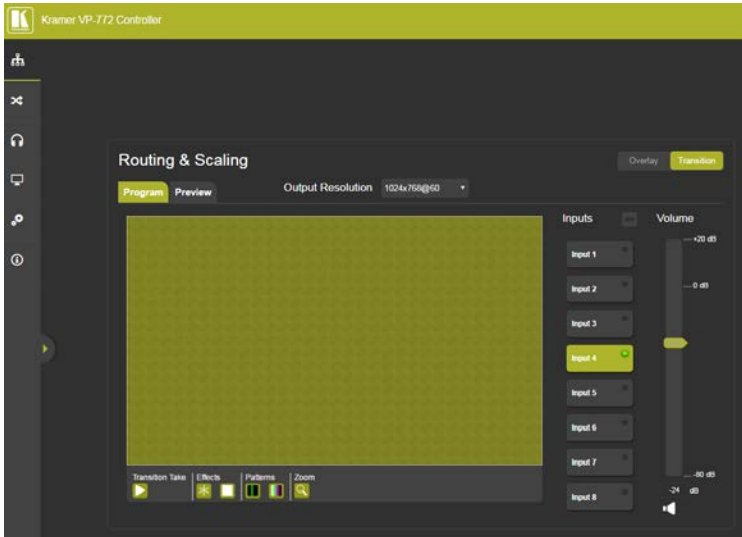


Figure 27: Routing and Scaling Page


2. Click either the Transition or the Overlay button to set the required operation mode.

Note that the lower operation buttons change according to the operation mode:

 In the Transition mode:



In the Overlay mode

 

## 9.2.2 Selecting an Input

An input can be selected separately for the Program and Preview in the Transition mode or for the Main and PIP in the Overlay mode.

**To select an input:**

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears.
2. Select an input (from Input 1 to Input 8). If there is an active signal present on the selected input the signal indicator lights green (see Input 4 in [Figure 27](#)).



### 9.2.3 Setting the Output Resolution

**To set the Output Resolution:**

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears.
2. Open the Output Resolution drop box and select the desired resolution.

### 9.2.4 Setting the Effects and Test Patterns

**To set the effects:**

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears.
2. Click the freeze button  to freeze the image or click  to set a blank display.

**To select a test pattern:**

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears:
2. Click a test pattern button.

Two patterns are available: the slide bar content (for clear content) and the color bar pattern (for HDCP content). Note that selecting a test pattern disables the Effects buttons.



## 9.2.5 Setting the Zoom

The zoom button lets you zoom the image up to 4000% and shift the image to zoom into a specific area.

Note that if there is no active signal on the input, the Zoom window will not open.

### To zoom into the image:

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears.
2. Click the Zoom button.

The PROGRAM ZOOM window appears:

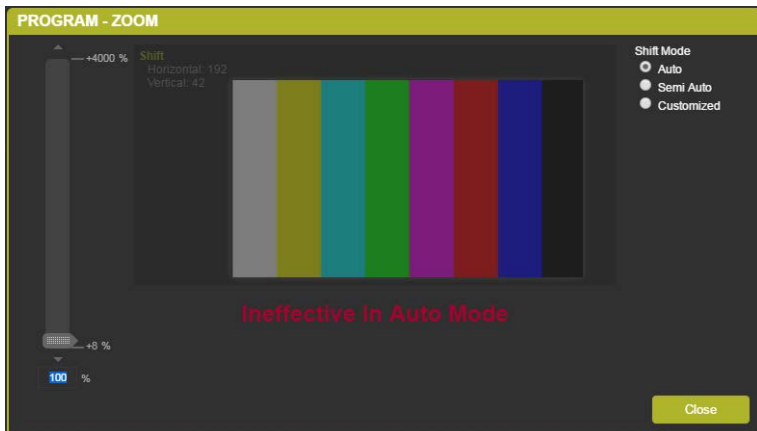


Figure 28: Routing and Scaling Page – PROGRAM – ZOOM Window

Three Zooming options are available:


- The Auto mode which automatically sets the Zoom to 100% and places the image correctly on the display.
- The Semi-Auto image in which the zoom and shift that are set manually do not change unless the input resolution is changed. In that case the zoom shift mode will return to Auto mode.
- The Customized mode in which the zoom and shift are set manually and do not change even if the source/input resolution are changed.

## 9.2.6 Setting the Output Volume

### To set the Output Volume:

1. In the Navigation pane, click **Routing & Scaling**. The Routing & Scaling page appears.
2. Use the volume slider on the right side to set the output volume and click the speaker button to mute (🔇) or unmute (🔊) the audio output.

## 9.2.7 Transition mode Specific Functions

In the transition mode, press the Transition Take  button to carry out a transition as defined in [Section 9.3](#).

 


Figure 29: Routing and Scaling Page – Transition Take

## 9.2.8 The Overlay Mode Specific Functions

The Overlay mode enables you to perform the following functions:

- Set the size and the position of the Main and PIP images.
- Set the layout of the Overlay mode.
- Set the customized image size.
- Keep aspect ratio when resizing the image.

### To set the size of the Main and PIP images:

1. Drag and pull a horizontal or a vertical arrow to change the size of the width and height of the image, respectively.

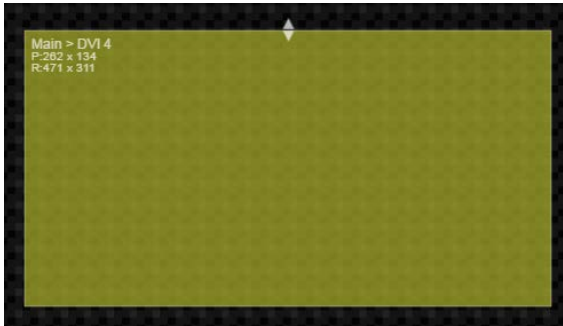


Figure 30: Routing and Scaling Page – Changing the Image Size

### To set the position of the image:

1. Click and drag the image to its new location.



The size and position of the image are set as the customized image sizes and appear when selecting Customized Single or Customized Dual layouts. The size and position of the image is indicated on the top left side of the image.

### To set the Layout:

1. Click the desired layout button: Single Window, Picture in Picture, Picture + Picture, Split or customized (as defined when setting the size and the position of the image):



Figure 31: Routing and Scaling Page – Selecting the Layout

For example, setting the Picture in Picture layout results in the following:

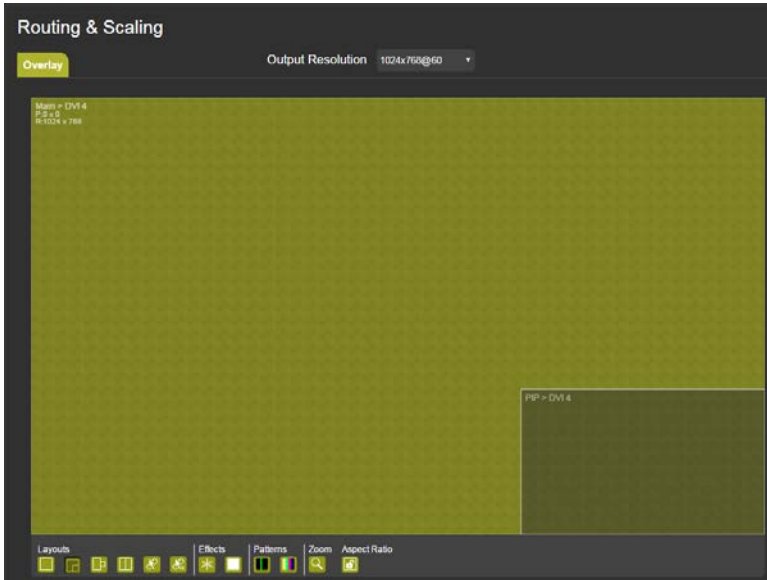


Figure 32: Routing and Scaling Page – Setting the Layout

Setting to customized Dual shows the manually defined images:

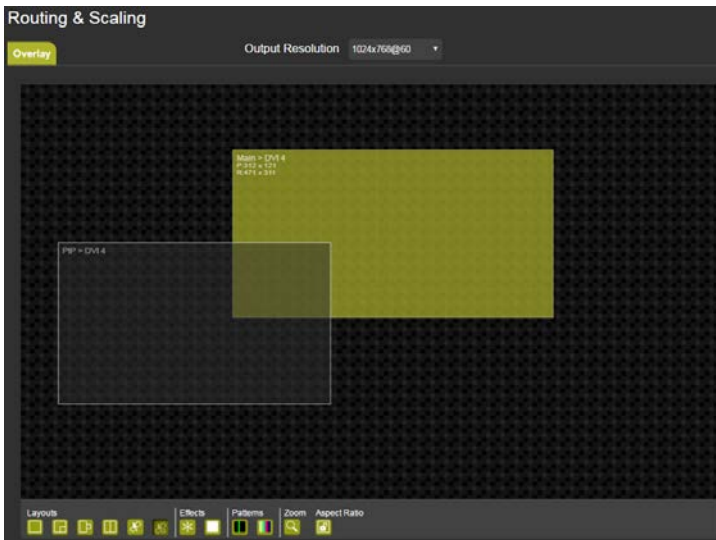


Figure 33: Routing and Scaling Page – Customized Dual Layout

## 9.3 Transition Settings Page

The Transition Settings page is enabled in the Transition mode:

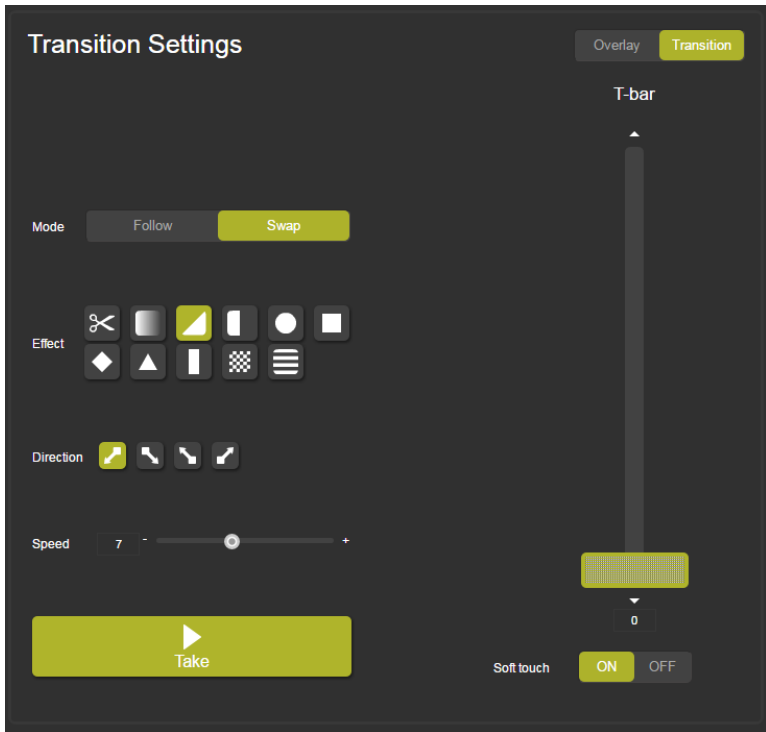


Figure 34: Transition Settings Page

The Transition Settings page allows you to perform the following functions (see [Section 6.3](#) for further details):

- Set the VP-772 to the Transition mode (see [Section 9.2.1](#))
- Set the Transition (see [Section 9.3.1](#))

### 9.3.1 Transition effects

Set the transition mode, effect, direction and speed of the transition and then press take to carry out the transition. You can also use the T-Bar to carry out a transition.

### 9.3.1.1 Setting Transition Effects

#### To set the transition effects:

1. In the Navigation pane, click **Transition Settings**. The Transition Settings page appears.  
Note that the Transition Settings page is enabled only in the Transition mode.
2. Select either Swap or Follow mode.  
Swap mode: Program and Preview inputs swap places.  
Follow Mode: Program input follows the Preview input.
3. Set the transition effect, click one of the available effects, and if required, the direction of the selected effect.
4. Click Take to carry out the transition setup.

### 9.3.1.2 Using the T-Bar

You can perform a transition using the T-Bar by using the slide or you can use the up and down arrows (identical to using + and - in the OSD menu) to move one step with each press of an arrow.



Note that when using the T-Bar, all the Web pages and OSD menus are disabled as well as the front panel buttons, unless the T-Bar is set to 0 or 100%.

#### To use the T-Bar slider:

1. In the Navigation pane, click **Transition Settings**. The Transition Settings page appears.
2. After setting the transition effects, slide the T-bar (from one point on the slider to another point) to complete the transition.  
The extent of the transition depends on the position of the slider.  
For example, 100% means a full transition 50% means a halfway transition.  
The rate at which you slide the handle determines the smoothness of the transition.

### To use the T-Bar arrows:

1. In the Navigation pane, click **Transition Settings**. The Transition Settings page appears.
2. After setting the transition effects, click the up arrow (or down arrow) as many times as you need to perform the transition in steps.

If Soft touch is set to **ON**, the transition will be carried out smoothly between steps.

If Soft touch is set to **OFF**, the transition will be carried out abruptly between steps.

Note that Soft touch selection (ON/OFF) is a trade-off between Speed and a smooth transition and vice-versa.

### T-Bar Limitations

T-Bar does not function when the:

- Display mode is set to overlay
- Selected effect is chessboard and the direction is random
- Selected effect is curtain and the direction is horizontal
- Selected effect is square and the direction is outbound
- Selected effect is cut

## 9.4 Audio Settings Page

The Audio page lets you define the audio parameters in the Overlay and Transition Mode. In the Transition mode you can set the Preview and Program audio parameters while in the Overlay mode you can set the Main audio parameters:

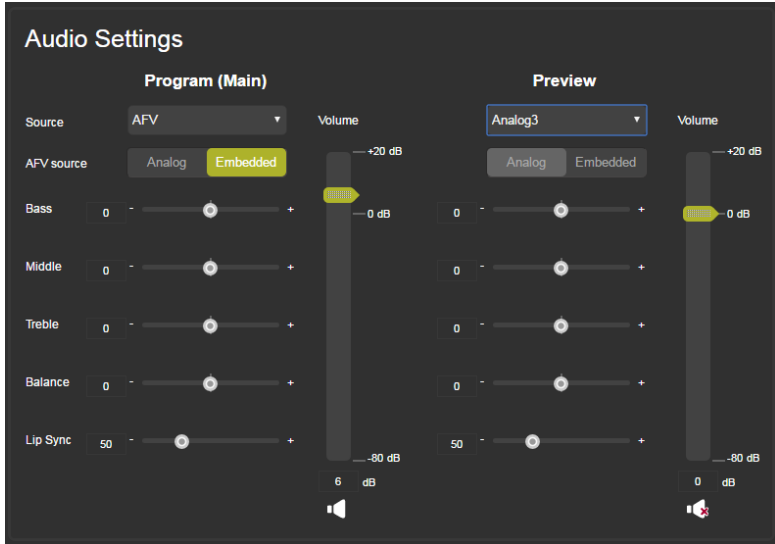


Figure 35: Audio Settings Page

The Audio Settings Web page enables performing the following functions:

- Set AFV (see [Section 9.4.1](#)).
- Adjust the Bass, Middle, Treble, balance and Lip Sync (see [Section 9.4.2](#)).
- Adjust the output volume (see [Section 9.2.6](#)).

### 9.4.1 Setting AFV

1. In the Navigation pane, click **Audio Settings**. The Audio Settings page appears.
2. Set the source to AFV or to any of the 8 analog inputs.



If an analog audio source is selected, the AFV source is disabled and is set to Analog.



## 9.4.2 Adjusting Audio Parameters

1. In the Navigation pane, click **Audio Settings**. The Audio Settings page appears.
2. Use the various sliders to set the audio parameters.

## 9.5 Output Settings Page

The output Settings pages enables to define output parameters:

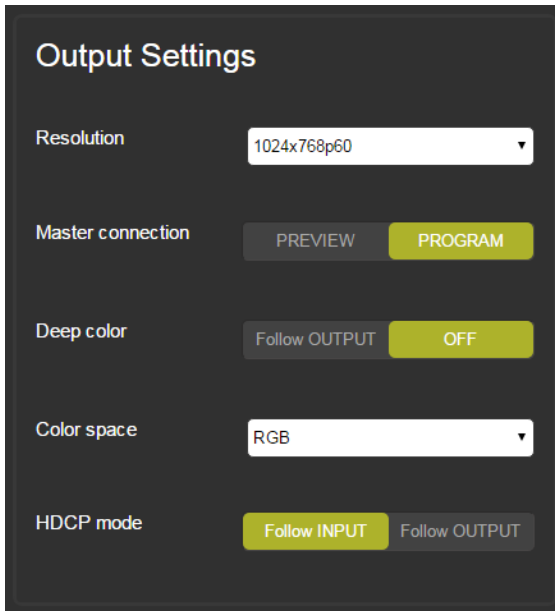


Figure 36: Output Settings Page

The following functions can be set:

- Output resolution (see [Section 11](#))
- Master connection (Preview or Program)
- Deep color settings (Follow Output or Off)
- Color space (RGB, YPbPr422 or YPbPr444)
- HDCP mode (Follow Input or Follow Output)

## 9.6 Device Settings Page

The device Settings page ([Figure 38](#)) allows you to set the:

- Unit name (type the name and click the Set button)
- Ethernet parameters
- View the Information window

**Device Settings**

Model **VP-772**

Unit name

Serial number **00011112222334**

Mac address **00-1D-56-02-A0-BF**

---

DHCP  ON  OFF

IP address

Subnet Mask

Gateway




Figure 37: Device Settings Page

### 9.6.1 Setting the Ethernet Parameters

When setting DHCP **OFF**, the DHCP OFF window lets you select the default IP address or a custom IP address:

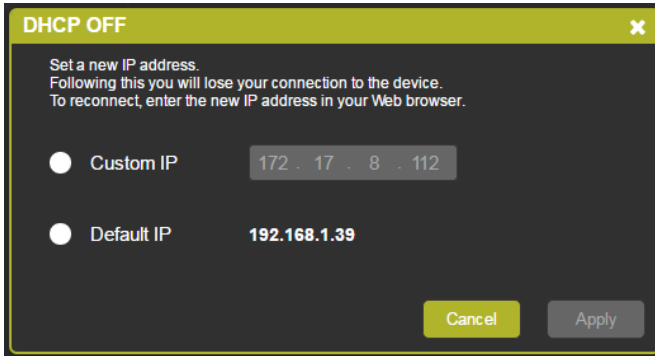


Figure 38: Device Settings Page – DHCP Window

You need to confirm the changes and reopen the Web pages.

### 9.6.2 View VP-772 Information

Click the Information button (I) to view the device information:

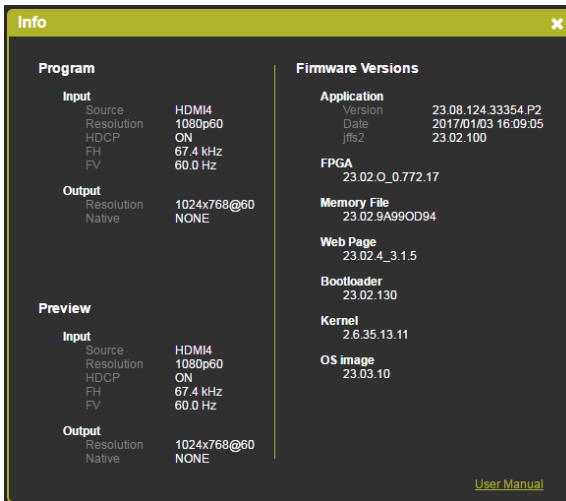


Figure 39: Device Settings Page Info Window

## 9.7 About Page

The **VP-772** About page lets you view the Web page version and Kramer Electronics Ltd details.



Figure 40: About Page

---

# 10 Firmware Upgrade

This section describes the firmware upgrade of the **VP-772** components that are described in the table below:

File Type	In OSD	Description	Becomes Effective After
RBF	[R]	An *.rbf file to upgrade FPGA	<b>VP-772</b> application restart
Memory	[M]	upgrades the other Alteras and the OSD bitmap	<b>VP-772</b> application restart
Application	[A]	The main <b>VP-772</b> application	<b>VP-772</b> application restart
Linux kernel	[K]	Includes all drivers for the <b>VP-772</b> board	Rebooting the board
Cramfs	[C]	A read only Linux file system	Rebooting the board
Bootloader	[B]	Launches the Linux kernel	Rebooting the board
Jffs2	[J]	A read/write file system including the RBF and Memory files, as well as the application	Rebooting the board



Note that rebooting the device following firmware upgrade, may be slower and rarely with flashing LEDs on the front panel.



The latest firmware version can be downloaded from the Kramer Web site at [www.kramerav.com/downloads/VP-772](http://www.kramerav.com/downloads/VP-772).

## 10.1 The Firmware Upgrade Process



Check if the package includes additional firmware upgrade instructions.

Unzip the firmware files on your desktop to a folder named “VP-772” and then copy that folder to a memory stick **as a root folder**.



We recommend that you use an empty, FAT32-formatted (<32GB) USB memory stick. If this is not possible, use a memory stick with at least 30Mb of free space.

After copying the “VP-772” folder, the USB memory stick is ready to be used by attaching it into the device.



Make sure that you remove the USB memory stick safely from your PC. Failing to do so may corrupt the firmware files on the memory stick.

To upgrade the firmware:

1. Connect the USB memory stick to the S/W UPGRADE USB port on the rear panel of the **VP-772**.
2. On the front panel click the MENU button, select FW Upgrade and then select Upgrade (see [Section 6.5](#)).

The OSD shows the firmware version found in the memory stick:

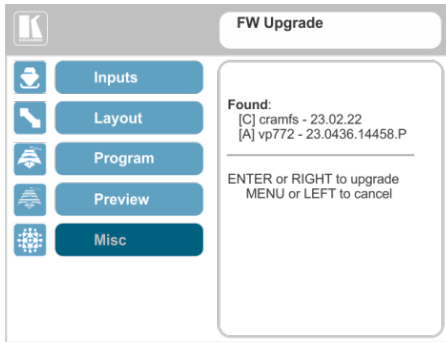


Figure 41: Firmware Upgrade – list of Files to Upgrade

3. Click the ENTER button on the front panel.  
Wait for the completion of the upgrade process:

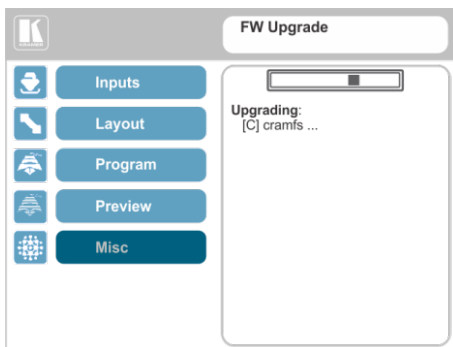


Figure 42: Firmware Upgrade – Upgrade Process

When the firmware upgrade is complete, the list of upgraded files appears:

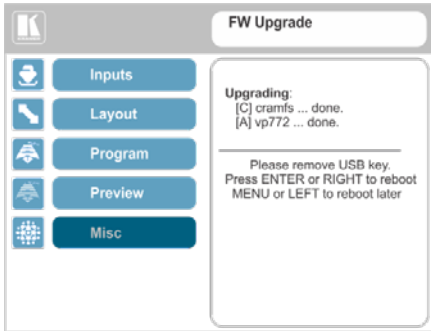


Figure 43: Firmware Upgrade – Upgrade Complete

4. Remove the USB memory stick and click the ENTER button on the front panel to reboot the system.

## 10.2 Rollback

The Rollback feature lets you restore the previous firmware version installed by the user. To do so:

1. On the front panel click the MENU button, select FW Upgrade and then select Rollback (see [Section 6.5](#)).

The OSD shows the firmware version found in the system:

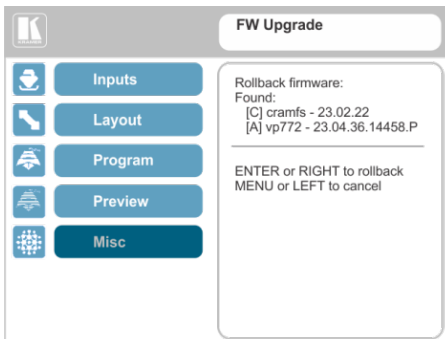


Figure 44: Firmware Upgrade – list of Files to Rollback

2. Press the ENTER button or the left arrow to proceed. Wait for completion of the procedure.
3. Reboot the machine by turning it off and then on again.

# 11 Technical Specifications

Inputs:	8 DVI-U inputs (DVI-D, HDMI, PC, YPbPr and CV) on DVI-I connectors 8 balanced stereo audio on 5-pin terminal block connectors
Outputs:	2 DVI-I outputs (DVI-D, HDMI and PC) on DVI-I connectors 2 balanced stereo audio on 5-pin terminal block connector
Compliance with HDMI Standard:	Supports HDMI (deep color) and HDCP
Output Resolutions:	640x480@60, 640x480@75, 800x600@50, 800x600@60, 800x600@75, 1024x768@50, 1024x768@60, 1024x768@75, 1280x768@50, 1280x768@60, 1280x800@60, 1280x1024@50, 1280x1024@60, 1280x1024@75, 1360x768@60, 1366x768@50, 1366x768@60, 1400x1050@50, 1400x1050@60, 1600x900@60, 1600x1200@50, 1600x1200@60, 1680x1050@60, 1920x1200@60RB, 480p60, 576p50, 720p50, 720p59.94, 720p60, 1080p23.976, 1080p24, 1080p25, 1080p29.97, 1080p30, 1080p50, 1080p59.94, 1080p60, 1080i50, 1080i60, 2k50, 2k60, 4k2k@30
Controls:	Front panel buttons, OSD, IR remote control, RS-232 on a 9-pin D-sub connector, Ethernet
Operating Temperature:	0° to +40°C (32° to 104°F)
Storage Temperature:	-40° to +70°C (-40° to 158°F)
Humidity:	10% to 90%, RH (non-condensing)
Power Consumption:	100-240V AC, 38VA max.
Dimensions:	19" (W), 9.3" (D) 1U (H) rack mountable
Shipping Dimensions:	52.5cm x 33cm x 10.7cm (20.7" x 13" x 4.2") W, D, H
Weight:	4.3kg (9.5lbs) approx.
Shipping Weight:	5.3kg (11.7lbs) approx.
Included Accessories:	Power cord, rack "ears", IR remote control 2 DVI-A (M) to 5 BNC (F) Adapter Cables (ADC-DMA/5BF-1) 2 DVI (M) to 15-pin HD (F) Adapters (AD-DM/GF)
<p>Specifications are subject to change without notice For the most updated resolution list, go to our Web site at <a href="http://www.kramerav.com">www.kramerav.com</a></p>	



## 11.1 Default Communication Parameters

RS-232	
Protocol	3000 (Default)
Baud Rate:	115,200
Data Bits:	8
Stop Bits:	1
Parity:	None
Command Format:	ASCII
Example (decrease the volume on input 5):	#Y 0,115,-<CR>
Ethernet	
IP Address:	192.168.1.39
Subnet mask:	255.255.000.000
Default gateway:	192.168.0.1
TCP Port #:	5000
UDP Port #:	50000
Maximum UDP Connections:	Unlimited
Maximum TCP Connections:	Unlimited
Full Factory Reset	
OSD	Factory Reset through the Misc menu item
Protocol 3000	Including ETH: use Factory Reset command "Including ETH" or #Y 0,561,1<CR>
	Excluding ETH: use Factory Reset command "Excluding ETH" or #Y 0,562,1<CR>
Front panel buttons	Including ETH: power up the device with the "RESET TO XGA/720P" key pressed

## 11.2 Input Resolutions

The **VP-772** features eight DVI-U inputs. This section defines the input resolutions for each input.

### 11.2.1 CV Input Resolutions

NTSC and PAL

### 11.2.2 Component Analog Video (YPbPr) Input Resolutions

PC Input Resolutions			
NTSC	720_P50	1080_P30	1080_P50
PAL	720_P60	1080_P23_976	1080_P60
525_P60	1080_I50	1080_P24	1080_I100
625_P50	1080_I60	1080_P25	

### 11.2.3 RGBHV Analog Video Input Resolutions

RGBHV Input Resolutions				
640X480_60	800x600_75	625_P50	1280x1024_60	1400x1050_75
640x480_72	800x600_85	525_P60	1280x1024_75	1600x900_60
640x480_75	1024x768_60	720_P50	1280x1024_85	1600x1200_60
640x480_85	1024x768_70	720_P60	1360x768_60	1680x1050_60
800x600_56	1024x768_75	1280x800_60	1366x768_60	1920x1200_60RB
800x600_60	1024x768_85	1280x960_85	1440x900_60	1080_P50
800x600_72	1152x864_75	1280x768_60	1400x1050_60	1080_P60

### 11.2.4 HDMI Digital Video Input Resolutions

HDMI Input Resolutions				
NTSC	1080_I60	640x480_72	1024x768_70	1360x768_60
PAL	1080_P23_976	640x480_75	1024x768_75	1366x768_60
525_P60	1080_P24	640x480_85	1024x768_85	1440x900_60
625_P50	1080_P25	800x600_56	1152x864_75	1400x1050_60
720_P24	1080_P30	800x600_60	1280x800_60	1400x1050_75
720_P25	1080_P50	800x600_72	1280x960_85	1600x900_60
720_P30	1080_P60	800x600_75	1280x768_60	1600x1200_60
720_P50	2k50	800x600_85	1280x1024_60	1680x1050_60
720_P60	2k60	848x480_60	1280x1024_75	1920x1200_60RB
1080_I50	640X480_60	1024x768_60	1280x1024_85	

## 11.3 Output Resolutions

The **VP-772** features two DVI-I outputs. This section defines the output resolutions for each output.

### 11.3.1 HDMI Digital Video Output Resolutions

Technical Specifications of the HDMI Output Signal			
640x480@60	1280x1024@50	1680x1050@60	1080p30
640x480@75	1280x1024@60	1920x1200@60	1080p50
800x600@50	1280x1024@75	480p60	1080p59.94
800x600@60	1360x768@60	576p50	1080p60
800x600@75	1366x768@50	720p50	1080i50
1024x768@50	1366x768@60	720p59.94	1080i60
1024x768@60	1400x1050@50	720p60	2k50
1024x768@75	1400x1050@60	1080p23.976	2k60
1280x768@50	1600x900@60	1080p24	4k2k@30
1280x768@60	1600x1200@50	1080p25	
1280x800@60	1600x1200@60	1080p29.97	

### 11.3.1 RGBHV Analog Video Output Resolutions

RGBHV Output Resolutions				
640x480@60	1280x800@60	1600x1200@60	720p60	1080p59.94
640x480@75	1280x1024@60	1680x1050@60	1080p23.976	1080p60
800x600@60	1280x1024@75	1920x1200@60	1080p24	1080i50
800x600@75	1360x768@60	480p60	1080p25	1080i60
1024x768@60	1366x768@60	576p50	1080p29.97	2k50
1024x768@75	1400x1050@60	720p50	1080p30	2k60
1280x768@60	1600x900@60	720p59.94	1080p50	

---

## 12 The VP-772 RS-232 Communication Protocol

The Kramer Protocol lets you control the **VP-772** from any standard terminal software (for example, the Windows® HyperTerminal Application).

### 12.1 Using the Communication Protocol

There are three different methods to control the **VP-772** RS-232 or the Ethernet:

- Protocol commands mimicking the OSD, see [Section 12.2](#)
- The button functions mimicking the remote controller buttons (as well as the front panel buttons), see [Section 12.2.2.1](#)
- Protocol 3000 common commands, see [Section 12.4](#)



All three tables together include all the protocol commands, but they are not identical and do not always include the same information. Some of the data may appear in one or two of the tables but not in the third table and vice versa.

The protocol 3000 communications protocol uses a data rate of 115200 baud, with no parity, 8 data bits, and 1 stop bit.

### 12.2 Communication Protocol: Mimicking OSD

The audio/video protocol commands define all the function numbers, their valid parameters can be used with protocol 3000.

#### 12.2.1 Using the Communication Protocol with Protocol 3000 (the “Y” Command)

**Set Command:**

Type in: “Y Control\_Type=0,Function,Param”

Reply: “~id=01Y Control\_Type=0,Function,Param OK”

Set command example: set HDCP mode for input 1 (113) to “On”

Send: “#y 0,113,1”

Result: “~01@Y 0,113,1 OK”

### Get Command:

Type in: "Y Control\_Type=1,Function"

Result: "~id=01Y Control\_Type=1,Function,Param"

Get command example: get HDCP mode for input 3 (113):

Send: "#y 1,113"

Result: "~01@y 1,113,1"

The "Y" command also supports the value increment/decrement of any command using the '+' or '-' signs as the third parameter of the "Y" command.

For example, in order to decrease the volume on input 6 (116)

Send: "#Y 0,116,-<CR>"

Reply: "~01@Y 0,116,-OK"

Note that if the value after the decrease is out of range, the reply will show an error such as: "~01@Y ERR -03"

Character Symbols Definitions	
Symbol	Meaning
□	Space
[CR]	Carriage Return, ASCII code 0x0D
[LF] or >	Line Feed, ASCII code 0x0A

### 12.2.2 Protocol Table: Mimicking OSD

You can associate a function number to its description and valid parameters intuitively by navigating the OSD menu according to the following logic:

A function number is directly related to its location in the OSD menu.

For example, the second menu on the OSD is Layout (2 in the hundreds). The third menu item in Layout is Overlay Settings (2 in the tens), therefore the function number for it will be 230 (2<sup>nd</sup> item on the Main menu and the 3<sup>rd</sup> item in the Layout submenu (see also [Section 6.1](#)). When navigating in the OSD MENU you will be able to see the Overlay Settings valid parameters.



Note that for the Inputs, menu levels 3, 4 and 5 are valid for each input from 1 to 8. For example, Type (3<sup>rd</sup> level) item is 111 for Input 1 and 121 for Input 2, and so on. In order not to repeat the Inputs menu for each input, the function list will have an x denoting the input number from 1 to 8. For example the Type item will have 1x1 as the function number x being from 1 to 8.

The following table shows the Program function numbering.



Note that some items that appear in red on the OSD menu seem missing in the table below. These items will be enabled in future firmware and will be described in detail.

The following table defines the protocol commands:

1st Level	2nd Level	3rd Level	4th Level	5th Level	Range	Func.	Notes
Inputs (3 <sup>rd</sup> level and on refers here to each input)	Input 1	Type	HDMI		0	1x1	
	Input 2		YUV		1		
	Input 3		VGA		2		
	Input 4		CV		3		
	Input 5	EDID Management	Native Select	1024x768 @60		1x21	
	Input 6			1280x800 @60			
	Input 7			1280x1024 @60			
	Input 8			1366x768 @60			
				1440x900 @60			
				1400x1050 @60			
				1600x900 @60			
				1600x1200 @60			
				1680x1050 @60			
				1920x1200 @60RB			
				720p50			
				720p60			
				1080p50			
				1080p60			
				2K50			
				2K60			
				Color Depth	12bpp		0
		8bpp			1		
		Modeline	Multiple		0	1x23	
			Single		1		
		HDCP Mode	Off		0	1x3	
			On		1		
		Color Space	RGB		0	1x4	
	YPbPr			1			
	Follow Input			2			
	Volume				[-20:+4]	1x5	

1st Level	2nd Level	3rd Level	4th Level	5th Level	Range	Func.	Notes	
Layout	Display Mode	Transition			0	21		
		Overlay			1			
	Transition Settings	Speed				[1:15]	221	
		Mode	Swap			0	222	
			Follow			1		
		Effect	Cut			0	223	
			Fade			1		
			Diagonal			2		
			Wipe			3		
			Circle			4		
			Square			5		
			Diamond			6		
			Triangle			7		
			Curtain			8		
			Chessboard			9		
		Blinds			10			
	Direction	Left to Right / From Top Left / Inbound			0	224	Direction applies only to certain effect types (see table in Section 12.2.2.1)	
		Right to Left / From Bottom Left / Outbound			1			
		Up / From Top Right / Horizontal			2			
		Down / From Bottom Right / Vertical			3			
	Take					225		
	T-Bar	Percentage				[0:100]	2261	Enabled in transition mode
		Soft Touch	Off		0		2262	
			On		1			
	Overlay Settings	Single Window	Picture in Picture			0	23	
			Picture + Picture			1		
			Split			2		
			Customized Single			3		
			Customized Dual			4		
			Customized Dual			5		
	Output	Video Resolution	NATIVE			0	241	
			640x480p60			1		
			640x480p75			2		
800x600p50					3			
800x600p60					4			
800x600p75					5			
1024x768p50					6			
1024x768p60					7			
1024x768p75					8			
1280x768p50					9			
1280x768p60			10					

1st Level	2nd Level	3rd Level	4th Level	5th Level	Range	Func.	Notes
			1280x80p60		11		
			1280x1024p50		12		
			1280x1024p60		13		
			1280x1024p75		14		
			1360x768p60		15		
			1366x768p50		16		
			1366x768p60		17		
			1400x1050p50		18		
			1400x1050p60		19		
			1600x900p60		20		
			1600x1200p50		21		
			1600x1200p60		22		
			1680x1050p60		23		
			1920x1200p60RB		24		
			480p60		25		
			576p50		26		
			720p50		27		
			720p59_94		28		
			720p60		29		
			1080i50		30		
			1080i60		31		
			1080p23_976		32		
			1080p24		33		
			1080p25		34		
			1080p29_97		35		
			1080p30		36		
			1080p50		37		
			1080p59_94		38		
			1080p60		39		
			2k50		40		
			2k60		41		
			4k2k30		42		
		Master Connection	Program		0	242	
			Preview		1		
		Deep Color	Off			243	
			Follow Output				
		Color Space	RGB		0	244	
			YPbPr422		1		
			YPbPr444		2		
		HDCP Mode	Follow Output		0	245	
			Follow Input		1		



The Program and the Preview menus are identical therefore one table is shown for both. The only difference would be in the function number: Program functions start with a 3 and Preview functions start with a 4. For example, Aspect ratio is 321 for the Program aspect ratio and 421 for the Preview aspect ratio.



1st Level	2nd Level	3rd Level	4th Level	5th Level	Range	Func.	Notes		
Program (3xx) / Preview (4xx)	Source	Input 1			[1:8]	31			
		Input 2							
		Input 3							
		Input 4							
		Input 5							
		Input 6							
		Input 7							
		Input 8							
	Scaling	Aspect Ratio	Follow Input			0	321		
			Follow Output			1			
			Best Fit			2			
			Letterbox			3			
		Overscan	Follow Input			0	322		
			Off			1			
			5%			2			
			10%			3			
		Zoom Shift mode	Auto			0	323		
			Semi Auto			1			
			Customized			2			
		Zoom				[8:4000]	324		
	H Image Shift				[20:729]	325			
	V Image Shift				[4:239]	326			
	Window Customization	H Position				[0:2046]	331	The value range is dynamic	
		Width				[16:3840]	332		
		V Position				[0:2046]	333		
		Height				[9:2160]	334		
	Picture	Brightness				[-512:+512]	341		
		Contrast				[10:160]	342		
		H Sharpness				[-10:+10]	343		
		V Sharpness				[-10:+10]	344		
	Color	Chroma				[0:400]	351		
		Hue				[-180:+180]	352		
		Color Temperature	6500k				0	353	
			9300k				1		
		Gamma Mode	Gamma Off				0	354	
			Gamma 0.4				1		
			Gamma 0.8				2		
			Gamma 1.2				3		
			Gamma 1.6				4		
			Gamma 2.0				5		
Gamma 2.4						6			
Gamma 2.8					7				
Color Correction Blue					[0:4]	355			
Color Correction Green					[0:4]	356			
Color Correction Flesh					[0:4]	357			

1st Level	2nd Level	3rd Level	4th Level	5th Level	Range	Func.	Notes		
	De-interlacing	Film Mode	Off		0	361			
			Follow Input		1				
			24PsF Mode		2				
		PD Time				[0:15]	362		
		Motion Detection Sensitivity	LEVEL1-5				[0:4]	363	
	Diagonal Correction					[0:3]	364		
	Noise Reduction	Horizontal NR					[0:3]	371	
							[0:3]	372	
							[0:3]	373	
							[0:3]	374	
							[0:3]	375	
							[0:3]	376	
	Advanced	Projection	Front			0	381		
				Back		1			
				Ceiling Front		2			
				Ceiling Back		3			
		Pause	Freeze	On / Off		[0:1]	3821	-	
				Blank	On / Off	[0:1]	3822	-	
				Mute	On / Off	[0:1]	3823		
		Sync Off	Auto	Enable		Off/On [0:1]	38311		
				Timeout		[0:5]	38312		
		Test Pattern	Manual	Off/On		[0:1]	3832		
				Off			0	384	
					Slide Bar		1		
		Color Bar			2				
		No Signal	Gray			0	385		
				Blue		1			
	Black				2				
	Fade-thru	Black			0	386			
			Freeze		1				
	Audio	Source	AFV			0	391		
				[1-8]		[1-8]			
		AFV Source	Embedded			0	392		
				Analog		1			
		ProcAmp	Output Volume				[-80:+20]	3931	
				Bass			[-18:+18]	3932	
Mid						[-18:+18]	3933		
Treble						[-18:+18]	3934		
		Balance			[-10:+10]	3935			
Lip Sync				[0:170]	394				

1st Level	2nd Level	3rd Level	4th Level	5th Level	Range	Func.	Notes	
Misc	Information	Program/				511		
		Preview				512		
		FW Versions				513		
		Network				514		
		<p>The 511 to 514 Information GET commands are replied as a JSON string format which describes all the information data that appears on the OSD. Generally the JSON format appears as {field 1:value1, field 2:value2...}</p> <p>For example, for #Y 1,511&lt;CR&gt; (get the Program screen information)  The reply is:  ~01@Y  1,511, {"Input": {"Source": "HDMI1", "Resolution": "1080p60", "HDCP": "OFF", "FH": "67.4 kHz", "FV": "60.0 Hz"}, "Output": {"Resolution": "1024x768@60", "Native": "HDMI1"}}</p>						
	OSD	H Position			[0:2047]	521	The value range is dynamic, FW prevents exceeding of boundaries	
		V Position			[0:2047]	522		
		Transparent	On / Off		[0:1]	523		
		Gain			[1:4]	524		
		Bias			[-128:+127]	525		
		Timeout	Off			0		526
			30 Sec			1		
	60 Sec				2			
	Keying	Chroma Keying Red				[0:240]	531	In steps of 16
		Chroma Keying Green				[0:240]	532	
		Chroma Keying Blue				[0:240]	533	
		Chroma Keying	On / Off			[0:1]	534	
		Luma Keying	On / Off			[0:1]	535	
	FW Upgrade	Upgrade					541	
Rollback						542		
	Advanced					553		
Factory Reset	Including ETH					561		
	Excluding ETH					562		

### 12.2.2.1 Transition Settings

The direction (#Y command 224) of a transition effect (#Y command 223) is specific to the effect. The following table defines the directions that are specific for each effect.

Effect Type	Range	Direction
0 = Cut		Unavailable
1 = Fade		Unavailable
2 = Diagonal	[0-3]	0 = From Top Right 1 = From Top Left 2 = From Bottom Right 3 = From Bottom Left
3 = Wipe	[0-3]	0 = Left To Right 1 = Right To Left 2 = Up 3 = Down
4 = Circle	[0-1]	0 = Inbound 1 = Outbound
5 = Square	[0-1]	0 = Inbound 1 = Outbound
6 = Diamond	[0-1]	0 = Inbound 1 = Outbound
7 = Triangle	[0-3]	0 = Left To Right 1 = Right To Left 2 = Up 3 = Down
8 = Curtain	[0-1]	0 = Horizontal 1 = Vertical
9 = Chessboard	[0-2]	0 = Inbound 1 = Outbound 2 = Random
10 = Blinds	[0-1]	0 = Horizontal 1 = Vertical

## 12.3 Protocol Table: Mimicking Remote and Front Panel Buttons

The keystroke codes operate in the following way:

SET command third parameter =0,

Syntax example: "#Y 0,920,0<CR>" => MENU keystroke

GET command for keystrokes will return ERR

The following table defines the keystroke function codes:

Button	Keystroke Code	Button	Keystroke Code	Button	Keystroke Code
MENU	920	PROG BLANK	933	PREV IN 2	944
ENTER	921	PROG FREEZE	934	PREV IN 3	945
DOWN (-)	922	PROG IN 1	935	PREV IN 4	946
UP (+)	923	PROG IN 2	936	PREV IN 5	947
LEFT	924	PROG IN 3	937	PREV IN 6	948
RIGHT	925	PROG IN 4	938	PREV IN 7	949
RESET	926	PROG IN 5	939	PREV IN 8	950
LOCK	927	PROG IN 6	940	PROG MUTE	951
MODE	930	PROG IN 7	941	PREV MUTE	952
PREV BLANK	931	PROG IN 8	942	POWER	953
PREV FREEZE	932	PREV IN 1	943		

## 12.4 The Protocol 3000 Common Operation Commands

The following table lists the protocol 3000 commands:

Operation Commands		
Command	Syntax	Response
<b>Lock front panel</b>	<b>LOCK-FP</b> <i>LOCK-MODE</i>	<b>LOCK-FP</b> <i>LOCK-MODE RESULT</i>
<b>Get front panel locking state</b>	<b>LOCK-FP?</b>	<b>LOCK-FP</b> <i>LOCK-MODE</i>
Parameters Description: LOCK-MODE = Front panel locking state: "0" or "off" to unlock front panel buttons. "1" or "on" to lock front panel buttons.		
<b>Power state</b>	<b>POWER</b> <i>POWER-MODE</i>	<b>POWER</b> <i>POWER-MODE RESULT</i>
<b>Get power state</b>	<b>POWER?</b>	<b>POWER</b> <i>POWER-MODE</i>
Parameters Description: POWER-MODE = power state: "0" or "off" to enter standby mode. "1" or "on" to power up.		
<b>Restart device</b>	<b>RESET</b>	<b>RESET OK</b>

<b>Reset configuration to factory default</b>	<b>FACTORY</b>	<b>FACTORYRESULT</b>
<b>Output volume</b>	<b>VOLUME VOLUME-PARAMETER</b>	<b>VOLUME VOLUME-PARAMETER RESULT</b>
<b>Get output volume</b>	<b>VOLUME?</b>	<b>VOLUME VOLUME-VALUE</b>
<b>Set layer routing</b>	<b>ROUTE</b>	<b>ROUTE?</b>
Parameters Description: P1 – Input to route (12-AFV, 1- video, 2 - audio) P2 – Scaler (0 – Program, 1 – Preview) P3 – Inputs number ( 0-7)		
<b>Mute the selected output</b>	<b>MUTE?</b>	<b>MUTE?</b>
Parameters Description: P1 – Scaler (0 – Program, 1 – Preview) P2 –Mute status: 0 (Off), 1 (On)		
<b>Set enable/disable video on output</b>	<b>VMUTE?</b>	<b>VMUTE</b>
VMUTE and VMUTE commands work with described parameters Parameters Description: P1 – Scaler (0 – Program, 1 – Preview) P2 –Video mute status: 0 (Off), 1 (On)		
<b>Identification commands</b>		
<b>Command</b>	<b>Syntax</b>	<b>Response</b>
<b>Protocol Handshaking</b>	<b>#CR</b>	<b>~OK CRLF</b>
<b>Read device model</b>	<b>MODEL?</b>	<b>MODEL MACHINE_MODEL</b>
<b>Read device serial number</b>	<b>SN?</b>	<b>SN SERIAL_NUMBER</b>
<b>Read device firmware version</b>	<b>VERSION?</b>	<b>VERSION MAJOR .MINOR .BUILD .REVISION</b>
<b>Read device build date</b>	<b>BUILD-DATE?</b>	<b>BUILD-DATE YYYY/MM/DD HH:MM:SS</b>
<b>Read device protocol version</b>	<b>PROT-VER?</b>	<b>PROT-VER 3000:MAJOR .MINOR</b>
<b>Set machine name</b>	<b>NAME MACHINE_NAME</b>	<b>NAME MACHINE_NAME RESULT</b>
<b>Read machine name</b>	<b>NAME?</b>	<b>NAME MACHINE_NAME</b>
<b>Reset machine name to factory default*</b>	<b>NAME-RST</b>	<b>NAME-RST RESULT</b>

<b>Network settings commands</b>		
Network settings commands require admin authorization		
<b>Command</b>	<b>Syntax</b>	<b>Response</b>
<b>Set IP Address</b>	<b>NET-IP IP_ADDRESS</b>	<b>NET-IP IP_ADDRESS RESULT</b>
<b>Read IP Address</b>	<b>NET-IP?</b>	<b>NET-IP IP_ADDRESS</b>
<b>Read MAC Address</b>	<b>NET-MAC?</b>	<b>NET-MAC MAC_ADDRESS</b>
<b>Set subnet mask</b>	<b>NET-MASK SUBNET_MASK</b>	<b>NET-MASK SUBNET_MASK RESULT</b>
<b>Read subnet mask</b>	<b>NET-MASK?</b>	<b>NET-MASK SUBNET_MASK</b>
<b>Set gateway address</b>	<b>NET-GATE</b>	<b>NET-GATE</b>

<b>Network settings commands</b>		
Network settings commands require admin authorization		
	<i>GATEWAY_ADDRESS</i>	<i>GATEWAY_ADDRESS RESULT</i>
<b>Read subnet mask</b>	<b>NET-GATE?</b>	<b>NET-GATE GATEWAY_ADDRESS</b>
<b>Set DHCP mode</b>	<b>NET-DHCP</b> <i>DHCP_MODE</i>	<b>NET-DHCP</b> <i>DHCP_MODE RESULT</i>
<b>Read DHCP mode</b>	<b>NET-DHCP?</b>	<b>NET-DHCP</b> <i>DHCP_MODE</i>
<p><i>DHCP_MODE</i> =  0 (factory default) – Don't use DHCP (Use IP set by factory or IP set command).  1 – Try to use DHCP, if unavailable use IP as above.  2– Try to use DHCP, if unavailable use AUTO-IP</p>		
<b>Change protocol Ethernet port</b>	<b>ETH-PORT</b> <i>PROTOCOL</i> , <i>PORT</i>	<b>ETH-PORT</b> <i>PROTOCOL ,PORT</i> <b>RESULT</b>
<b>Read protocol Ethernet port</b>	<b>ETH-PORT?</b> <i>PROTOCOL</i>	<b>ETH-PORT</b> <i>PROTOCOL</i> , <i>PORT</i>
<p><i>PROTOCOL</i> = TCP / UDP (<b>transport layer protocol</b>)  <i>PORT</i> =  Ethernet port to enter protocol 3000 commands.  1-65535 = User defined port  0 - reset port to factory default (50000 for UDP, 5000 for TCP)</p>		

## LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

### What is Covered

This limited warranty covers defects in materials and workmanship in this product.

### What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

### How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

### Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

### What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

### What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

### How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

### Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

### Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

### Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.



# KRAMER



## SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

[www.kramerAV.com](http://www.kramerAV.com)  
[info@kramerele.com](mailto:info@kramerele.com)