



Installing and Removing the SFP-IN/OUT-2km Fiber Optic Module


Thank you for purchasing the Kramer **SFP-IN/OUT-2km Fiber Optic Module** that is used in applicable Kramer fiber optic devices.

To install an SFP module:

1. Make sure the bail (removal handle) is closed in an upward position as shown in #1.
2. Insert the SFP module in an open slot and push it inward until it clicks.
3. Remove the protective SFP cap from the end of the SFP (#2).

To remove an SFP module:

1. Pull the bail downward to release the SFP (#3).
2. Pull the SFP module out by the bail (#4).
3. If needed, replace the protective cap over the fiber connectors.

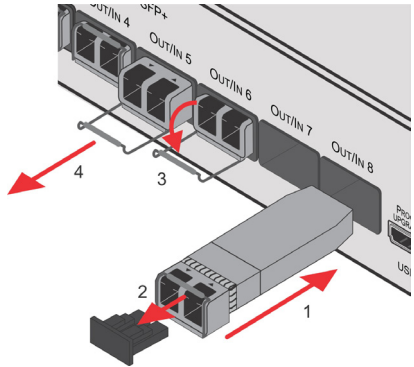

Note: When transporting or storing an unconnected device, replace the SFP caps to protect against dust.

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this sheet may be found.

We welcome your questions, comments, and feedback. Web site: www.kramerelectronics.com
E-mail: info@kramerel.com

For more detailed information regarding this product scan the QR code:



KRAMER ELECTRONICS LTD.

P/N: 2900-300238 REV 1



P/N: 2900-300238



Rev: 1