

Powerdot MINI

□ 935-PM51W
■ 935-PM51

POWER
dot

- A** - Installation into round hole
B - Installation into tailored hole


CONTENT:




- 1A** DRILL
Drill a hole in the table.




- 2A** INSERT
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

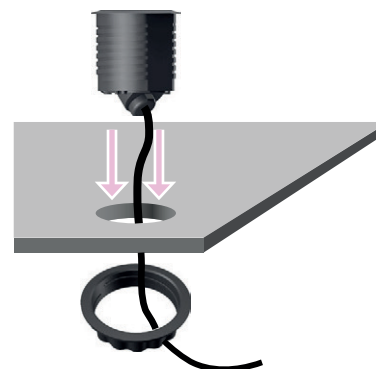


- 3A** TURN CLOCKWISE & PLUG IN
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the product into a socket.

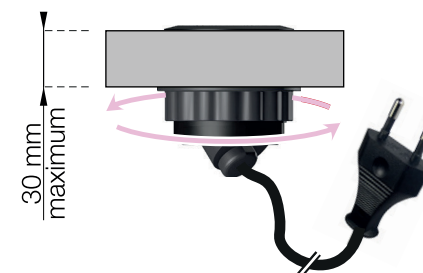

- 1B** MILL
Mill a hole in the table.

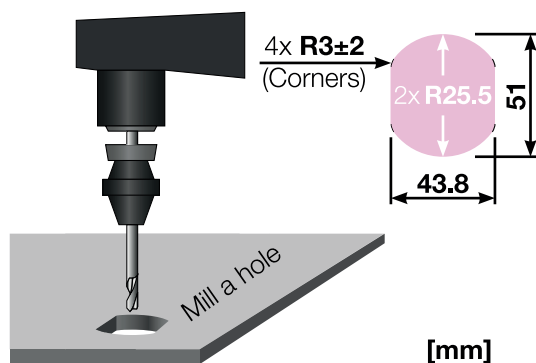

- 2B** INSERT
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

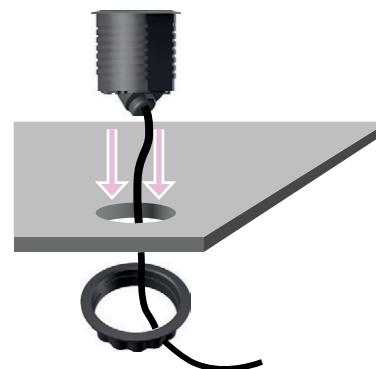

- 3B** TURN CLOCKWISE & PLUG IN
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the product into a socket.

