


BMA Surface-Mount Kit

To install the surface mount kit, first assemble the frame, and then attach the frame to the ceiling.


Step 1

On each end of one frame piece, insert a spring clip into the inside channel.

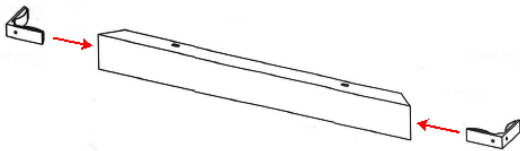


Step 2


At each end of the frame piece from step 1, slide the inside channel of another frame piece onto the clip to form a u-shape.

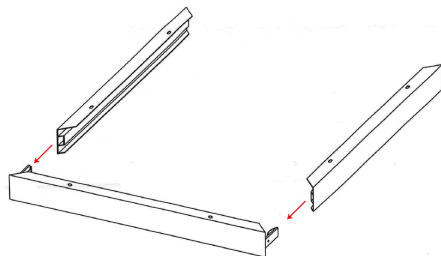

Step 3

Lift the u-shaped frame into place against the ceiling. Attach the frame to the ceiling.

 **Warning! Surface mount kit must be independently supported by building structure according to all applicable national and local codes.**

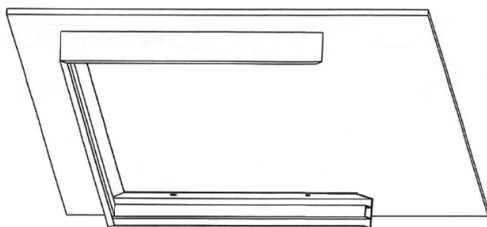

Important!

- Examine shipment and report damage to your transportation carrier.
- Install in accordance with all applicable local codes.
- Ensure that power is off before you start installation.

Part Number:


- 910-3200-210
- 910-3200-210-I (International)

Included Components:

- Frame piece (4)
- L-shaped spring clip (4)

Step 4


Attach cables to ports on the back of the BMA. Then slide the BMA onto the recessed edges of the frame.

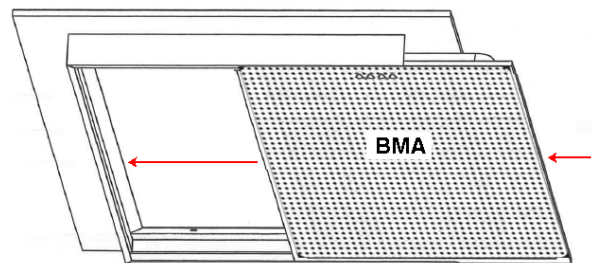

Step 5:

On each end of the remaining frame piece, insert a spring clip into the inside channel.

Push the spring clips into the channels of the mounted u-shaped frame.

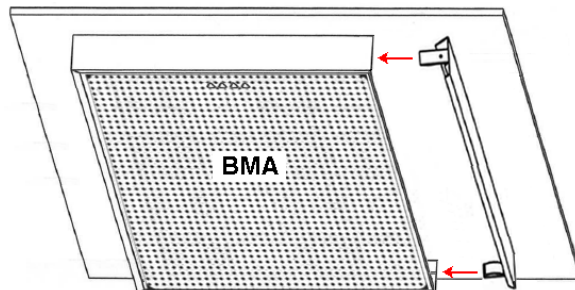

ClearOne Contacts

Headquarters

5225 Wiley Post Way
Suite 500
Salt Lake City, UT 84116
www.clearone.com

Sales

Tel: 801.975.7200
e-mail: sales@clearone.com

US & Canada

Tel: 801.975.7200
Fax: 801.303.5711

Technical Support

Tel: 801.974.3760
e-mail: tech.support@clearone.com

International

Tel: +801.974.3621
e-mail: global@clearone.com