

ClearOne®

VERSA® Lite BMA 360D



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 500
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
collaborate.support@clearone.com

Notices

© 2024 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0173-001v1.0 June 2024

Safety and Care

1. Before you set up the Versa Lite BMA 360D, read this manual carefully. Follow the setup instructions indicated in this manual.
2. Keep this manual for future use.
3. To prevent electric shock, do not remove screws from the housing. No self-serviceable parts are inside the housing.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN
AVIS RISQUE DU CHOC ELECTRIQUE - NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



Use only in non-tropical locations.



Use only at altitudes of 2000 meters or less.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

Components Included

The VERSA LITE BMA 360D includes the BMA 360D, Versa USB22D, 50 FT RJ45, and PoE 90W.

Contents:

No	Product	Description	Quantity
1	910-3200-208-D (24 in) 910-3200-208-D-I (600 mm)	BMA 360D	1
2	910-3200-309	Versa USB22D 2CH USB Adapter	1
3	910-3200-204-50	50 FT RJ45 CAT6 CABLE	2
4	910-3200-209	PoE 90W Power Supply Kit	1

PoE 90W Power Supply Kit Contents:

No	Product	Description	Quantity
1	699-150-006	PWR CORD MOLDED 6' BLK 3 COND	1
2	CBL-0092-001	CABLE 25' CAT6 PLENUM BLUE	1
3	CBL-0097-001	CABLE 25' CAT6 PLENUM BLACK	1
4	PWS-0043-001	Power Supply 90W Single Port 1 Gig Power over Ethernet IEE802.3bt Midspan Power Supply	1

Software

ClearOne CONSOLE AI Lite software

To configure the BMA 360D, download CONSOLE AI Lite software from the ClearOne website at:


<https://www.clearone.com/versa-lite-bma-360d>

Audinate Dante Controller software

To configure the Dante audio routing, download Dante Controller from audinate.com

Setup

The example below shows how to connect the components together to create a professional quality audio conferencing system for any in-room computer or bring-your-own-meeting (BYOM) computer.

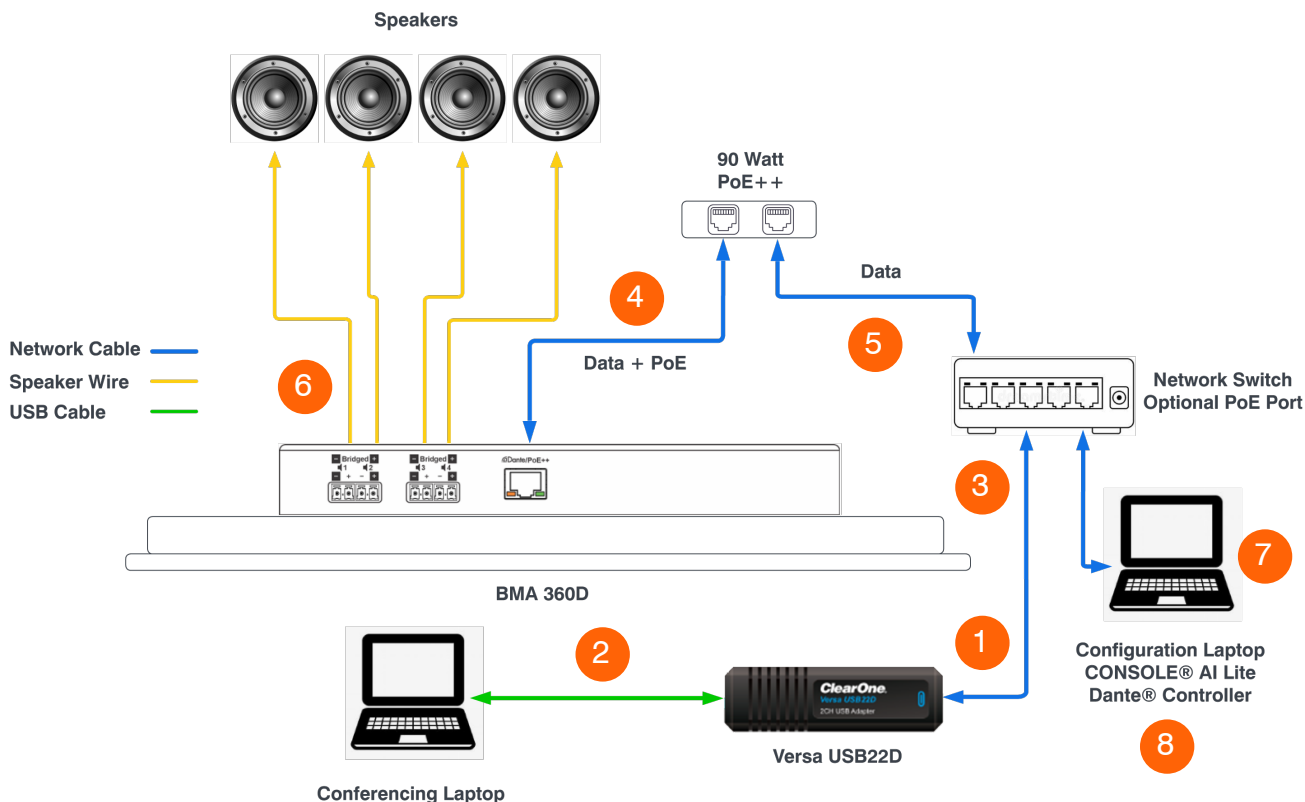

Connections

Refer to the numbered diagram below for these connections.

- 1 Connect the USB22D to the network switch using a standard network cable. To keep the USB22D always powered on, use a network switch with a PoE port or insert a PoE injector in between the switch and the USB22D.
- 2 Connect the USB22D to the computer using one of the provided USB cables.
- 3 Connect the BMA 360D system to the network switch. Refer to the BMA 360D Quick Start Guide and User Manual for more information.
- 4 Connect a Cat 6 cable between the BMA 360D and the PoE injector.
- 5 Connect a Cat 6 cable between the PoE injector and the network switch with a DHCP server.
- 6 Install and wire speakers. Using speakers requires the use of a 90 Watt PoE++ injector.
- 7 Configure the Dante routing using Audinate’s Dante Controller software.
- 8 Customize the beamformer and speaker settings using ClearOne CONSOLE AI Lite software.

Safety Precautions

Installation

Avoid contact with any liquid, gas or solid material that may cause corrosion.

Do Not Disassemble

This product has no user-repairable parts. Damage caused by unauthorized disassembly is not covered by warranty.

Notice

Electromagnetic fields at specific frequencies may affect audio quality.