



tvONE

CORIOmatrix MX (C3-440)

CORIOmatrix (C3-340)

CORIOmatrix mini (C3-310)

Manual

Version 1.1.4

29th of March 2016

Document Information

Version Control:

Version	Amendments	Author	Date
1.1.2	Revised to include C3-440	Bruce Meldrum	13 th November 2015
1.1.3	Revised to include C3-440 4k support	Marcel Roth	18 th January 2016
1.1.4	Changed described Update- Procedure to use CORIOdiscover only	Marcel Roth	29 th of March 2016

Copyright 2017 tvONE. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's personal use without the written permission of tvONE.

tvONE
Continental Approach
Westwood Industrial Estate
Margate, Kent, CT9 4UG
<http://www.tvone.com/>

Part Number: PDF-CORIOMATRIX-V1.1.4

Contents

Disclaimer	1
Intellectual property	1
Regulatory Agency Acceptance	2
European 'CE' Mark Statement.....	2
Emissions:	2
Immunity:	2
FCC Statement	3
End User License Agreement	4
END USER LICENSE AGREEMENT - FOR TVONE CORIOmatrix WEB INTERFACE SOFTWARE	4
Safety Instructions	8
CONSIGNE IMPORTANTE DE SECURITE	9
Propriété intellectuelle.....	9
WICHTIGE SICHERHEITSANWEISUNGEN	10
Geistiges Eigentum.....	10
INSTRUCCIONES IMPORTANTES DE SEGURIDAD	12
Propiedad intelectual	12
BELANGRIJKE VEILIGHEIDSINSTRUCTIE	13
Intellectueel eigendom	13
VIKTIGA SÄKERHETSANVISNINGAR	14
Intellektuell egendom	14
VIKTIGE SIKKERHETSANVISNINGER	15
Ophavsrett	15
TÄRKEITÄ TURVALLISUUSOHJEITA	16
Immateriaaliomaisuus	16
Introduction	17
Shipping Carton.....	17
Important Safety Instructions	17
Connecting the PC to the CORIOmatrix	17
Initial Operation Check	19
Connections	20
Modularity.....	22
Input and Output Naming Convention.....	23
Supported Browsers	25
Configure Connection via Ethernet	26

Configure Connection via Serial	29
Getting Started	30
Configuring Inputs and Outputs	30
Log In	32
Log Out.....	33
Updating Firmware and WebUI.....	34
Settings.....	37
System	38
Users.....	39
Networking	41
Slots Status	44
Backup to SD Card.....	46
Restore from SD Card.....	48
Routing	51
Routing Overview.....	51
Welcome corner.....	52
Notification box	53
Presets pane	54
Setting routing options.....	55
Configuring Input Settings	56
Configuring Input Alias	58
Configuring Input Aspect Ratio	60
Configuring Input Brightness	62
Configuring Input Color Space.....	64
Configuring Input Contrast.....	66
Configuring Input Type	68
Configuring Source Loss Color	70
Reading Input Values from Input Settings	72
Configuring Input – Video Range (CORIOmatrix MX only).....	74
Configuring Input – 4K Bundle Input ID (CORIOmatrix MX only)	74
Configuring Output Settings	74
Configuring Output Alias.....	77
Configuring Output Aspect Ratio.....	79
Configuring Output Audio	81
Configuring Output Color Scale	83
Configuring Output Display Type.....	85

Configuring Output Genlock Source.....	87
Configuring Output HDCP Downstream.....	89
Configuring Output Resolution.....	91
Configuring Source Switching.....	94
Configuring Output Type	96
Configuring Output– Video Range (CORIOmatrix MX only).....	98
Configuring Output– 4k Bundle Output ID (CORIOmatrix MX only).....	98
Cut to Black.....	98
Command Line.....	99
Immediate vs Synchronized	100
Refreshing Routing Information	101
Routing Video	102
Routing Audio with Input (AFV).....	103
Configuring AFV from the Input.....	103
Configuring AFV from the Routing Table Cell.....	105
Routing Audio with Output (BreakAway).....	107
Presets	110
About Presets.....	110
What is a Preset?.....	110
Why would I use Presets?.....	110
Create Preset	111
Edit Preset	112
Rename Preset.....	113
Delete Preset	115
Using Presets	116
Monitor.....	117
About Monitoring.....	117
Auto MonitorCard settings.....	118
Auto MonitorCard On for Quick Monitoring	119
Auto MonitorCard Off - Overview	120
Auto MonitorCard Off - Setup.....	121
Add Views.....	121
Populate Views	122
Options	123
Immediate vs Synchronized	124
Monitoring Audio	125

Resolution Editor Guide	126
Resolution Editor.....	126
Resolution Editor Overview	129
Resolution Editor Constraints	130
Listing Resolutions from CORIOdiscover Resolution Editor.....	131
Creating a Custom Resolution From a Built-In Resolution.....	133
Creating a Custom Resolution From a Standard	135
Creating a Custom Resolution From Scratch	137
Editing an existing Custom Resolution	139
Clearing or Deleting an existing Custom Resolution	141
Listing Resolution Properties from CORIOdiscover Resolution Editor	143
Editing Resolution Properties from CORIOdiscover Resolution Editor	144
Editing Name Property from CORIOdiscover Resolution Editor	145
Editing Aspect Ratio Property from CORIOdiscover Resolution Editor	148
Editing Pixel Clock Property from CORIOdiscover Resolution Editor	150
Editing Scan type Property from CORIOdiscover Resolution Editor.....	153
Editing Horizontal Active Pixels Property from CORIOdiscover Resolution Editor	155
Editing Horizontal Front Porch Property from CORIOdiscover Resolution Editor	157
Editing Horizontal Sync Pulse Property from CORIOdiscover Resolution Editor	159
Editing Horizontal Back Porch Property from CORIOdiscover Resolution Editor	161
Editing Horizontal Sync Polarity Property from CORIOdiscover Resolution Editor	163
Editing Vertical Active Pixels Property from CORIOdiscover Resolution Editor.....	165
Editing Vertical Front Porch Property from CORIOdiscover Resolution Editor	167
Editing Vertical Sync Pulse Property from CORIOdiscover Resolution Editor	169
Editing Vertical Back Porch Property from CORIOdiscover Resolution Editor.....	171
Editing Vertical Sync Polarity Property from CORIOdiscover Resolution Editor	173
Editing CEA ID Property from CORIOdiscover Resolution Editor	175
Listing Resolutions from Command Line	177
Editing Resolution Properties from Command Line.....	180
Editing Name Property from Command Line.....	181
Editing Aspect Property from Command Line	183
Listing Framelock Properties from Command Line	184
Editing Pixel Clock Property from Command Line	185
Editing Scan Type Property from Command Line	187
Editing Horizontal Active Pixels Property from Command Line	188
Editing Horizontal Front Porch Property from Command Line.....	189

Editing Horizontal Sync Pulse Property from Command Line	190
Editing Horizontal Back Porch Property from Command Line	191
Editing Horizontal Sync Polarity Property from Command Line.....	192
Editing Vertical Active Pixels Property from Command Line	193
Editing Vertical Front Porch Property from Command Line	194
Editing Vertical Sync Pulse Property from Command Line.....	195
Editing Vertical Back Porch Property from Command Line	196
Editing Vertical Sync Polarity Property from Command Line.....	197
Editing CEVID Property from Command Line	198
Editing Origin Property from Command Line.....	199
Command Line Resolution Options	200
List Usable Resolutions by Name	200
List Resolutions by Index	201
Read Output Resolution.....	202
Specific Resolutions by Index	203
Set Output Resolution.....	204
Read Input Resolution.....	205
Command Line - Resolutions	206
Use Custom Resolution on an Output.....	207
Use Custom Resolution on an Input.....	208
Troubleshooting	209
Troubleshooting - CORIOdiscover Doesn't See Device	209
Troubleshooting - Doesn't Reconnect After Restore	211
Troubleshooting - Slot Name Goes Blank.....	212
Troubleshooting - Website Looks Wrong	213
Troubleshooting - Windows Security Alert on Login.....	214
Troubleshooting - Output Displays Go Blank After Changing Resolution	215
Troubleshooting - No monitor card output.....	216
Changing Monitor Card Output Settings.....	216

Disclaimer

This product is intended for professional use. This product is not intended for use in a medical environment and does not have the required certifications for such use. Similarly, use aboard any aircraft or spacecraft while in flight or as an adjunct to any surface, airborne or marine navigation system or any offshore marine activity, including control of any watercraft, or any use similar to those specifically herein mentioned is prohibited. Use in the aforementioned circumstances would require additional testing and certification.

You have not become the owner of any software - you have merely purchased the right to use the software. You may make one copy of the software for your own use. Other copies will be deemed a breach of copyright.

No warranty is made either expressed or implied including but not limited to any implied warranties of merchantability or fitness for a particular purpose. In no event shall the supplier or manufacturer of this product be liable for errors found within, or be liable for any direct, indirect or consequential damages or loss in connection with the purchase or use of this hardware, software or manual. The sole and exclusive liability to the supplier and manufacturer regardless of the form of action shall not exceed the replacement cost of the materials described herein.

By using this equipment you have indicated that you have agreed to the terms listed above. If you do not wish to agree or the above terms are contrary to your conditions of purchase you may return the equipment, unused, to your supplier. All trademarks and copyrights are acknowledged. E&OE.

Intellectual property

Some IC chips in this product include confidential and/or trade secret property. Therefore you may not copy, modify, adapt, translate, distribute, reverse engineer, reverse assemble or decompile the contents thereof.

Regulatory Agency Acceptance

European 'CE' Mark Statement

Emissions:

Radiated magnetic interference, 50Hz to 50kHz	EN 55103-1:2009 Environment E1, E2, E3, & E4
Radiated disturbance	EN 55103-1:2009 Environment E4
Conducted disturbance, AC and signal ports	EN 55103-1:2009 Environment E4
Radiated disturbance, 1000 to 4000 MHz	FCC/CFR 47; Part 15: 2009 Canadian Standard ICES-003: Issue 4

Immunity:

Electrostatic discharge	
Radiated RF disturbance	
Magnetic LF disturbance, 50 Hz to 10 kHz	
Fast transient bursts, AC port and signal ports	EN5103-2:2009 Environment E1, E2, E3, E4
Conducted RF field, AC port and signal ports	
Surges AC port	
Dips and outages	
For Low Voltage Directive (LVD):	EN 60065:2002 + Amd I:2006 + Amd II:2008

FCC Statement

Class A Device: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide a reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction Manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Caution: This equipment is intended for use in the manner prescribed in the Instruction Manual. Any user changes or modifications not expressly approved by tvONE could void the user's authority to operate the equipment. Connecting this equipment to external devices requires appropriate cabling for FCC compliance. The Instruction Manual shows or describes the proper connection of this equipment for operation that insures FCC compliance.

Direct all inquiries regarding FCC compliance to:

tvONE
2791 Circleport Drive
Erlanger, KY 41018
USA
Tel 859-282-7303
Fax 859-282-8225

End User License Agreement

END USER LICENSE AGREEMENT - FOR TVONE CORIOmatrix WEB INTERFACE SOFTWARE

BY DOWNLOADING, INSTALLING OR USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THIS END USER LICENSE AGREEMENT (the "Agreement"). IF YOU DO NOT AGREE, DO NOT INSTALL, COPY OR USE THE SOFTWARE; YOU MUST DELETE OR DESTROY ANY COPY IN YOUR POSSESSION OR CONTROL. This Agreement is between you ("you" or "your") and TV One Ltd, a limited company incorporated in England and Wales (registration number 1973948) having its registered office at Continental Approach, Westwood Ind. Est, Margate, Kent CT9 4JG ("Licensor") for CORIOmatrix software that accompanies this Agreement, including all associated media, printed or electronic documentation (collectively, the "Software").

1. License Grants. During the term of this Agreement and conditioned upon your full compliance with all of the Agreement's terms and conditions, Licensor grants to you the following licenses:

1.1 *Software.* Licensor grants to you a personal, nonexclusive, nonsublicensable, nontransferable revocable license to install and use the Software solely in conjunction with Licensor's or its affiliates' products ("Products").

1.2 *Documentation.* Licensor grants to you a personal, nonexclusive, nonsublicensable, nontransferable, revocable license to make and use a reasonable number of copies of documentation provided with the Software for your internal use in connection with your use of the Software; provided that you reproduce all copyright and other proprietary notices that are on the original copies.

2. License Limitations. The license(s) granted in Section 1 are conditioned upon your compliance with the following limitations:

2.1 *Reverse Engineering.* You may not decompile, decipher, disassemble, reverse engineer or otherwise attempt to access source code of the Software, or circumvent any technical limitations in the Software that limit or restrict use of the Software, except as expressly permitted by applicable law notwithstanding this limitation.

2.2 *No Distribution, Rental or Transfer.* You may not distribute, rent, lease, lend, transfer, sublicense, disclose or otherwise provide (except as provided herein) the Software to any third party, except that the initial owner of a Product with respect to which the Software is initially used may make a one-time permanent transfer of this Agreement and Software to another end user, provided the initial user retains no copies of the Software. This transfer must include all of the Software (including all component parts, the media and printed materials, documentation, any upgrades and this Agreement). The transfer may not be an indirect transfer, such as a consignment. In the event you rent or lease Products, you may provide the Software to a third party to whom you rent or lease such Products ("Product Renter") during the rental term of such a Product. Before the one time transfer or providing the Software to a Product Renter, the end user receiving the Software must agree to all the terms and conditions of this Agreement.

2.3 *No Modification or Derivative Works.* You may not modify or create derivative works of the Software, in whole or in part.

2.4 *Proprietary Notices.* You may not remove any proprietary notices or labels on the Software or any copy thereof.

2.5 *Non-Permitted Uses.* Without limiting any of the foregoing, you may not make any use of the Software in any manner not expressly permitted by this Agreement.

3. Reservation of Rights and Ownership. Licensor, its parent or its affiliates own all right, title and interest, including all intellectual property rights, in and to the Software and reserve all rights not expressly granted to you in this Agreement. The Software is protected by copyright and other intellectual property laws and treaties.

4. Additional Software or Services. This Agreement applies to updates, supplements, add-on components of the Software that Licensor may, in its sole discretion, provide or make available to you (“**Update**”). If Licensor provides additional terms along with the Update, those terms will apply to the Update.

5. Termination. This Agreement will automatically terminate upon your breach of any of this Agreement’s terms and conditions. In the event of termination, you must immediately destroy all copies of the Software, and the following Sections of this Agreement will survive: Sections 2, 3 and 5 to 11.

6. DISCLAIMER OF WARRANTIES. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW THE SOFTWARE AND SUPPORT SERVICES ARE PROVIDED AS IS AND WITH ALL FAULTS. LICENSOR AND ITS PARENT, AFFILIATES AND SUPPLIERS HEREBY DISCLAIM ALL OTHER WARRANTIES AND CONDITIONS, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTIES, DUTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT, LACK OF VIRUSES OR BUGS, ACCURACY OR COMPLETENESS OF RESPONSES OR RESULTS WITH REGARD TO THE SOFTWARE OR SUPPORT SERVICES. LICENSOR AND ITS PARENT, AFFILIATES AND SUPPLIERS DO NOT WARRANT THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE OR THAT ANY DEFECTS WILL BE CORRECTED. THE ENTIRE RISK ARISING OUT OF THE SOFTWARE AND SUPPORT SERVICES REMAINS WITH YOU.

7. EXCLUSIONS OF CERTAIN DAMAGES; LIMITATIONS OF LIABILITY. IN NO EVENT WILL LICENSOR OR ITS PARENT, AFFILIATES OR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, DAMAGES TO YOUR COMPUTER SYSTEM OR OTHER SYSTEMS, LOSS OF DATA, GOODWILL, USE OR OTHER LOSSES) ARISING OUT OF OR IN ANY WAY RELATED TO THE SOFTWARE, THE PROVISION OF OR FAILURE TO PROVIDE SERVICES OR THIS AGREEMENT, REGARDLESS OF THE CAUSE OF ACTION OR THE BASIS OF THE CLAIM AND EVEN IF LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF THE DAMAGES OR REMEDIES FAIL OF THEIR ESSENTIAL PURPOSE. LICENSOR AND ITS PARENT, AFFILIATES AND SUPPLIERS BEAR NO LIABILITY FOR ANY DAMAGES RESULTING FROM USE OR ATTEMPTED USE OF THE SOFTWARE OR SUPPORT SERVICES. LICENSOR’S AND ITS PARENT’S, AFFILIATES’ AND SUPPLIERS’ ENTIRE LIABILITY UNDER THIS AGREEMENT AND YOUR EXCLUSIVE REMEDY WILL BE LIMITED TO THE ACTUAL DAMAGES YOU INCUR IN REASONABLE RELIANCE ON THE SOFTWARE AND SUPPORT SERVICES UP TO THE PRICE YOU PAID FOR THE SOFTWARE. NO ACTION, REGARDLESS OF FORM, RELATING TO THE SOFTWARE OR

SUPPORT SERVICES MAY BE BROUGHT BY YOU MORE THAN ONE YEAR AFTER YOU HAVE KNOWLEDGE OF THE OCCURRENCE WHICH GIVES RISE TO THE CAUSE OF ACTION.

8. U.S. Government License Rights. Software provided to the U.S. Government pursuant to solicitations issued on or after December 1, 1995 is provided with the commercial license rights and restrictions described in this Agreement. Software provided to the U.S. Government pursuant to solicitations issued prior to December 1, 1995 is provided with "Restricted Rights" as provided for in FAR, 48 CFR 52.227-14 (JUNE 1987) or DFAR, 48 CFR 252.227-7013 (OCT 1988), as applicable.

9. Compliance with Law; Export Restrictions. You will comply with all applicable international and national laws, rules and regulations that apply to the Software and your use of the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. or other governments.

10. Governing Law and Jurisdiction. This Agreement will be construed and controlled by Delaware law, without giving effect to its conflict of law provisions. Each party consents to exclusive jurisdiction and venue in the state and federal courts in Kenton County, KY for any and all disputes, claims and actions arising from or in connection with the Software and this Agreement. The United Nations Convention on Contracts for the International Sale of Goods does not apply to this Agreement.

11. General. The section titles in this Agreement are used solely for the parties' convenience and have no legal or contractual significance. Any list of examples following "including" or "e.g.," is illustrative and not exhaustive, unless qualified by terms like "only" or "solely." Licensor's failure to act with respect to a breach by you or others does not waive its right to act with respect to subsequent or similar breaches. No waiver of any provision of this Agreement will be effective unless it is in a signed writing, and no waiver will constitute a waiver of any other provision(s) or of the same provision on another occasion. If a court of competent jurisdiction holds any term, covenant or restriction of this Agreement to be illegal, invalid or unenforceable, in whole or in part, the remaining terms, covenants and restrictions will remain in full force and effect and will in no way be affected, impaired or invalidated. You may not assign, transfer or sublicense this Agreement or your rights (if any) under this Agreement. This Agreement will be binding upon all successors and assigns. This Agreement constitutes the entire agreement between you and Licensor with respect to the Software (including support services (if any)) and merges all prior and contemporaneous communications and proposals, whether electronic, oral or written, between you and Licensor with respect to the Software.

Patent Pending

CONTACT INFORMATION

If you have any questions about this Agreement, or want to contact Licensor for any reason, please direct all correspondence to:

TV ONE Limited Legal Department

Continental Approach, Westwood Ind. Est, Margate, Kent CT9 4JG

For **Customer Support** please contact:

tech.usa@tvone.com or tech.europe@tvone.com

or refer to <http://www.tvone.com/contactus-2>

Safety Instructions

To insure the best from this product, please read this manual carefully.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety.
- If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- This unit must be connected to a mains socket outlet with a protective earth connection.
- The AC wall outlet should be installed near to the unit and be easily accessible.
- Only use attachments / accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified servicing personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- The AC power cord or adapter furnished with the unit should conform to the type in use in your country. Please compare the plug on your cord or adapter with the power socket where the unit will be installed. If you did not receive the correct plug, DO NOT attempt to modify it. Instead, immediately contact your dealer or contact tvONE at the sales office nearest to your geographic location and request the proper plug.

CONSIGNE IMPORTANTE DE SECURITE

Pour obtenir les meilleures performances avec ce produit, nous vous demandons de lire soigneusement ce manuel.

- Lisez ces consignes
- Conservez ces consignes
- Respectez tous les avertissements
- Respectez toutes les consignes
- N'utilisez pas cet appareil à proximité d'eau
- Nettoyez-le en utilisant uniquement un chiffon sec
- Ne bloquez pas les ouvertures de ventilation. Installez cet appareil en respectant les consignes du constructeur
- Ne procédez pas à une installation à proximité de sources de chaleur, quelles qu'elles soient, (radiateurs, registres calorifiques, fours, etc.) ou d'autres appareils (dont des amplificateurs) qui produisent de la chaleur
- Ne cherchez pas à détourner l'objectif de la prise électrique à polarisation ou à mise à la masse. Une prise électrique polarisée comporte deux lames de largeurs différentes. Une prise à mise à la masse a deux lames et une broche de mise à la masse. La lame la plus large ou la troisième broche ont pour but de vous protéger. Si la prise fournie ne correspond pas à la prise murale, consultez un électricien pour remplacer l'élément obsolète
- Protégez le cordon électrique pour éviter que l'on ne marche dessus ou qu'on ne le coince, en particulier au niveau des prises mâles ou des prises murales et au niveau de l'appareil
- Il faut brancher l'appareil sur une prise du secteur disposant d'une mise à la terre.
- La prise murale de courant doit être installée près de l'unité et aisément accessible.
- Utilisez uniquement les fixations et accessoires spécifiés par le fabricant
- Débranchez cet appareil durant les orages électriques ou pendant les périodes prolongées d'inactivité
- Confiez toutes les interventions d'entretien à un personnel qualifié spécialisé dans l'entretien. Une intervention d'entretien s'avère nécessaire lorsque cet appareil a été endommagé, d'une façon ou d'une autre, par exemple lorsque le cordon d'alimentation électrique ou sa prise est endommagé, lorsqu'il y a eu un épanchement de liquide ou lorsque des objets sont tombés sur cet appareil, voire même lorsque cet appareil a été exposé à de la pluie ou une humidité, ne fonctionne pas normalement ou est tombé.



WARNING: AVERTISSEMENT Pour réduire tout risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou à une humidité.

- Le câble d'alimentation secteur ou l'adaptateur remis avec cet appareil doit être conforme au type employé dans votre pays. Veuillez comparer la prise de votre cordon électrique ou de votre adaptateur à la prise murale de l'emplacement où doit être installé votre appareil.
- Si vous n'avez pas reçu la bonne prise, **N'ESSAYEZ PAS** de la modifier. Vous devez au contraire immédiatement contacter votre revendeur ou le bureau de vente TV One le plus proche de chez vous pour demander la bonne prise.

Propriété intellectuelle

Certaines puces à circuits imprimés de ce produit contiennent des données confidentielles et (ou) des secrets professionnels. Par conséquent, vous ne pouvez pas recopier, modifier, adapter, traduire ou distribuer son contenu ou procéder à une ingénierie inverse ou à une décompilation de ce contenu.

WICHTIGE SICHERHEITSANWEISUNGEN

Lesen Sie diese Bedienungsanleitung sorgfältig, um zu gewährleisten, dass Sie den optimalen Nutzen aus diesem Produkt ziehen.

- Lesen Sie diese Anweisungen.
- Bewahren Sie diese Anweisungen auf.
- Beachten Sie alle Warnhinweise.
- Befolgen Sie alle Anweisungen.
- Verwenden Sie dieses Gerät nicht in der Nähe von Wasser.
- Verwenden Sie zur Reinigung nur ein trockenes Tuch.
- Blockieren Sie keine Lüftungsöffnungen. Installieren Sie das Gerät nach den Anweisungen des Herstellers.
- Stellen Sie das Gerät nicht in der Nähe von Wärmequellen wie etwa Heizkörpern, Heizklappen, Öfen oder anderen Wärme erzeugenden Geräten (einschließlich Verstärkern) auf.
- Setzen Sie den Sicherheitszweck von unvertauschbaren Steckern oder Erdungssteckern nicht außer Kraft. Ein unvertauschbarer Stecker besitzt zwei Messerkontakte, von denen einer breiter als der andere ist. Ein Erdungsstecker besitzt zwei Messerkontakte und einen dritten Erdungskontakt. Der breitere Messerkontakt oder der Erdungskontakt dient Ihrer Sicherheit. Falls der mitgelieferte Stecker nicht an eine Steckdose angeschlossen werden kann, beauftragen Sie einen Elektriker, die veraltete Steckdose auszutauschen.
- Schützen Sie das Netzkabel, so dass niemand auf das Netzkabel treten kann oder es insbesondere an Steckern, Steckdosen und an der Stelle, an der das Netzkabel aus dem Gerät geführt wird, nicht eingeklemmt werden kann.
- Verwenden Sie nur Zusatzgeräte/Zubehör, die/das der Hersteller angibt.
- Ziehen Sie den Netzstecker dieses Geräts bei Gewittern und auch dann ab, wenn es über einen längeren Zeitraum nicht betrieben wird.
- Lassen Sie Reparaturen nur von qualifiziertem Wartungspersonal durchführen. Reparaturen sind erforderlich, wenn das Gerät in irgendeiner Form beschädigt wurde, beispielsweise das Netzkabel oder der Stecker beschädigt wurde, Flüssigkeit auf dem Gerät verschüttet wurde oder Objekte in das Gerät gefallen sind, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht normal arbeitet oder fallen gelassen wurde.



WARNING: WARNUNG: Setzen Sie das Gerät weder Regen noch Feuchtigkeit aus, um die Gefahr eines Brandes oder elektrischen Schlags zu minimieren.

- Das mitgelieferte Netzkabel oder der mitgelieferte Adapter müssen dem in Ihrem Land verwendeten Typ entsprechen. Vergleichen Sie den Netzstecker oder Adapter mit der Netzsteckdose, an die das Gerät angeschlossen wird.

Falls Sie nicht den richtigen Stecker erhalten haben, versuchen Sie **NICHT**, ihn zu ändern. Setzen Sie sich stattdessen mit Ihrem Fachhändler oder der Verkaufsniederlassung von TV One in Verbindung, die sich am nächsten an Ihrem Wohnort befindet, und fordern Sie den richtigen Stecker an.

Geistiges Eigentum

Einige IC-Chips in diesem Produkt enthalten vertrauliche Informationen und/oder Geschäftsgeheimnisse. Aus diesem Grund dürfen Sie deren Inhalt nicht kopieren, ändern, anpassen, übersetzen, verteilen zurückentwickeln oder dekompilieren.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Para garantizar el máximo rendimiento de este producto, lea cuidadosamente este manual.

- Lea estas instrucciones
- Guarde estas instrucciones
- Respete todas las advertencias
- Siga todas las instrucciones
- No use este aparato cerca del agua
- Límpielo sólo con un paño seco
- No bloquee ninguna abertura de ventilación. Instálelo de acuerdo con las instrucciones del fabricante
- No lo instale cerca de fuentes de calor como radiadores, salidas de aire caliente, estufas u otros aparatos (incluyendo amplificadores) que produzcan calor.
- Respete la finalidad de seguridad de las clavijas polarizadas o con toma de tierra. Una clavija polarizada tiene dos cuchillas, una más ancha que la otra. Una clavija del tipo de puesta a tierra tiene dos cuchillas y un tercer borne para puesta a tierra. La cuchilla más ancha o el tercer borne son para su seguridad. Si la clavija suministrada no se adapta a su toma de corriente, consulte a un electricista para que cambie la toma obsoleta.
- Proteja el cable de alimentación para que no se pueda pisar ni pellizcar, especialmente junto a las clavijas, tomas de corriente, y en el punto de salida de las mismas en el aparato.
- Use sólo accesorios / elementos especificados por el fabricante
- Desenchufe el aparato durante las tormentas eléctricas o si no va a usarlo durante un largo período de tiempo.
- Consulte con personal cualificado cualquier tipo de servicio. Se necesitará servicio cuando el aparato haya sufrido daños de cualquier tipo, como daños en el cable de alimentación o en las clavijas, haya entrado líquido o se hayan caído objetos dentro del aparato, haya estado expuesto a la lluvia o humedad, no funcione normalmente o se haya caído.



WARNING: ADVERTENCIA: Para reducir el riesgo de incendio o electrocución, no exponga el aparato a la lluvia ni la humedad.

- El cable de alimentación de C.A o el adaptador suministrado con la unidad debe ser conforme al tipo usado en su país. Compare la clavija en su cable o adaptador con la toma de corriente donde vaya a instalar la unidad.

Si no ha recibido la clavija correcta, **NO** intente modificarla. Póngase inmediatamente en contacto con su distribuidor o con TV One en la oficina de ventas más cercana a su localización geográfica y solicite la clavija adecuada.

Propiedad intelectual

Algunos chips con circuitos integrados presentes en este producto incluyen propiedad confidencial y/o secreta del sector. Por lo tanto, usted no puede copiar, modificar, adaptar, traducir, distribuir, diseñar a la inversa, montar a la inversa o descompilar el contenido de los mismos.

BELANGRIJKE VEILIGHEIDSINSTRUCTIE

Om dit product optimaal te kunnen gebruiken, dient u deze handleiding aandacht te lezen.

- Lees deze instructies
- Bewaar deze instructies
- Let op alle waarschuwingen
- Volg alle instructies
- Gebruik dit apparaat niet in de nabijheid van water
- Reinig het apparaat alleen met een droge doek
- Blokkeer geen ventilatieopeningen. Installeer het apparaat volgens de instructies van de fabrikant. Plaats het apparaat niet in de nabijheid van warmtebronnen zoals radiatoren, kachels, warmtesensoren zoals thermometers, of andere apparaten (waaronder versterkers) die warmte afgeven.
- Omzeil het beveiligingszogmerk van de gepolariseerde of geaarde stekker niet. Een gepolariseerde stekker heeft twee pinnen, waarvan de een breder is dan de ander. Een geaarde stekker heeft twee pinnen, en een derde pin; een zogeheten aardlekpin. De bredere pin of aardlekpin is er voor uw veiligheid. Als de geleverde stekker niet in het stopcontact past, vraag dan een elektricien om het verouderde stopcontact te vervangen.
- Bescherm de netspanningkabel zodanig dat er niet op kan worden gelopen en dat er geen kink in kan komen, vooral bij de stekker, pinnen, en bij de aansluiting op het apparaat
- Gebruik alleen de accessoires en onderdelen die door de fabrikant worden aanbevolen
- Haal de stekker van dit apparaat bij onweer uit het stopcontact. Doe dit ook wanneer het apparaat lange tijd niet wordt gebruikt.
- Laat alle onderhoud over aan gekwalificeerd personeel. Onderhoud is vereist wanneer het apparaat op enigerlei wijze is beschadigd, bijvoorbeeld in het geval van een beschadigd netsnoer of een beschadigde stekker, wanneer er vloeistof op het apparaat is gemorst, of wanneer er een voorwerp in het apparaat is gevallen, wanneer het apparaat is blootgesteld aan regen of vocht, niet normaal functioneert, of is gevallen.



WARNING: WAARSCHUWING Om het risico op brand of een elektrische schok te verkleinen, dient u dit apparaat niet bloot te stellen aan regen of vocht.

- Het type wisselspanningkabel of adapter dat met deze eenheid is geleverd, dient overeen te komen met wat in uw land wordt gebruikt. Vergelijk de stekker van de kabel of adapter met het stopcontact waarop de eenheid wordt aangesloten.

Als u niet de juiste stekker hebt ontvangen, breng dan zelf **GEEN** wijzigingen aan. Neem in plaats daarvan direct contact op met uw dealer of met de afdeling verkoop van TV One die zich het dichtst bij u in de buurt bevindt en vraag om de juiste stekker.

Intellectueel eigendom

In bepaalde IC-chips in dit product zijn vertrouwelijke informatie en/of geheime handelseigendommen opgenomen. Het is u daarom niet toegestaan om de inhoud ervan te kopiëren, wijzigen, aanpassen, vertalen, verspreiden, te onderwerpen aan reverse engineering, reverse assembling, of te decompileren.

VIKTIGA SÄKERHETSANVISNINGAR

För att få ut det bästa av din product bör du läsa denna bruksanvisning noggrant.

- Läs dessa anvisningar
- Spara dessa anvisningar
- Rätta dig efter alla varningar
- Följ alla instruktioner
- Använd inte enheten nära vatten
- Rengör enheten endast med torr trasa
- Blockera inte ventilationsöppningarna. Installera enheten enligt tillverkarens anvisningar
- Placera inte enheten nära värmekällor, som värmeelement, varmluftsintag, spisar eller annan utrustning (inklusive förstärkare) som producerar värme.
- Försök inte använda en stickkontakt i ett uttag som den inte är utformad att användas i.
- En polariserad kontakt har två blad – det ena bredare än det andra. En jordad kontakt har två blad och ett tredje jordstift. Det breda bladet eller jordstiftet är till för din säkerhet.
- Om den medföljande stickkontakten inte passar i ditt eluttag måste du kontakta en elektriker för att få eluttaget utbytt.
- Skydda nätsladden så att man inte kan trampa på den eller klämma den, särskilt intill stickkontakten, vid grenuttag och där den kommer ut från enheten.
- Använd bara anslutningar och tillbehör som specificeras av tillverkaren.
- Dra ur nätsladden före åskväder eller när enheten inte ska användas en längre tid.
- Överlåt all service åt kvalificerad servicepersonal. Service krävs när enheten är skadad på något sätt, t.ex. om nätsladden eller stickkontakten har skadats, om vätska eller främmande föremål har kommit in i enheten, om enheten har utsatts för regn eller fukt, om den inte fungerar normalt eller om den har tappats i golvet.



WARNING: VARNING Med tanke på risken för brand och elchock får enheten inte utsättas för regn eller fukt.

- Den medföljande nätsladden eller adaptorn måste vara av den typ som används i ditt land. Jämför stickkontakten på nätsladden eller adaptorn med eluttaget där enheten ska installeras.

Om du inte fick rätt stickkontakt **FÅR DU INTE** försöka anpassa den. Kontakta i stället omedelbart butiken eller TV Ones närmaste försäljningsställe och be att få rätt stickkontakt.

Intellektuell egendom

Vissa IC-chip i denna produkt innehåller konfidentiellt material och/eller företagshemligheter. Du får därför inte kopiera, modifiera, anpassa, översätta eller distribuera innehållet eller använda reverse engineering, assemblering eller dekompilering på det.

VIKTIGE SIKKERHETSANVISNINGER

For at du skal få mest mulig ut av dette produktet, ber vi deg lese denne håndboken nøye.

- Les disse anvisningene.
- Ta vare på disse anvisningene.
- Vær oppmerksom på alle anvisningene.
- Følg alle anvisningene.
- Ikke bruk dette apparatet i nærheten av vann.
- Må bare rengjøres med en tørr klut.
- Ikke blokker ventilasjonsåpningene. Må installeres i overensstemmelse med produsentens anvisninger.
- Må ikke installeres i nærheten av varmekilder som radiatorer, varmeapparater, komfyrer eller andre apparater (også forsterkere) som produserer varme.
- Ikke sett sikkerhetsinnretningen til det polariserte eller jordete støpselet ut av funksjon.
- Et polarisert støpsel har to pinner, hvor den ene er bredere enn den andre. Et jordet støpsel har to pinner pluss en tredje jordingspinne. Den brede pinnen eller tredje pinnen er der av hensyn til sikkerheten. Hvis støpselet som følger med ikke passer i kontakten, må du kontakte en elektriker for å få skiftet ut kontakten.
- Beskytt ledningen mot å bli tråkket på eller klemt, spesielt ved støpselet, stikkkontakten og punktet hvor den kommer ut av apparatet.
- Ikke bruk andre typer tilbehør enn det som er angitt av produsenten.
- Koble apparatet fra strømforsyningen i tordenvær eller når det ikke skal brukes over en lengre periode.
- Overlat all service til kvalifisert servicepersonell. Apparatet trenger service hvis det på en eller annen måte har fått en skade, for eksempel at ledningen eller støpselet er ødelagt, det er blitt sølt væske på eller gjenstander har falt inn i apparatet, apparatet har vært utsatt for regn eller fuktighet, ikke fungerer som det skal eller har falt i gulvet.



WARNING: ADVARSEL For å redusere faren for brann eller elektrisk støt, må apparatet ikke utsettes for regn eller fuktighet.

- Strømledningen (vekselstrøm) eller adapteren som følger med enheten må tilsvare den typen som brukes i landet der du bor. Sammenlign støpselet på ledningen eller adapteren med stikkkontakten der hvor enheten skal installeres.

Hvis du har fått feil støpsel, må du **IKKE** forsøke å modifisere det. I stedet må du straks kontakte forhandleren eller nærmeste salgskontor for TV One og be om riktig type støpsel.

Opphavsrett

Noen av IC-brikkene i dette produktet inneholder fortrolig informasjon og/eller fabrikkhemmeligheter. Du må derfor ikke kopiere, endre, tilpasse, oversette, distribuere, rekonstruere kildekodene til eller dekompile noe av dette innholdet.

TÄRKEITÄ TURVALLISUUSOHJEITA

Lue tämä opaskirja huolellisesti, jotta saat parhaan hyödyn tästä tuotteesta. Lue nämä ohjeet

- Säilytä nämä ohjeet
- Ota kaikki varoitukset huomioon
- Noudata kaikkia ohjeita
- Älä käytä tätä laitetta veden lähellä
- Puhdista vain kuivalla kankaalla
- Älä tuki ilma-aukkoja. Asenna laite valmistajan ohjeiden mukaisesti.
- Älä asenna laitetta lähelle lämpölähteitä, kuten esim. lämpöpatteria, lämmitintä, uunia tai muita lämpöä tuottavia laitteita (vahvistimet mukaan lukien).
- Älä tee tyhjäksi polarisoidun tai maadoitetun pistokkeen turvallisuustarkoitusta. Polarisoidussa pistokkeessa on kaksi kosketuspiikkiä, joista toinen on leveämpi. Maadoitetussa pistokkeessa on kaksi kosketuspiikkiä ja kolmas maattokosketin. Leveä kosketuspiikki tai kolmas maattokosketin on turvallisuusominaisuus. Jos toimitettu pistoke ei sovi pistorasiaan, pyydä sähköasentajaa asentamaan uusi pistorasia.
- Varmista, että verkkojohdon yli ei kävellä eikä se jää puristuksiin etenkin pistokeja liitinkohdista sekä laitteesta ulostulevista kohdista.
- Käytä vain valmistajan määrittämiä lisälaitteita/lisävarusteita.
- Kytke laite irti verkkovirrasta ukkosmyrskyn aikana tai silloin, kun sitä ei käytetä pitkään aikaan.
- Jätä kaikki huoltotoimenpiteet pätevän huoltohenkilöstön suoritettavaksi. Laite on toimitettava huoltoon, jos se on vahingoittunut jotenkin, kuten esim. verkkojohto tai pistoke on vioittunut, laitteeseen on joutunut nestettä tai laitteen päälle on pudonnut esineitä, laite on altistunut sateelle tai kosteudelle, laite ei toimi normaalisti tai se on pudonnut.



WARNING: VAROITUS! Älä altista tätä laitetta sateelle tai kosteudelle tulipalon tai sähköiskun vaaran vähentämiseksi

- Laitteen mukana tulevan verkkojohdon tai sovittimen tulee olla yhdenmukainen maassa jo käytössä olevien kanssa. Tarkasta, että verkkojohdon pistoke tai sovitin sopii asennuspaikassa olevaan pistorasiaan.

Jos laitteen pistoke on väärä, **ÄLÄ** yritä muunnella sitä. Ota heti yhteys jälleenmyyjään tai lähimpään TV One -myyntikonttoriin ja pyydä oikeaa pistoketta.

Immateriaaliomaisuus

Jotkut tässä tuotteessa olevat IC-sirut sisältävät luottamuksellista ja/tai liikesalaisuusomaisuutta. Sen tähden sisältöä ei saa kopioida, muokata, kääntää, jakaa, takaisinmallintaa, mallintaa symbolisella konekielellä tai kääntää takaisin.

Introduction

Shipping Carton

Your CORIOmatrix will arrive boxed with internal foam inserts for maximum protection during shipping. You are encouraged to retain the box and all packing material so the unit can be returned in the unlikely event that repairs should ever become necessary.

Important Safety Instructions

The AC power cable furnished with the unit should conform to the type in use in your country. Please compare the plug on your cable with the power socket where the unit will be installed.

If you did not receive the correct cable, **DO NOT** attempt to modify it. Instead, immediately contact your dealer or contact tvONE at the sales office nearest to your geographic location and request the proper cable.

Installation should be made such that the system fans are not blocked by other pieces of equipment, and such that they may not be accidentally touched by users.

Connecting the PC to the CORIOmatrix

The physical connection between PC and CORIOmatrix is the same as with previous tvONE products. The CORIOmatrix can be connected to the PC through an Ethernet network, or by a serial (RS-232) cable.

By default, a CORIOmatrix running up-to-date firmware will be set to accept a DHCP-assigned IP address. If you do not know what this IP address is, use the CORIOdiscover application to configure the unit.

If you prefer not to use Ethernet, you can connect using a serial cable and use a third-party controller. (Crestron and AMX modules are available, or use a terminal emulator.)

For more information on configuring the connection, see “Configure Connection via Ethernet” on page 26 or “

Configure Connection via Serial” on page 29.

Initial Operation Check

This product can be operated via multiple methods, but this manual will address use of the device using an Ethernet connection and the CORIOmatrix web UI that is provided with the firmware. Although the unit can be controlled using an RS-232 serial connection and Crestron or AMX controllers, their use is not outlined here - to use those products, please see the documentation that is provided with that software.


If you have problems using the unit as described in this document, see the “Troubleshooting” section on page 209.

Connections

The rear of the CORIOmatrix has dual-link digital and analog DVI (DVI-I)¹ input and output connectors. Due to the large number of connectors that may be attached, it is important to use fully screened cables with built-in Ferrite chokes to meet the emission standards.

In the event that you want to use YC or CV analog video, a card with Universal DVI (DVI-U) ports is available from tvONE. These DVI-U ports can use adapters (available from tvONE) to attach HDMI, composite video or analog signals to the DVI-U connector.


Below is a diagram of the rear of the CORIOmatrix. DVI-I or DVI-U cards can be placed in slots 1-16.

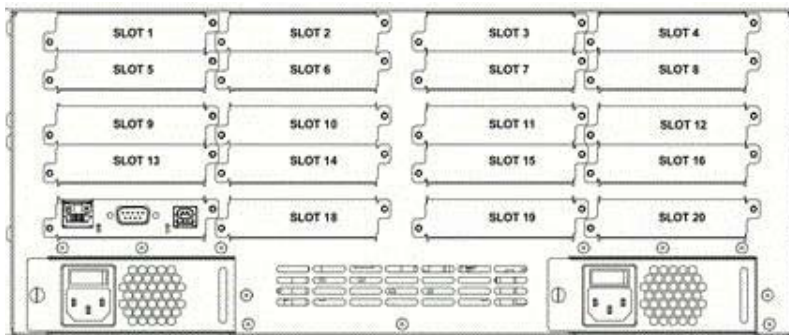

INPUT cards are painted black with white writing. They are placed in the unit from slot 1 onwards. The top row can only be inputs; remaining rows can be either inputs or outputs. Best practice is to add inputs in a left-to-right, top-to-bottom direction, while putting the first output card in slot 16 and working backwards.

OUTPUT cards are painted white with black writing. Output cards are placed after input cards; slot 5 is the first slot that will accept an output card. These outputs can do resolution conversion and can genlock to a separate input.

On a CORIOmatrix mini, there are six slots, and the sixth slot is a fixed DVI-I slot. Slots 1 through 5 can be filled with any combination of input and output cards, although it is still best practice to put inputs above and left of outputs. Below is a diagram of the rear of the CORIOmatrix mini.




Note: Your CORIOmatrix MX, CORIOmatrix or CORIOmatrix mini comes with various modules installed. CORIOmatrix mini modules are factory installed and cannot be replaced in the field by end users.

¹In Early 2015, CORIOmatrix and CORIOmatrix mini units were redesigned to use DVI-I cards by default. Prior to this date, DVI-U connectors were default. If your CORIOmatrix has DVI-I cards, be sure not to use a firmware build prior to M306.

Modularity

The CORIOmatrix MX, CORIOmatrix and CORIOmatrix mini frames come as standard with a CPU module and an inbuilt DVI-I card (with two inputs) and a single Power Supply Unit.

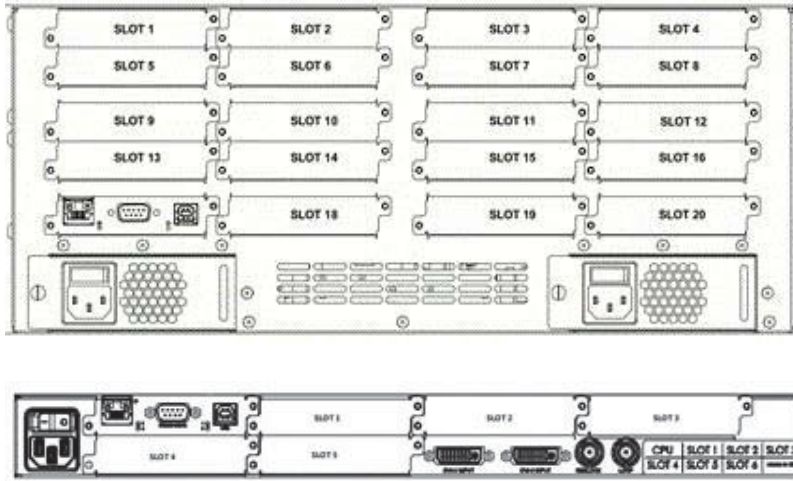

The video modules available for these units are **DVI-I**, **Universal DVI**, **3G-SDI**, **HD-SDI** and **HDBaseT**. You can also get an audio module and a monitor card

	Input Cards	Output Cards
DVI-I ¹	CM-DVI-I-2IN	CM-DVI-I-SC-2OUT
Universal DVI ²	CM-DVIU-2IN	CM-DVIU-SC-2OUT
3G-SDI	CM-3GSDI-2IN	CM-3GSDI-SC-2OUT
HD-SDI	CM-HSDSI-4IN ³	CM-3GSDI-SC-2OUT
HDBaseT	CM-HDBT-2IN-1ETH	CM-HDBT-SC-2OUT-1ETH ⁴

In addition to the video cards, a monitor card is available from tvONE which enables you to see all attached inputs and outputs on a separate display. See “About Monitoring” on page 117 for more information.

¹ Default DVI card was DVI-U until early 2015, at which time default connector became DVI-I. DVI-I cards require firmware version M306 or later.

² Universal DVI allows the connection of a number of different adapters for HDMI, VGA, Y/C, Composite, etc.

³ Although other modules have two connections, the HD-SDI card allows the connection of four HD-SDI connections.


⁴ The HDBaseT module allows for transmission of uncompressed, HDMI-quality video, audio and LAN up to 100m with good quality cabling. The card has two independent HDBaseT outputs and a single LAN input, supporting 100Base-T.

Input and Output Naming Convention


The CORIOmatrix protocol uses a fixed naming convention. You can create aliases within the control software but it is helpful to understand the default naming convention.

The naming is defined by the position of modules within the CORIOmatrix product. The figure below shows the unit as viewed from the rear. Each location in which a module can be placed is called a slot and each slot is numbered from the top left, going across then down.

The first slot is numbered 1; the last is 20. Slot 17 is a special slot holding the CPU card and slots 18,19 and 20 only work with data, not video signals.

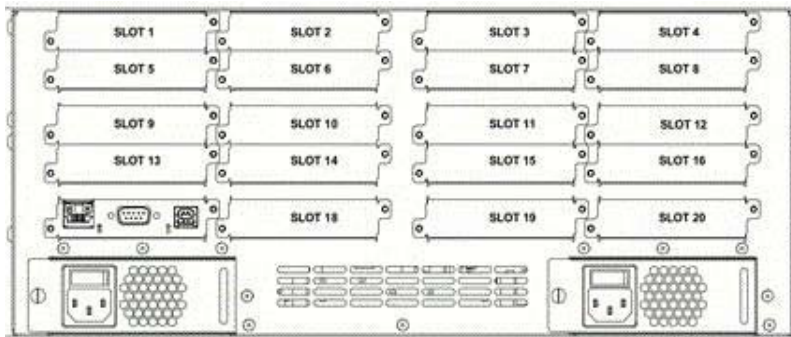

On a CORIOmatrix mini, slots are also numbered left-to-right, but there are a total of six slots; slot six is already filled with DVI-I or DVI-U connectors (CORIOmatrix units built after early 2015 have DVI-I; earlier models use DVI-U). The CPU card is to the left of Slot 1.



The fixed label for slot 1 is Slots.slot1

The video modules have inputs and outputs. Most cards have two connectors per slot or per module that slides into the slot.

Inputs are addressed by in1 and in2; outputs are addressed by out1 and out2. HD-SDI input cards also have in3 and in4.

Like the slot numbering system, they are numbered from left to right when you are facing the rear of the CORIOmax.

The fixed label for the left-most input on slot 1 is Slots.slot1.in1

The fixed label for the left-most output on slot 13 is `Slots.slot13.out1`

The input numbering starts from 1 and continues to the number of inputs on that card. Likewise, the output numbering starts at 1 and continues to the number of outputs on that card. So an input card in the first slot with four connectors would be `slot1.in1`, `slot1.in2`, `slot1.in3`, and `slot1.in4`, while an output in slot 14 with two connectors would be `slot14.out1` and `slot14.out2`, labeled from left to right.

These names may also be abbreviated to the first initial, so in the examples above, the inputs could also be `s1i1`, `s1i2`, `s1i3` and `s1i4` while the outputs would be `s14o1` and `s14o2`. These are the default labels in the software unless you change them.

Slot aliases must be unique strings. If you change a slot alias to be the same as another slot (for example, rename `s1i2` to be "`s1i1`"), after saving the name, the original slot with that name will now have a blank name field. You would then need to rename the blank-named slot to a unique alias.

Supported Browsers

The CORIOmatrix web UI has been written for and tested in certain select browsers. If you attempt to access your CORIOmatrix web UI through an unsupported browser, it may not perform as expected. Symptoms range from inability to access the UI past the login page to graphical anomalies or functional loss of features.


The browsers which are supported for use with the CORIOmatrix web UI are the Windows, Mac or Linux versions of:

- **Firefox** version 28 or newer
- **Chrome** version 34 or newer
- **Safari** version 6 or newer
- **Internet Explorer** version 10 or newer


Configure Connection via Ethernet

If you wish to connect to a CORIOmatrix using an Ethernet connection, the process should be simple, as any CORIOmatrix with up-to-date firmware (M300 or later) defaults to DHCP and should be discoverable on your network. tvONE recommends that you change any CORIOmatrix device in a fixed networked installation to a static IP address.

Initially, your CORIOmatrix will acquire an IP address via DHCP. Use the CORIOdiscover application provided on the USB memory stick included in the box to find and configure your CORIOmatrix.

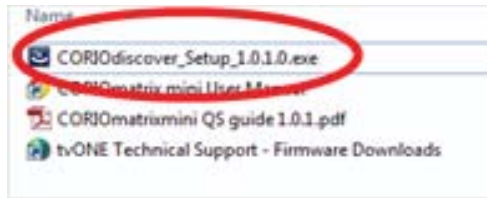


As well as installing the CORIOdiscover application, make sure your computer and the CORIOmatrix are on the same Ethernet network. If you do not want the CORIOmatrix on your network yet, you can connect the computer directly to the CORIOmatrix via Ethernet and configure it with this direct IP connection.

1. Once the CORIOmatrix and your PC are on the same network or directly connected, open the CORIOdiscover application which automatically scans for any CORIO devices. The application automatically refreshes data every few seconds and any changes will appear within ten seconds. If you wish to re-scan on demand, click the green refresh button  at the top right.
2. If you have multiple devices on the network, identify the specific CORIOmatrix you wish to configure by verifying the serial number in the application (the serial number is located on a sticker underneath the unit).

- Click the corresponding line to highlight the CORIOmatrix and click the Configure button.



- In the resulting pop-up window, you can change the configuration to Static and enter the appropriate network settings for the CORIOmatrix as determined by your systems administrator.

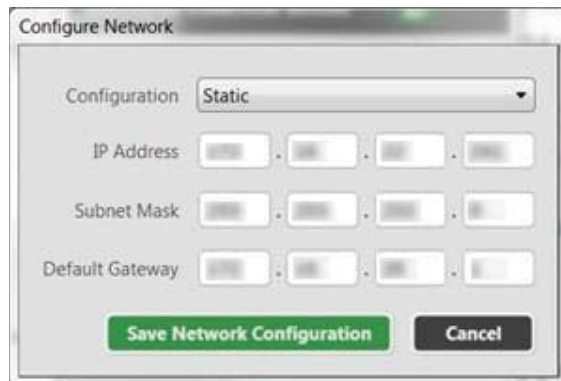

- Click the Save Network Configuration button to commit your changes and restart the unit. The window closes, and CORIODiscover scans the network again, allowing you to confirm the network settings on the unit. While the unit is restarting, it appears as "Offline" in the device. Once the reboot is completed, you can select the appropriate line.
- Select the unit in CORIODiscover and click the Open button to open the device in your default web browser. Alternatively, in the web browser of your choice, type the IP address of the CORIOmatrix into the address bar and press return.
- The CORIOmatrix serves a web interface, beginning with a login page.
- Type the appropriate username and password into the fields (default username is admin and password is adminpw) and click Log in.

For a list of supported browsers, see [Supported Browsers](#)

Configure Connection via Serial

By default, any new CORIOmatrix defaults to a DHCP network connection. If you wish to connect to a CORIOmatrix using a serial (RS-232) connection, you need to use a third-party controller such as those provided by Crestron or AMX. These third-party products use a series of API commands to control the unit, or you can use a HyperTerminal application; if you want to control the unit manually, you can download a manual of API commands from the tvONE website.

If you wish to simply connect to the CORIOmatrix in order to configure network settings, follow these steps:


1. Connect your control computer directly to the CORIOmatrix using a serial (RS-232) cable.
2. Using a HyperTerminal application, connect to the CORIOmatrix (instructions will vary depending on software used). Once connected, you can use the command line to log in and configure network settings as needed:
3. Once the CORIOmatrix is responding, type `login (admin, adminpw)` and press Return to connect and authenticate. The response, if successful, is `!Info : User admin Logged In.`
4. There are two potential IP address settings - the static IP settings and the DHCP settings. If you want to configure a static IP, you need to disable DHCP as those settings will over-ride static IP settings. Type `System.Comms.Ethernet.DHCP.Enabled = Off` to disable DHCP. The system will echo the command if it was successful.
5. Configure your static IP and other network settings by using the following commands, using the Return key after each command:
 - `System.Comms.Ethernet.IP_Address = <enter your static IP address>`
 - `System.Comms.Ethernet.IP_Subnet_Mask = <enter subnet mask>`
 - `System.Comms.Ethernet.IP_Gateway = <enter gateway address>`
6. Type `System.Comms.Ethernet` and press Return; this command will return all Ethernet settings and you can verify the addresses you just input.
7. When you have the settings as desired, type `System.SaveAllSettings()` (including the open and close parentheses at the end) and press Return to save your changes to the CORIOmatrix memory.
8. In order to make the network settings active, restart the CORIOmatrix. The easiest way to do this via the command line is to type `System.Reset()` and press Return. You are disconnected from the unit while it restarts, but after it restarts you can access it via the static IP you configured. **Supported Browsers**


Getting Started

Configuring Inputs and Outputs

When you begin to use the Routing Page, the software will automatically retrieve information on the cards that are installed in your unit. Inputs appear vertically down the left side of the page; outputs appear horizontally across the top of the page.

When you have logged in to the CORIOmatrix web interface, the first screen you see is the routing table. This is the default, with Video and Audio both selected. Upon loading, the software automatically retrieves information on the cards that are installed in your unit. Inputs appear vertically down the left side of the page; outputs appear horizontally across the top of the page.

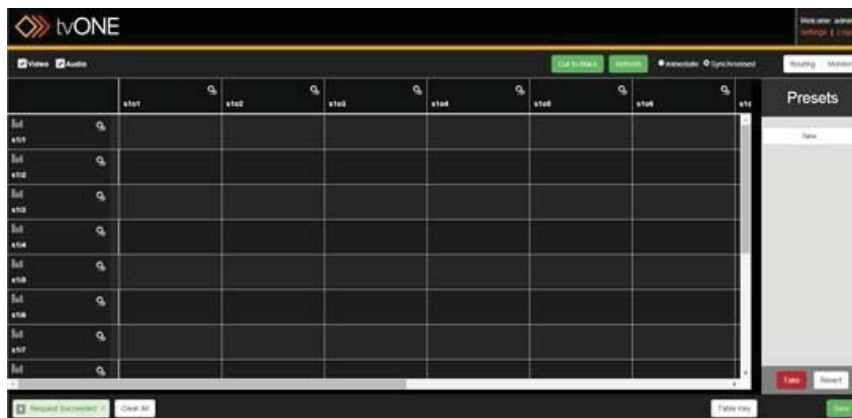


You can configure Input settings by clicking the gear icon  next to the input's alias. In the right-hand pane, Input Settings appears and allows you to modify the alias (the name which appears in the Routing table) or view the full name and status. From this pane, you can also click the Configure button to access more settings for a video input card; no additional settings are available for audio input cards. See “Configuring Input Settings” on page 56 for more information.



Log In

Assuming you have already configured the CORIOmatrix, these instructions tell you how to log in to the web interface on the unit. If you still need to configure the CORIOmatrix for your network, see “Configure Connection via Ethernet” on page 26.

1. Select the unit in CORIOdiscover and click the Open button to open the device in your default web browser. Alternatively, in the web browser of your choice, type the IP address of the CORIOmatrix into the address bar and press return.
2. The CORIOmatrix serves a web interface, beginning with a login page.

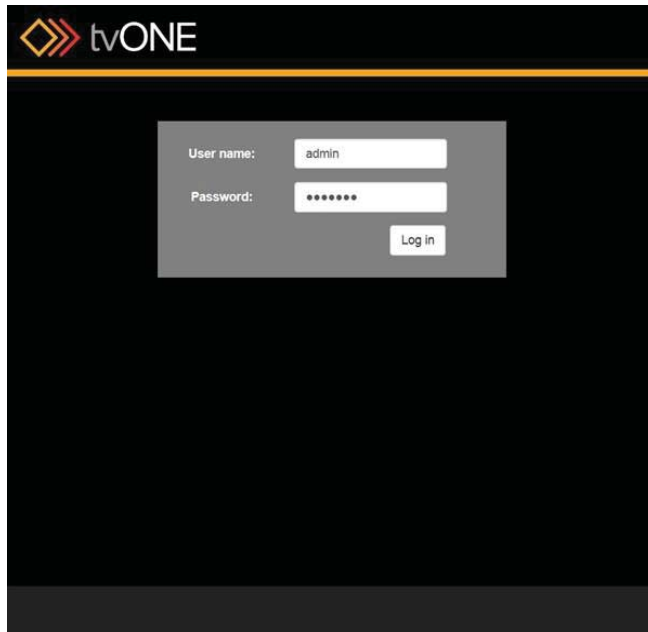

3. Type the appropriate username and password into the fields (default username is admin and password is adminpw) and click Log in.

Log Out

When you have finished configuring or using the CORIOmatrix, tvONE recommends that you log out of your session and close the browser window, for security reasons.

To log out of the CORIOmatrix web interface, click the **Logout** button in the top right corner of the Routing Page:




Updating Firmware and WebUI

To update the firmware (and the WebUI) on the device you will need to use the CORIOdiscover software tool. You can find instructions to install CORIOdiscover [here](#).

Once you have CORIOdiscover installed. Open the application and you should be presented with the following window:



1. Select your device from the list.
2. Click on the [Update]-button in the row of buttons at the bottom. You will then see a new window popping up:

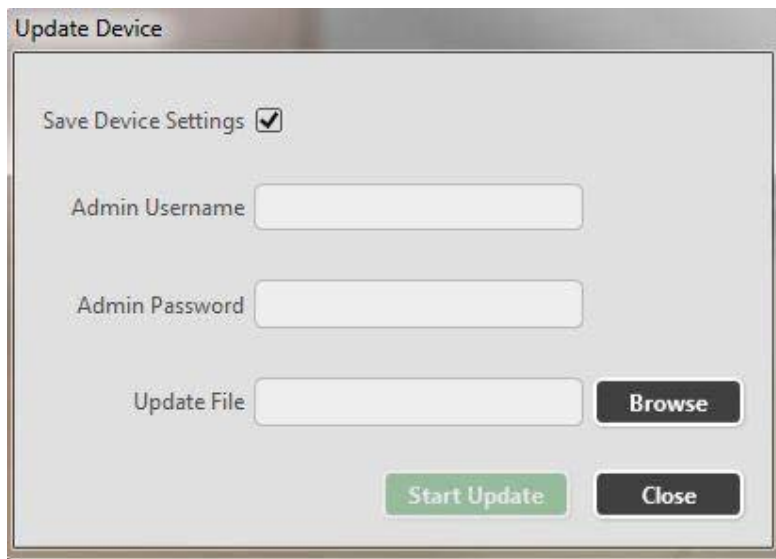

3. If you have settings on the device already and want to move them across to the new installation, make sure you check the “*Save Device Settings*” box. It will back up your settings and restore them once the firmware update is completed. All this will happen automatically without further interaction.


Be aware:

This option will overwrite a backup you might have already made. If you would like to hold on to a current backup, leave the box unchecked. This will allow you to restore to your earlier backup after you have finished updating the software. Alternatively you can copy your SD card content before you proceed with the update, then check the tick box when updating. This way you have:

- Your earlier backup in your copy location and
 - The recent backup on your SD card after the update. (Also your system will have the same settings after the update as it had just before the update.)
4. Please provide the *Admin Username* and *Admin Password*. If you have not changed them (which is recommended) by default they are:
 - a. Admin Username: admin
 - b. Admin Password: adminpw
 5. In order to update the firmware, you then need to find the zip-file containing your new firmware:

Model of unit	Firmware file
CORIOmatrix	Mxxx_yyS.zip
CORIOmatrix mini	Mxxx_yyR.zip
CORIOmatrix MX	Mxxx_yyO.zip
CORIOmaster	Mxxx_yyM.zip
CORIOmaster mini	Mxxx_yyL.zip

6. Eventually click the [Start Update] – button. If all correct the software will show you a progress window as shown below:

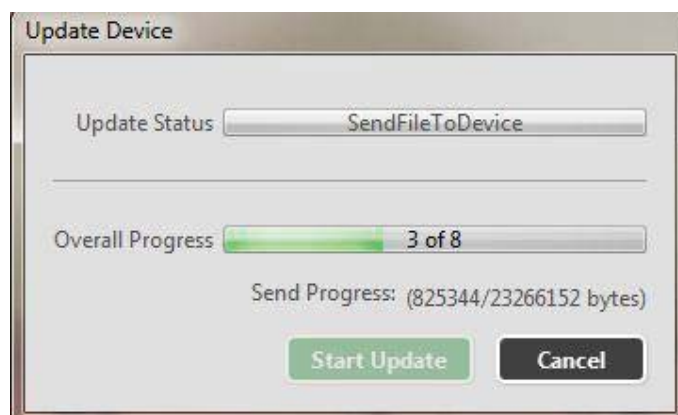


7. Once the update is complete, you can close the CORIOdiscover tool and now run your system on the new firmware. If you are using the WebUI of the CORIOmatrix (MX) it is recommended to **completely clear the cache** of your browser to prevent it from showing old cached pages.

If you'd like to restore a backup (or if you have selected "Save Device Settings" earlier, but you'd like to restore your system to a different backup) please refer to the section [Restore from SD Card](#).

Settings

To access the settings of your CORIOmatrix, log in as the administrator and click the Settings button in the top right corner of the Routing Page.

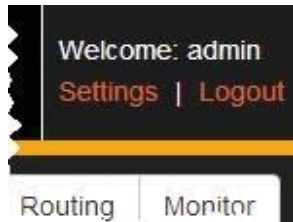


From the Settings area, you can access [information](#) about your CORIOmatrix, [change passwords](#), [configure networking](#), [review or adjust slot configurations](#), [back up to an onboard SD card](#), or [restore from the onboard SD card](#).

System

From the Settings window, you can make various changes to the CORIOmatrix, and you can find information about the unit.

1. While connected to a CORIOmatrix as the administrator, click the Settings button in the top right corner.

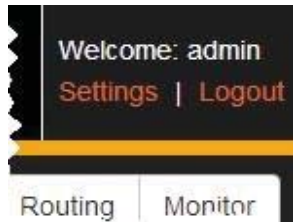

2. Choose the System option in the left sidebar.



In the right-hand pane, you see various information including the device name, model number, serial number, firmware version, and the date the firmware was installed. None of this information is editable but it is provided for informational purposes.

3. If you wish to exit Settings, click the Back button in the bottom right to return to the Routing Page.

Users

The CORIOmatrix web UI has two user roles, in order to streamline privileges.


Admin, the administrator, can do everything including changing routing settings, saving Presets, and resetting passwords for other users.

Users can switch between Presets and change the password for that user.


When a user creates a password, the password is stored securely on the device, and is not displayed during transmission over the API. Only the administrator can reset another user's password.

To change passwords, follow these steps:

1. While connected to a CORIOmatrix as the administrator, click the Settings button in the top right corner.

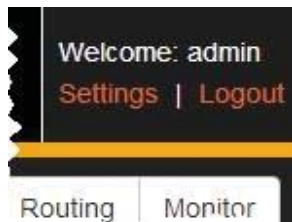

2. Choose the Users option in the left sidebar.

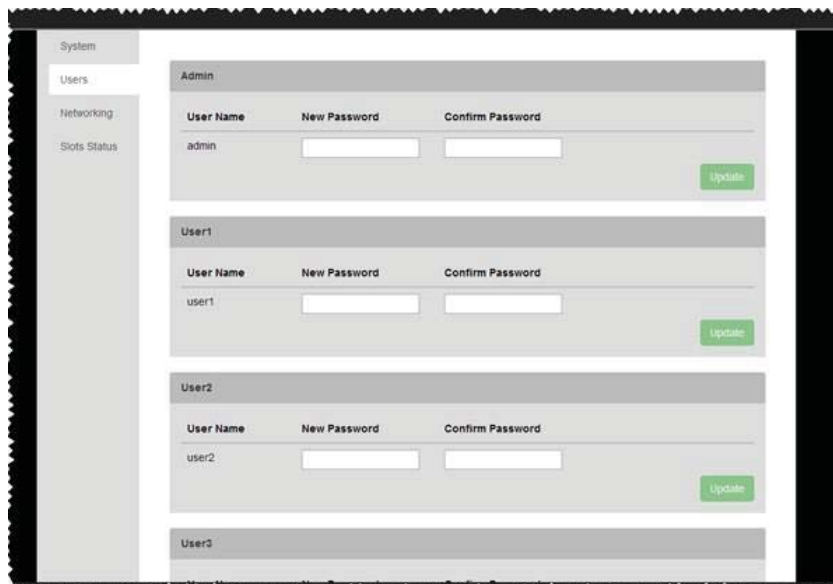

In the right-hand pane, note sections for each user - the Admin and Users 1-4. User names are not modifiable but you can change the password for any user by entering the new password twice and clicking the Update button to the right of the text fields. If


the Update button doesn't become available, the text in the two password fields does not match.

3. Check the notifications in the bottom left corner of the screen to make sure the password change was successful. If it was unsuccessful, the notification box will change from green to red.
4. If you wish to exit Settings, click the Back button at the bottom right to return to the Routing Page.


Networking

From the Settings window, you can make various changes to the CORIOmatrix, including adjusting the network settings.

1. While connected to a CORIOmatrix as the administrator, click the Settings button in the top right corner.

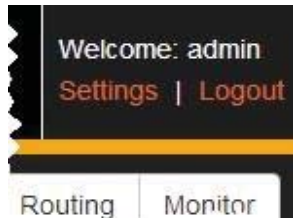

2. Choose the Networking option in the left sidebar.

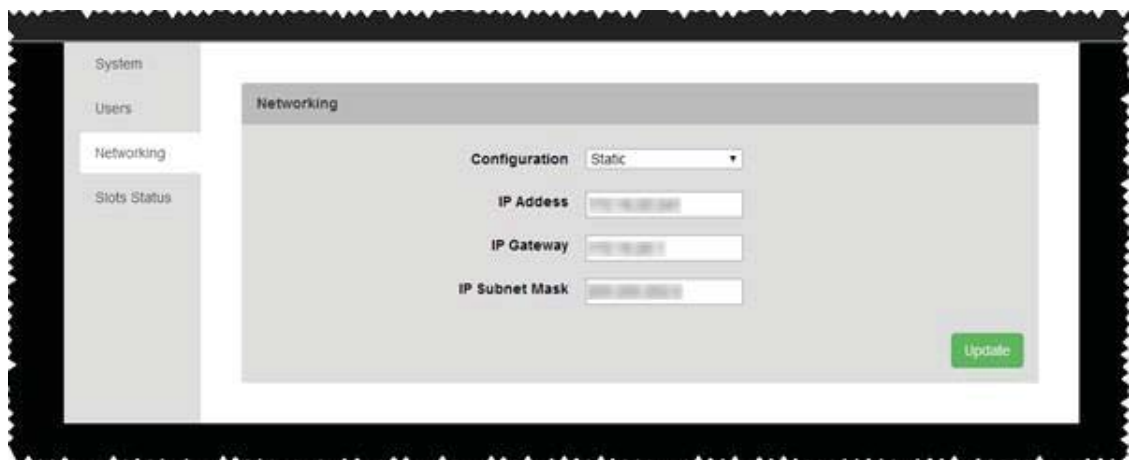

In the right-hand pane, you see various options that allow you to choose a static or dynamic IP address as well as configure subnet mask and gateway details.

3. On the top line, Configuration, choose from the drop-down whether you will be using a Static IP address or if the address will be configured by DHCP. (If you choose DHCP, neither IP Address nor Subnet Mask will be configurable.)
4. If you chose Static:
 - I. In the second field, enter the appropriate IP Address.
 - II. In the third field, enter the appropriate Default Gateway.
 - III. In the fourth field, enter the appropriate Subnet Mask.
5. Click the Update button to save this information.
6. An authentication window may require you to re-confirm the admin user credentials to verify the change. Enter the administrator username and password and click Log In.
7. If you wish to exit Settings, click the Back button in the bottom right to return to the Routing Page.


For assistance with configuring network settings on first boot, see “Configure Connection via Ethernet” on page 26 and “

Configure Connection via Serial” on page 29.


Slots Status

From the Settings window, you can make various changes to the CORIOmatrix, and you can modify settings for the input and output slots. Be aware that any change you make is saved as soon as you exit the field, so there is no need to save changes once you finish making modifications.

1. While connected to a CORIOmatrix as the administrator, click the Settings button in the top right corner.

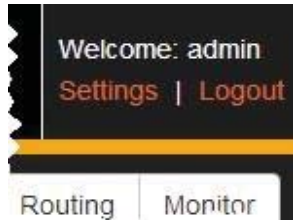

2. Choose the Slots Status option in the left sidebar.

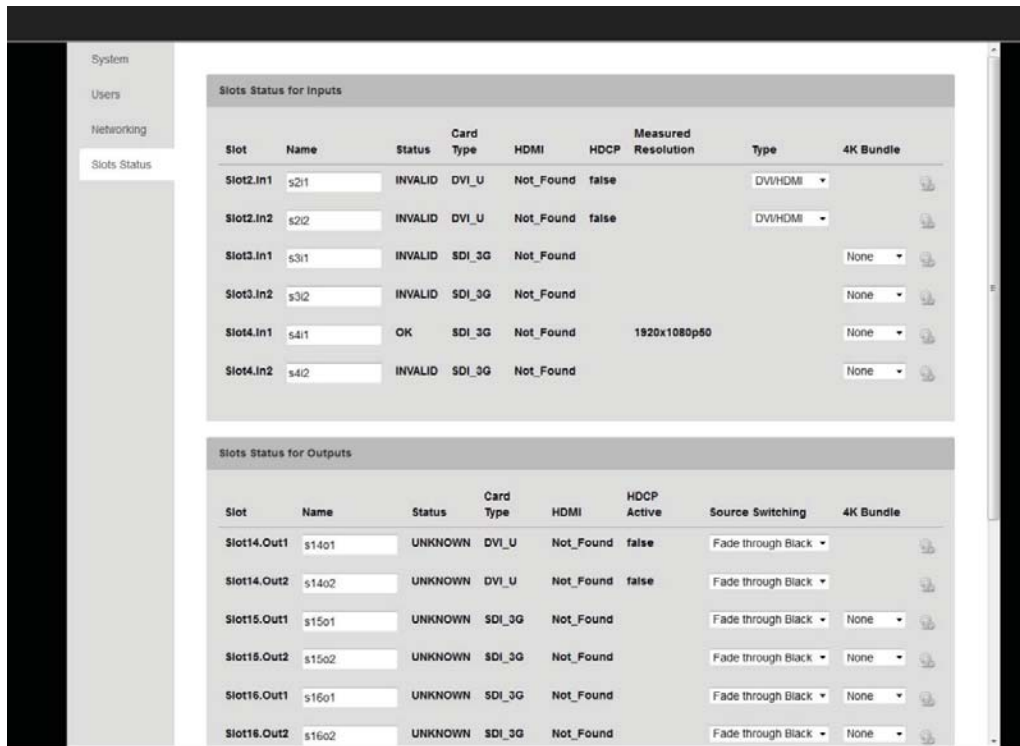

Slots Status for Inputs

Slot	Name	Status	Card Type	HDMI	HDCP	Measured Resolution	Type	4K Bundle
Slot2.In1	s2i1	INVALID	DVI_U	Not_Found	false		DW/HDMI	
Slot2.In2	s2i2	INVALID	DVI_U	Not_Found	false		DW/HDMI	
Slot3.In1	s3i1	INVALID	SDI_3G	Not_Found			None	
Slot3.In2	s3i2	INVALID	SDI_3G	Not_Found			None	
Slot4.In1	s4i1	OK	SDI_3G	Not_Found		1920x1080p50	None	
Slot4.In2	s4i2	INVALID	SDI_3G	Not_Found			None	

Slots Status for Outputs

Slot	Name	Status	Card Type	HDMI	HDCP Active	Source Switching	4K Bundle
Slot14.Out1	s14o1	UNKNOWN	DVI_U	Not_Found	false	Fade through Black	
Slot14.Out2	s14o2	UNKNOWN	DVI_U	Not_Found	false	Fade through Black	
Slot15.Out1	s15o1	UNKNOWN	SDI_3G	Not_Found		Fade through Black	None
Slot15.Out2	s15o2	UNKNOWN	SDI_3G	Not_Found		Fade through Black	None
Slot16.Out1	s16o1	UNKNOWN	SDI_3G	Not_Found		Fade through Black	None
Slot16.Out2	s16o2	UNKNOWN	SDI_3G	Not_Found		Fade through Black	None

In the right-hand pane, you see various information about the inputs, another section for outputs, a third section for audio inputs, and a fourth section for audio outputs. Editable fields are identified by text boxes or drop-down menus.

3. Specify the name for any inputs or outputs you wish to modify. These names can be up to 19 characters, must start with a letter, and contain letters, numbers, or the underscore "_" symbol. For inputs, you can specify the video type by selecting from the drop-down list. Choices are DVI, RGBHV, RGsB, YUV/YPbPr, CV or YC. For outputs, you can specify the way to handle source switching. Choices are Fade through Black or Freeze and Cut. For both inputs and outputs you can assign them to a 4K-Bundle-Group in case you are using a CORIOmatrix MX device. Find more on this topic in the dedicated section.
4. If you wish to exit Settings, click the Back button in the bottom right to return to the Routing Page. Remember that changes are committed as soon as you exit the field or select the drop-down, so there is no need to save changes before leaving the page.


Backup to SD Card

From the Settings window, you can back all of your current configuration up to the internal SD card within the CORIOmatrix.


The device only allows for one backup on the SD card at a time, therefore – if you have already made a backup and you would like to keep it, please copy the backup to your PC before taking further steps.

If you wish to do a backup:

1. While connected to a CORIOmatrix as the administrator, click the Settings button in the top right corner.

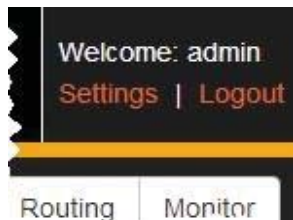

2. At the bottom of the window, you can see various buttons, including **Backup to SD**.

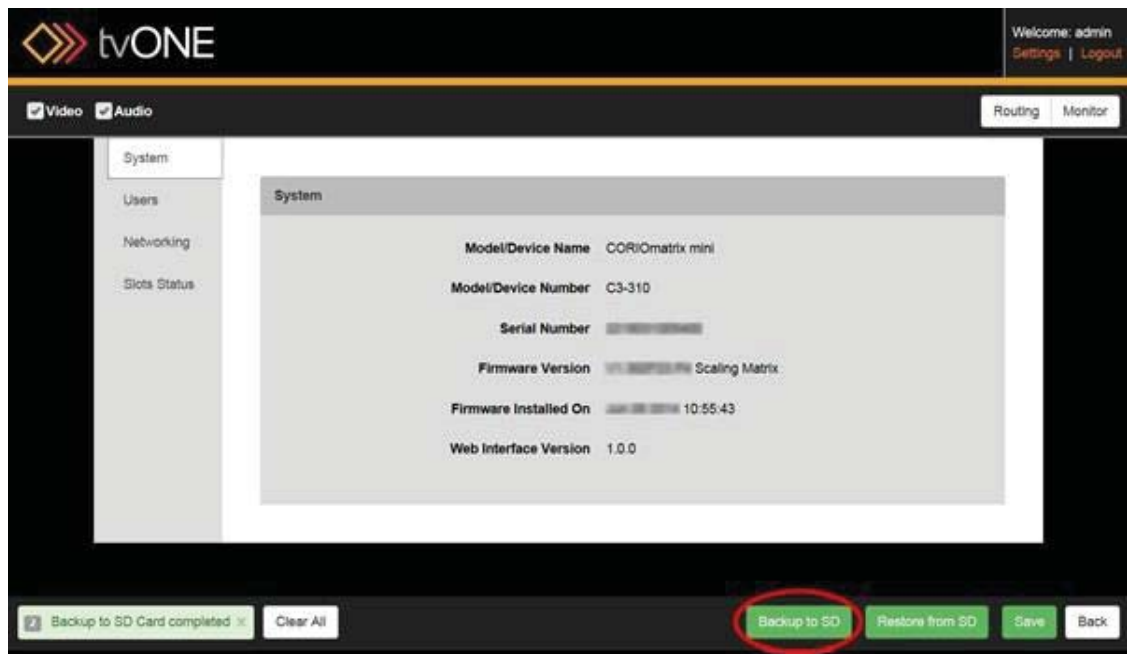

If you have made any changes, be sure to click the **Save** button before backing up, to ensure that the backup includes the most current modifications.

3. Click the Backup to SD button. A progress bar appears, asking you to please wait.



4. When the backup is finished, the progress bar disappears and the notification area informs you that the backup was successful.




Restore from SD Card

From the Settings window, you can restore your saved configuration that has been previously saved on the internal SD card within the CORIOmatrix. You may have a backup on your SD card due to one of 3 scenarios:


- You have previously chosen to make a backup via “Backup to SD”,
- You have previously update the firmware and you selected “Save Device Settings” or
- You have copied a backup to your SD card from another location.

If you wish to restore a backup:


1. While connected to a CORIOmatrix as the administrator, click the Settings button in the top right corner.

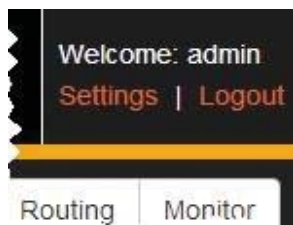

2. At the bottom of the window, you can see various buttons, including **Restore from SD**.

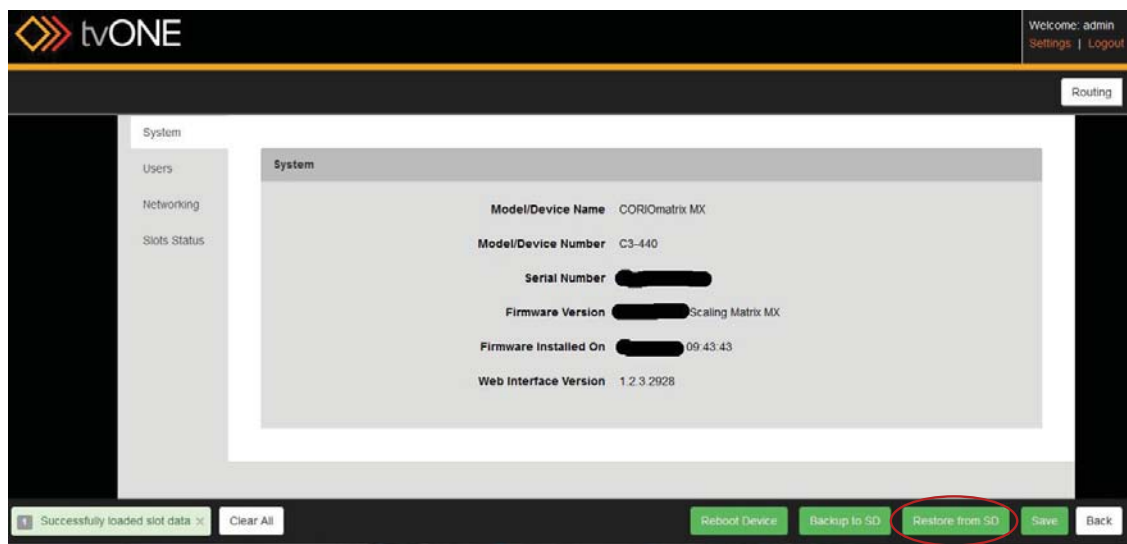

3. Click the **Restore from SD** button. A confirmation window appears, asking you to verify your choice.

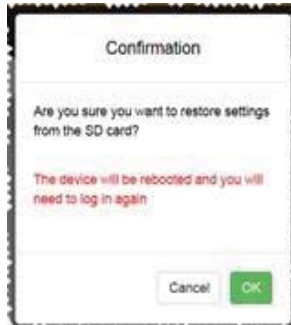

Caution: If you choose to restore from the SD card, you will delete the active configuration.

4. If you are sure you want to restore the settings, click the OK button. A series of two progress bars appear. The first says "Please wait" while settings copy from the SD card:




The second progress bar indicates that the CORIOmatrix is restarting with the restored settings:



Please make use of the **[Reboot Device]**-button, if you are uncertain whether the machine has rebooted.

5. When the CORIOmatrix has completed rebooting and the web interface is available again, your browser window will return to the login page of the web interface. Log in and proceed with the restored settings.

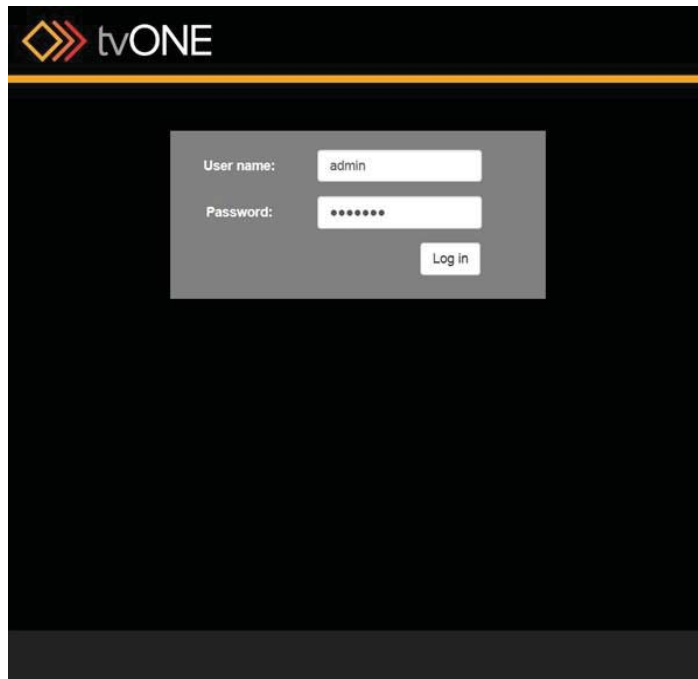


If you have any issues following these steps while using Chrome, Firefox or Safari, please see
“Troubleshooting - Doesn't Reconnect After Restore” on page 211.

Routing

Routing Overview

The Routing page is the first page you see after you log in. This is the main page of the web interface, from which you access all other pages.

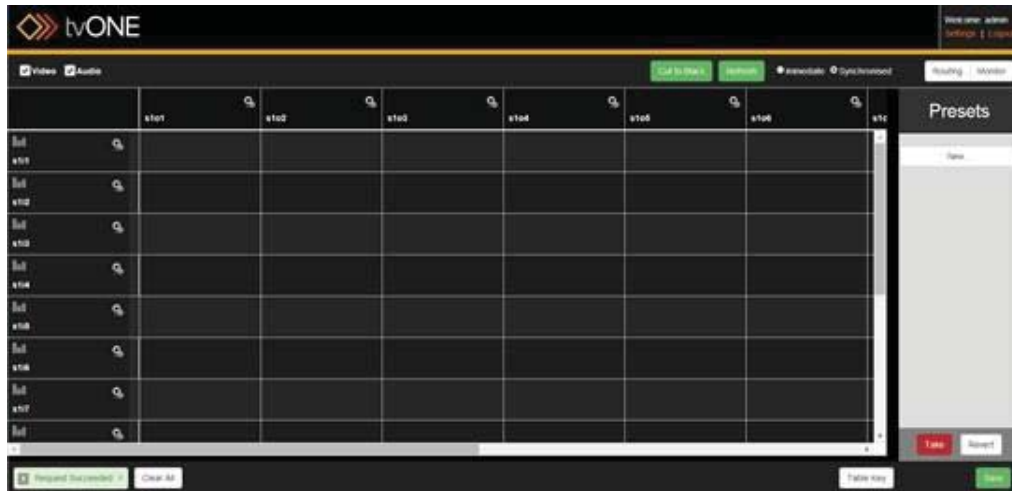

The first time you log in to your CORIOmatrix as an administrator, the page will look like the screenshot above - input and output aliases set to default, no routing information, no presets defined, and the interface defaulting to Synchronised.

The main part of the page is a table showing inputs listed vertically on the left and outputs listed horizontally across the top.

To configure routing, find the cell that is the intersection of the desired input and the desired output, and select that cell. More details are available in “Setting routing options” on page 55.

The interface is also made up of several other components, outlined here:

The “Welcome corner” on page 52, in the top right corner shows which user you are logged in as, and allows you to log out or access settings.

The “Notification box” on page 53 in the bottom left corner indicates what responses have been received from the unit.

The “Presets pane” on page 54, at the right, shows presets by default but can also be an input/output configuration pane.

Welcome corner

In the top right corner of the Routing page are the words, "Welcome: admin" if you are logged in as the administrator. If you log in as a user, the username is shown in the top right corner, and some of the options available to administrators such as settings, defining presets, and monitor card access are not available when you are logged in as a user. The rest of this document will generally assume that you are logged in as the administrator; if you are logged in as a user and do not see a feature described in this documentation, it may not be available to a non-administrator. Log out and log back in as the admin user in order to take advantage of all features.



Below the greeting are two links, for **Settings** and **Logout**. Click the "**Settings**" (see page 37) button to see and edit various configurable options. Click **Logout** if you wish to exit the CORIOmatrix Web Interface.

Notification box

A notification in the bottom left corner of the Routing page reads "Request Succeeded" when you first log in, to indicate that your login was successful. This notification area is green when commands sent to the CORIOmatrix have been successful.



If a command has failed, the notification area turns red and gives a brief textual indicator of the issue. This can be the result of a variety of symptoms but the most common issue to check is that the CORIOmatrix is still on and connected to the network. If the connection to the CORIOmatrix is broken, you may still seem to be connected to the web interface, but no commands are reaching the unit. If the unit is no longer connected, an error message is returned within 60 seconds of the unsuccessful command being sent.



The number on the far left of this area, in a gray box, shows how many messages are queued. Click the gray **X** on the right side of the notification box **X** to dismiss a single message and see the previous message, or click the **Clear All** button to dismiss all messages. If you have dismissed all notifications, this area of the window will remain blank until the next request is made that generates a success or failure notification from the CORIOmatrix. For more information on the commands being sent between the web interface and the CORIOmatrix, see the API documentation available from the tvONE [website](#).

Presets pane

The far right of the Routing page screen contains a contextual pane. If nothing else has been selected, it shows the Presets. You can add, edit, or delete presets from this pane. (See “About Presets” on page 110 for more information.) If you select an input or output to configure, this pane becomes a settings pane for that input or output.



Setting routing options

The main part of the Routing page is a table showing inputs listed vertically on the left and outputs listed horizontally across the top. A checkbox above the table allows you to select only video, only audio, or both. For the purposes of this manual, we generally use a table showing both video and audio options.

To configure routing, find the cell that is the intersection of the desired input and the desired output, and select that cell. The options available depend on what sort of input and output are detected/configured.

If video is an option for the given cards, clicking into a cell sets the video routing for that input to that output. (That cell of the table shows a blue lozenge to indicate the pairing.) A drop-down menu in the cell allows you to choose audio configuration options from **Off**, **AFV** (audio follow video), **BreakAway**, or **Configure...** The top option, **Remove**, can be used if you want to delete the configurations that have been made in that cell.




AFV or Audio Follow Video indicates that the audio routing is defined at the input. This often means that the audio comes from that source, but it can mean that any time that video source is selected, the audio is defined as coming from another input. AFV audio sources are the default embedded source or any audio input, embedded or external AES. AFV audio channels are configured in the Input Settings or from the **Configure...** menu option in the cell's drop-down menu. See “Routing Audio with Input (AFV)” on page 103 for more information.

BreakAway indicates that the audio routing is defined at the output. By default, breakaway audio uses the same source for video and audio input, but it can mean that anytime that output is selected, the audio is configured to come from a different source. BreakAway audio channels are configured from the **Configure...** menu option in the cell's drop-down menu. See “Routing Audio with Output (BreakAway)” on page 107 for more information.

Configuring Input Settings


The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. To do this:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



From this pane, you can change the alias, if you wish to rename the slot to something more memorable, such as "BluRay". The alias must begin with a letter and contain only letters, numbers, and underscores (no spaces), maximum 19 characters. If this is all you wish to modify, press the **Done** button and return to the Routing page.

3. If you wish to configure more than simply the alias, click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

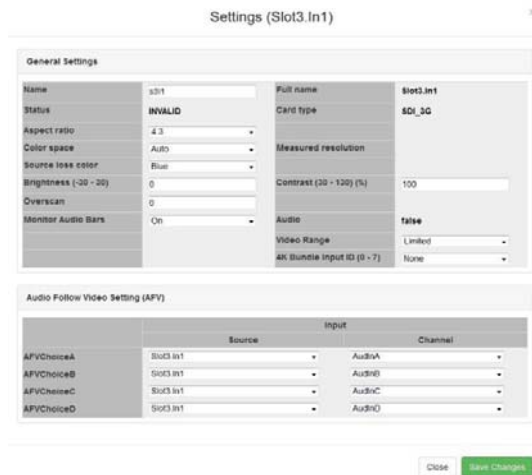

- From this window, you can again adjust the **alias**, as above; you can set the **aspect ratio**, adjust the **color space**, define the **source loss color**, and define **brightness** and **contrast** for the slot. This window also tells you details about the slot such as **name**, detected **card type**, **HDMI** status and **HDCP protection**, **measured resolution**, the **EDID filename** and whether audio is detected. Some of these items are only available on DVI cards; the input settings for SDI cards will have blank fields for inapplicable options such as EDID filename, HDMI and HDCP. In addition, you can configure the AFV (Audio Follow Video) in this section. From here, you can define the AFV settings for this input on a per-channel basis, both slot and channel.


Only available on CORIOmatrix MX:

On a SDI video input card you can also adjust the **Video Range**, thereby enable limited or extended range inputs. Finally you can assign **4K Bund Input IDs** to make your input part of a 4K-Bundle-Group. By doing so you enable synchronized switching.

- When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Input Alias


The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. There are two ways to configure the alias of the input:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot. If you only wish to change the alias of the input, you can type it into the text field here - the name must begin with a letter and be a maximum of 19 alphanumeric characters (no spaces, but an underscore "_" is fine):



If that is all you wish to change, be sure to click the **Done** button to commit the change and the **Save** button to save changes.

3. If you wish to modify more than just the alias, click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

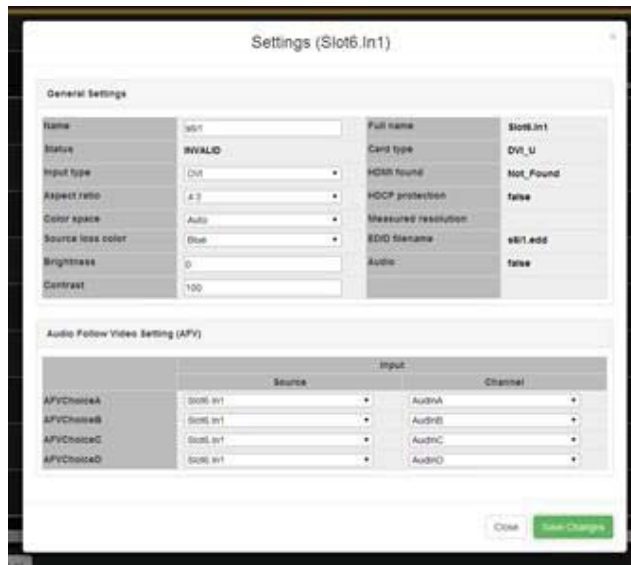


4. From this window, **Name** (same as **Alias**) is in the left column, at the top. You can type into this text field to set an alias, just as above.
5. When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Input Aspect Ratio

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.

The signal coming in to the CORIOmatrix can be in a variety of possible aspect ratios. You can configure the desired aspect ratio in the input settings.

To configure the aspect ratio of the input:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



3. Click the Configure button in the bottom right hand corner of the settings pane. A new window pops up:



- From this window, Aspect ratio is in the left column, halfway down. Click on the drop-down menu to choose the aspect ratio you prefer from such options as 4:3, 5:3, 5:4, 16:9, 16:10, 1:1, and 16:6.




- When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Input Brightness


You can adjust the brightness and contrast of the incoming signal, which may be useful when you are switching between and matching sources of varying brightness and contrast levels. This is however a disabled setting when in *Extended* mode, see Video Range.

To configure the brightness of the input:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:




3. Click the Configure button in the bottom right hand corner of the settings pane. A new window pops up:

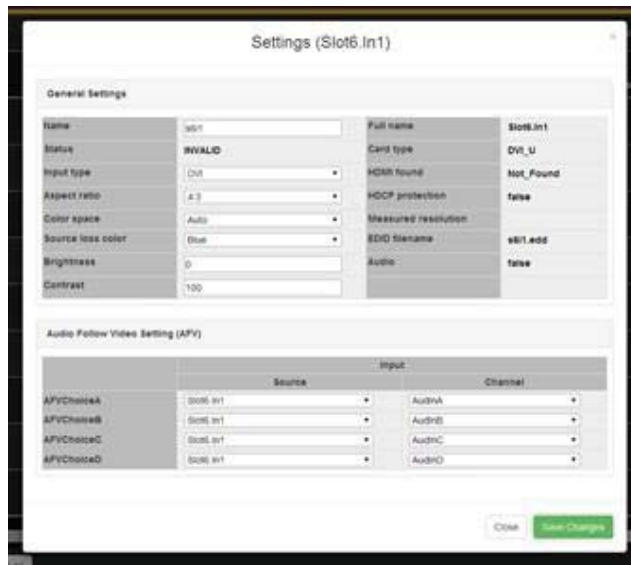

4. From this window, **Brightness** is in the left column, towards the bottom. Click into the text box and type an integer between -30 and 30. The default value is 0.
5. When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.


Configuring Input Color Space

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. To configure the color space of the input:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



3. Click the Configure button in the bottom right hand corner of the settings pane. A new window pops up:

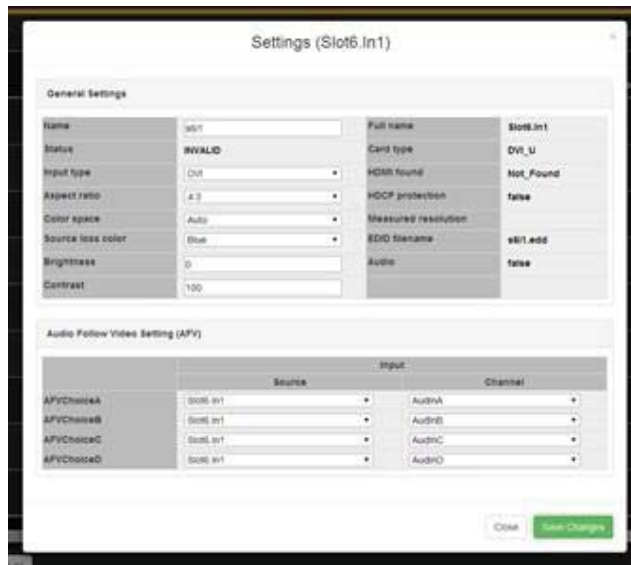

- From this window, **Color space** is in the left column, halfway down. Click on the drop-down menu to choose the color space you prefer. Options depend on what the input type is, but may include Auto (automatically selects based on source type), Black (blanks the input), RGB (for RGB inputs), YUV (defaults to 709 for 720p/1080i/1080p resolutions; defaults to 601 for all other resolutions), YUV_601, and YUV_709 (both specific options within the YUV color space).



- When you have finished configuring the input to your requirements, click the Save changes button and the window closes, returning you to the Routing table.


Note: Selecting the color space does not affect the configured Output Display Type. To adjust the Output Display Type, see "Configuring Output Display Type" on page 85.

Configuring Input Contrast

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


You can adjust the brightness and contrast of the incoming signal, which may be useful when you are switching between and matching sources of varying brightness and contrast levels. This is however a disabled setting when in *Extended* mode, see Video Range.

To configure the contrast of the input:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

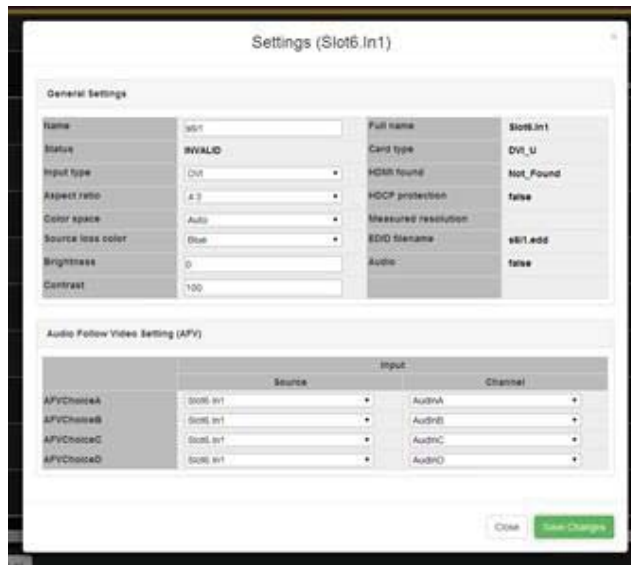


4. From this window, **Contrast** is in the left column, at the bottom. Click into the text field and select a value (as a percentage) between 30 and 130. The default value is 100%.
5. When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Input Type

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.

Both DVI-I and Universal DVI (DVI-U) inputs are capable of receiving a number of different signals, and you can configure the input to the expected signal type.

To configure the input type of the input:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:



- From this window, **Input type** is in the left column, halfway down. Click on the drop-down menu to choose the appropriate input type. Choices include DVI (the digital option - choose this for HDMI input); RGBHV (analog RGB with HV, separate horizontal and vertical sync); RGsB (Analog RGB with sync on Green); YUV/YPbPr (YUV with sync on Y - use this also for YPbPr component analog); CV (Composite Video); and YC (Luminance and Chrominance).




- When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Source Loss Color

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


If the input source is disconnected, the video feed will switch to a blank screen. You can configure the color you would like the screen to show in the event that there is no video feed coming in.

To configure the source loss color:

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

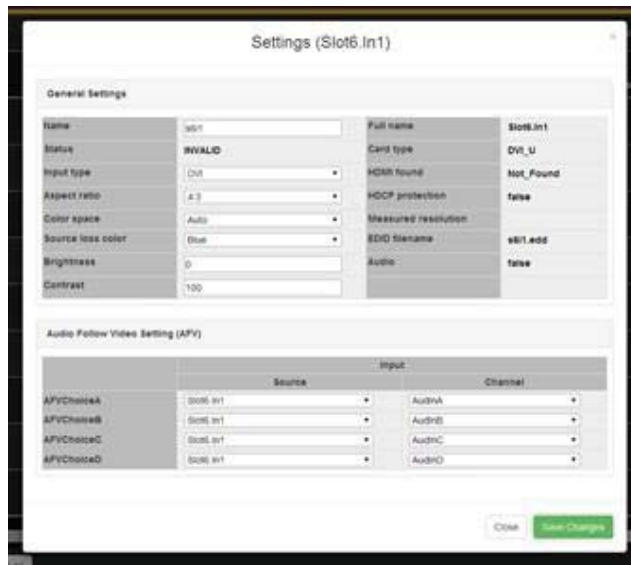


- From this window, **Source loss color** is in the left column, halfway down. Click on the drop-down menu to choose the color you prefer to display if there is no input signal. Choices include black, red, green, yellow, blue, magenta, cyan and white. If you do not configure this setting, the default color is blue.



- When you have finished configuring the input to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.


Reading Input Values from Input Settings

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. Some information is not configurable, but you can check what the settings are in the Input Settings window.

1. Click on the gear icon  next to the input you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

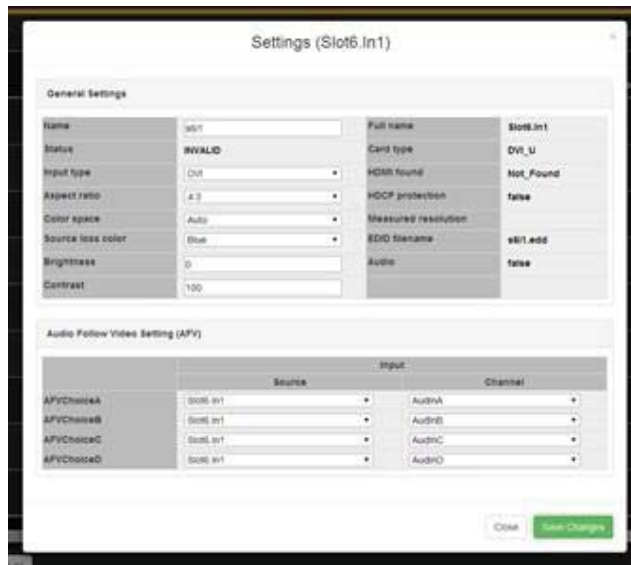

4. In **Status** on the left column and the entire right-hand column, you are shown settings that are detected by the system. These are not configurable but may be useful for troubleshooting purposes. From this page, you can learn the status of the current input connection, the full name of the slot in question, what type of card is detected, whether HDMI is detected (options are "Found" or "Not_Found"), whether HDCP is enabled, the measured resolution of the input signal, the location of the EDID file for this input, and whether input audio is detected. The options available here will vary depending on type of module; if an option is not relevant for a certain module, it will not be shown in this window.
5. As there are no modifiable values discussed here, click **Close** to exit back to the Routing table. (If you have made any changes to modifiable fields, click the **Save changes** button first, or you will lose the changes when you close the window.)

Configuring Input – Video Range (CORIOmatrix MX only)

You can adjust the SDI video input settings to enable limited or extended range inputs.

Limited range (Default setting)

When set to limited, all SDI signals routed from this input will have a colour range that is limited from 64 to 940. This is with the exception of a 3G level B dual stream signal which will automatically be routed with extended range set when routed to an SDI output.

Extended range

Both the input and output must be set to *Extended* for this feature to function. When set to *Extended*, SDI signals routed to an SDI output will have an extended colour range from 64 to 1019. Also in this mode the signal will by-pass internal processing to retaining the original video signal. The by-passing therefore disables the brightness and contrast settings described above.

The purpose of this feature is to provide support for medical applications where some sources will often have an extended colour space.

Configuring Input – 4K Bundle Input ID (CORIOmatrix MX only)


It is possible to bundle 4 input signals to be part of a single 4K stream by assigning them to 1 of 7 4K-Bundle-Groups. By doing so routing will only take effect once all inputs have been routed to outputs (of a 4K output bundle). This allows for a synchronized routing operation.

If there is a gap of more than 1 second between any of the 4 routings, the system will reset the queued routing commands and thereby prevent a lock-up of the system.

Also any input that is assigned to a 4K group will automatically be changed to operate in “Extended range” (see above).

Configuring Output Settings

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. To do this:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that input, including the full name, the alias, and the status of the slot:



From this pane, you can change the alias, if you wish to rename the slot to something more memorable, such as "Main_LCD". The alias must begin with a letter and contain only letters, numbers, and underscores (no spaces). You can also adjust the resolution of the output from the drop-down list of selections. If this is all you wish to modify, press the **Done** button and return to the Routing page.

3. If you wish to configure more than simply the alias or resolution, click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

Settings (Slot16.Out1) ✕

General Settings

Name	s16o1	Full name	Slot16.Out1
Resolution	1280x720p60	Card type	SDI_3G
Source switching	Fade through Black	Genlock enable	Off
Genlock source	NULL	Color space	Auto
Aspect ratio	4:3	Monitor Audio Bars	Off
Red Gamma (0.30 - 2.30)	1	Audio	Off
Green Gamma (0.30 - 2.30)	1	Video Range	Limited
Blue Gamma (0.30 - 2.30)	1	4K Bundle Output ID (0 - 7)	None

Close
Save Changes

4. From this window, you can again adjust the **Name** (alias) and **Resolution**, as above; you can also set the **Source switching** method, identify a **Genlock source**, set the **Aspect ratio** and make **Red, Green and Blue Gamma** adjustments.

This window also tells you details about the slot such as **Full name**, detected **Card type** and you can see whether **Genlock** is enabled.

Finally you can also select the **Color space**, turn **Monitor Audio Bars** on or off and select various **Audio** options for the slot.

ONLY available on CORIOmatrix MX: Video Range and 4K Bundle Output ID allow for more options to refine how the output signal shall be handled by the system.


Some of these items are only available on DVI cards others only on SDI cards. Options will have blank fields if inapplicable.

Read more about any of these options in the dedicated sections.

5. When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output Alias

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. There are two ways to configure the alias of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot and the resolution. If you only wish to change the alias of the output, you can type it into the text field here - the name must begin with a letter and be a maximum of 19 alphanumeric characters (no spaces, but an underscore "_" is fine):



If that is all you wish to change, be sure to click the **Done** button to commit the change and the **Save** button to save changes.

3. If you wish to modify more than just the alias, click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

Settings (Slot1.Out2) ✕

General Settings

Name	<input type="text" value="s1o2"/>	Full Name	Slot1.Out2
Resolution	<input type="text" value="1280x720p60"/>	Card Type	DVI_U
Source switching	<input type="text" value="Fade through Black"/>	HDMI found	Not_Found
Genlock source	<input type="text" value="NULL"/>	Genlock Enable	Off
Aspect ratio	<input type="text" value="4:3"/>	Colour scale	<input type="text" value="Auto"/>
Display type	<input type="text" value="Monitor"/>	HDCP enable	false
Audio	<input type="text" value="AFV"/>	HDCP Downstream	<input type="text" value="HoldOn"/>
Output type	<input type="text" value="RGBHV"/>		


4. From this window, **Name** (same as **Alias**) is in the left column, at the top. You can type into this text field to set an alias, just as above.
5. When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output Aspect Ratio

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


The signal going out of the CORIOmatrix can be in a variety of possible aspect ratios. You can configure the desired aspect ratio in the output settings.

To configure the aspect ratio of the output:


1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

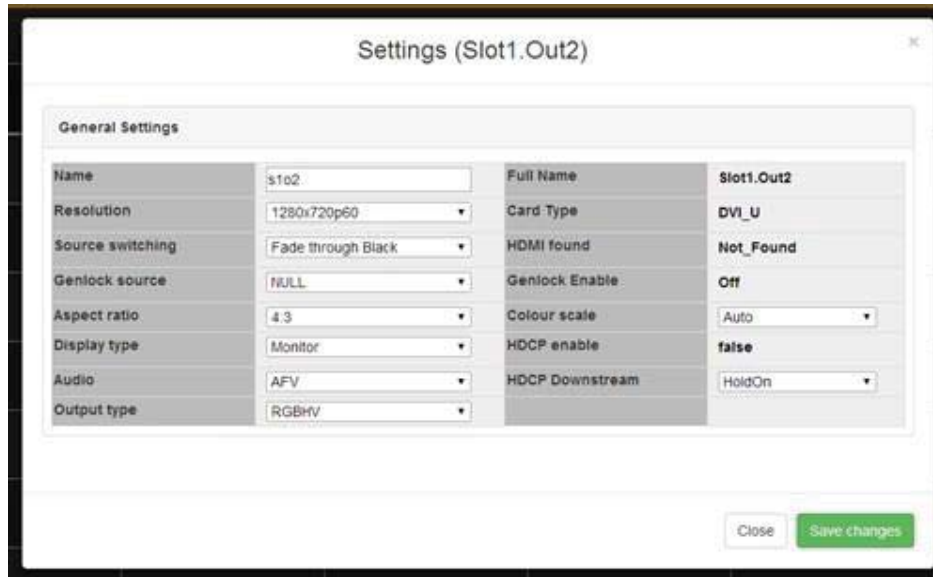

- From this window, Aspect ratio is in the left column, halfway down. Click on the drop-down menu to choose the aspect ratio you prefer from such options as 4:3, 5:3, 5:4, 16:9, 16:10, 1:1, and 16:6.

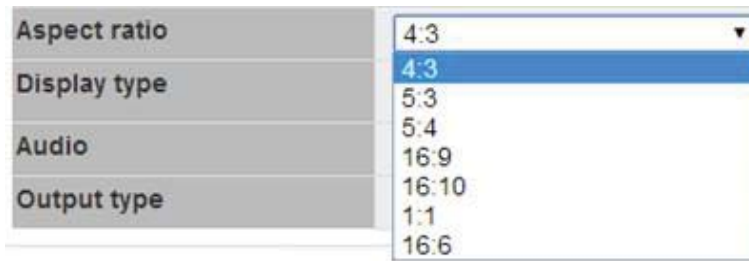


- When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output Audio

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


The audio on each output is displayed graphically in the routing table (see “Routing Audio with Output (BreakAway)” on page 107) and can be configured directly from the cell in the routing table, but you can also configure an output's audio from the settings for that particular output.

To configure the audio of the output from within the output settings:


1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:




3. Click the Configure button in the bottom right hand corner of the settings pane. A new window pops up:

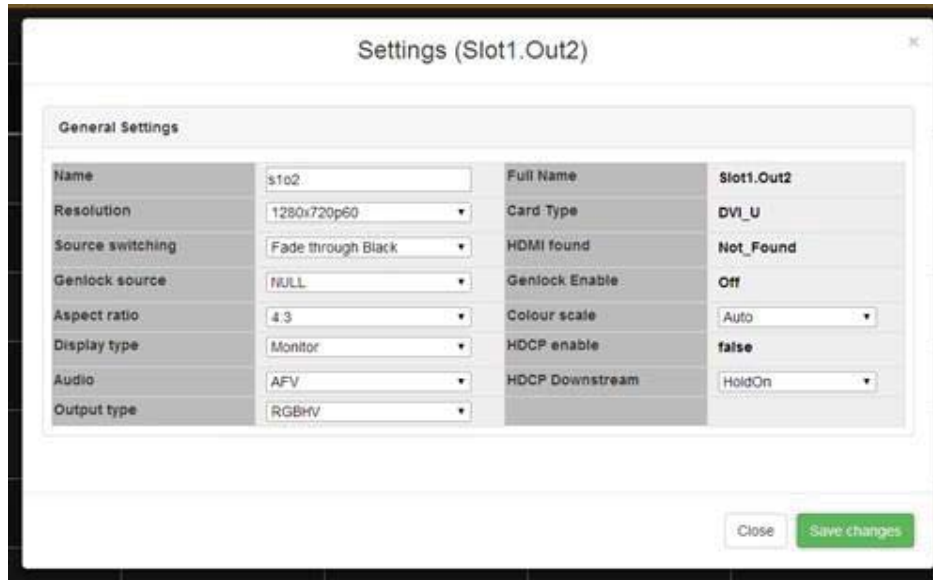

- From this window, **Audio** is in the left column, towards the bottom. Click on the drop-down menu to choose the audio you prefer - Off, AFV or BreakAway. Note that setting the AFV or BreakAway preference here does NOT define which input the audio is coming from, it simply sets a preferred default state for this output.

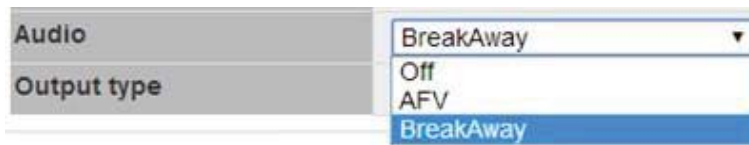

- When you have finished configuring the output to your requirements, click the Save changes button and the window closes, returning you to the Routing table.


 **Note:** For more details on audio routing within the routing table, see "Routing Audio with Input (AFV)" on page 103 and "Routing Audio with Output (BreakAway)" on page 107.

Configuring Output Color Scale

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


Both DVI-I and Universal DVI (DVI-U) outputs are capable of sending a number of different signals, and you can configure the output to the expected signal type.

To configure the color scale of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

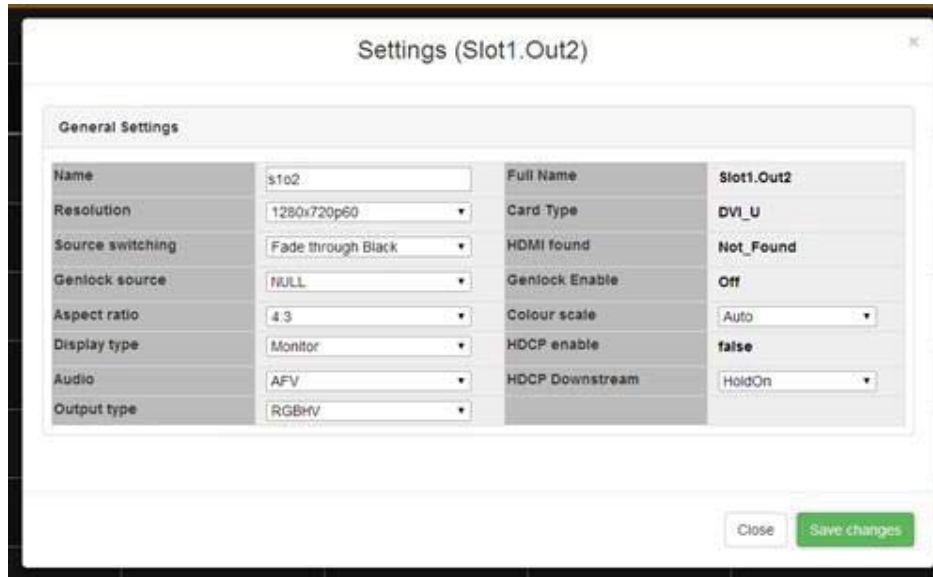


- From this window, **Color scale** is in the right column, halfway down. Click on the drop-down menu to choose the color scale you prefer. Options may vary, but may include Auto, Black, RGB, YUV, YUV_601, and YUV_709.



- When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.


Configuring Output Display Type

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. To configure the display type of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

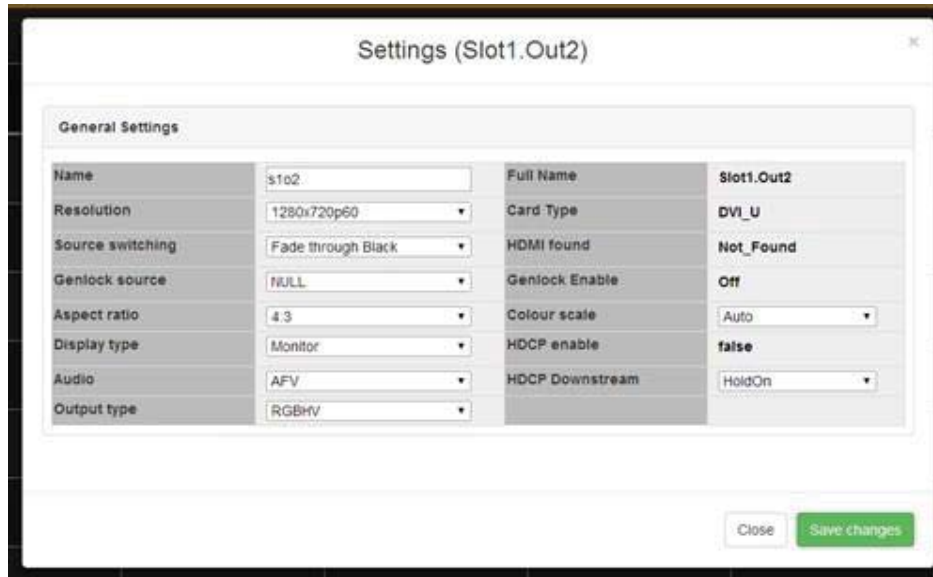

- From this window, Display type is in the left column, halfway down. Click on the drop-down menu to choose the display type you prefer, from such choices as Monitor, Projector, Repeater, and Unknown.




- When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output Genlock Source

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


Genlock allows you to synchronize one or more outputs to a compatible input. Note that in order to genlock, the resolution and frame rate of the output and input must match exactly. If they do not match exactly, despite having selected a source, the Output setting "Genlock enable" will show "Off" to indicate that genlock was not achieved. If this is the case, check available resolutions and frame rates of both output and input to try to find a match.

To configure the genlock source of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the Configure button in the bottom right hand corner of the settings pane. A new window pops up:

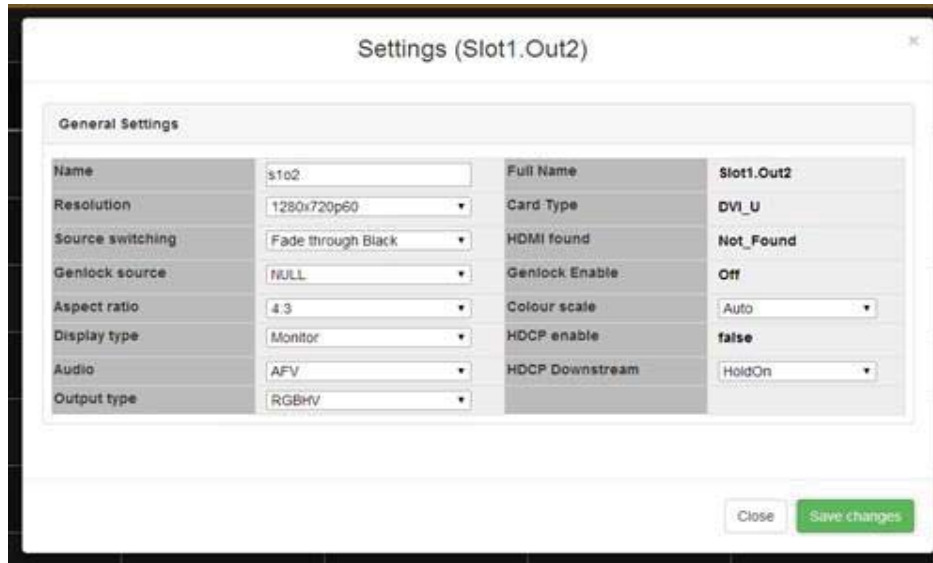

- From this window, Genlock source is in the left column, halfway down. Click on the drop-down menu to choose the source you would like to genlock to.



- When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output HDCP Downstream

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


The HDCP Downstream feature gives you the ability to change the way each output handles "HDCP Downstream" communications.

In the default setting, "Hold On", the Output is permanently HDCP enabled and will work if the display device is HDCP compliant.

The "Keep Off" option disables HDCP on the Output, meaning that only non- HDCP sources will work on the Output.


The "Follow Sources" option turns the HDCP on the output on or off depending on source stream - if HDCP is present on the source stream, it will require HDCP compliance from downstream devices.

To configure the HDCP settings of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the Configure button in the bottom right hand corner of the settings pane. A new window pops up:

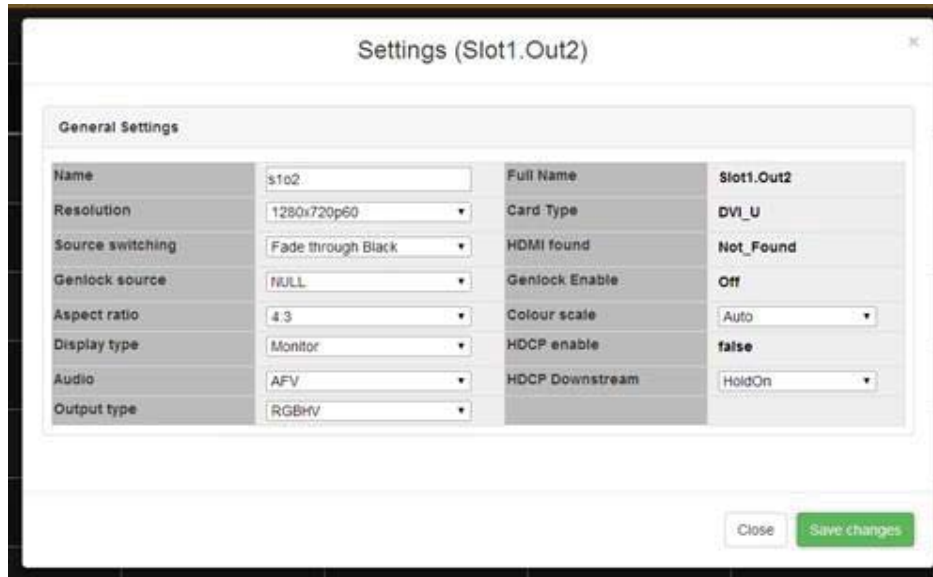


- From this window, **HDCP Downstream** is in the right column, at the bottom. Click on the drop-down menu to choose the HDCP settings you prefer- **HoldOn**, **KeepOff** or **FollowSources**.



- When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output Resolution


The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information. There are two ways to configure the resolution of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution. If you only wish to change the resolution of the output, you can choose your preferred resolution from the drop-down list here:




If that is all you wish to change, be sure to click the **Done** button to commit the change and the **Save** button to save changes.


- If you wish to modify more than just the resolution, click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

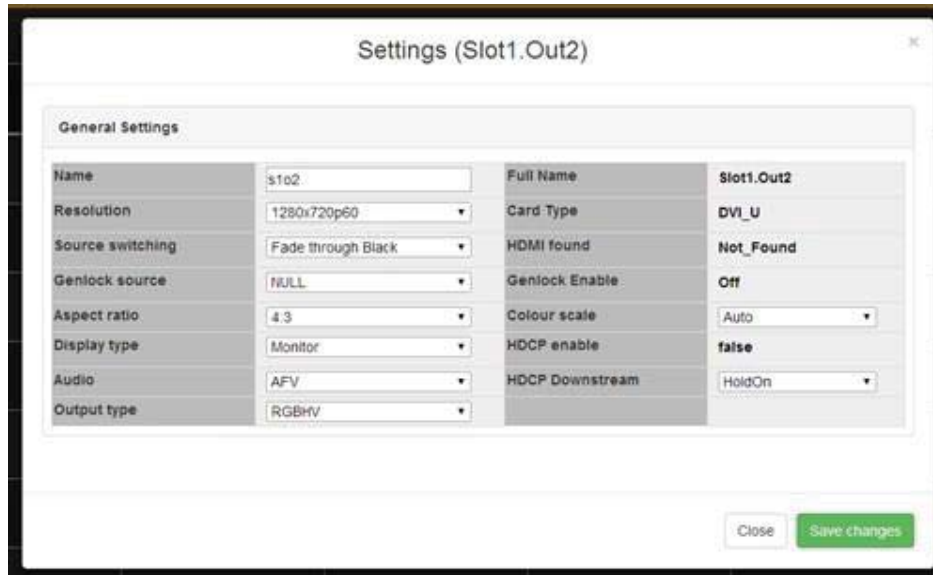


- From this window, **Resolution** is in the left column, near the top. Click on the drop-down menu to choose the resolution you prefer.

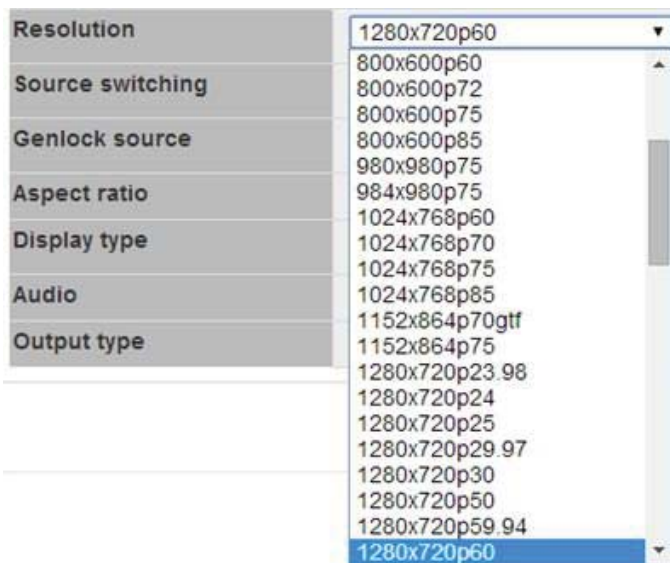

5. When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.



Note: Be aware that when you change the resolution of an output, after three seconds, all outputs will go blank for a moment, due to an attempt to renegotiate Framelock.




Note: If you wish to create and use Custom Resolutions beyond the built-in resolutions available on your unit, use the Resolution Editor available in the CORIOdiscover application - see "[Resolution Editor](#)" on page 126. The Resolution Editor feature is only available on units running firmware version 105 or later and CORIOdiscover software version 2.0.0 or later.

Configuring Source Switching

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


On occasions, you may find you want to quickly switch between inputs. There are two methods provided for this. **Fade through Black**, the default, fades a source out to black and fades the incoming source from black, giving a smooth transmission. **Freeze and Cut** freezes the first source and cuts the incoming source in from the frozen image.

To configure the behavior of source switching for the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

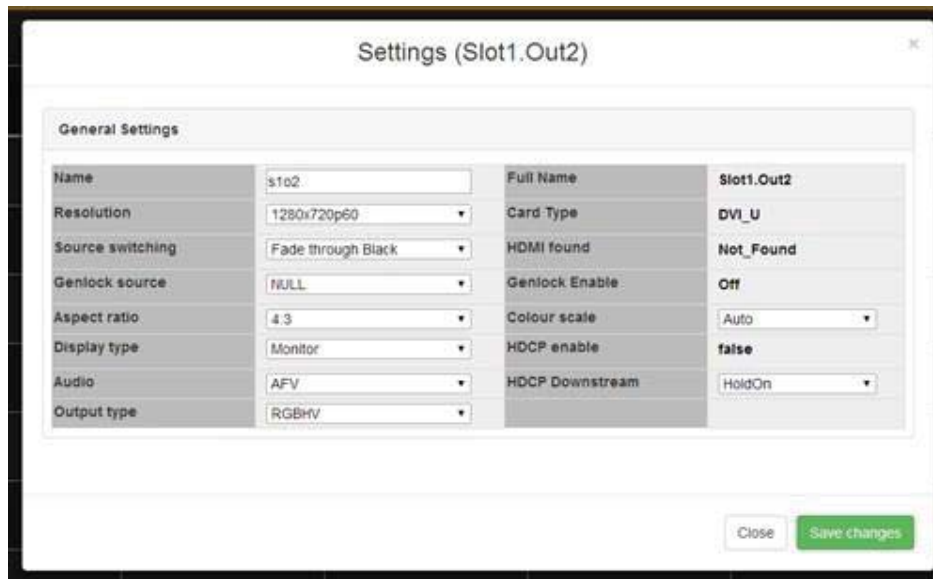

- From this window, **Source switching** is in the left column, halfway down. Click on the drop-down menu to choose the source switching transition you prefer - Fade through Black or Freeze and Cut.




- When you have finished configuring the output to your requirements, click the Save changes button and the window closes, returning you to the Routing table.

Configuring Output Type

The CORIOmatrix web interface automatically populates with some data about your input and output cards. There are some aspects that you can configure in addition to the default information.


Both DVI-I and Universal DVI (DVI-U) outputs are capable of sending a number of different signals, and you can configure the output to the expected signal type.

To configure the type of the output:

1. Click on the gear icon  next to the output you wish to configure.
2. The right-hand pane shows some information about that output, including the full name, the alias, the status of the slot, and the resolution:



3. Click the **Configure** button in the bottom right hand corner of the settings pane. A new window pops up:

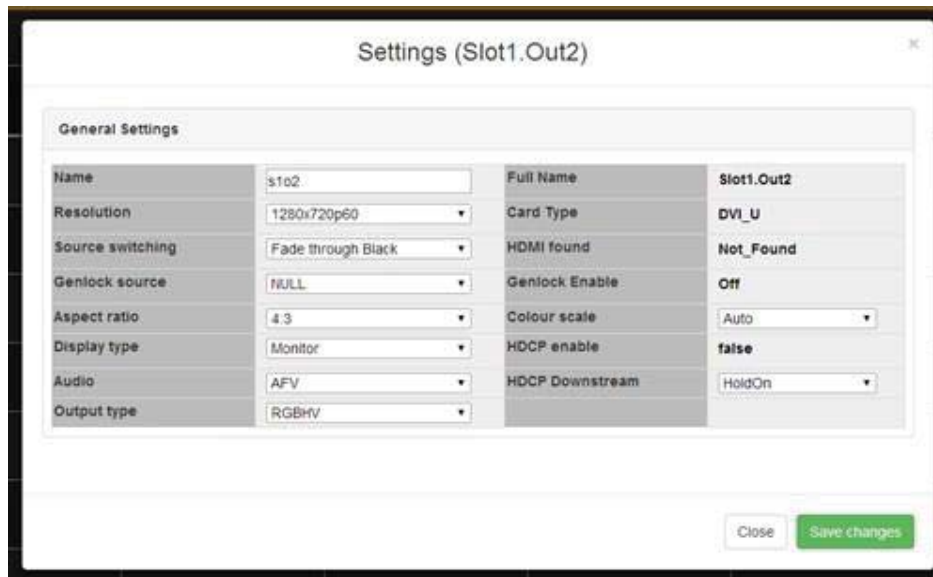

- From this window, **Output type** is in the left column, at the bottom. Click on the drop-down menu to choose the output type you prefer. Choices may vary but include RGBHV (analog and digital), RGBS, RGsB, YUV, and CV + YC.



- When you have finished configuring the output to your requirements, click the **Save changes** button and the window closes, returning you to the Routing table.

Configuring Output – Video Range (CORIOmatrix MX only)

You can adjust the SDI video output settings to enable limited or extended range outputs.

Limited range (Default setting)

When set to limited, all SDI signals routed to this output will have a colour range that is limited from 64 to 940. This is with the exception of a 3G level B dual stream signal which will automatically be routed with extended range set when routed to an SDI output.

Extended range

Both the input and output must be set to *Extended* for this feature to function. When set to *Extended*, SDI signals routed to an SDI output will have an extended colour range from 64 to 1019. Also in this mode the signal will by-pass internal processing to retain the original video signal.

The purpose of this feature is to provide support for medical applications where some sources will often have an extended colour space.

Configuring Output – 4k Bundle Output ID (CORIOmatrix MX only)

It is possible to bundle 4 outputs to be part of a single 4K stream by assigning them to 1 of 7 4K-Bundle-Groups. By doing so routing will only take effect once 4 4K inputs have been routed to these outputs. This allows for a synchronized routing operation.


If there is a gap of more than 1 second between any of the 4 routings, the system will reset the queued routing commands and thereby prevent a lock-up of the system.

Also any output that is assigned to a 4K group will automatically be changed to operate in “Extended range” (see above).


Cut to Black

In some cases, in a live setting, you may want to cut all outputs to a black background, or cut the video in from black.

If you wish to use the Cut to Black functionality, use the button at the top of the Routing page:

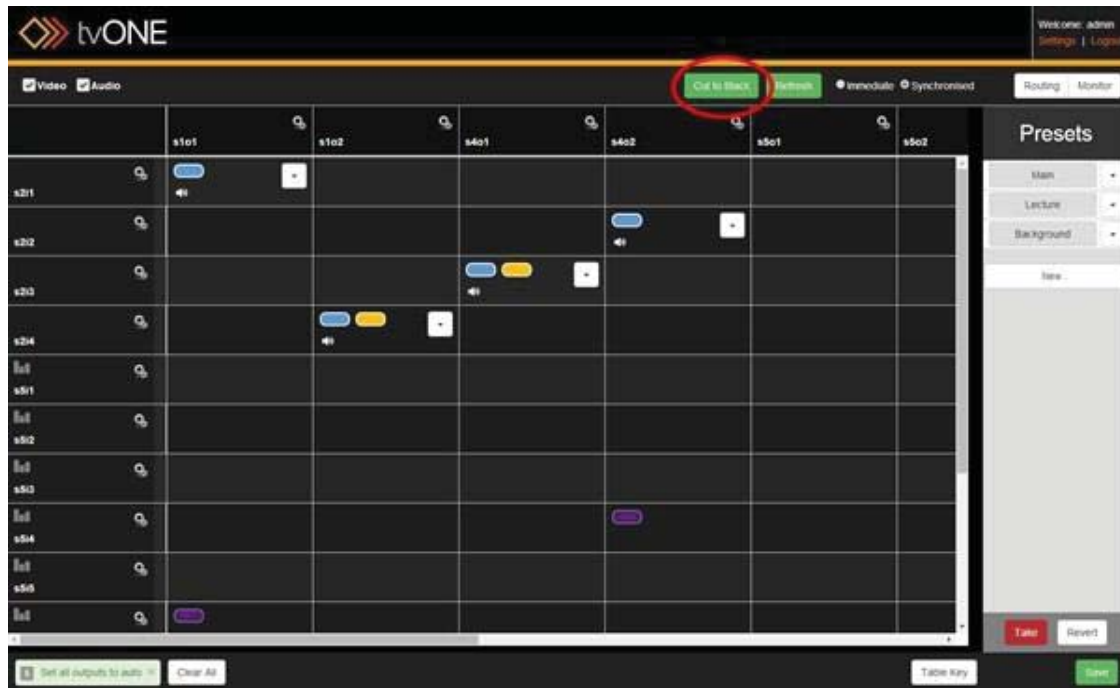

As soon as you press the **Cut to Black** button, all outputs are set to black (even if you are in Synchronized mode - you do not have to press the **Take** button). You can tell **Cut to Black** has been implemented because the notification area shows the message "Set all outputs to black" and the **Cut to Black** button is a deeper green, indicating that it is currently in a pressed state. See below for a comparison of the inactive and active button states.




To reverse this, press the **Cut to Black** button a second time. Video and audio outputs are set back to their previous configuration. The notification area says "Set all outputs to auto" and the **Cut to Black** button returns to its original color.

Command Line

This feature is also available via command line. If you are not confident with the command line interface, please use the GUI provided; however, if you are comfortable with the command line and wish to use it instead of the user interface, the command is `sXoY.CutToBlack = On`. While it is black, the output retains source information. This parameter is not retained in `SaveAllSettings()` - this is intentional and means an output that was set to black will show original routing configuration after the unit is restarted.

Immediate vs Synchronized

There are two modes in which the Routing page functions - **Immediate** and **Synchronized**.

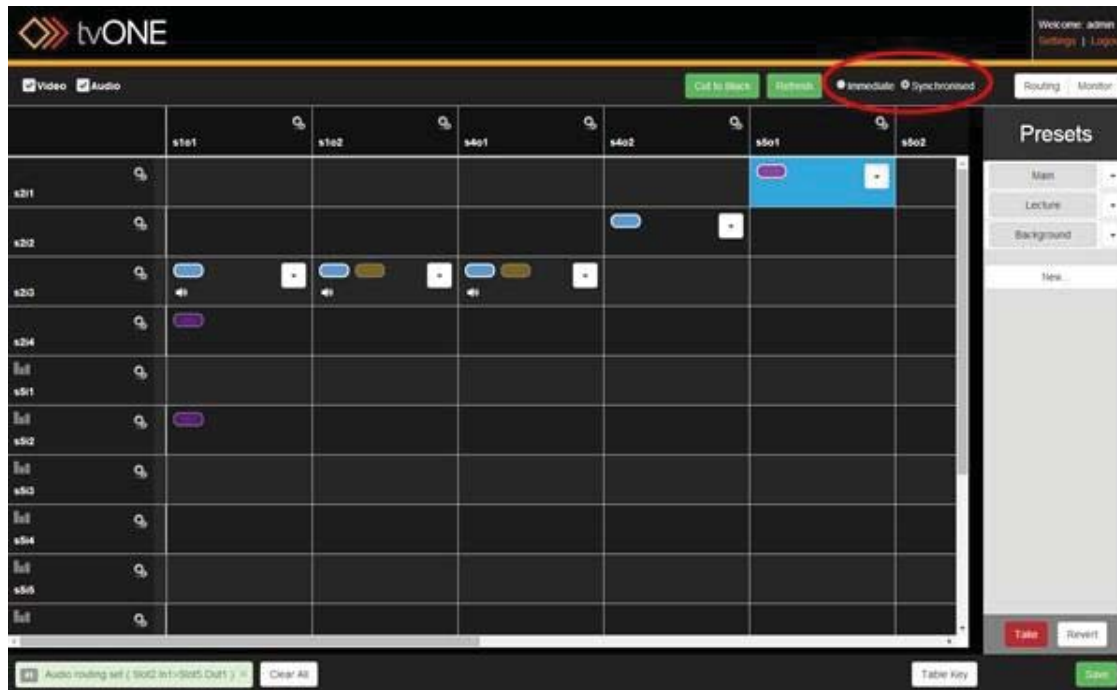

In **Immediate** mode, any action you take is committed individually by the web interface. Each step is live as soon as it has been committed.



Caution: If you are changing from **Synchronized** to **Immediate** mode and you have queued steps in **Synchronized** mode, be sure to click **Take** before changing to **Immediate** mode, as any uncommitted changes will be abandoned when changing to **Immediate** mode.

In **Synchronized** mode, actions are only committed when you initiate a **Take**. You can queue up a number of changes and commit them all at once by making multiple changes before pressing the **Take** button. In this mode, be sure to click the **Take** button before you refresh, disconnect or otherwise abandon your changes.


If you are in **Synchronized** mode, any queued but not-yet-committed changes are indicated by a blue cell. In the screenshot above, s2i1 (slot 2, input 1) has been routed to s5o1 (slot 5, output 1) with BreakAway audio, but until the **Take** button is pressed, the change is not live.

If you decide to abandon your changes, use the **Revert** button to remove queued commands and refresh the routing table to the current live configuration.

Refreshing Routing Information

To keep the interface quick and responsive, the system was designed so that it does not regularly poll the CORIOmatrix for slot data. The system pulls information when the routing page is loaded, and it subsequently sends commands to the CORIOmatrix, but it does not regularly refresh the web UI with the current state of the CORIOmatrix.


If you are working in the routing page and wish to poll the CORIOmatrix for slot configuration information, to make sure what it has saved is what you expect, you can click the Refresh button at the top of the routing page.

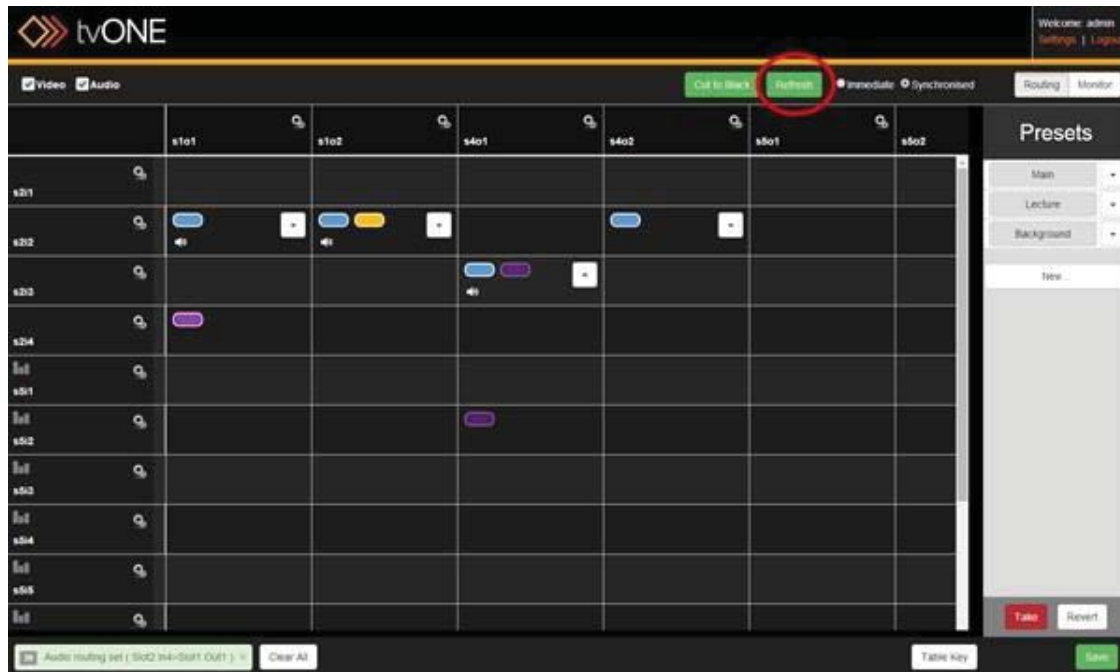


Routing Video

If the system detects that the input for the row you are selecting and the output for the column you are selecting are both appropriate, video-enabled slots, when you click on the cell intersecting the two, a blue lozenge will appear, indicating that the video feed for that input is now routed to that output.

You can confirm this by checking the Notification window - if successful, the notification will say something like "Video routing set (Slot2.In2>Slot1.Out2)".

If you would like to simplify the routing table to look specifically at the video routing, uncheck the Audio box in the top left corner. The table will decrease to show only cards with video options, and selecting a cell will configure only the video portion of the routing. (An audio icon  appears in a cell if audio is configured for that routing, but in this view it doesn't specify what the audio routing is.)

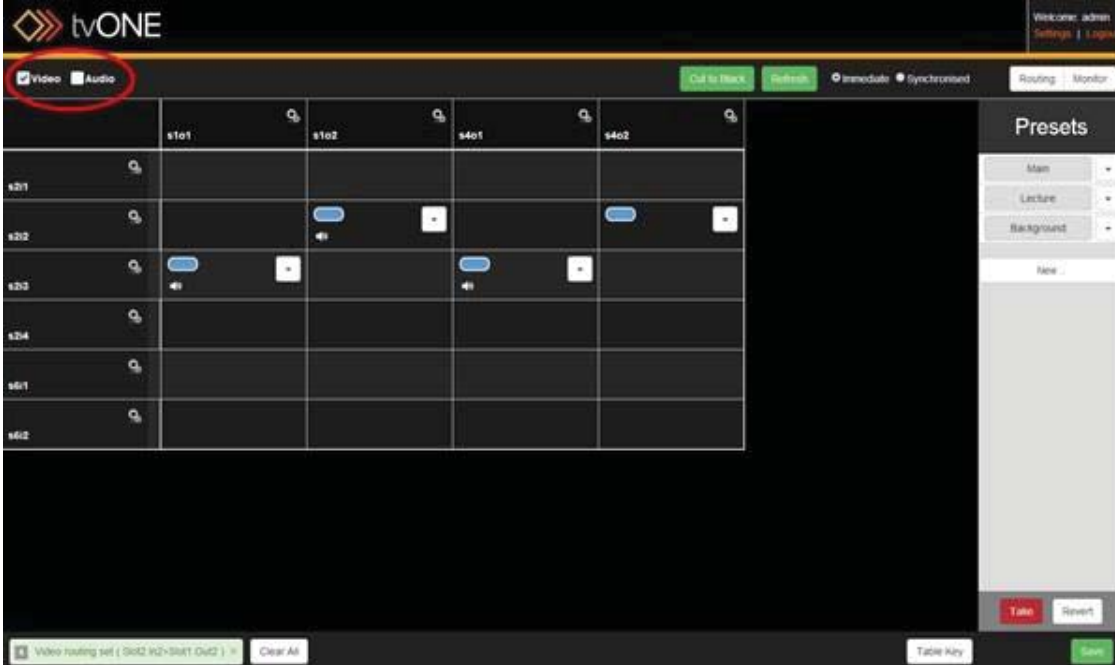

The screenshot shows the tvONE interface with a routing table. The top left has a 'Video' checkbox (checked) and an 'Audio' checkbox (unchecked). The table has columns labeled s101, s102, s401, and s402, and rows labeled s201, s202, s203, s204, s401, and s402. Blue lozenges are visible in cells (s202, s102), (s203, s401), and (s203, s402). A notification bar at the bottom shows 'Video routing set (Slot2.In2>Slot1.Out2)'. On the right, there is a 'Presets' panel with 'Main', 'Lecture', and 'Background' options, and a 'Take' button.

Routing Audio with Input (AFV)

When you are configuring audio routing, you have three options.


AFV or Audio Follow Video indicates that the audio routing is defined at the input. This often means that the audio comes from that source, but it can mean that any time that video source is selected, the audio is defined as coming from another input. AFV audio sources are the default embedded source or any audio input, embedded or external AES. AFV audio channels are configured in the Input Settings or from the **Configure...** menu option in the cell's drop-down menu.

BreakAway indicates that the audio routing is defined at the output. By default, breakaway audio uses the same source for video and audio input, but it can mean that anytime that output is selected, the audio is configured to come from a different source. BreakAway audio channels are configured from the **Configure...** menu option in the cell's drop-down menu.

Off, the third option, disables audio for that routing.

Configuring AFV from the Input

To configure AFV (Audio Follow Video), follow these steps:


1. In the left-hand cell for the input you wish to configure, click the gear  icon
2. On the right side of the routing table, the sidebar will show some details of that input including its name and status. Click the **Configure** button in the bottom right corner.




- In the resulting pop-up window, look in the lower section, labelled Audio Follow Video Setting (AFV).



- The four potential channels are shown as **AFVChoiceA**, **AFVChoiceB**, **AFVChoiceC** and **AFVChoiceD**. To the right of each of these, you can choose an audio source from any of your audio input options. Simply select the appropriate slot and input number in the first column and the appropriate channel from that card in the second column.
- When you have configured all available audio channels as you wish, click the **Save changes** button in the bottom right corner. You are returned to the routing page, and any time you select that input for an output, the table will show a yellow lozenge (or multiple yellow lozenges, if audio is split between multiple inputs) in the appropriate cell intersecting that output with whichever input is the audio source.

 **Note:** This section shows four channels even if the video card only supports two channels, such as an HD-SDI input module. In this case, the selections for AFVChoiceC and AFVChoiceD will be ignored. If you are unsure how many channels are available for that input and you have a monitor card, check the number of audio bars associated with the input in the Monitor section.

 **Note:** All audio for a given routing must come from the same card - if you try to select multiple cards as sources, you will see an alert message notifying you that your inputs must all be co-timed.

Configuring AFV from the Routing Table Cell

Alternatively, AFV routing can be configured the same way BreakAway routing is configured:


1. In the cell that shows the intersection between the desired input and desired output, click on the drop-down arrow.



2. In the resulting pop-up, choose **Configure...**



3. A window pops up

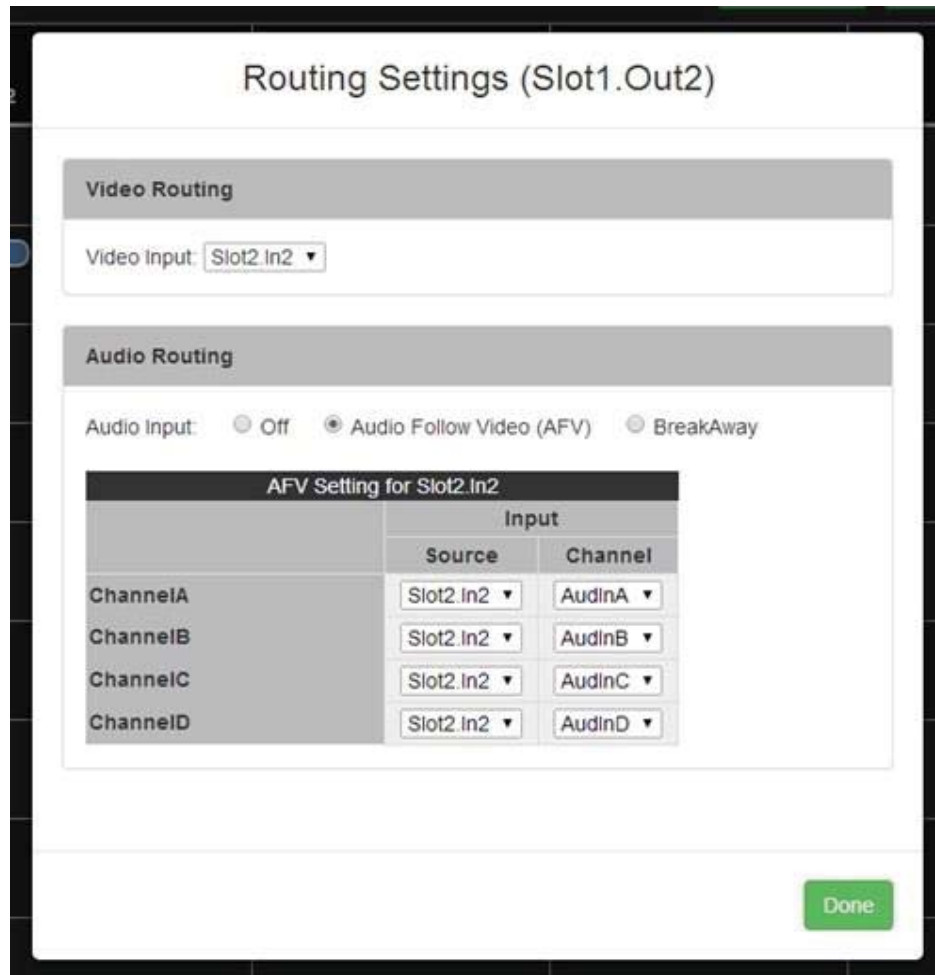

4. The upper section shows the video input that has been chosen to correspond to this output. The lower section shows the default audio configuration. Change the **Audio Input**: radio button to **Audio Follow Video (AFV)**. The four potential audio channels are shown as **ChannelA**, **ChannelB**, **ChannelC** and **ChannelD**. To the right of each of these, you can choose an audio source from any of your audio input options. Simply select the appropriate slot and input number in the first column and the appropriate channel from that card in the second column.
5. When you have configured all available audio channels as you wish, click the **Done** button in the bottom right corner. You are returned to the routing page.

Routing Audio with Output (BreakAway)

When you are configuring audio routing, you have three options.

AFV or Audio Follow Video indicates that the audio routing is defined at the input. This often means that the audio comes from that source, but it can mean that any time that video source is selected, the audio is defined as coming from another input. AFV audio sources are the default embedded source or any audio input, embedded or external AES. AFV audio channels are configured in the Input Settings.

BreakAway indicates that the audio routing is defined at the output. By default, breakaway audio uses the same source for video and audio input, but it can mean that anytime that output is selected, the audio is configured to come from a different source. BreakAway audio channels are configured from the **Configure...** menu option in the cell's drop-down menu.

Off, the third option, disables audio for that routing.

To configure **BreakAway**, follow these steps:


1. In the cell that shows the intersection between the desired input and desired output, click on the drop-down arrow.



2. In the resulting pop-up, choose **Configure...**




3. A window pops up

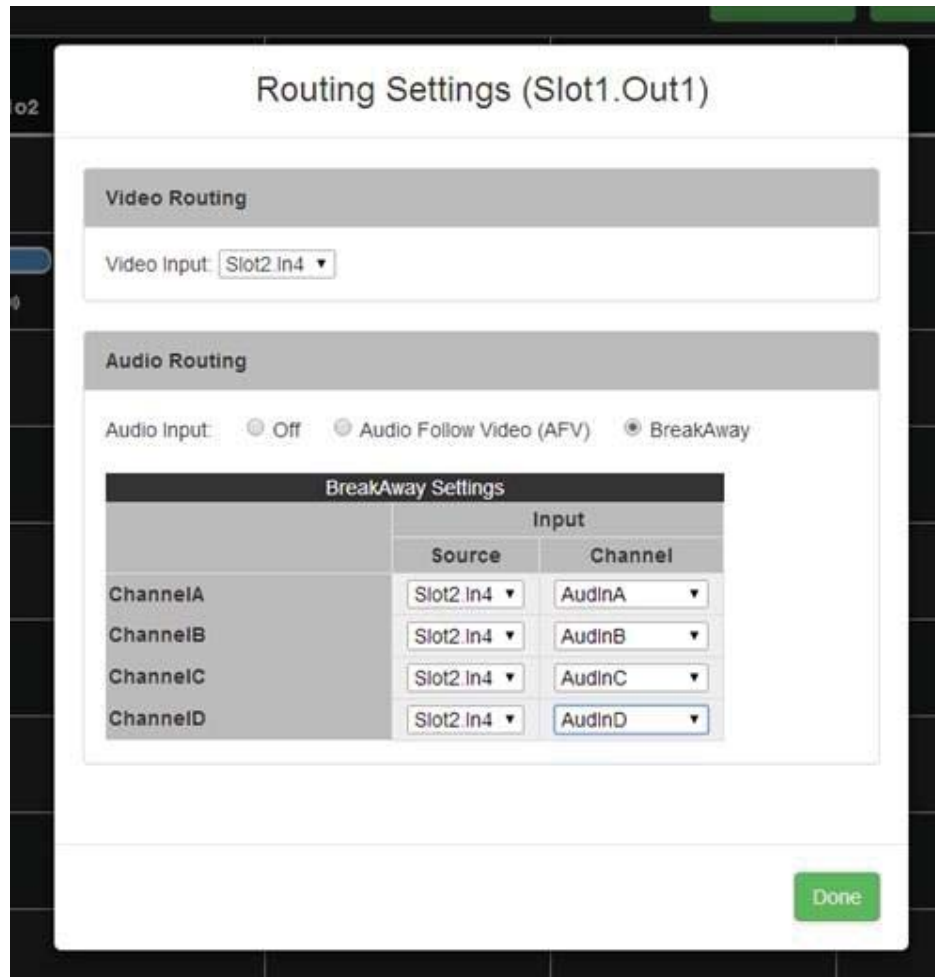


4. The upper section shows the video input that has been chosen to correspond to this output. The lower section shows the default audio configuration. (If no audio configuration has been modified yet, the default setting is to route audio directly with video. If the input has been configured with AFV settings, the default shows the AFV settings that were defined in the input settings. These defaults can be overridden from this page.)
- The four potential BreakAway audio channels are shown as **ChannelA**, **ChannelB**, **ChannelC** and **ChannelD**. To the right of each of these, you can choose an audio source from any of your audio input options. Simply select the appropriate slot and input number in the first column and the appropriate channel from that card in the second column.

5. When you have configured all available audio channels as you wish, click the **Done** button in the bottom right corner. You are returned to the routing page. Be aware that, unlike the AFV settings (which are stored in connection with an input), BreakAway settings are specific to that output.



Note: This section shows four channels even if the video card only supports two channels, such as an HD-SDI input module. In this case, the selections for **ChannelC** and **ChannelD** will be ignored. If you are unsure how many channels are available for that output and you have a monitor card, check the number of audio bars associated with the output in the Monitor section.



Note: All audio for a given routing must come from the same card - if you try to select multiple cards as sources, you will see an alert message notifying you that your inputs must all be co-timed.

Presets

About Presets

What is a Preset?

A preset, at its simplest, is a saved routing configuration. Configure the routing table with the inputs and outputs that you wish - you can then save this as a Preset. Rearrange the routing, press Take and save again as another Preset. When you have multiple Presets saved, you can flip between Presets on-the-fly in your live environment.

Why would I use Presets?

Presets are useful if, for example, you want to do a presentation and swap between several pre-configured routing arrangements of your inputs and outputs. In this example, your first preset may be a single camera input shown on all displays, with audio from the camera as output. Your second preset may be a media presentation - some displays showing a presentation slide, some showing the original camera image, and audio coming from the presentation. You can configure all the different routing settings beforehand, save them as Presets, then swap between the saved Presets in real time simply by clicking on the name of the desired preset.

Create Preset

If you want to create a new Preset, follow these steps.

1. If you are in Synchronized mode, click the **Take** button to make sure the routing settings are applied.
2. In the routing wall's right-hand Preset pane, click the **New** button below any existing presets.



3. A new preset will appear at the bottom of the list of presets, named "presetx" where x is a number (incremented from the previous saved preset). You may want to immediately "Rename Preset" on page 113 to a more intuitive name.

Edit Preset

If you want to change the routing settings on an existing Preset, follow these steps.

1. If you are in Synchronized mode, click the **Take** button to make sure the routing settings are applied.
2. In the routing wall's right-hand Preset pane, click the drop-down icon to the right of the appropriate preset.



3. In the drop-down menu, choose **Save** from the list.



This will save the current configuration to the selected Preset.

Rename Preset

If you want to rename an existing Preset, follow these steps.

1. In the routing wall's right-hand Preset pane, click the drop-down icon to the right of the appropriate preset.



2. In the drop-down menu, choose Rename from the list.



3. A window pops up. Click in the text field and type the new name for the preset.



4. Click the **Save** button. The window closes and the newly-renamed preset appears in the list in the Preset pane.

Delete Preset

If you want to delete an existing Preset, follow these steps.


1. In the routing wall's right-hand Preset pane, click the drop-down icon to the right of the appropriate preset.



2. In the drop-down menu, choose **Delete** from the list.



3. The selected preset disappears from the list of available presets in the Preset pane.

 **Caution:** If you delete a preset, it cannot be retrieved unless you have backed up your data, and this is a complex recovery that is not outlined in this manual. Do not delete a preset unless you have no wish to retain that routing data.

Using Presets

If you have presets configured and saved, using them in a live environment is fairly straightforward.

To load or activate a preset, click the button with that preset's name.



As soon as you have pressed the button, those settings become active (regardless of whether you are in **Immediate** or **Synchronized** mode).




Note: The button for an active preset turns green. If you change any settings from the saved configuration, the green color disappears, indicating that the live settings do not match a saved preset.

If you want to swap to a different preset, simply press the appropriate button for that preset. Swap between presets as many times as you need to do so. If you wish to cut all to black, see "[Cut to Black](#)" for information.

Monitor

About Monitoring

If your CORIOmatrix has a monitor card installed, you can see a **Monitor** option in the top right corner of the Routing page. (If you do not see this button, you do not have a monitor card or it is installed incorrectly. The monitor card can be installed in any available slot on a CORIOmatrix mini; on a CORIOmatrix, it can be installed in any slot other than the top row.)

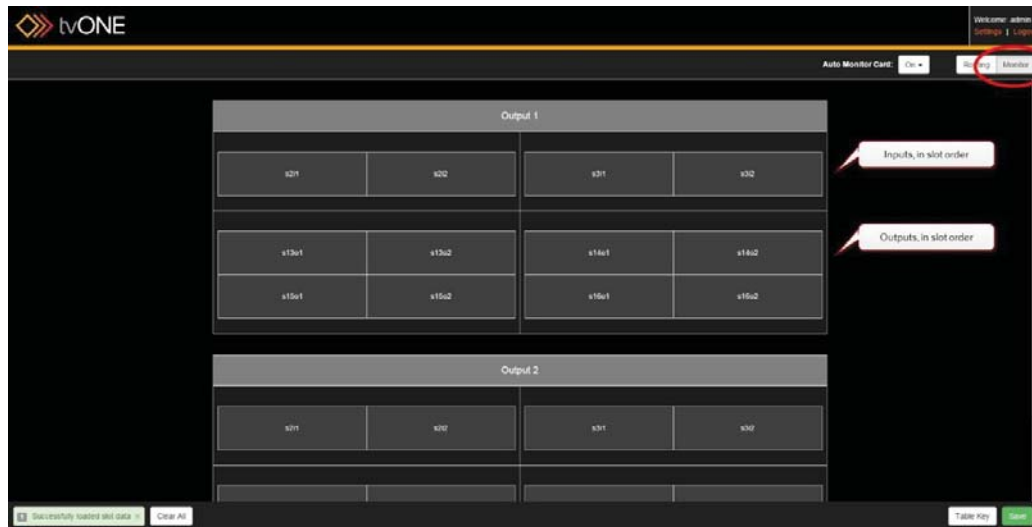

When the CORIOmatrix is in use, each small rectangle shows the video going through that input or output, and small green lines in the bottom left corner show audio channel activity.

Each input is shown in the top section, in order, with slot 1 input 1 at the top left, continuing across and then down. Outputs are shown in the lower half, similarly ordered. (Output 1 and Output 2 show exactly the same content.)


From the Monitor page, you can observe the content coming in to the inputs and the content going out through the outputs. If you wish to change anything, use the Routing page to reassign the routing.

To return from the Monitor settings to the Routing page, click on the Routing button in the top right corner.

More information:

- “Auto MonitorCard settings” on page 118
- “Monitoring Audio” on page 125

Auto MonitorCard settings

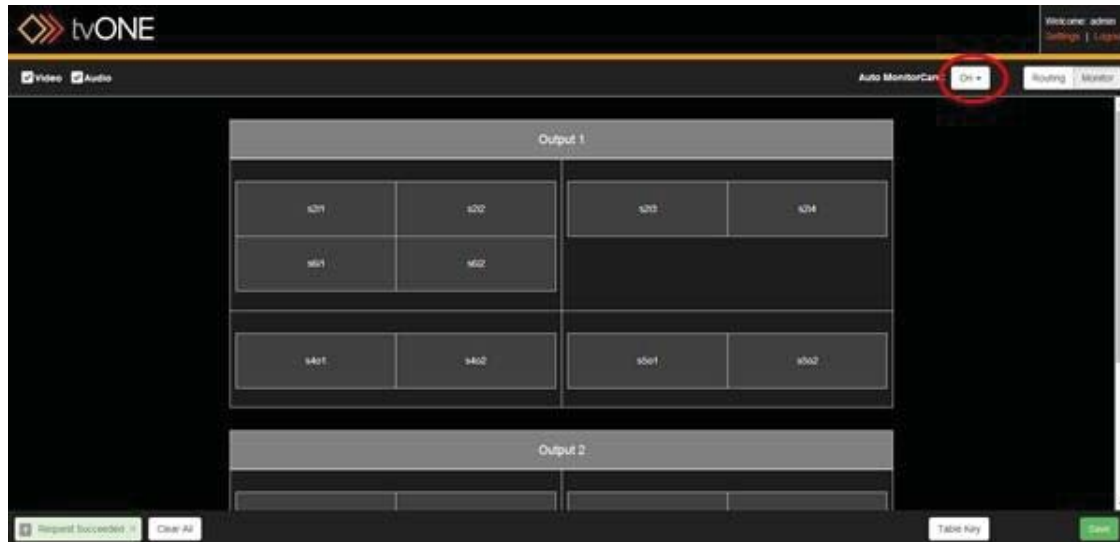

If you have upgraded an older CORIOmatrix which has a custom monitoring configuration saved, select **Off** in the **Auto MonitorCard**: dropdown at the top, and follow the instructions in “Restore from SD Card” on page 48 to ensure that your previous monitor card configuration is available.

Prior to version 2.0.0 of the CORIOmatrix web control software, the only configuration available was the automatic configuration of monitor settings. Beginning with version 2.0.0, there are various ways you can configure monitoring, by changing **Auto MonitorCard** to **Off**, and configuring it as described in “Auto MonitorCard Off - Setup” on page 121.



Caution: If you turn Auto MonitorCard Off and configure settings as you desire, do NOT toggle the Auto MonitorCard settings On and Off again, as your settings will be lost. In this case, the only way to recover would be to restore from a previously- saved configuration.

Auto MonitorCard On for Quick Monitoring


By default, the **Auto MonitorCard** setting is **Off**, and you can configure your monitor to show your inputs and outputs in a variety of configurations.

If you want to be able to monitor your inputs and outputs quickly with a minimum of configuration, you can enable the **Auto MonitorCard** feature from the drop-down list by choosing **On**.



Caution: Turning this feature on overwrites any settings you already have, so only enable this feature if you are prepared to lose anything you have configured in the Monitor Card pane. If you turn Auto MonitorCard Off and configure settings as you desire, do NOT toggle the Auto MonitorCard


When you set **Auto MonitorCard** to **On**, the web interface immediately displays a grid with all detected inputs and outputs shown sequentially.

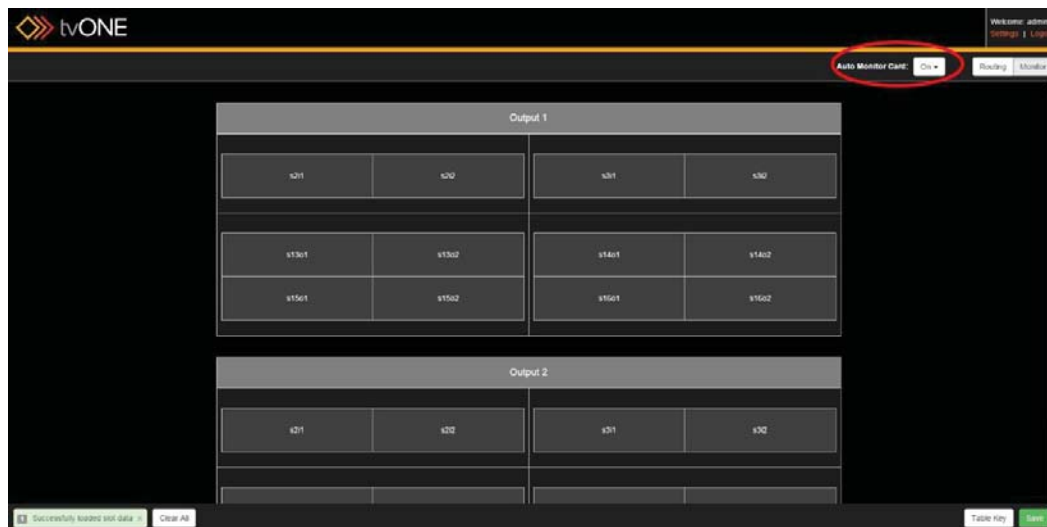


This view is useful if you want quick and instant feedback showing all inputs and outputs, without wanting to finesse the location of each, so this option is not modifiable - if you want to customize your view, set **Auto MonitorCard** to **Off**.

Auto MonitorCard Off - Overview


By default, the **Auto MonitorCard** setting is **Off**, and you can configure your monitor to show your inputs and outputs in a variety of configurations.

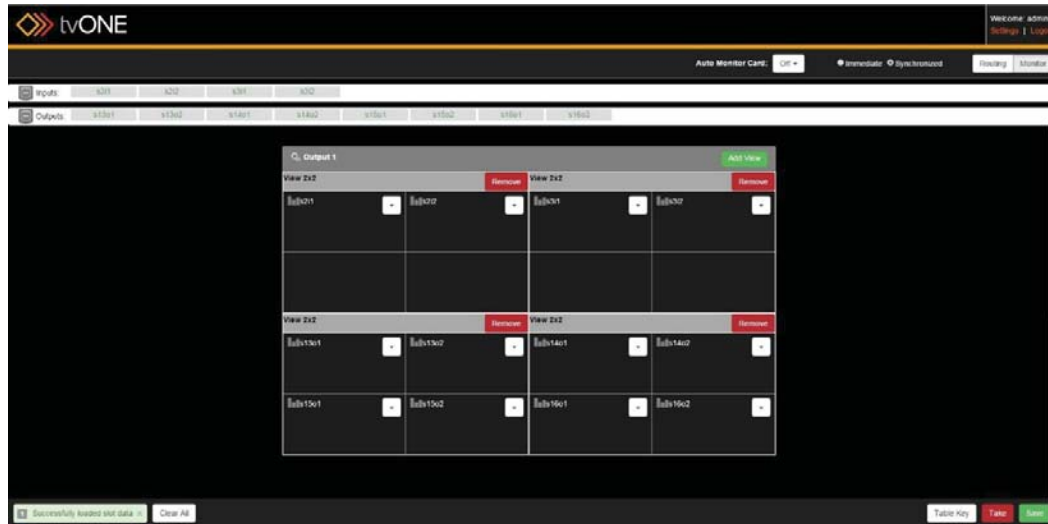

There are two outputs, to match the two output connectors on the monitor card. By default, the second output display duplicates the first. If you wish to use both output displays with unique content, uncheck the box and configure the second output appropriately.


 **Note:** Be aware that any given input or output in the CORIOmatrix can only be displayed once on the monitors - the second display cannot "re-use" any inputs or outputs already in use on the first.

Auto MonitorCard Off - Setup

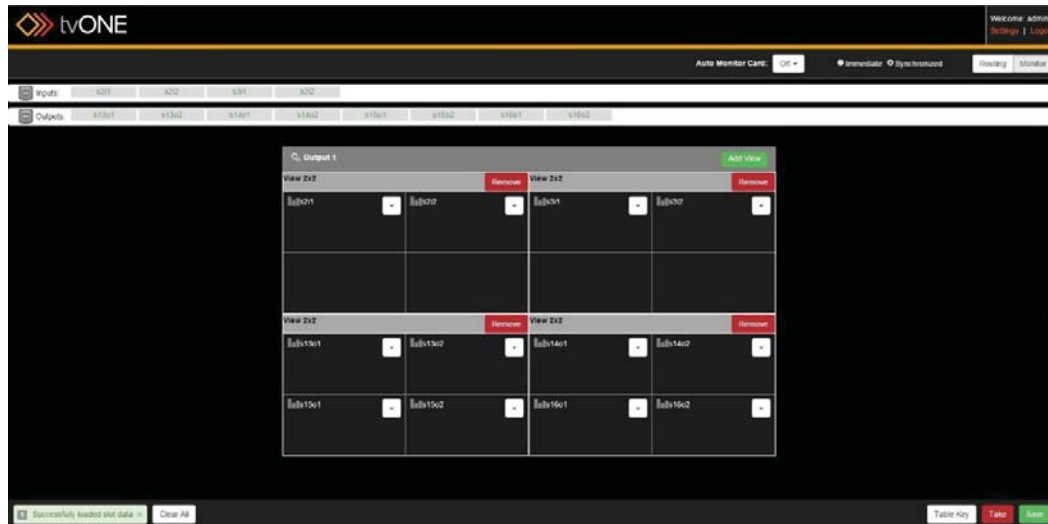


Add Views

To begin configuring your monitor view, click the **Add View** button to choose a view option.

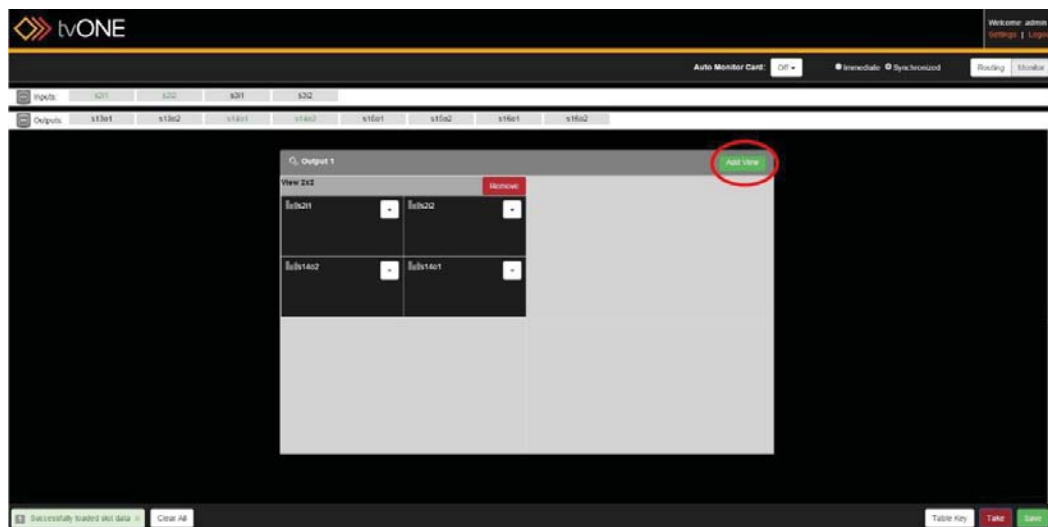

Options are 2x2, 4x4, 4x2, or 8x8. 2x2 and 4x4 views only take up a quarter of your overall output - you can add other views to different quadrants and drag-and-drop to rearrange them as you wish. The maximum number of a given view is listed in the pop-up window.


(4x2 views take up half of the screen horizontally, and are put into the first available horizontal half. 8x8 views take up the entire screen.)

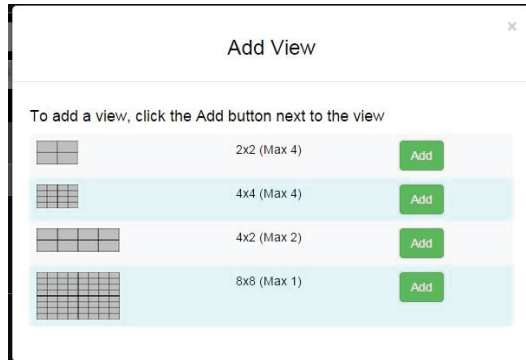

Populate Views

Once you have the framework set up, you can start adding inputs and outputs to the grid. Simply drag-and-drop whichever item you wish from the Inputs and Outputs lines at the top into the grid space you wish. If you change your mind, you can drag the item backwards and forwards between grid spaces.

The Inputs and Outputs at the top show each item by card and slot number. When the input or output is being used in a view, it shows green in the list, to indicate that it is already being used and is thus unavailable to add. When the input or output is not yet assigned to a view, it appears in black - these ones can be dragged to a view.

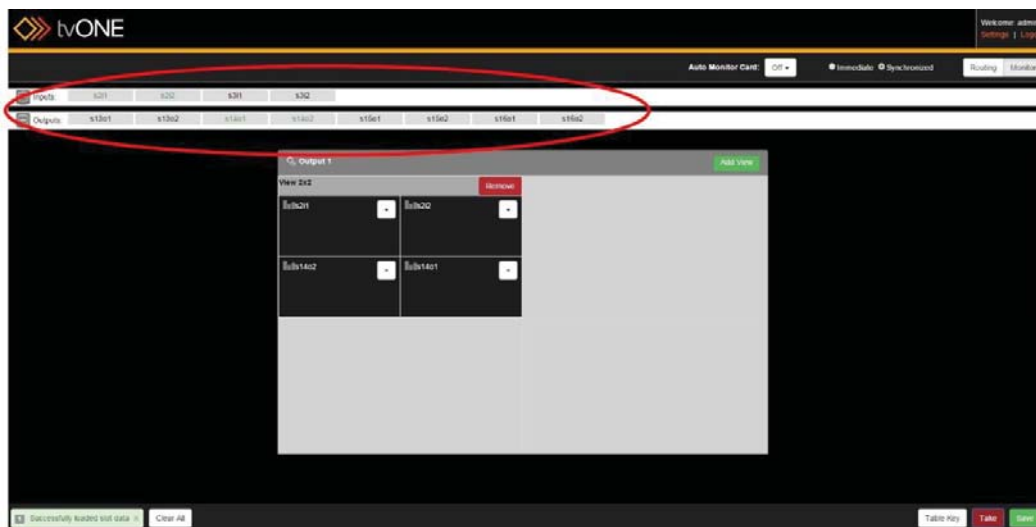

Options

For each input or output that is in a View grid, a drop-down button provides two options.

Remove


The first option, **Remove**, uncouples the input or output from that grid and makes it black (available) from the Inputs or Outputs list at the top of the window. The corresponding space in the grid goes blank, meaning that an input or output can now be assigned to that space.

Audio Bars

The second option, Audio Bars, allows you to toggle between having the audio bars visible or not visible. See “Monitoring Audio” on page 125 for more information.

Immediate vs Synchronized

Similar to the Routing page, the Monitoring page has two modes - **Immediate** and **Synchronized**. The Monitoring page settings are not related to the Routing settings, so you do not have to use the same mode in both situations.

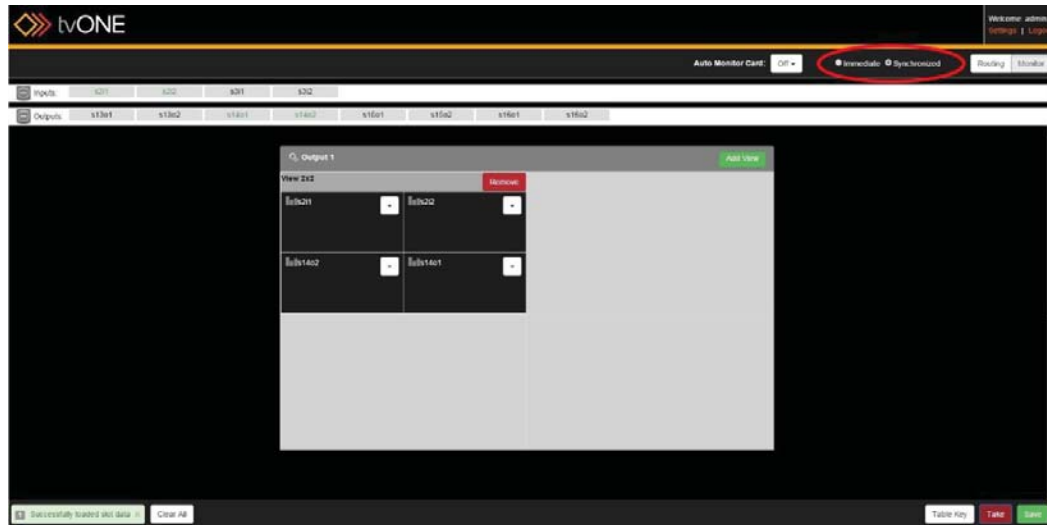

In **Immediate** mode, any action you take is committed individually by the web interface. Each step is live as soon as it has been committed.




Caution: If you are changing from **Synchronized** to **Immediate** mode and you have queued steps in **Synchronized** mode, be sure to click **Take** before changing to **Immediate** mode, as any uncommitted changes will be abandoned when changing to Immediate mode.

In **Synchronized** mode, actions are only committed when you initiate a **Take**. You can queue up a number of changes and commit them all at once by making multiple changes before pressing the **Take** button. In this mode, be sure to click the **Take** button before you refresh, disconnect or otherwise abandon your changes.

If you decide to abandon your changes, use the **Revert** button to remove queued commands and refresh the Monitoring page to your current live configuration.

Monitoring Audio

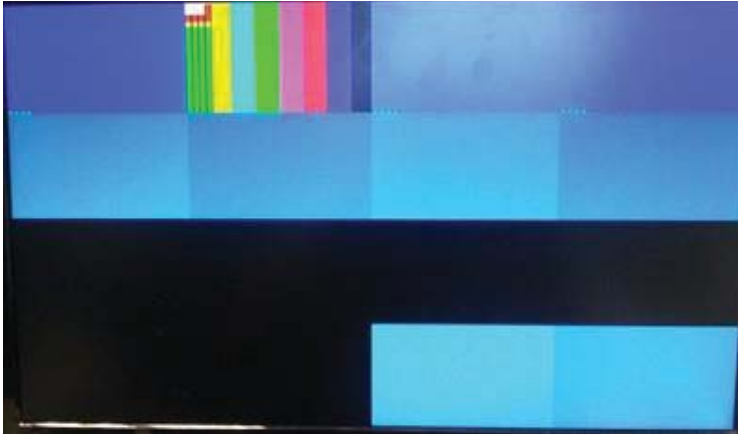

When you are monitoring your inputs and outputs, you can see the video signals in real-time on each input and output. On the display you are using to see the monitor card output, you can see the embedded audio visually monitored in the corner of its associated video.

To indicate audio tracks, each video stream on the display has small green lines in the bottom left corner as a live audio meter indicating number of channels and level of each channel. If audio is going through that input or output, the green lines increase and decrease vertically as each channel's levels vary.

HD-SDI cards provide two audio channels; others provide four. The monitor card will indicate the number of channels available from your particular card by either showing two or four bars. (This may not be reflected in the Routing page - if there is a discrepancy between number of channels in the Routing page and number of channels in the Monitor page, the Monitor page is correct.)

Resolution Editor Guide


Resolution Editor

Beginning with version 2.0.0, the CORIOdiscover application includes a Resolution Editor.


1. Start the CORIOdiscover application:




2. Select the target device (the one you want to have the Custom Resolution) and press the **Resolution Editor** button.

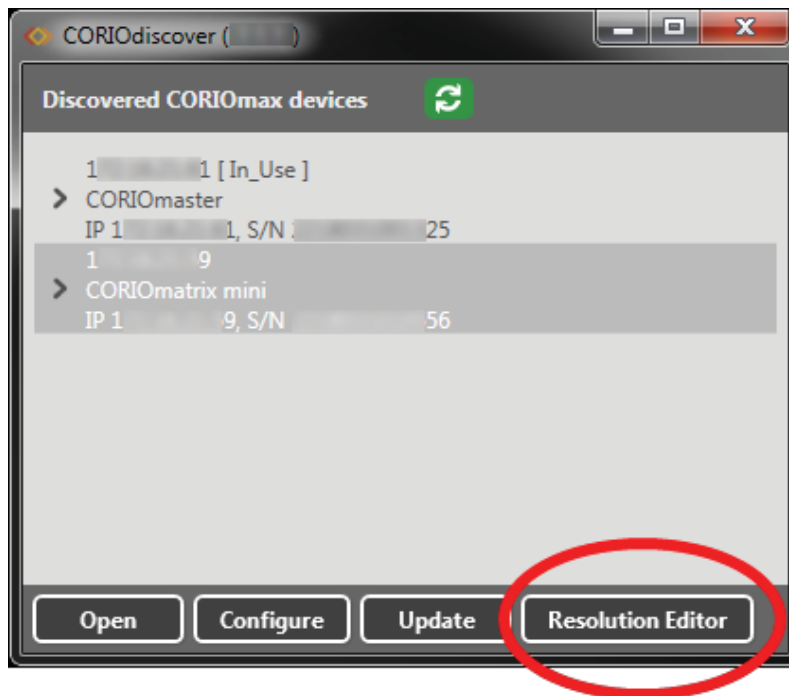

3. Enter the Administrator username and password for the unit:

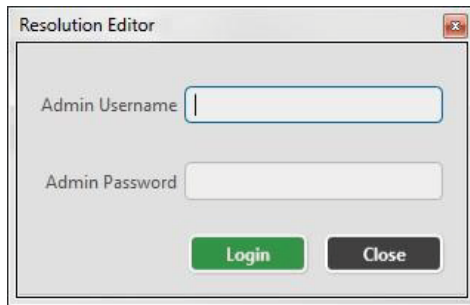

4. Once you have successfully logged in you see the Resolution Editor main window:

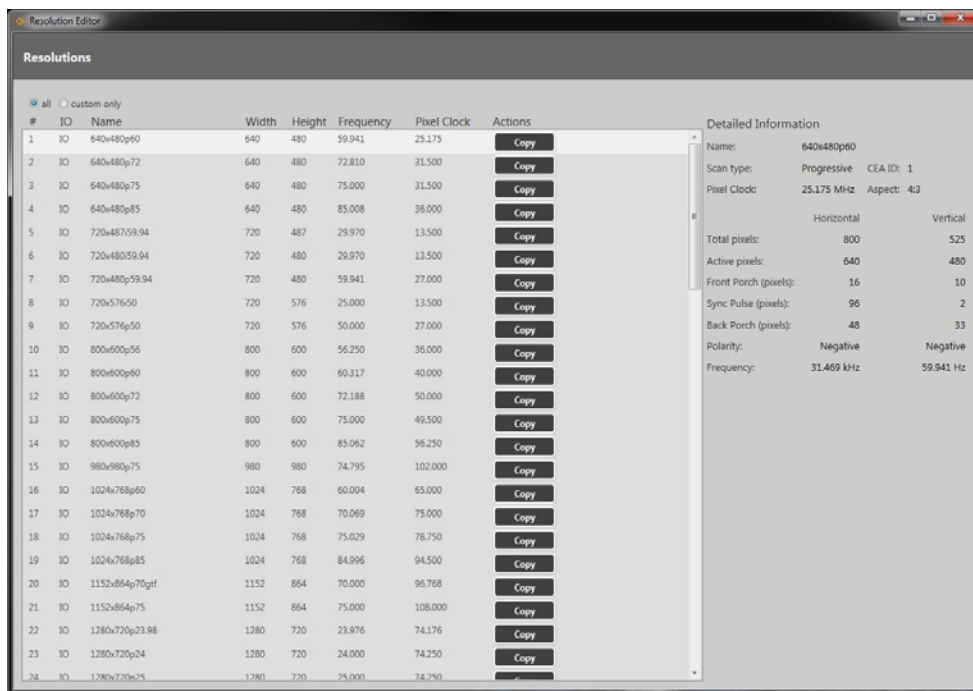

5. By default the Resolution Editor shows all resolutions, both built-in and custom. Scroll to the bottom of the list or select the **Custom Only** radio button to see the Custom Resolutions:



Note that built-in resolutions only have a **Copy** option, while Custom Resolutions have **Copy**, **Edit** and **Reset** buttons.

71	IO	1920x1200p50cvt-rb	1920	1200	49.974	127.750	Copy
72	IO	1920x1200p60cvt-rb	1920	1200	59.950	154.000	Copy
1000	IO	1920x1080p60	1920	1080	60.000	148.500	Copy Edit Reset
1001	IO	Empty1001	0	0	0.000	0.000	Copy Edit Reset

For more details, see “Listing Resolutions from CORIOdiscover Resolution Editor” on page 131.

Resolution Editor Overview

The CORIOmax series (CORIOmaster, CORIOmaster mini, CORIOmatrix and CORIOmatrix mini) supports a vast majority of standard video resolutions, both broadcast and computing, as well as certain non-standard resolutions. These include the more commonly used resolutions from the following standards:

- CEA-861-D
- VESA CVT
- VESA DMT

In addition, you can add up to ten further Custom Resolutions either from the CORIOdiscover software (see “Resolution Editor” on page 126) or via command line (see “Command Line - Resolutions” on page 206).

Resolution Editor Constraints

Custom Resolution support and the CORIO**discover** Resolution Editor is available from firmware version M306 onwards.

Custom Resolutions cannot be used with SDI input or outputs. The unit can save a maximum of ten Custom Resolutions.

The Custom Resolutions are definable within the following constraints:

- all numeric values are in pixels unless otherwise stated.
- all numeric values are positive integers or zero.
- string values may not contain spaces.
- string values may only be valid printable ASCII characters.
- string values are limited in the number of characters they may contain.

Custom Resolutions do not support:

- borders (any required border values must be included in the front and back porches).
- the pixel clock is limited to the following range:
 - 13.5MHz to 162MHz
- The value for the Active Video must not be zero.

Interlaced Custom Resolutions require that:

- the vertical front and back porches are twice the even field.
- the vertical sync pulse is twice the even value.

The CEA identifier information option (CEAID) does not affect the Custom Resolution - it is there for providing attached equipment with information on the resolution. Only set this value when defining a Custom Resolution that complies with the CEA profile for that value.




Note: The unit might not display an image if the CEAID is non-zero and the Custom Resolution does not conform to the CEA format for that value

Custom Resolutions become persistent after using the `System.SaveAllSettings()` operation.

Listing Resolutions from CORIOdiscover Resolution Editor

To list the available built-in and Custom Resolutions from CORIOdiscover, access the main Resolution Editor window. From this window, you can see a list of all built-in and custom resolutions.

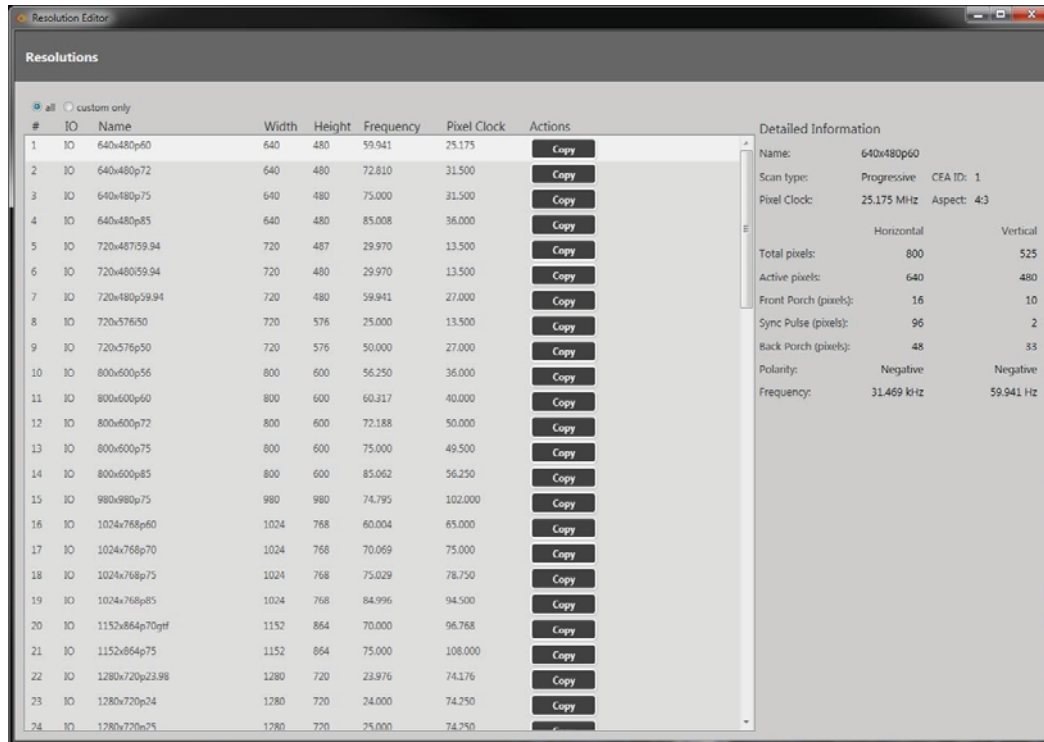


The screenshot shows the Resolution Editor window with a list of resolutions and a detailed information pane on the right.

#	IO	Name	Width	Height	Frequency	Pixel Clock	Actions
1	IO	640x480p60	640	480	59.941	25.175	Copy
2	IO	640x480p72	640	480	72.810	31.500	Copy
3	IO	640x480p75	640	480	75.000	31.500	Copy
4	IO	640x480p85	640	480	85.008	36.000	Copy
5	IO	720x48759.94	720	487	29.970	13.500	Copy
6	IO	720x48059.94	720	480	29.970	13.500	Copy
7	IO	720x480p59.94	720	480	59.941	27.000	Copy
8	IO	720x57650	720	576	25.000	13.500	Copy
9	IO	720x576p50	720	576	50.000	27.000	Copy
10	IO	800x600p56	800	600	56.250	36.000	Copy
11	IO	800x600p60	800	600	60.317	40.000	Copy
12	IO	800x600p72	800	600	72.188	50.000	Copy
13	IO	800x600p75	800	600	75.000	49.500	Copy
14	IO	800x600p85	800	600	85.062	56.250	Copy
15	IO	980x980p75	980	980	74.795	102.000	Copy
16	IO	1024x768p60	1024	768	60.004	65.000	Copy
17	IO	1024x768p70	1024	768	70.069	75.000	Copy
18	IO	1024x768p75	1024	768	75.029	78.750	Copy
19	IO	1024x768p85	1024	768	84.996	94.500	Copy
20	IO	1152x864p70gjf	1152	864	70.000	96.768	Copy
21	IO	1152x864p75	1152	864	75.000	108.000	Copy
22	IO	1280x720p23.98	1280	720	23.976	74.176	Copy
23	IO	1280x720p24	1280	720	24.000	74.250	Copy
24	IO	1280x720p25	1280	720	25.000	74.250	Copy

Detailed Information for selected resolution (640x480p60):

- Name: 640x480p60
- Scan type: Progressive CEA ID: 1
- Pixel Clock: 25.175 MHz Aspect: 4:3
- Total pixels: Horizontal 800, Vertical 525
- Active pixels: Horizontal 640, Vertical 480
- Front Porch (pixels): Horizontal 16, Vertical 10
- Sync Pulse (pixels): Horizontal 96, Vertical 2
- Rack Porch (pixels): Horizontal 48, Vertical 33
- Polarity: Negative (Horizontal), Negative (Vertical)
- Frequency: 31.469 kHz (Horizontal), 59.941 Hz (Vertical)

By default the Resolution Editor shows all resolutions, both built-in and custom. Scroll to the bottom of the list or select the **Custom Only** radio button to see the Custom Resolutions:

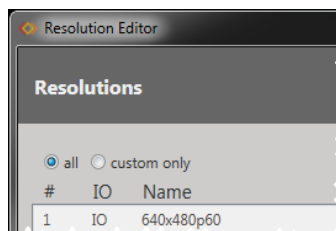

The screenshot shows the Resolution Editor window with the 'Custom Only' radio button selected. The list of resolutions is filtered to show only custom resolutions.

#	IO	Name
1	IO	640x480p60

For each resolution, you can see the resolution number, **Name**, **Width**, **Height**, **Frequency**, and **Pixel Clock**. This information should be sufficient for you to identify the specific resolution you are looking for.


If you want more details of a given resolution, click on that line and the **Detailed Information** pane on the right will list all available properties of the resolution including the name of the

resolution, the **Scan Type**, **Pixel Clock**, and both **Horizontal** and **Vertical** values for **Total pixels**, **Active pixels**, **Front** and **Back Porch**, **Sync Pulse**, **Polarity** and **Frequency**.


Creating a Custom Resolution From a Built-In Resolution

The simplest way to create a Custom Resolution is to base it on an existing resolution, and change only the parameters that vary.

1. Select the existing resolution that most closely matches your desired resolution and press the **Copy** button:

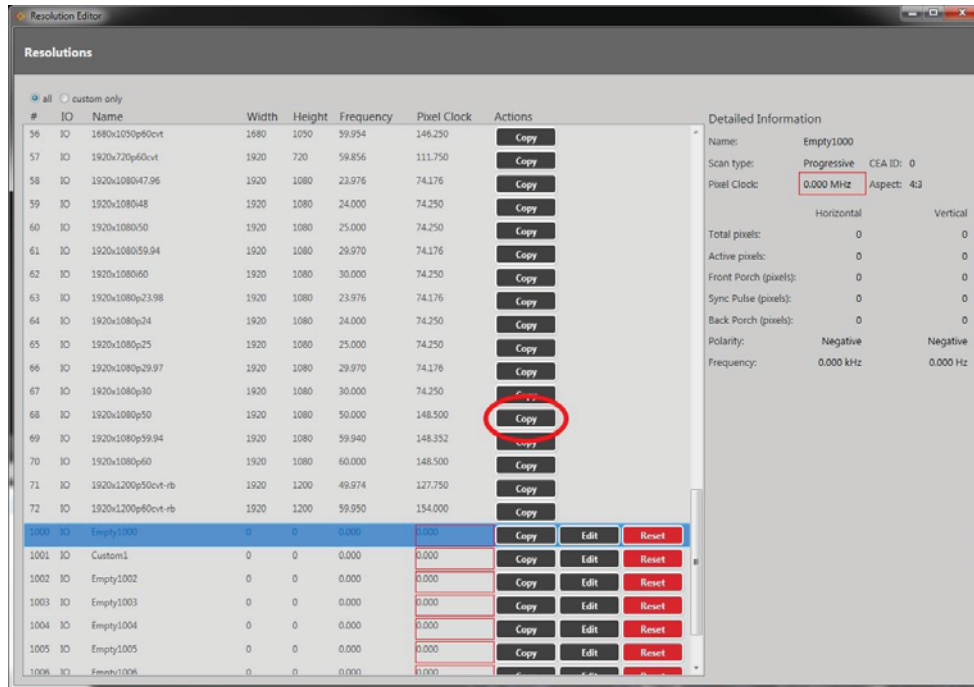


2. In the resulting Edit Resolution window, enter a meaningful name for your Custom Resolution and change the other fields as required. (If you are going to use your Custom Resolution with CORIOgrapher, be sure to read the notes regarding naming at “Editing Name Property from CORIOdiscover Resolution Editor” on page 145.)

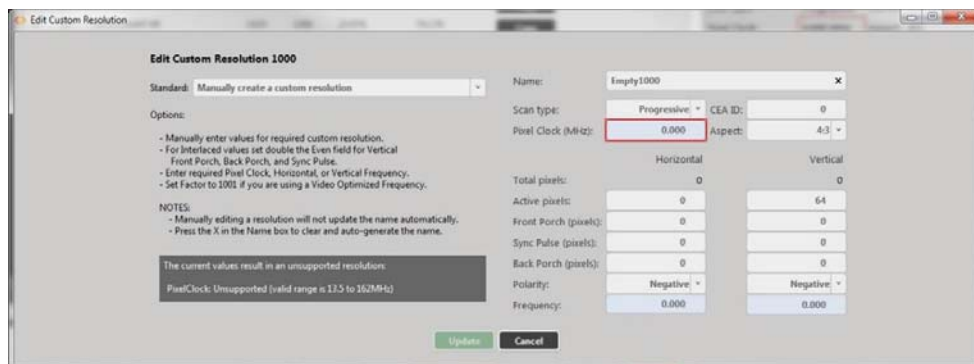

For more information on the individual fields, see the individual topics in the rest of this section.


- When you have finished configuring the fields, click the **Update** button and the new Custom Resolution will be placed in the next available (empty) Custom Resolution.

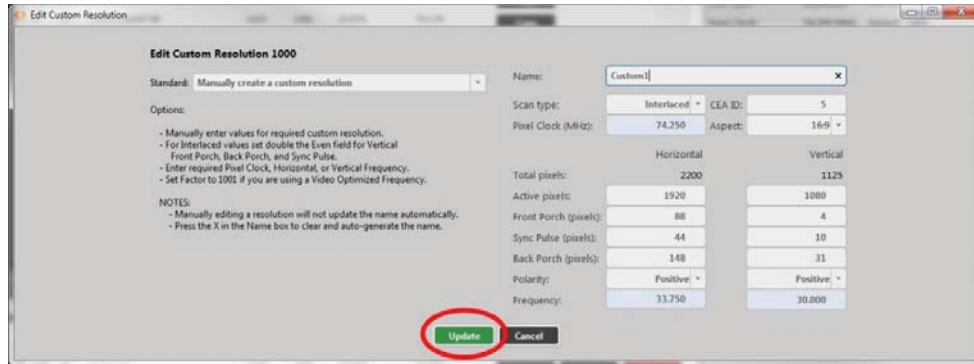


Creating a Custom Resolution From a Standard

If you want to create a Custom Resolution based on a video standard, such as CVT, follow these steps:


1. Select an empty Custom Resolution, and click the **Edit** button.

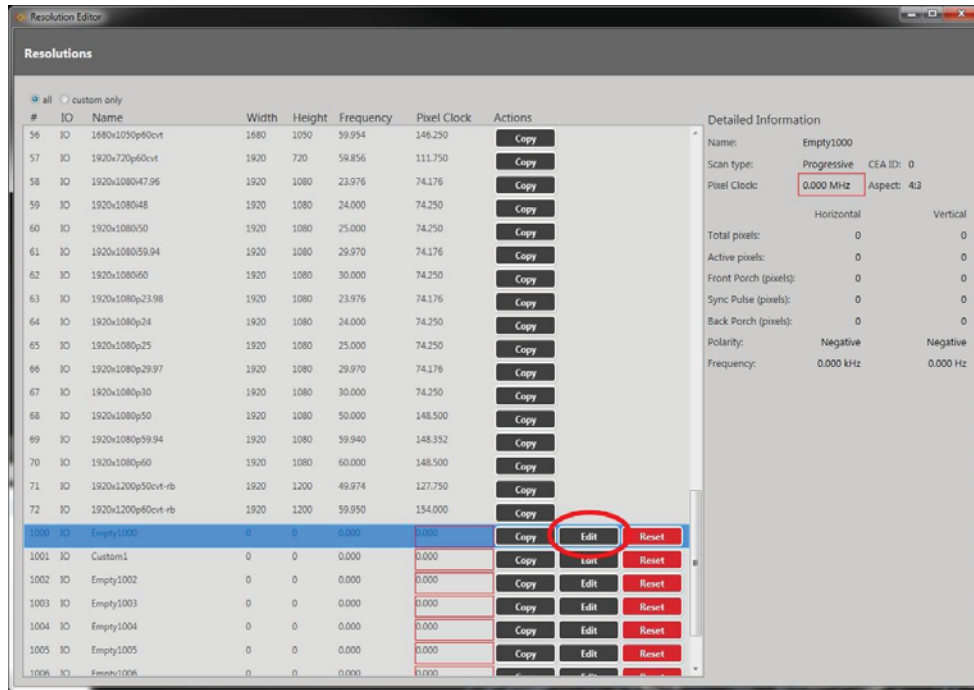


2. In the resulting Edit Resolution window, choose the appropriate Standard from the drop-down list of options.

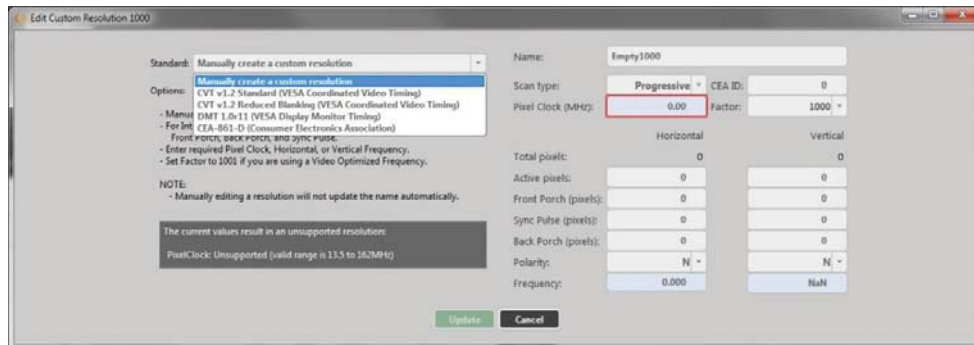

3. Choose the appropriate Resolution from the drop-down list of options.

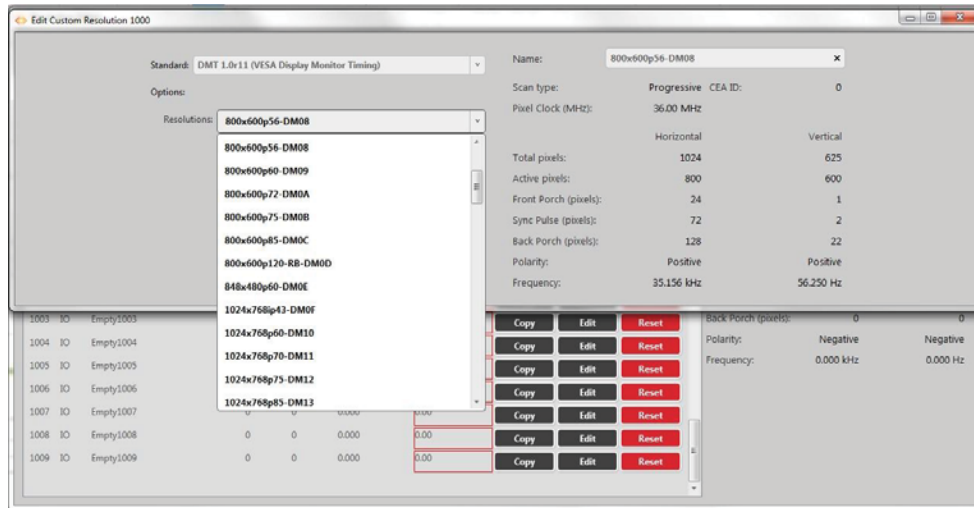


4. Enter a meaningful name for your Custom Resolution and change the other fields as required. (If you are going to use your Custom Resolution with CORIOgrapher, be sure to read the notes regarding naming at “Editing Name Property from CORIOdiscover Resolution Editor” on page 145.) For more information on the individual fields, see elsewhere in this manual.
5. When you have finished configuring the fields, click the **Update** button and the Custom Resolution will be saved in the Custom Resolution slot you chose in step 1.

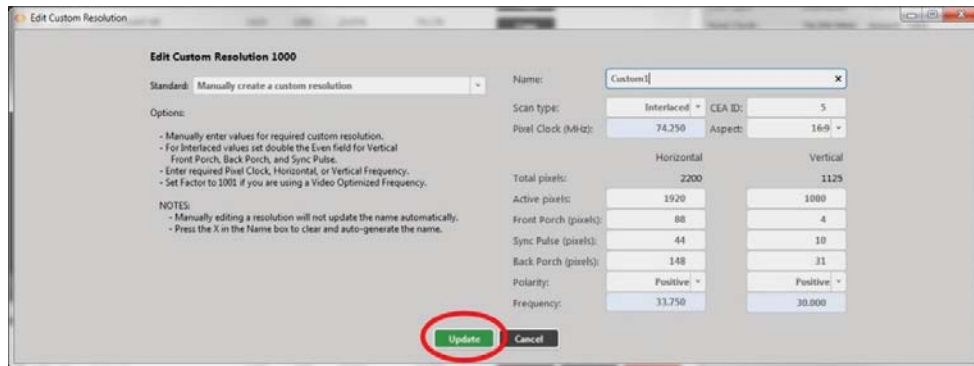


Creating a Custom Resolution From Scratch

If you want to create a Custom Resolution that isn't based on a standard or an existing custom resolution, follow these steps.


1. Select an empty Custom Resolution, and click the Edit button.

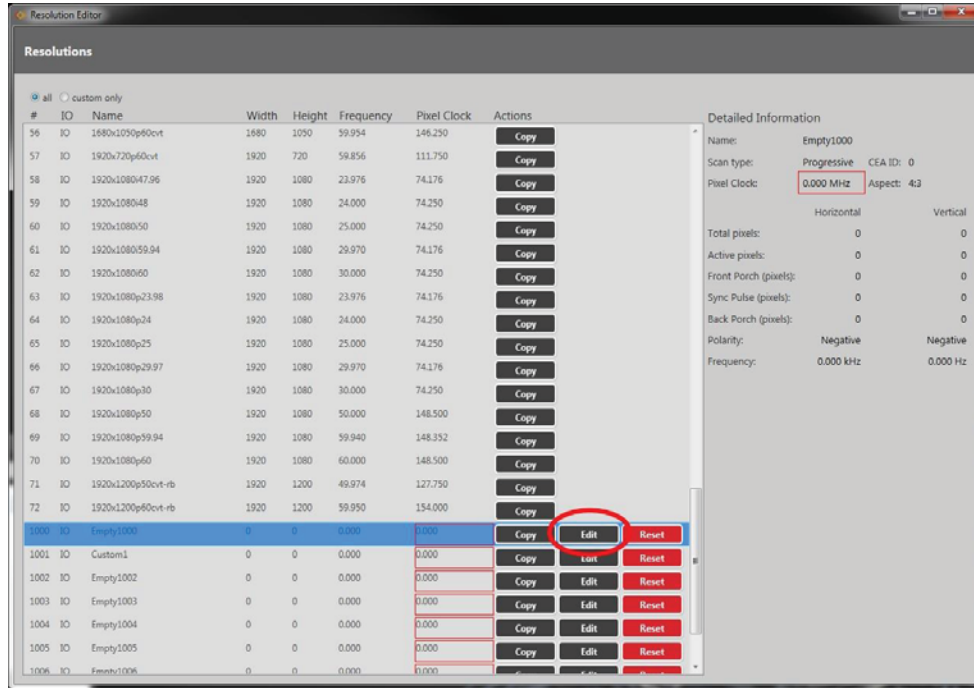

2. In the resulting Edit Resolution window, be sure that **Manually create a custom resolution** is selected from the **Standard** drop-down list.

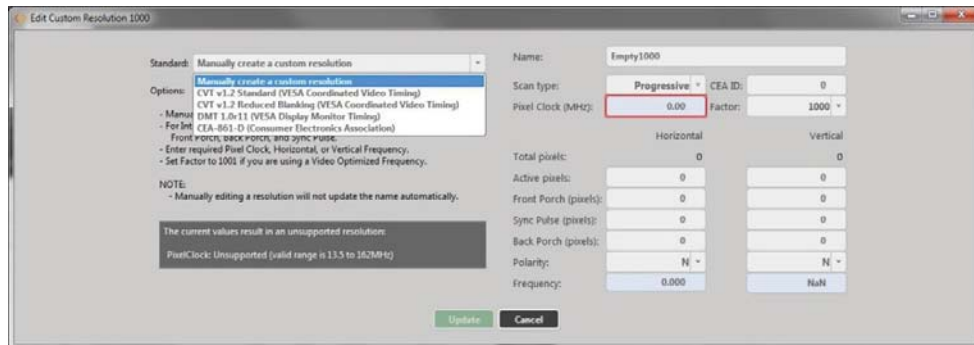


3. Enter a meaningful name for your Custom Resolution and change the other fields to match your requirements. (If you are going to use your Custom Resolution with CORIOgrapher, be sure to read the notes regarding naming at “Editing Name Property from CORIODiscover Resolution Editor” on page 145.)

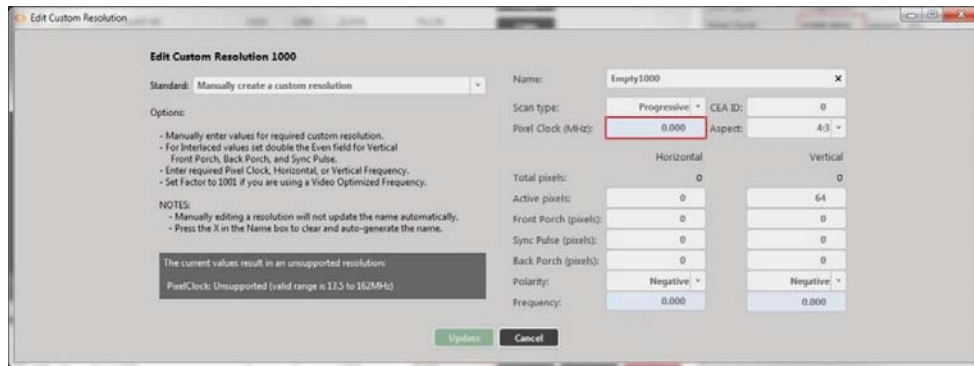

For more information on the individual fields, see elsewhere in this manual. Note that some fields must be updated to appropriate values before you can save the resolution.


4. When you have finished configuring the fields, click the **Update** button and the Custom Resolution will be saved in the Custom Resolution slot you chose in step 1.

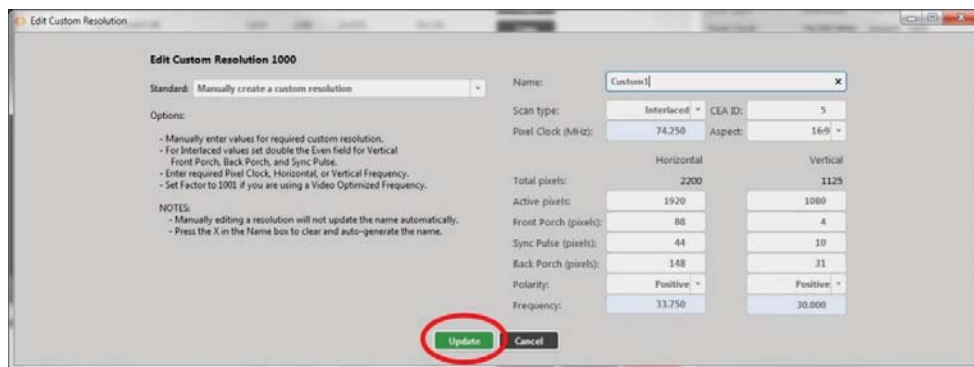


Editing an existing Custom Resolution

To edit an existing Custom Resolution:

1. Select the Custom Resolution and press the **Edit** button:

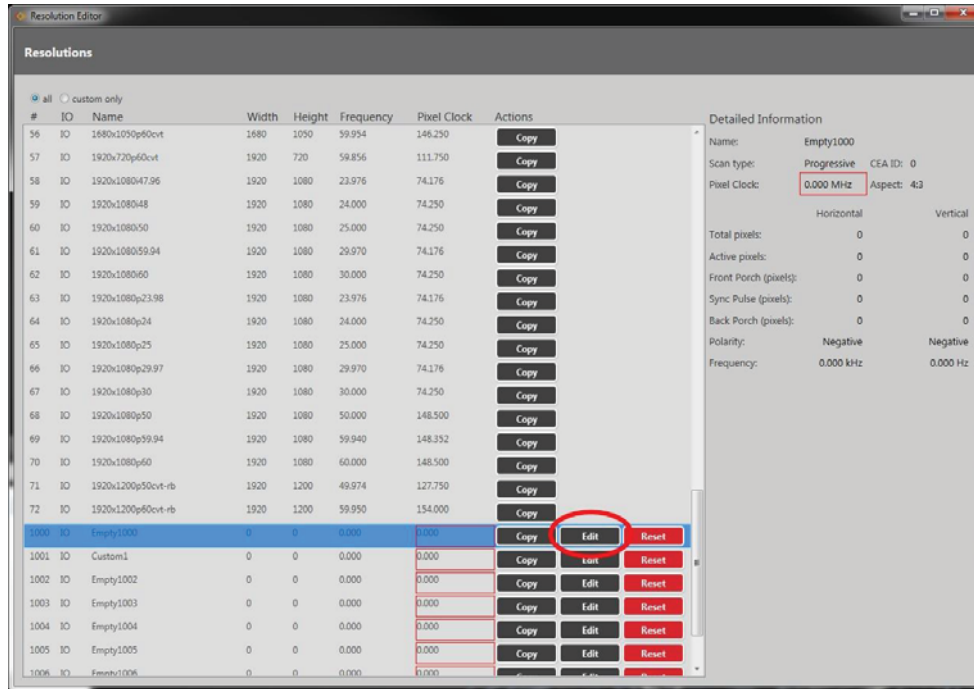



2. In the resulting Edit Resolution window, change the fields as required. (If you are going to use your Custom Resolution with CORIOgrapher, be sure to read the notes regarding naming at “Editing Name Property from CORIOdiscover Resolution Editor” on page 145.)

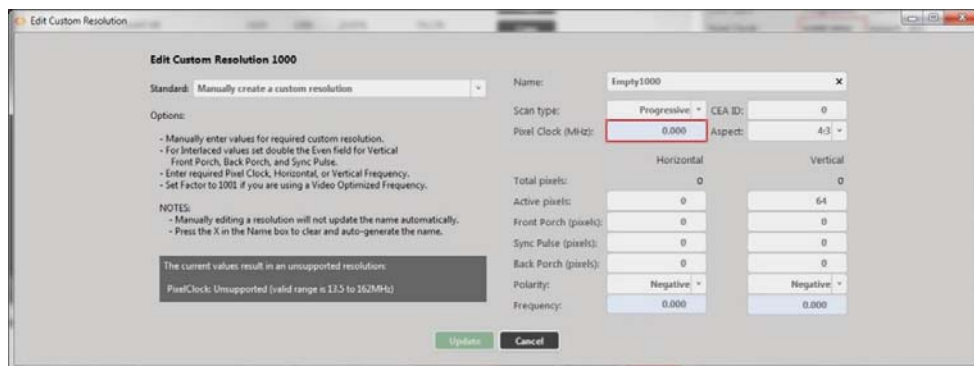

For more information on the individual fields, see elsewhere in this manual.

3. When you have finished configuring the fields, click the Update button and the Custom Resolution will be saved in the same Custom Resolution slot you chose in step 1.

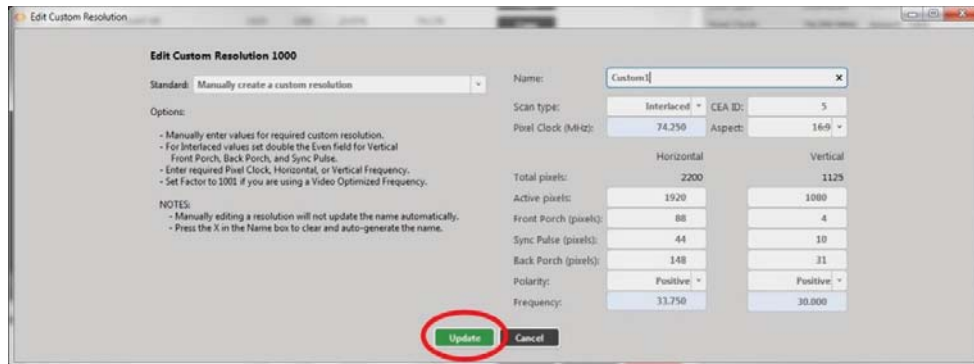


 **Note:** If the Custom Resolution is active on an output, your changes will take effect immediately after you press the **Update** button, with the exception of the **Name**. If you change the **Name** attribute of a Custom Resolution that you have already set to an output, the output will revert to the default built-in resolution for that output. To continue using the same Custom Resolution with that output, re-apply it to the output.

Clearing or Deleting an existing Custom Resolution


Custom Resolutions can only be modified; they cannot be created or deleted. If you wish to remove saved details, **Reset** the Custom Resolution to default settings. This is equivalent to deleting, but the slot is still available for future use.

To clear a Custom Resolution:


1. Select the Custom Resolution and press the **Reset** button.

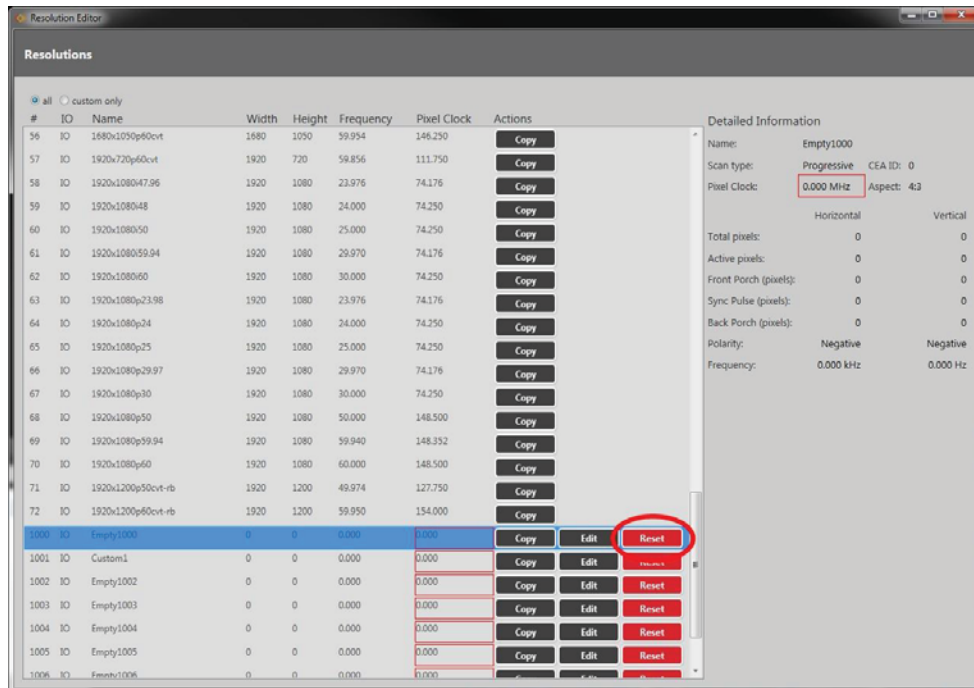

2. A pop-up window appears, asking you to verify that you want to erase all the data for this resolution. Click **Yes**, if you do wish to clear the Custom Resolution.

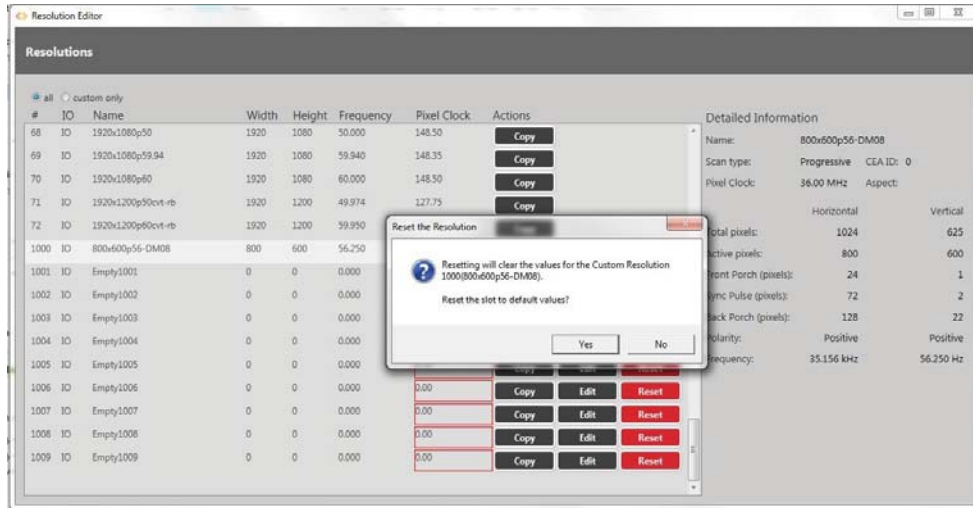


- In the Resolution Editor, that Custom Resolution now appears empty, with values reset to default.

 **Note:** If you clear a Custom Resolution that you have already set to an output, the output will revert to the default built-in resolution for that output.

Listing Resolution Properties from CORIOdiscover Resolution Editor

The **Detailed Information** pane is on the far right of the Resolution Editor window. This pane displays information about the highlighted resolution.

Built-in resolution details are read-only; custom resolution details can be edited.

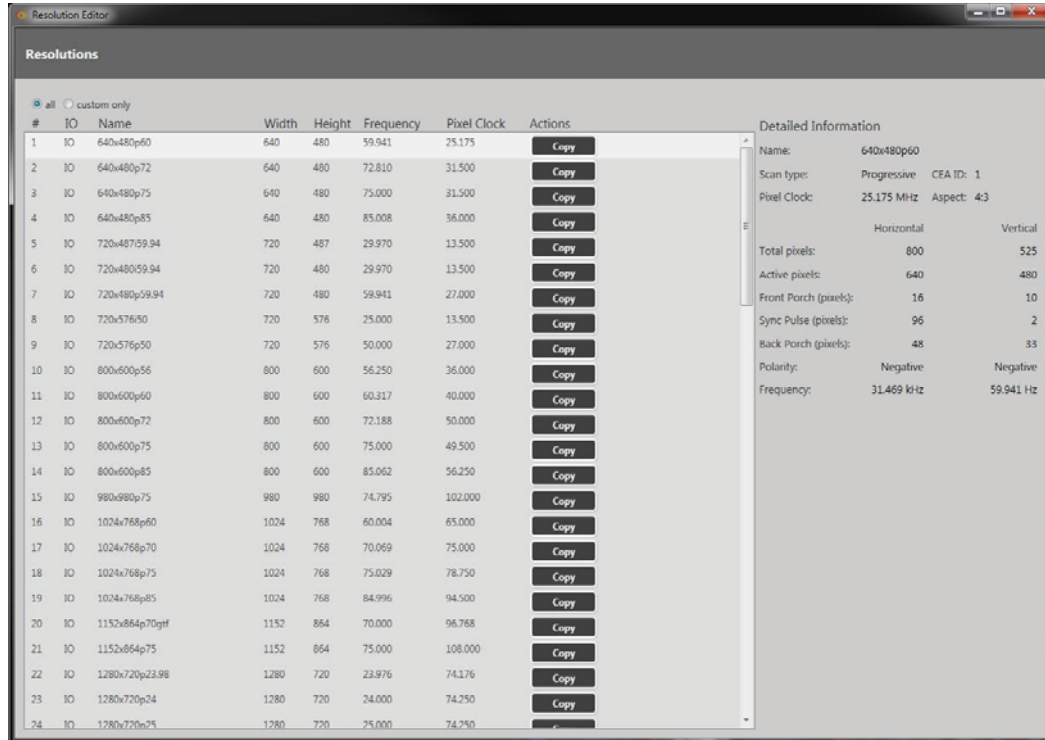

The screenshot shows the Resolution Editor window with a list of resolutions and a detailed information pane for the selected resolution (640x480p60).

#	IO	Name	Width	Height	Frequency	Pixel Clock	Actions
1	IO	640x480p60	640	480	59.941	25.175	Copy
2	IO	640x480p72	640	480	72.810	31.500	Copy
3	IO	640x480p75	640	480	75.000	31.500	Copy
4	IO	640x480p85	640	480	85.008	36.000	Copy
5	IO	720x48759.94	720	487	29.970	13.500	Copy
6	IO	720x48059.94	720	480	29.970	13.500	Copy
7	IO	720x480p59.94	720	480	59.941	27.000	Copy
8	IO	720x57650	720	576	25.000	13.500	Copy
9	IO	720x576p50	720	576	50.000	27.000	Copy
10	IO	800x600p56	800	600	56.250	36.000	Copy
11	IO	800x600p60	800	600	60.317	40.000	Copy
12	IO	800x600p72	800	600	72.188	50.000	Copy
13	IO	800x600p75	800	600	75.000	49.500	Copy
14	IO	800x600p85	800	600	85.002	56.250	Copy
15	IO	980x980p75	980	980	74.795	102.000	Copy
16	IO	1024x768p60	1024	768	60.004	65.000	Copy
17	IO	1024x768p70	1024	768	70.069	75.000	Copy
18	IO	1024x768p75	1024	768	75.029	78.750	Copy
19	IO	1024x768p85	1024	768	84.996	94.500	Copy
20	IO	1152x864p70gtr	1152	864	70.000	96.768	Copy
21	IO	1152x864p75	1152	864	75.000	108.000	Copy
22	IO	1280x720p23.98	1280	720	23.976	74.176	Copy
23	IO	1280x720p24	1280	720	24.000	74.250	Copy
24	IO	1280x720p25	1280	720	25.000	74.250	Copy

Detailed Information

Name: 640x480p60
 Scan type: Progressive CEA ID: 1
 Pixel Clock: 25.175 MHz Aspect: 4:3

	Horizontal	Vertical
Total pixels:	800	525
Active pixels:	640	480
Front Porch (pixels):	16	10
Sync Pulse (pixels):	96	2
Back Porch (pixels):	48	33
Polarity:	Negative	Negative
Frequency:	31.469 kHz	59.941 Hz

In this pane, you can view information including the name of the resolution, the **Scan Type**, **Pixel Clock**, and both **Horizontal** and **Vertical** values for **Total pixels**, **Active pixels**, **Front** and **Back Porch**, **Sync Pulse**, **Polarity** and **Frequency**.

Editing Resolution Properties from CORIOdiscover Resolution Editor

Various details specific to a resolution are saved on a per-resolution basis. You can edit settings for Custom Resolutions. Each property is covered separately.

Editing Name Property from CORIOdiscover Resolution Editor


Learn how to set a name for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


Lists the user-readable name for this resolution. Set up the name as something meaningful for you, within the limitations of the permissible characters. (See Note below.)

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to rename.

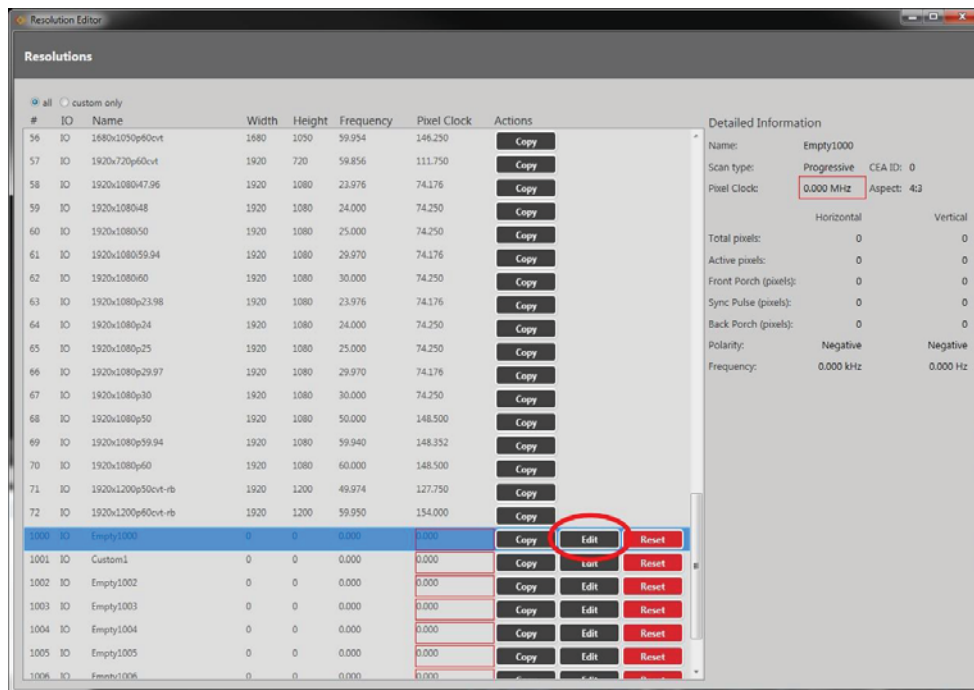

2. In the new window, you can edit various properties of the Custom Resolution. In the top right corner, you can edit the **Name** field. Be sure to read the notes below regarding valid characters.

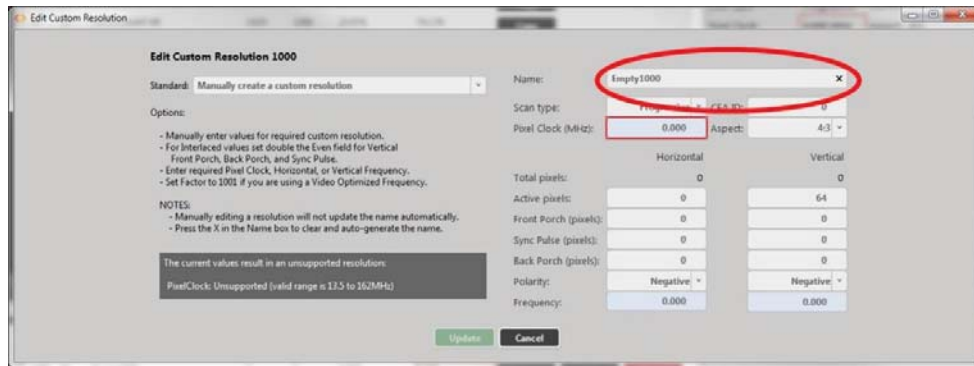

- When you have modified the **Name** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

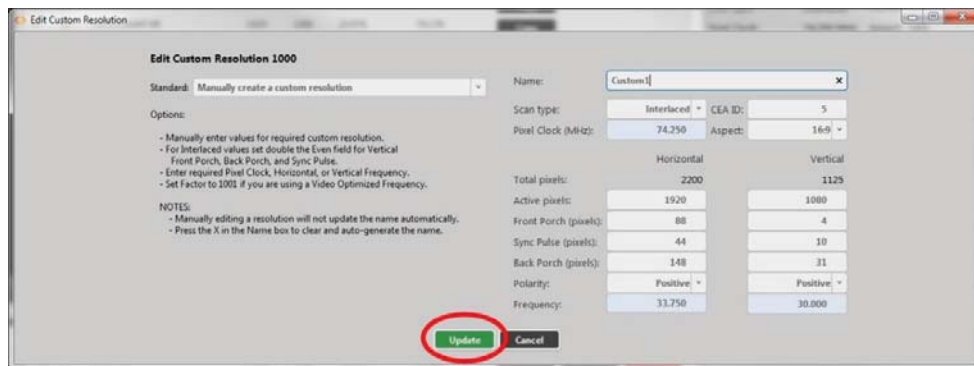

Default

The default **Name** is the string “EmptyNNNN” where ‘NNNN’ is the number of the Custom Resolution. Note that Resolution1000 is “Empty1000”, Resolution1001 is “Empty1001”, Resolution1009 is “Empty1009” and so forth.

Notes

The **Name** attribute has the following limitations:

- must be no more than 23 characters
- only valid printable ASCII characters may be used
- must have no spaces (underscore is valid)

The system does not check for duplicate names - if more than one Custom Resolution has the same name, when you set a Custom Resolution of that name to an output, unexpected behavior may result.

If you change the **Name** attribute of a Custom Resolution that you have already set to an output, the output will revert to the default built-in resolution for that output. To continue using the same Custom Resolution with that output, re-apply it to the output.

It is possible to set a Custom Resolution that has not been configured to an output. This is intentional.

If you wish to use a Custom Resolution with CORIOgrapher the **Name** must conform to the following format:

[width]x[height][scantype][rate][optional]

where:

[width]	width in pixels	num
[height]	height in pixels	num
X	the letter x	x
[scantype]	either <i>i</i> for interlaced or <i>p</i> for progressive	<i>i</i> or <i>p</i>
[rate]	the frame rate (this must be at least one character and may contain a period if relevant)	num
[optional]	any optional text	null or string

For example, the following are valid **Name** formats for use with CORIOgrapher:

- 1280x720i40055D
- 1280x720p6test
- 1280x720p59.94
- 1280x720i50
- 280x72i30



Caution: If you use CORIOgrapher with a **Name** that does not conform to the format described above, you may experience unexpected consequences.

Editing Aspect Ratio Property from CORIOdiscover Resolution Editor


Learn how to set the **Aspect** ratio for a Custom Resolution via the Resolution Editor in CORIOdiscover. This is used on the CORIOmatrix and CORIOmatrix mini to assist in signal conversion when an input and output have different aspect ratio.

Description


Lists the **Aspect** ratio for this Custom Resolution in the form width:height (in units of equal size).

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the Edit button next to the Custom Resolution you want to edit.

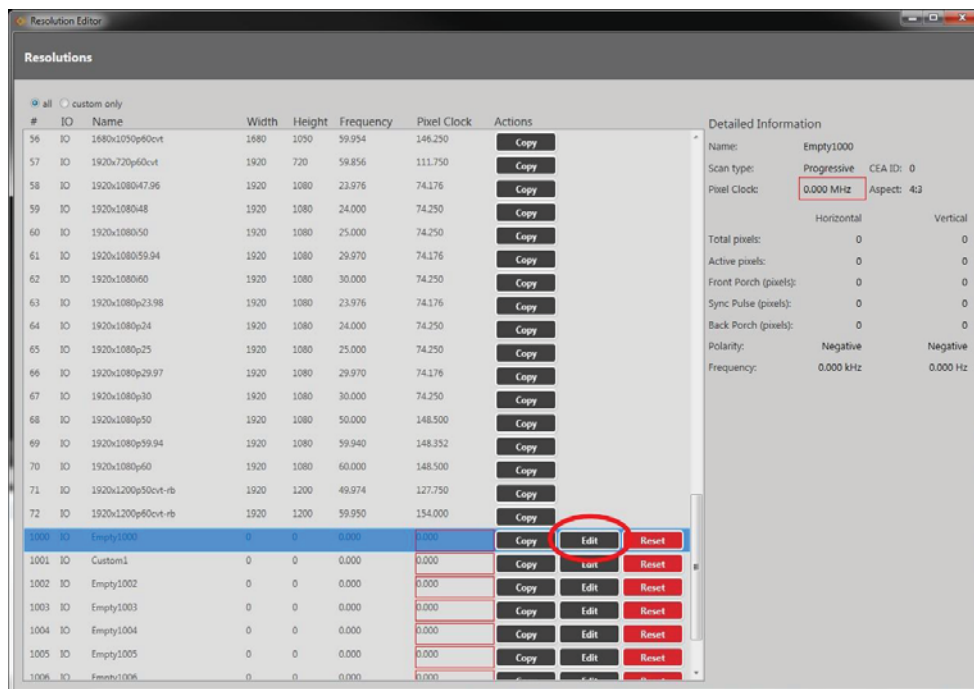

- In the new window, you can edit various properties of the Custom Resolution. In the top right corner, you can choose an option from the **Aspect** drop-down menu.

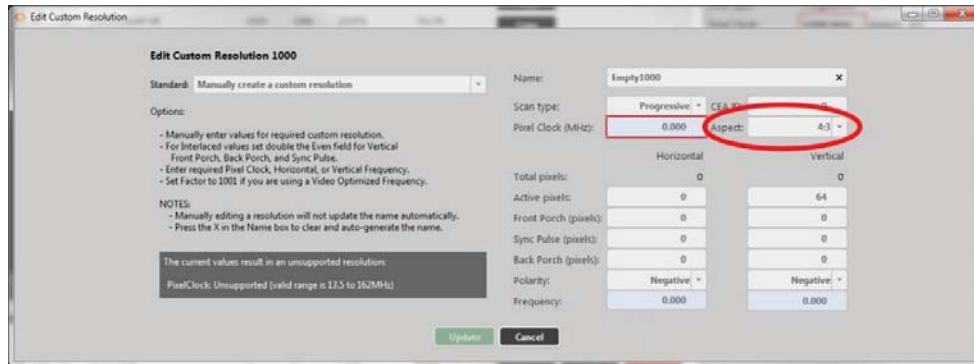

- When you have modified the Aspect as desired, click the Update button at the bottom of the window to commit changes and return to the Resolution Editor.

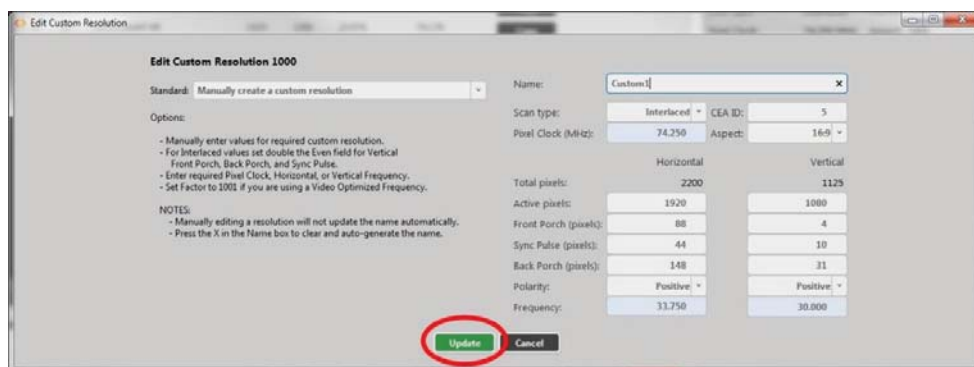

Default
4:3

Notes

Valid available **Aspect** ratios are:
16:9, 4:3, 5:4, 16:10, 5:3, 1:1, 16:6

The system cannot accept any other aspect ratios.

Aspect ratios are used on the CORIOmatrix and CORIOmatrix mini only, not on CORIOmaster or CORIOmaster mini.

Editing Pixel Clock Property from CORIOdiscover Resolution Editor

Learn how to set the **Pixel Clock** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description

The **Pixel Clock** value is the speed of the **Pixel Clock** in pixels per second. The minimum and maximum values are dependent on the following:

$$p = h * v * f$$

where:

p	Pixels per second
h	Horizontal total pixels
v	Vertical total pixels
f	Frame rate in frames per second


For example, for 1920x1080p60, h=2200, v=1125, and f=60.

This gives $p = 2200 * 1125 * 60 = 148.5\text{MHz}$


(Note that h and v are TOTAL pixels, not visible pixels - these numbers are greater than the visible resolution.)

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

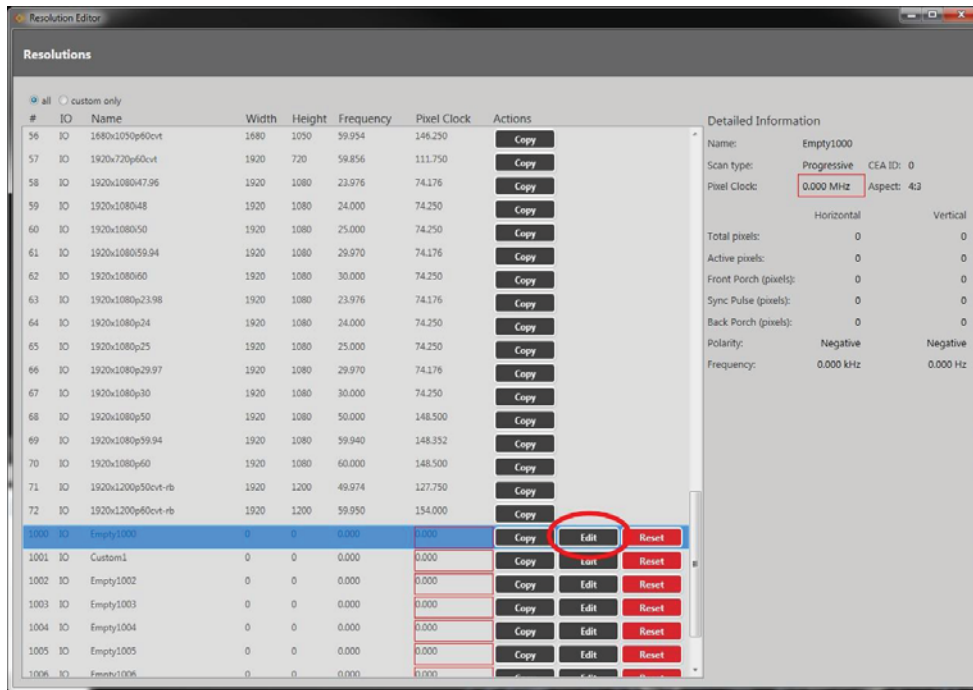

- In the new window, you can edit various properties of the Custom Resolution. In the upper right section, you can type a number into the **Pixel Clock** option.

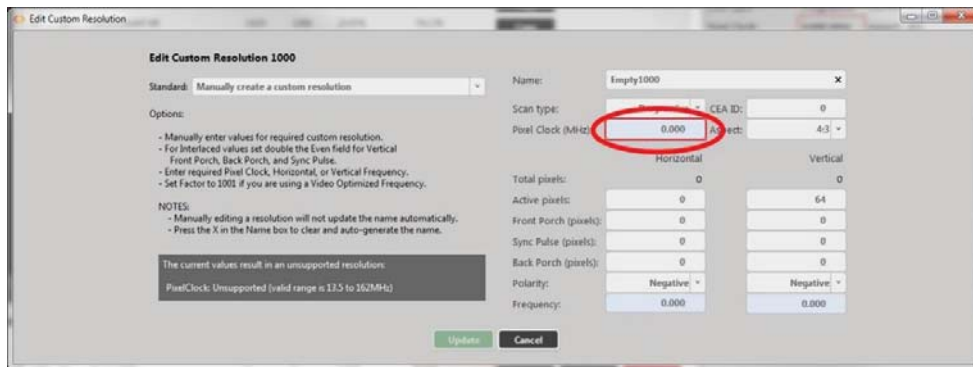

- When you have modified the **Aspect** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

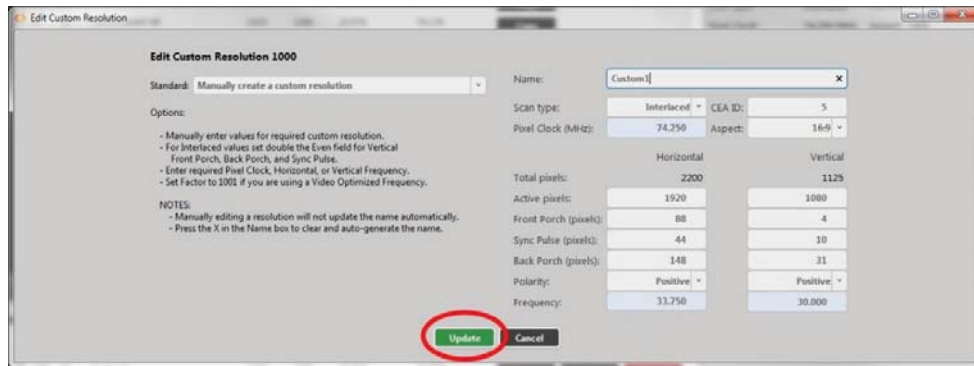

Default

0

(You cannot save a new Custom Resolution until the default value has been changed to a number in the valid range.)

Notes

The valid range for the **Pixel Clock** is 13.5MHz to 162MHz. As the value in pixels is a function of resolution (including frame rate), the minimum and maximum value in **Pixel Clock** varies with the resolution.

For example:

The minimum **Pixel Clock** at 640x480p60 is $800 * 525 * 59.94 = 25.175\text{MHz}$ (Note that p60 is nomenclature - the rate is actually 59.94MHz)

The maximum **Pixel Clock** at 1600x1200p60 is $2160 * 1250 * 60 = 162\text{MHz}$

To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

In the CORIOdiscover Resolution Editor, the **Horizontal Frequency** and **Vertical Frequency** read-only fields are derived from the **Pixel Clock** value.

Editing Scan type Property from CORIOdiscover Resolution Editor

Learn how to set the **Scan type** for a Custom Resolution via the Resolution Editor in CORIOdiscover as either Interlaced or Progressive.


Description

The **Scan type** state of this Custom Resolution has two options:


- p Progressive scan mode
- i Interlaced scan mode

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

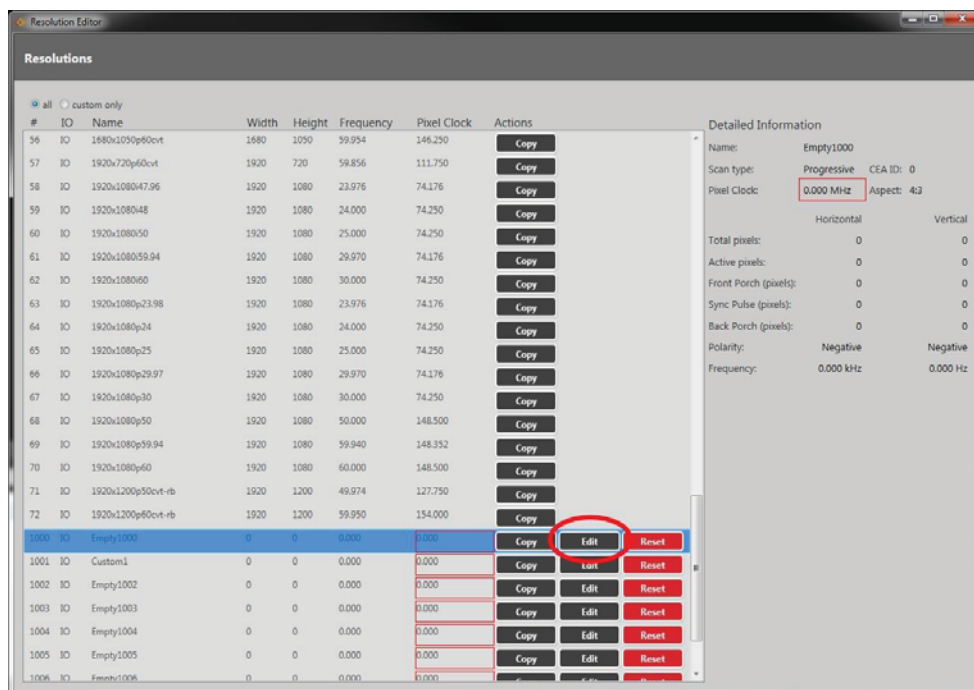

2. In the new window, you can edit various properties of the Custom Resolution. In the top right corner, you can choose an option from the **Scan type** drop-down menu.

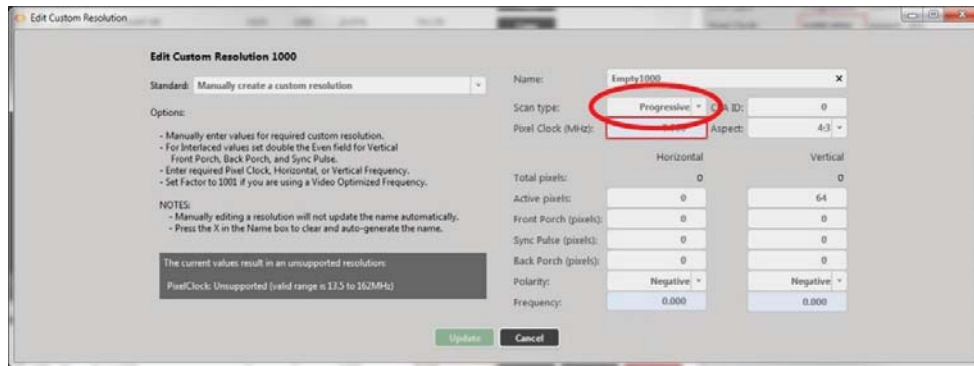

- When you have modified the **Scan type** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

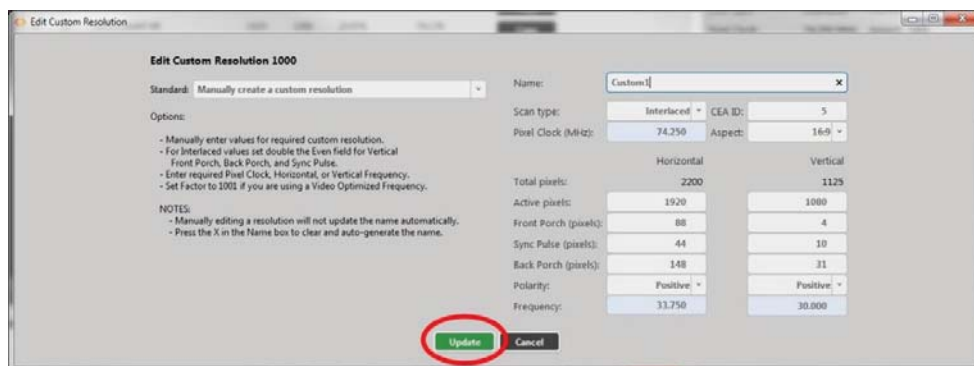

Default

Progressive (p)

Notes

Only Progressive (p) or interlaced (i) are valid options.

Editing Horizontal Active Pixels Property from CORIOdiscover Resolution Editor


Learn how to set the **Horizontal Active pixels** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Horizontal Active** video is the width of the displayed image in pixels. For example, for a Custom Resolution of 1024x768 this value would be 1024.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

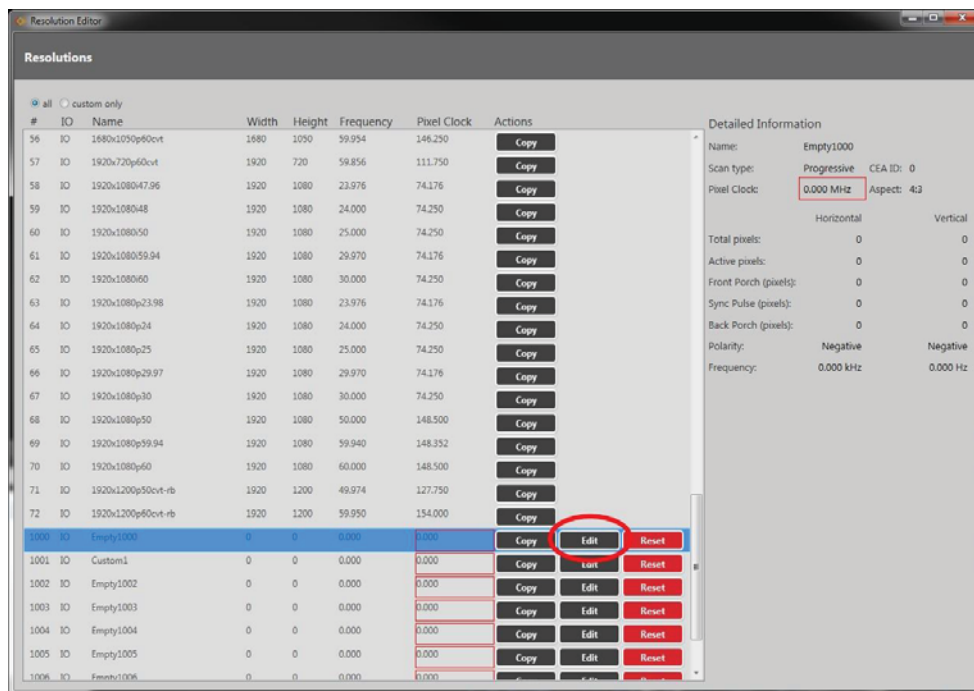

2. In the new window, you can edit various properties of the Custom Resolution. In the left column of the right-hand section, you can type a number into the **Active pixels** field under the **Horizontal** heading.

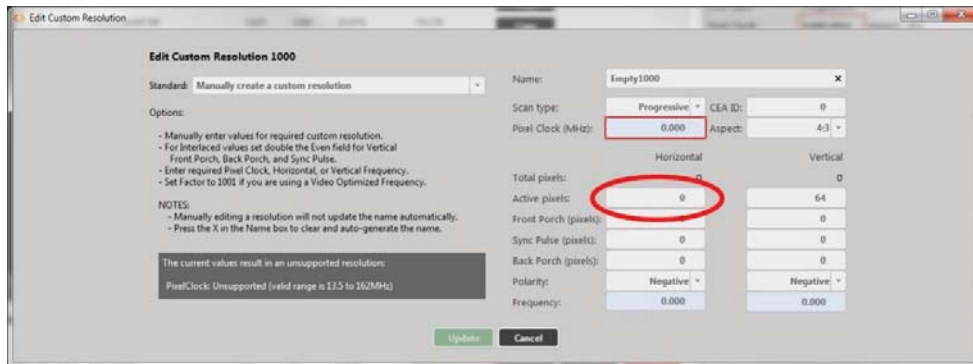

- When you have modified the **Active pixels** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

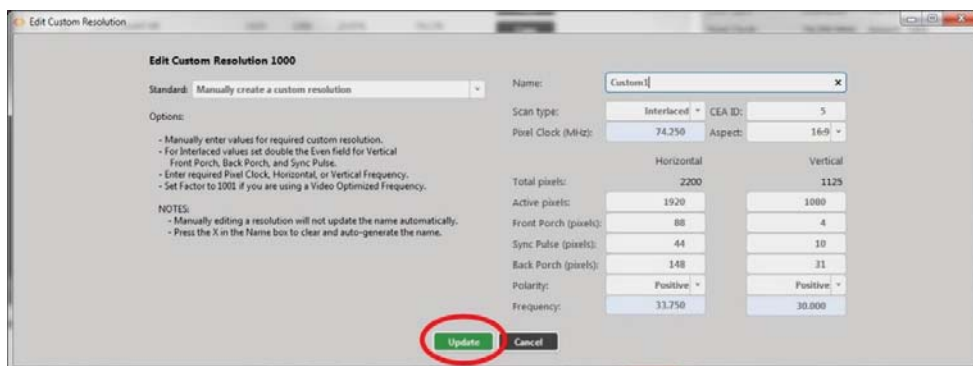

Default

0

Notes

The valid range of values is 64 to 1920.

For a valid Custom Resolution, you must configure this property to a value within the valid range. In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Active pixels**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Active pixels** changes.

Editing Horizontal Front Porch Property from CORIOdiscover Resolution Editor


Learn how to set the **Horizontal Front Porch** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Horizontal Front Porch** is the gap between the end of the Active Video and the start of the **Horizontal Sync Pulse**, in pixels.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

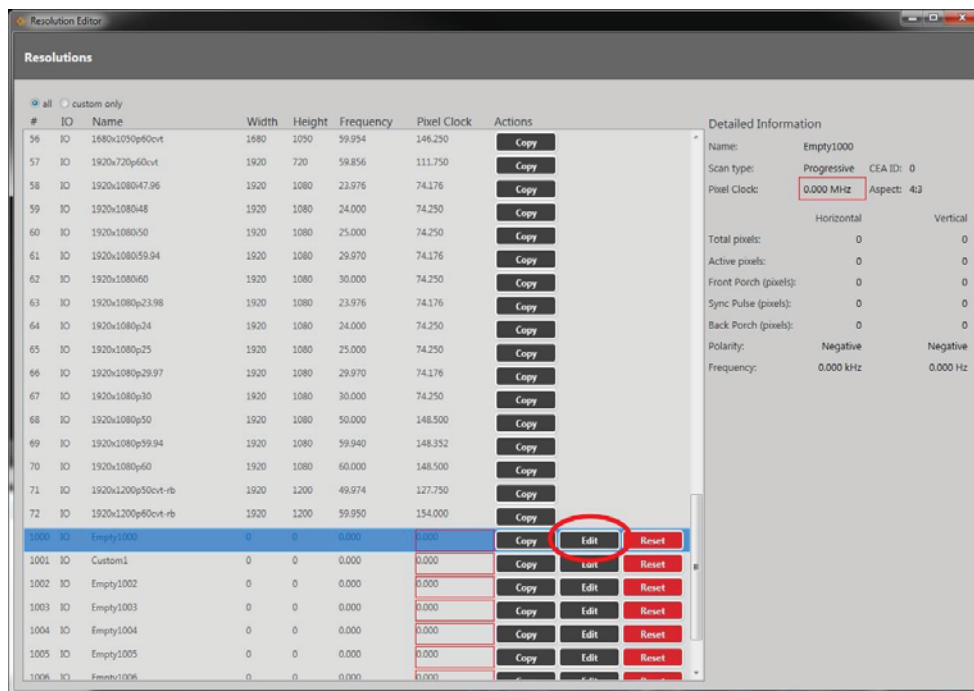

2. In the new window, you can edit various properties of the Custom Resolution. In the left column of the right-hand section, you can type a number into the **Front Porch (pixels)** field under the **Horizontal** heading.

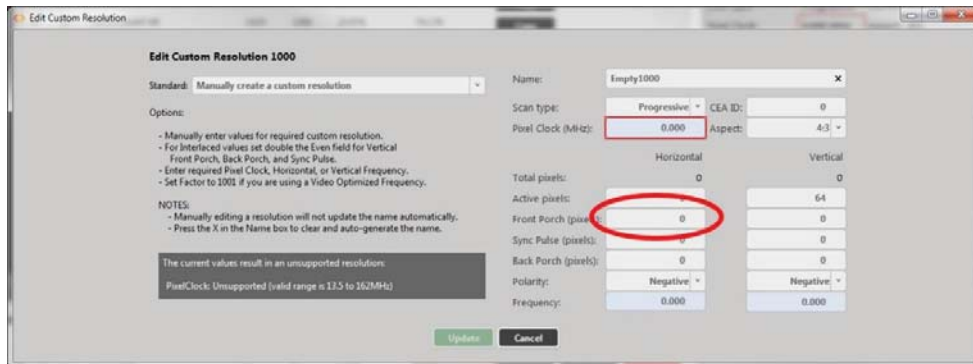

- When you have modified the **Front Porch** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

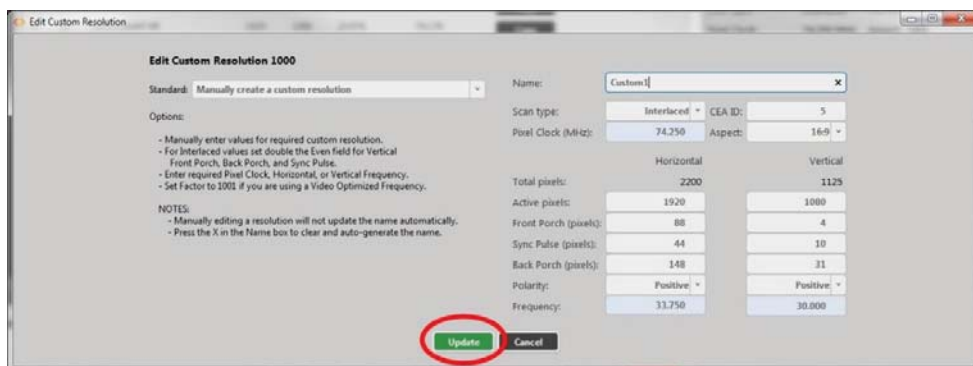

Default

0

Notes

The valid range of values is 1 to 2000.

For a valid Custom Resolution, you must configure this property to a value within the valid range. In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Front Porch**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Front Porch** changes.

Editing Horizontal Sync Pulse Property from CORIOdiscover Resolution Editor


Learn how to set the **Horizontal Sync Pulse** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Horizontal Sync Pulse** identifies the start of each row of pixels (line of video) in the Custom Resolution.

Instructions

1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

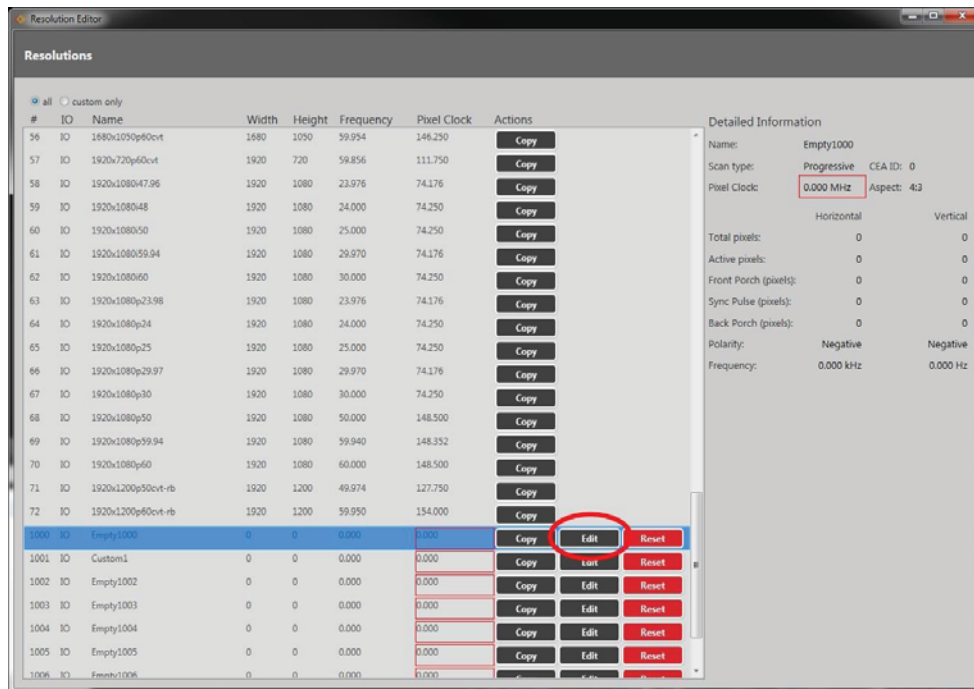

2. In the new window, you can edit various properties of the Custom Resolution. In the left column of the right-hand section, you can type a number into the **Sync Pulse (pixels)** field under the **Horizontal** heading.

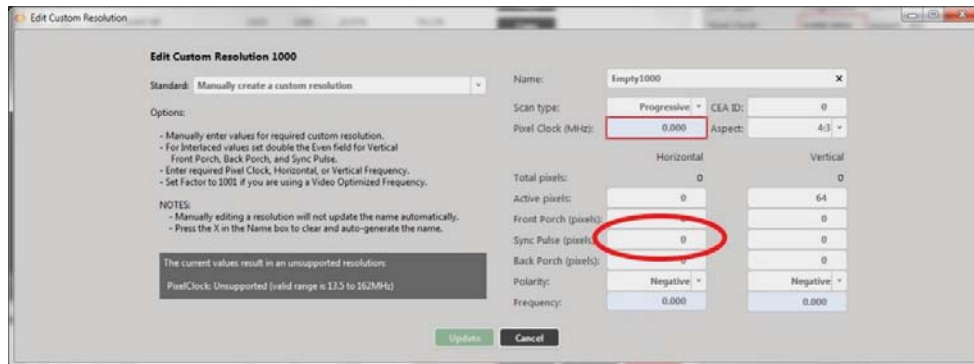

3. When you have modified the **Sync Pulse** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

Default

0

Notes

The valid range of values is 8 to 500.

For a valid Custom Resolution, you must configure this property to a value within the valid range. In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Sync Pulse**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Sync Pulse** changes.

Editing Horizontal Back Porch Property from CORIOdiscover Resolution Editor


Learn how to set the timing interval for the **Horizontal Back Porch** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Horizontal Back Porch** is the gap between the end of the **Horizontal Sync Pulse** and the beginning of the Active Video, in pixels.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

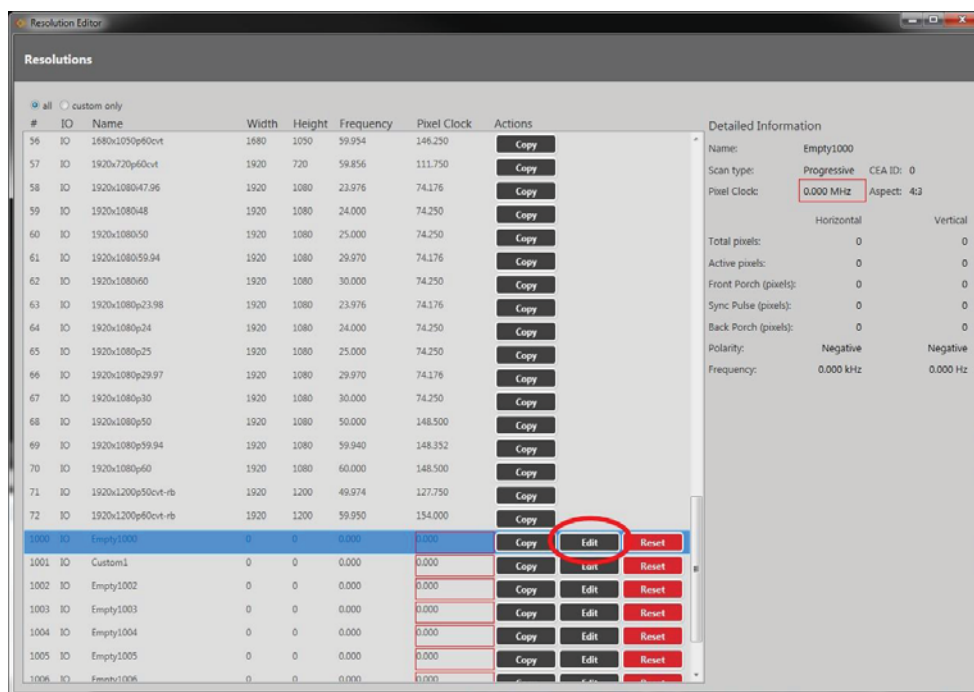

2. In the new window, you can edit various properties of the Custom Resolution. In the left column of the right-hand section, you can type a number into the **Back Porch (pixels)** field under the **Horizontal** heading.

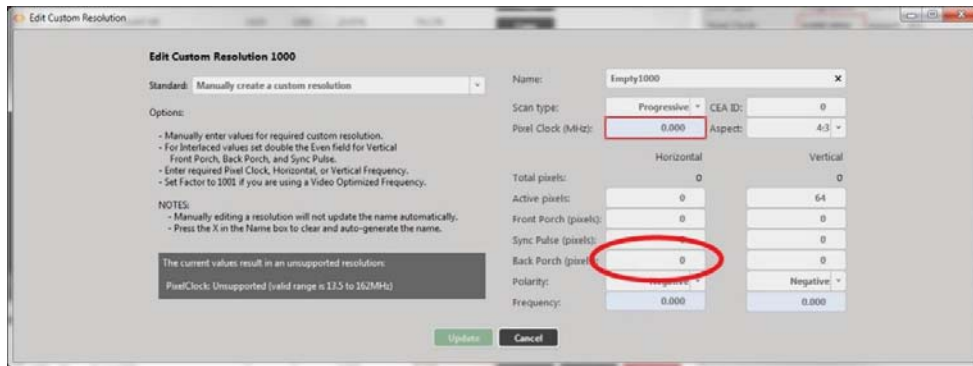

- When you have modified the **Back Porch** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

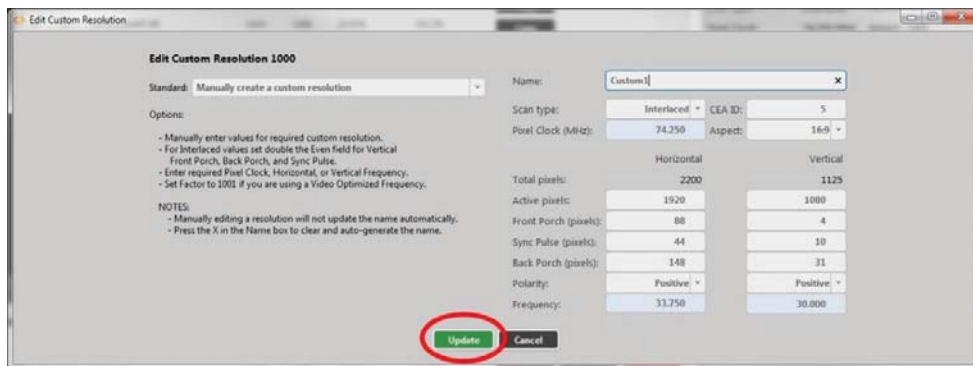

Default

0

Notes

The valid range of values is 1 to 2000.

For a valid Custom Resolution, you must configure this property to a value within the valid range. In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Back Porch**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Back Porch** changes.

Editing Horizontal Sync Polarity Property from CORIOdiscover Resolution Editor


Learn how to set the **Horizontal Synchronization Polarity** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Horizontal Sync Pulse** is a single short pulse which identifies the start of each row of pixels (line of video) in the Custom Resolution. It can be either **Positive** or **Negative**. This value is the **Horizontal Sync Polarity**.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

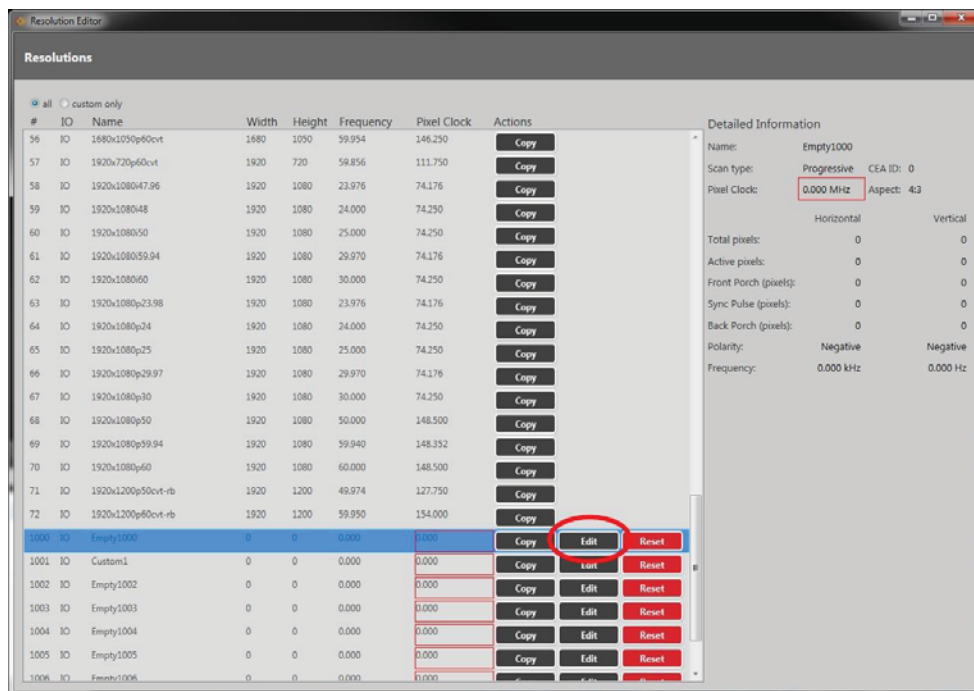

2. In the new window, you can edit various properties of the Custom Resolution. In the left column of the right-hand section, you can choose **Positive** or **Negative** from the drop-down **Polarity** list under the **Horizontal** heading.

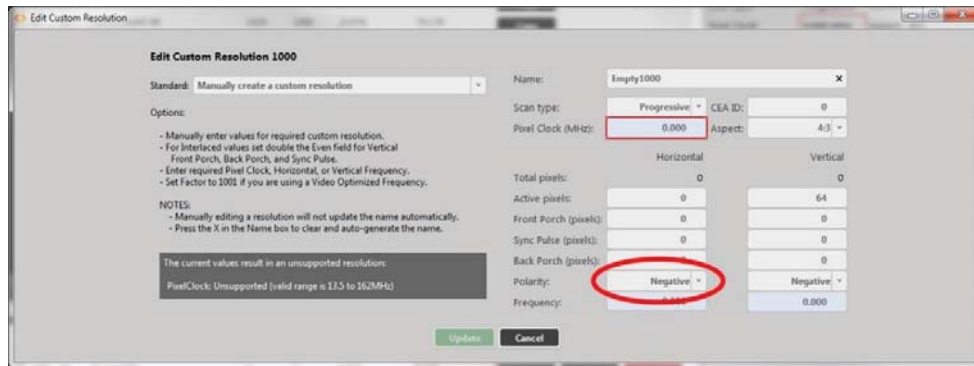

- When you have modified the **Horizontal Sync Polarity** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

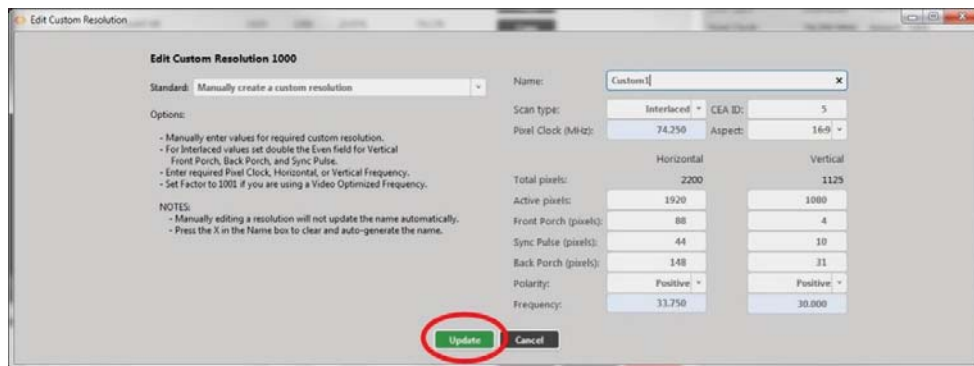

Default

N

Notes

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Sync Polarity**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Sync Polarity** changes.

Editing Vertical Active Pixels Property from CORIOdiscover Resolution Editor

Learn how to set the **Vertical Active pixels** for a Custom Resolution via the Resolution Editor in CORIOdiscover.


Description

The **Vertical Active** video is the height of the displayed image in pixels.


For example, for a Custom Resolution of 1024x768 this value would be 768.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

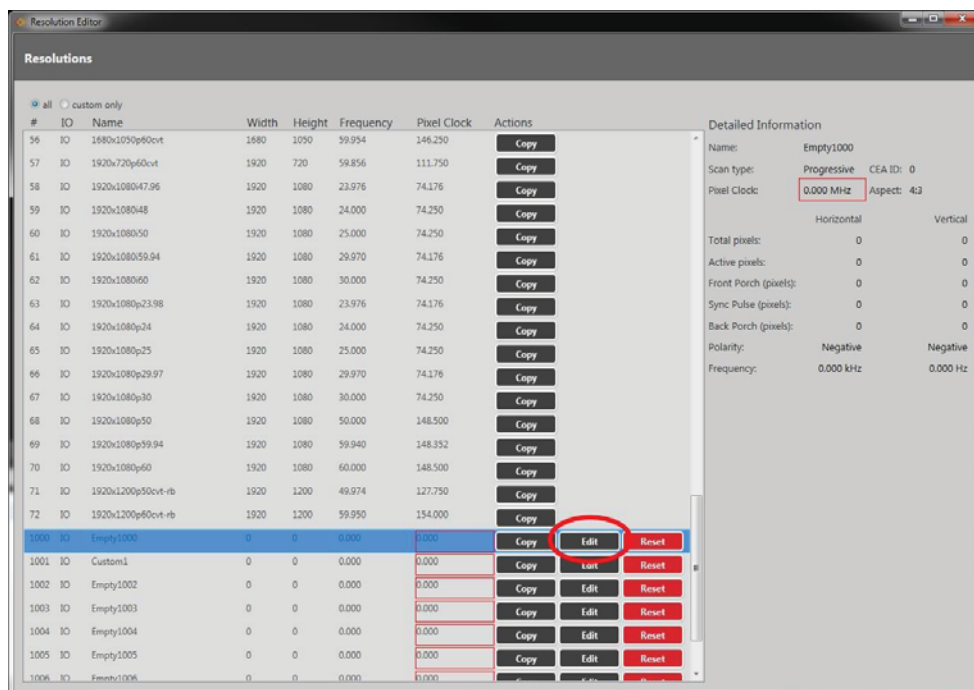

2. In the new window, you can edit various properties of the Custom Resolution. In the right column of the right-hand section, you can type a number into the **Active pixels** field under the **Vertical** heading.

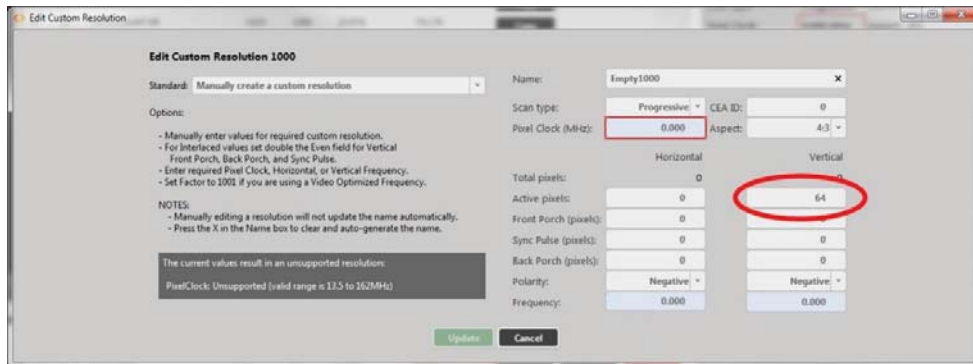

- When you have modified the **Active pixels** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

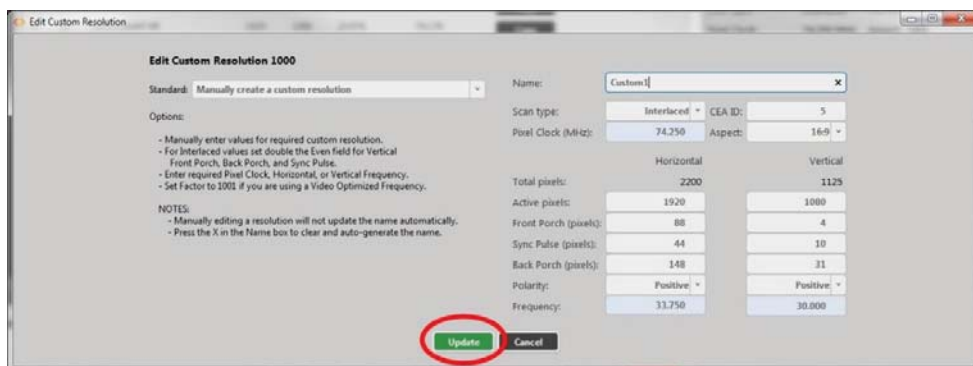

Default

0

Notes

The valid range of values is 64 to 1200.

For a valid Custom Resolution, you must configure this property to a value within the valid range. In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Active pixels**. However, the **Vertical Frequency** read-only field varies based on **Vertical Active pixels** changes.

Editing Vertical Front Porch Property from CORIOdiscover Resolution Editor


Learn how to set the **Vertical Front Porch** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Vertical Front Porch** is the gap between the end of the Active Video and the start of the **Vertical Sync Pulse**, in pixels.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

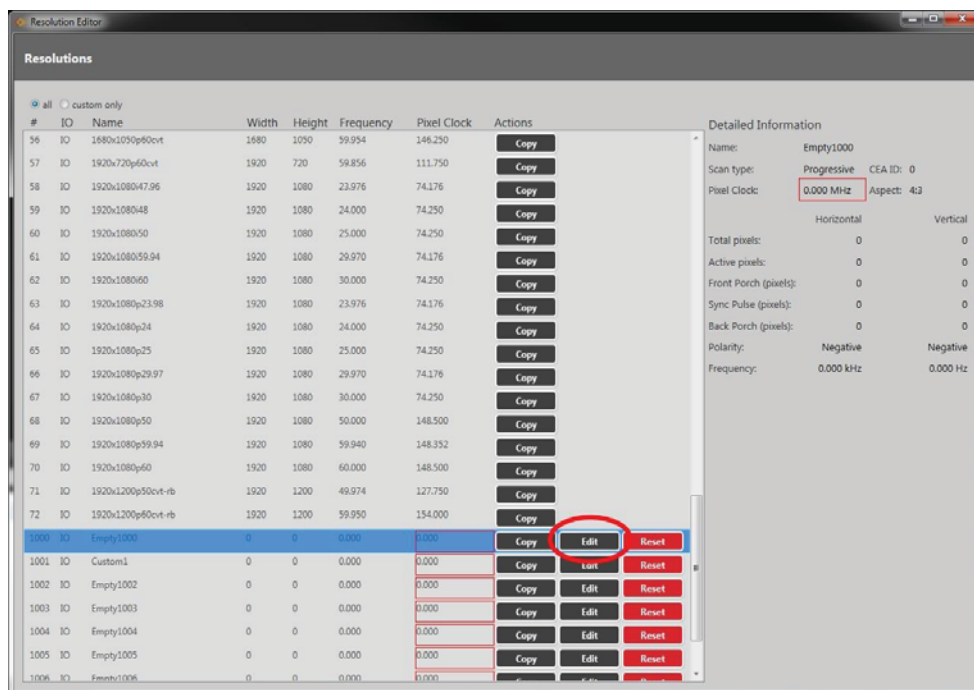

2. In the new window, you can edit various properties of the Custom Resolution. In the right column of the right-hand section, you can type a number into the **Front Porch (pixels)** field under the **Vertical** heading.

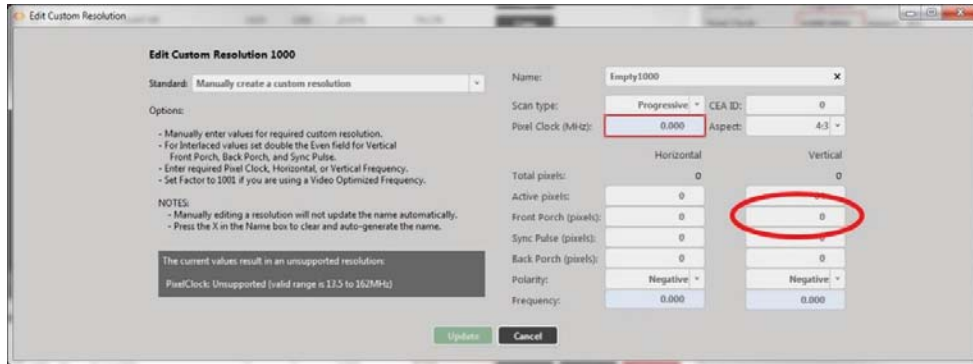

- When you have modified the **Front Porch** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

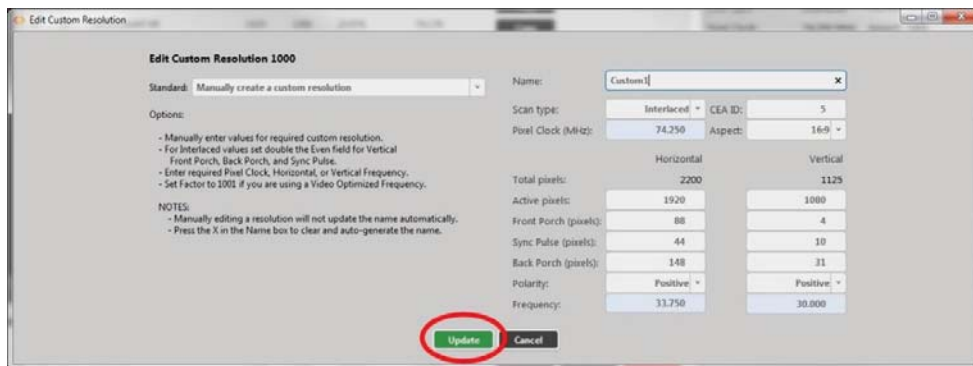

Default

0

Notes

The valid range of values is 1 to 2000.

For a valid Custom Resolution, you must configure this property to a value within the valid range. To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

Interlaced Custom Resolutions require that the **Vertical Front Porch** is twice the even field. For example, a Vertical Front Porch of 6 gives:

Odd field:3.5

Even field:3

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Front Porch**. However, the **Vertical Frequency** read-only field varies based on **Vertical Front Porch** changes.

Editing Vertical Sync Pulse Property from CORIOdiscover Resolution Editor


Learn how to set the **Vertical Sync Pulse** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Vertical Sync Pulse** identifies the start of each frame of video in the Custom Resolution. Note that for **Interlaced** Custom Resolutions both odd and even frames will have a **Vertical Sync Pulse**.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

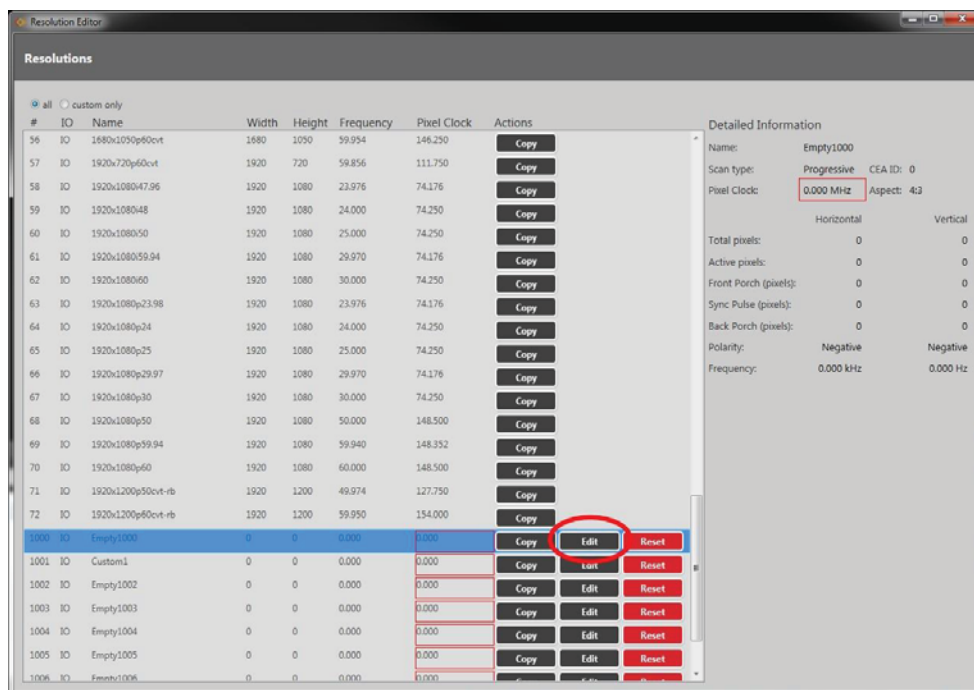

2. In the new window, you can edit various properties of the Custom Resolution. In the right column of the right-hand section, you can type a number into the **Sync Pulse (pixels)** field under the **Vertical** heading.

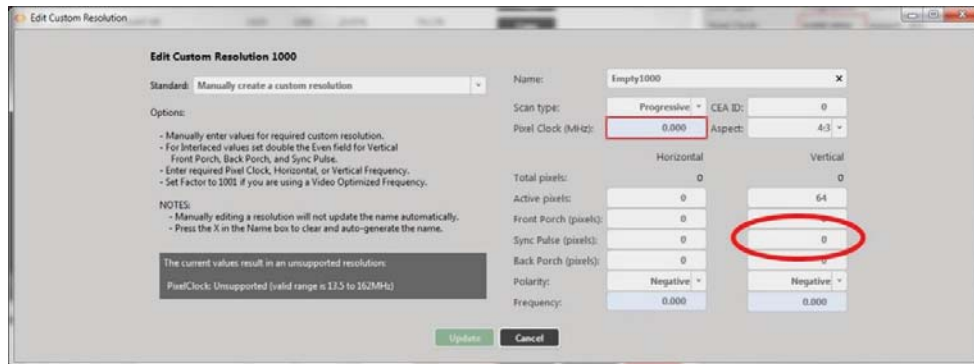

- When you have modified the **Sync Pulse** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

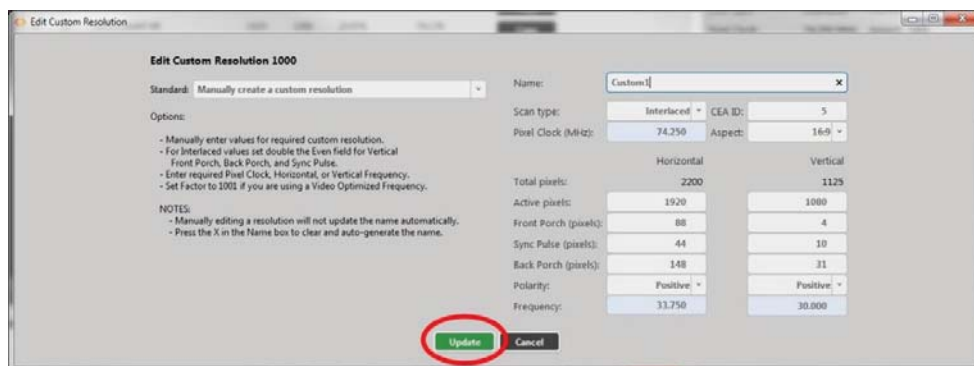

Default

0

Notes

The valid range of values is 1 to 100.

For a valid Custom Resolution, you must configure this property to a value within the valid range. To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

Interlaced Custom Resolutions require that the **Vertical Sync Pulse** is twice the even field. For example, a **Vertical Sync Pulse** of 10 gives:

Odd field: 5
Even field: 5

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Sync Pulse**. However, the **Vertical Frequency** read-only field varies based on **Vertical Sync Pulse** changes.

Editing Vertical Back Porch Property from CORIOdiscover Resolution Editor


Learn how to set the timing interval for the **Vertical Back Porch** for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


The **Vertical Back Porch** is the gap between the end of the **Vertical Sync Pulse** and the beginning of the Active Video, in pixels.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

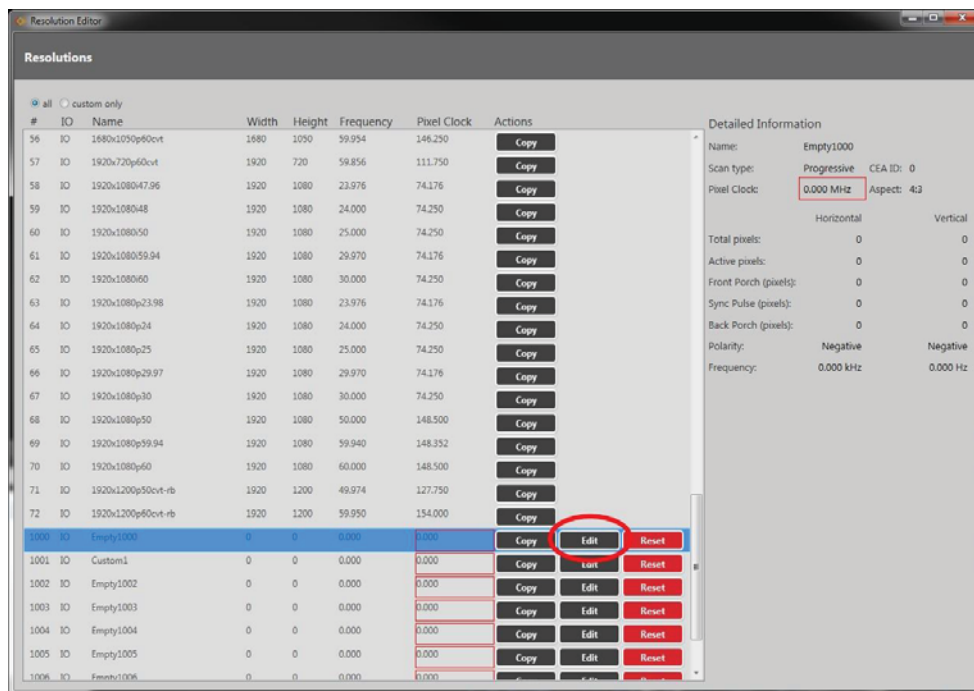

2. In the new window, you can edit various properties of the Custom Resolution. In the right column of the right-hand section, you can type a number into the **Back Porch (pixels)** field under the **Vertical** heading.

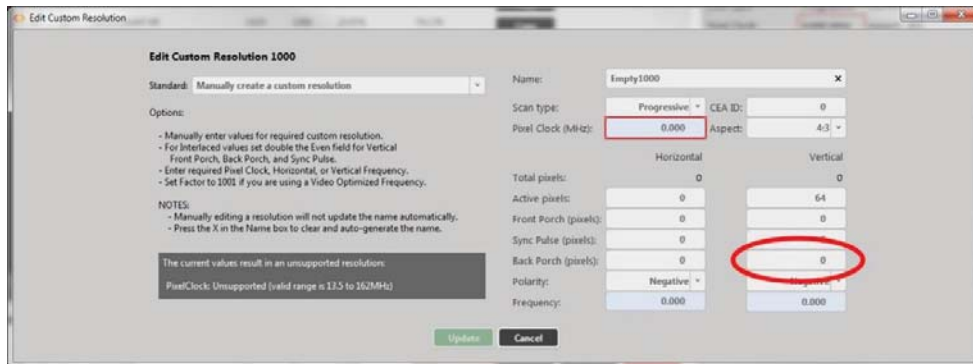

- When you have modified the **Back Porch** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

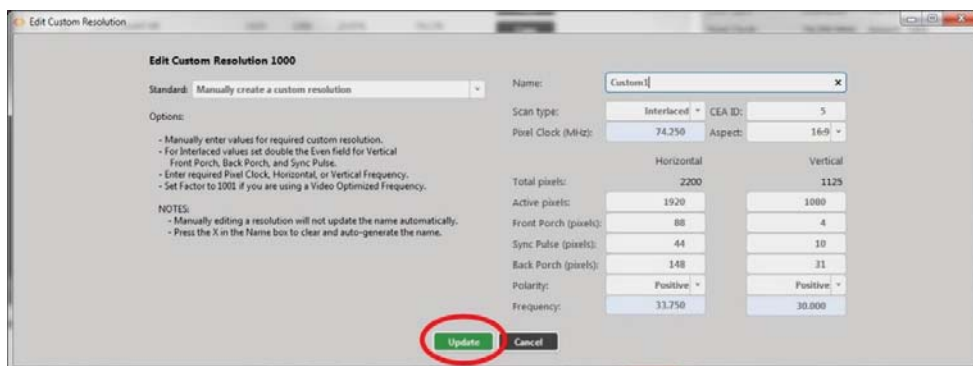

Default

0

Notes

The valid range of values is 1 to 100.

For a valid Custom Resolution, you must configure this property to a value within the valid range. To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

Interlaced Custom Resolutions require that the **Vertical Back Porch** is twice the even field. For example, a **Vertical Back Porch** of 69 gives:

Odd field: 34
Even field: 34.5

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Back Porch**. However, the **Vertical Frequency** read-only field varies based on **Vertical Back Porch** changes.

Editing Vertical Sync Polarity Property from CORIOdiscover Resolution Editor

Learn how to set the **Vertical Synchronization Polarity** for a Custom Resolution via the Resolution Editor in CORIOdiscover.


Description

The **Vertical Sync Pulse** separates the video fields in the Custom Resolution. It can be either


Positive or **Negative**. This value is the **Vertical Sync Polarity**.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

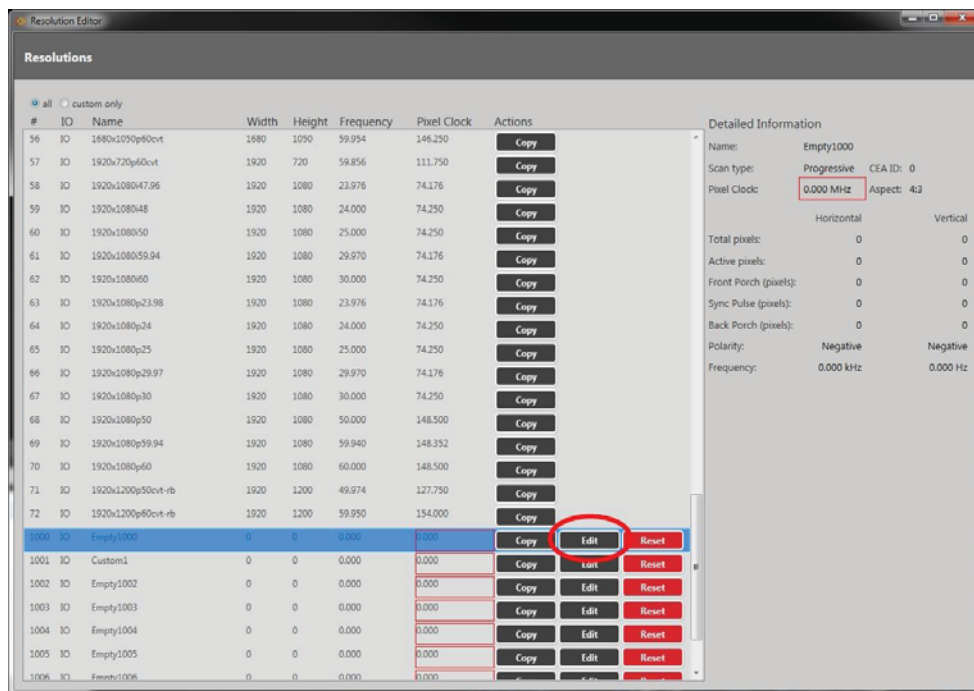

2. In the new window, you can edit various properties of the Custom Resolution. In the right column of the right-hand section, you can choose **Positive** or **Negative** from the drop-down **Polarity** list under the **Vertical** heading.

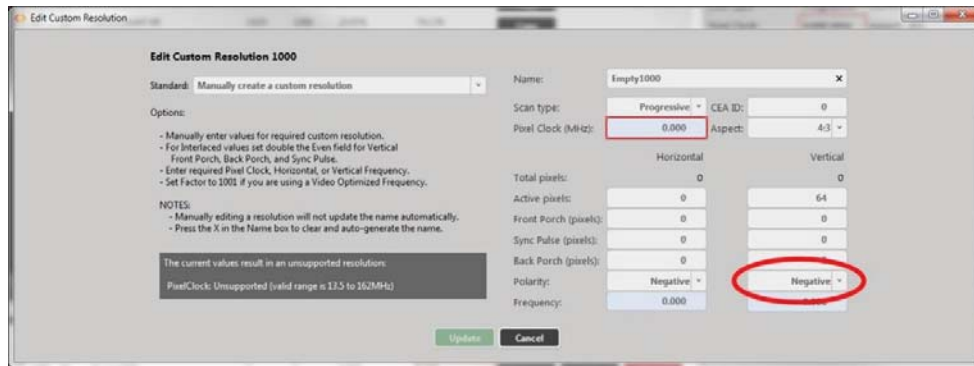

- When you have modified the **Vertical Sync Polarity** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

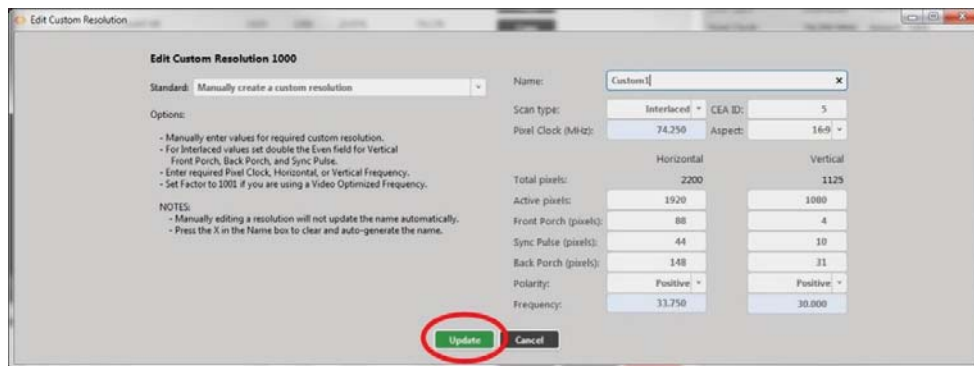

Default

N

Notes

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Sync Polarity**. However, the **Vertical Frequency** read-only field varies based on **Vertical Sync Polarity** changes.

Editing CEA ID Property from CORIOdiscover Resolution Editor


Learn how to set the **CEA ID** (Consumer Electronics Association Digital Television Profile, as defined in CEA-861-D) for a Custom Resolution via the Resolution Editor in CORIOdiscover.

Description


This attribute is to be used only when creating a Custom Resolution as defined in CEA-861-D.

Instructions


1. From the Resolution Editor window, scroll to the Custom Resolutions section and press the **Edit** button next to the Custom Resolution you want to edit.

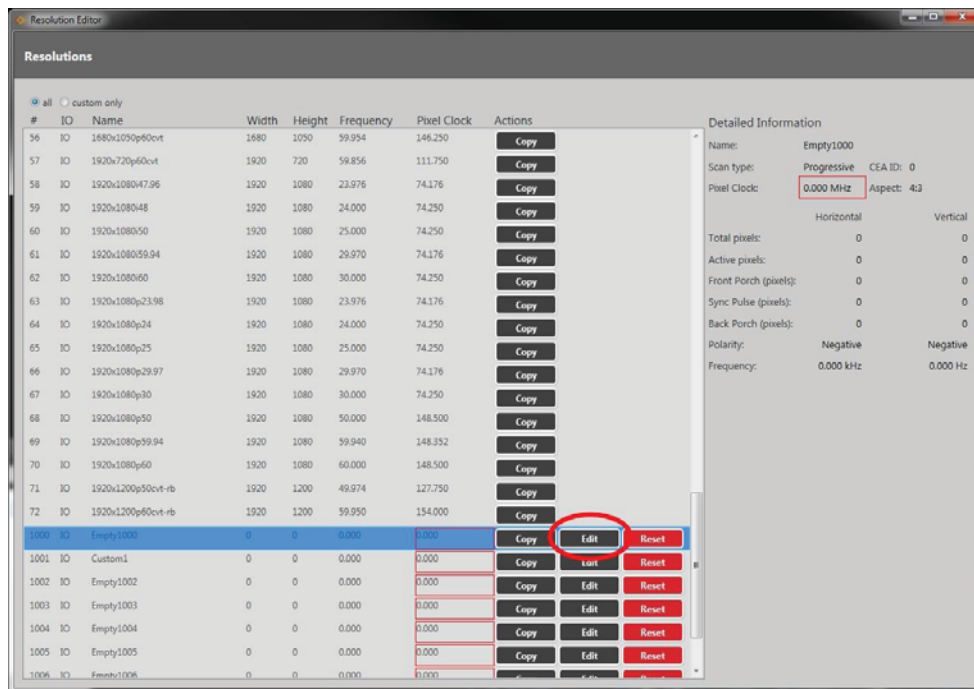

2. In the new window, you can edit various properties of the Custom Resolution. In the top right corner, you can type a value into the **CEA ID** field.

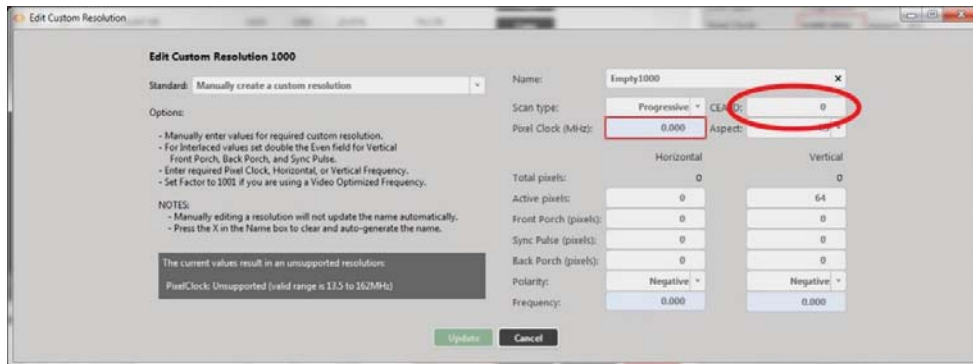

- When you have modified the **CEA ID** as desired, click the **Update** button at the bottom of the window to commit changes and return to the Resolution Editor.

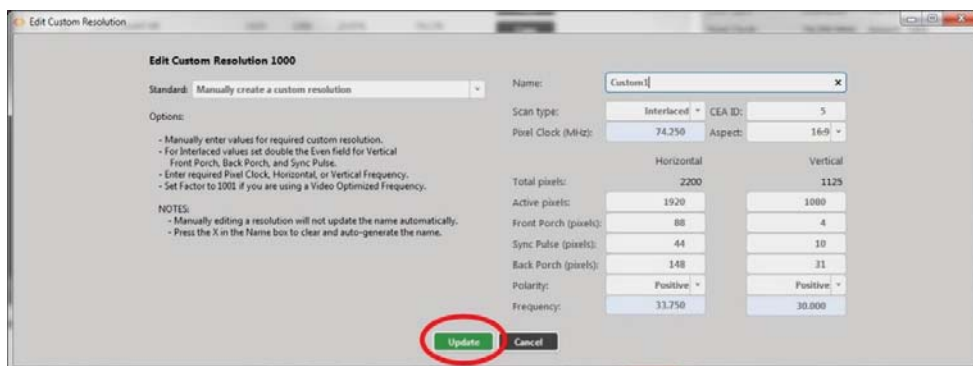

Default

0

Notes

This field value must be 0 or a value specified in the CEA Standard Profile, as defined in CEA-861-D.

The CEA identifier information option does not affect the Custom Resolution. It is there strictly for providing attached equipment with information on the resolution. When defining a Custom Resolution, only set this value if you are configuring it to comply with the CEA Profile for that value.



Caution: If the value of **CEA ID** is not 0 and the Custom Resolution does not conform to the CEA Profile for that value, the result is undefined and behavior may not be as expected

Listing Resolutions from Command Line

Various details specific to a resolution are saved on a per-resolution basis. You can view settings for built-in resolutions; you can view and edit settings for Custom Resolutions.

Command

```
Resources.Resolutions.Resolution1
```

Description

List the attributes of this resolution.

Example

For a default resolution:

```
Resources.Resolutions.Resolution1
Resources.Resolutions.Resolution1.Name = 640x480p60
Resources.Resolutions.Resolution1.Aspect = 4:3
Resources.Resolutions.Resolution1.CanFramelock = No
Resources.Resolutions.Resolution1.PixelClock = 25175000
Resources.Resolutions.Resolution1.ScanType = p
Resources.Resolutions.Resolution1.HActive = 640
Resources.Resolutions.Resolution1.HFrontPorch = 16
Resources.Resolutions.Resolution1.HSyncPulse = 96
Resources.Resolutions.Resolution1.HBackPorch = 48
Resources.Resolutions.Resolution1.VActive = 480
Resources.Resolutions.Resolution1.VFrontPorch = 10
Resources.Resolutions.Resolution1.VSyncPulse = 2
Resources.Resolutions.Resolution1.VBackPorch = 33
Resources.Resolutions.Resolution1.HSyncPolarity = N
Resources.Resolutions.Resolution1.VSyncPolarity = N
Resources.Resolutions.Resolution1.CEAID = 1
Resources.Resolutions.Resolution1.Origin = tvONE
```

```
!Done Resources.Resolutions.Resolution1
```

For a Custom Resolution:

```
Resources.Resolutions.Resolution1000
Resources.Resolutions.Resolution1000.Name = MyResolution
Resources.Resolutions.Resolution1000.Aspect = 4:3
Resources.Resolutions.Resolution1000.PixelClock = 111750000
Resources.Resolutions.Resolution1000.ScanType = p
Resources.Resolutions.Resolution1000.HActive = 1920
Resources.Resolutions.Resolution1000.HFrontPorch = 96
Resources.Resolutions.Resolution1000.HSyncPulse = 192
Resources.Resolutions.Resolution1000.HBackPorch = 288
Resources.Resolutions.Resolution1000.VActive = 720
Resources.Resolutions.Resolution1000.VFrontPorch = 3
Resources.Resolutions.Resolution1000.VSyncPulse = 10
Resources.Resolutions.Resolution1000.VBackPorch = 15
Resources.Resolutions.Resolution1000.HSyncPolarity = N
Resources.Resolutions.Resolution1000.VSyncPolarity = P
Resources.Resolutions.Resolution1000.CEAID = 0
Resources.Resolutions.Resolution1000.Origin = Example
```

```
!Done Resources.Resolutions.Resolution1000
```

Notes

Custom Resolutions can only be modified; they cannot be created or deleted. If you wish to remove saved details, **Reset** the Custom Resolution to default settings. This is equivalent to deleting, but the slot is still available for future use.

If a Custom Resolution is being used on an output and you change an **Attribute** (other than **Name**), the resolution will be reapplied on the output and the connection to the output device will be renegotiated. If you change the **Name Attribute**, the output will revert to the default built-in resolution.

You can configure a Custom Resolution by copying the values from a similar built-in or Custom Resolution and modifying as needed. See “Creating a Custom Resolution From a Built-In Resolution” on page 133.

Once you have configured a Custom Resolution, use `System.SaveAllSettings()` to ensure that your changes are persistent and not lost after powering off.



Caution: It is possible to apply an invalid Custom Resolution to an output.

Editing Resolution Properties from Command Line

Various details specific to a resolution are saved on a per-resolution basis. You can edit settings for Custom Resolutions. Each property is covered separately.

Editing Name Property from Command Line

Learn how to set a name for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.Name
```

Description

Lists the user-readable name for this resolution. Set up the name as something meaningful for you, within the limitations of the permissible characters. (See Note below.)

Example

```
Resources.Resolutions.Resolution1000.Name = NewCustomResolution
Resources.Resolutions.Resolution1000.Name = NewCustomResolution

!Done Resources.Resolutions.Resolution1000.Name =
NewCustomResolution
```

Default

The default **Name** is the string “EmptyNNNN” where ‘NNNN’ is the number of the Custom Resolution. Note that Resolution1000 is “Empty1000”, Resolution1001 is “Empty1001”, Resolution1009 is “Empty1009” and so forth.

```
Resources.Resolutions.Resolution1000.Name
Resources.Resolutions.Resolution1000.Name = Empty1000

!Done Resources.Resolutions.Resolution1000.Name
```

Notes

The **Name** attribute has the following limitations:

- must be no more than 23 characters
- only valid printable ASCII characters may be used
- must have no spaces (underscore is valid)

The system does not check for duplicate names - if more than one Custom Resolution has the same name, when you set a Custom Resolution of that name to an output, unexpected behavior may result.

If you change the **Name** attribute of a Custom Resolution that you have already set to an output, the output will revert to the default built-in resolution for that output. To continue using the same Custom Resolution with that output, re-apply it to the output.

It is possible to set a Custom Resolution that has not been configured to an output. This is intentional.

If you wish to use a Custom Resolution with CORIOgrapher the **Name** must conform to the following format:

[width]x[height][scantype][rate][optional]

where:

[width]	width in pixels	num	
[height]	height in pixels		num
x	the letter x	x	
[scantype]	either ifor interlaced or pfor progressive.	i or p	
[rate]	the frame rate (this must be at least one character and may contain a period if relevant)	num	
[optional]	any optional text		null or string

|

For example, the following are valid **Name** formats for use with CORIOgrapher:

- 1280x720i40055D
- 1280x720p6test
- 1280x720p59.94
- 1280x720i50
- 280x72i30



Caution: If you use CORIOgrapher with a **Name** that does not conform to the format described above, you may experience unexpected consequences.

Editing Aspect Property from Command Line

Learn how to set the Aspect ratio for a Custom Resolution via the command line. This is used on the CORIOmatrix and CORIOmatrix mini to assist in signal conversion when an input and output have different aspect ratio.

Command

```
Resources.Resolutions.Resolution1000.Aspect
```

Description

Lists the **Aspect** ratio for this Custom Resolution in the form width:height (in units of equal size).

Example

```
Resources.Resolutions.Resolution1000.Aspect = 16:6
```

```
Resources.Resolutions.Resolution1000.Aspect = 16:6
```

```
!Done Resources.Resolutions.Resolution1000.Aspect = 16:6
```

Default

4:3

Notes

Valid available **Aspect** ratios are:

- 16:9
- 4:3
- 5:4
- 16:10
- 5:3
- 1:1
- 16:6

The system cannot accept any other aspect ratios.

Aspect ratios are used on the CORIOmatrix and CORIOmatrix mini only, not on CORIOmaster or CORIOmaster mini.

Listing Framelock Properties from Command Line

Learn how to view the **Can Framelock** attribute for a Custom Resolution via the command line. **Can Framelock** is a read-only attribute indicating whether this Custom Resolution is suitable for use with the Framelock feature.

Command

```
Resources.Resolutions.Resolution1000.CanFramelock
```

Description

This attribute indicates whether a Custom Resolution may be used with the Framelock mechanism.

Yes The Custom Resolution is compatible with the Framelock mechanism and may be used as either an Input or Output to Framelock.

No The Custom Resolution is not compatible with the Framelock feature.

Example

```
Resources.Resolutions.Resolution1000.CanFramelock
Resources.Resolutions.Resolution1000.CanFramelock = No

!Done Resources.Resolutions.Resolution1000.CanFramelock
```

Notes

An **Input** to Framelock is the source that is to be used as the Framelock reference. An **Output** to Framelock is to be locked to the reference input. Currently this is always “No”.

This property is not available in the CORIOdiscover Resolution Editor.

Editing Pixel Clock Property from Command Line

Learn how to set the **Pixel Clock** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.PixelClock
```

Description

The **Pixel Clock** value is the speed of the **Pixel Clock** in pixels per second.

The minimum and maximum values are dependent on the following:

$p = h * v * f$ where:

p	Pixels per second
h	Horizontal total pixels
v	Vertical total pixels
f	Frame rate in frames per second

For example, for 1920x1080p60, h=2200, v=1125, and f=60. This gives $p = 2200 * 1125 * 60 = 148.5\text{MHz}$

Example

```
Resources.Resolutions.Resolution1000.PixelClock = 148500000
Resources.Resolutions.Resolution1000.PixelClock = 148500000

!Done Resources.Resolutions.Resolution1000.PixelClock = 148500000
```

Default

0

Notes

The valid range for the **Pixel Clock** is 13.5MHz to 162MHz. As the value in pixels is a function of resolution (including frame rate), the minimum and maximum value in **Pixel Clock** varies with the resolution.

For example:

The minimum **Pixel Clock** at 640x480p60 is $800 * 525 * 59.94 = 25.175\text{MHz}$ (Note that p60 is nomenclature - the rate is actually 59.94MHz)

The maximum **Pixel Clock** at 1600x1200p60 is $2160 * 1250 * 60 = 162\text{MHz}$

To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

In the CORIOdiscover Resolution Editor, the **Horizontal Frequency** and **Vertical Frequency** read-only fields are derived from the **Pixel Clock** value.

Editing Scan Type Property from Command Line

Learn how to set the Scan Type for a Custom Resolution via the command line as either Interlaced or Progressive.

Command

```
Resources.Resolutions.Resolution1000.ScanType
```

Description

The **Scan Type** state of this Custom Resolution has two options:

- p Progressive scan mode
- i Interlaced scan mode

Example

```
Resources.Resolutions.Resolution1000.ScanType = i  
Resources.Resolutions.Resolution1000.ScanType = i
```

```
!Done Resources.Resolutions.Resolution1000.ScanType = i
```

Default

Progressive (p)

Notes

Only Progressive (p) or interlaced (i) are valid options.

Editing Horizontal Active Pixels Property from Command Line

Learn how to set the **Horizontal Active pixels** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.HActive
```

Description

The **Horizontal Active** video is the width of the displayed image in pixels. For example, for a Custom Resolution of 1024x768 this value would be 1024.

Example

```
Resources.Resolutions.Resolution1000.HActive = 1024  
Resources.Resolutions.Resolution1000.HActive = 1024  
  
!Done Resources.Resolutions.Resolution1000.HActive = 1024
```

Default

0

Notes

The valid range of values is 64 to 1920.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Active pixels**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Active pixels** changes.

Editing Horizontal Front Porch Property from Command Line

Learn how to set the **Horizontal Front Porch** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.HFrontPorch
```

Description

The **Horizontal Front Porch** is the gap between the end of the Active Video and the start of the **Horizontal Sync Pulse**, in pixels.

Example

```
Resources.Resolutions.Resolution1000.HFrontPorch = 96  
Resources.Resolutions.Resolution1000.HFrontPorch = 96  
  
!Done Resources.Resolutions.Resolution1000.HFrontPorch = 96
```

Default

0

Notes

The valid range of values is 1 to 2000.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Front Porch**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Front Porch** changes.

Editing Horizontal Sync Pulse Property from Command Line

Learn how to set the **Horizontal Sync Pulse** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.HSyncPulse
```

Description

The **Horizontal Sync Pulse** identifies the start of each row of pixels (line of video) in the Custom Resolution.

Example

```
Resources.Resolutions.Resolution1000.HSyncPulse = 8  
Resources.Resolutions.Resolution1000.HSyncPulse = 8  
  
!Done Resources.Resolutions.Resolution1000.HSyncPulse = 8
```

Default

0

Notes

The valid range of values is 8 to 500.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Sync Pulse**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Sync Pulse** changes.

Editing Horizontal Back Porch Property from Command Line

Learn how to set the timing interval for the **Horizontal Back Porch** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.HBackPorch
```

Description

The **Horizontal Back Porch** is the gap between end of the **Horizontal Sync Pulse** and the beginning of the **Active Video** in pixels.

Example

```
Resources.Resolutions.Resolution1000.HBackPorch = 288  
Resources.Resolutions.Resolution1000.HBackPorch = 288  
  
!Done Resources.Resolutions.Resolution1000.HBackPorch = 288
```

Default

0

Notes

The valid range of values is 1 to 2000.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Back Porch**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Back Porch** changes.

Editing Horizontal Sync Polarity Property from Command Line

Learn how to set the **Horizontal Synchronization Polarity** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.HSyncPolarity
```

Description

The **Horizontal Sync Pulse** is a single short pulse which identifies the start of each row of pixels (line of video) in the Custom Resolution. It can be either **Positive** or **Negative**. This value is the **Horizontal Sync Polarity**.

Example

```
Resources.Resolutions.Resolution1000.HSyncPolarity = N
Resources.Resolutions.Resolution1000.HSyncPolarity = N

!Done Resources.Resolutions.Resolution1000.HSyncPolarity = N
```

Default

N

Notes

Only the case-insensitive values N (or n) for **Negative** and P (or p) for **Positive** polarity will be accepted.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Horizontal Sync Polarity**. However, the **Horizontal Frequency** and **Vertical Frequency** read-only fields vary based on **Horizontal Sync Polarity** changes.

Editing Vertical Active Pixels Property from Command Line

Learn how to set the **Vertical Active pixels** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.VActive
```

Description

The **Vertical Active** video is the height of the displayed image in pixels (lines). For example, for a Custom Resolution of 1024x768 this value would be 768.

Example

```
Resources.Resolutions.Resolution1000.VActive = 768
```

```
Resources.Resolutions.Resolution1000.VActive = 768
```

```
!Done Resources.Resolutions.Resolution1000.VActive = 768
```

Default

0

Notes

The valid range of values is 64 to 1200.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Active pixels**. However, the **Vertical Frequency** read-only field varies based on **Vertical Active pixels** changes.

Editing Vertical Front Porch Property from Command Line

Learn how to set the **Vertical Front Porch** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.VFrontPorch
```

Description

The **Vertical Front Porch** is the gap between the end of the Active Video and the start of the **Vertical Sync Pulse**, in pixels.

Example

```
Resources.Resolutions.Resolution1000.VFrontPorch = 3
Resources.Resolutions.Resolution1000.VFrontPorch = 3

!Done Resources.Resolutions.Resolution1000.VFrontPorch = 3
```

Default

0

Notes

The valid range of values is 1 to 100.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

Interlaced Custom Resolutions require that the **Vertical Front Porch** is twice the even field.

For example, a **Vertical Front Porch** of 6 gives:

Odd field:	3.5
Even field:	3

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Front Porch**. However, the **Vertical Frequency** read-only field varies based on **Vertical Front Porch** changes.

Editing Vertical Sync Pulse Property from Command Line

Learn how to set the **Vertical Sync Pulse** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.VSyncPulse
```

Description

The **Vertical Sync Pulse** identifies the start of each frame of video in the Custom Resolution.

Note that for **Interlaced** Custom Resolutions both odd and even frames will have a **Vertical Sync Pulse**.

Example

```
Resources.Resolutions.Resolution1000.VSyncPulse = 2
```

```
Resources.Resolutions.Resolution1000.VSyncPulse = 2
```

```
!Done Resources.Resolutions.Resolution1000.VSyncPulse = 2
```

Default

0

Notes

The valid range of values is 1 to 100.

For a valid Custom Resolution, you must configure this property to a value within the valid range. To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

Interlaced Custom Resolutions require that the **Vertical Sync Pulse** is twice the even field.

For example, a Vertical Sync Pulse of 10 gives:

Odd field:	5
Even field:	5

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Sync Pulse**. However, the **Vertical Frequency** read-only field varies based on **Vertical Sync Pulse** changes.

Editing Vertical Back Porch Property from Command Line

Learn how to set the timing interval for the **Vertical Back Porch** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.VBackPorch
```

Description

The **Vertical Back Porch** is the gap between end of the **Vertical Sync Pulse** and the beginning of the Active Video in pixels.

Example

```
Resources.Resolutions.Resolution1000.VBackPorch = 15
Resources.Resolutions.Resolution1000.VBackPorch = 15

!Done Resources.Resolutions.Resolution1000.VBackPorch = 15
```

Default

0

Notes

The valid range of values is 1 to 100.

For a valid Custom Resolution, you must configure this property to a value within the valid range.

To calculate the **Vertical Front Porch**, **Vertical Sync Pulse** and **Vertical Back Porch** for an interlaced resolution, double the value of the even field. Interlacing standards are designed this way in order to present the values in a similar format to Progressive values.

Interlaced Custom Resolutions require that the **Vertical Back Porch** is twice the even field.

For example, a **Vertical Back Porch** of 69 gives:

Odd field:	34
Even field:	34.5

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Back Porch**. However, the Vertical Frequency read-only field varies based on **Vertical Back Porch** changes.

Editing Vertical Sync Polarity Property from Command Line

Learn how to set the **Vertical Synchronization Polarity** for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.VSyncPolarity
```

Description

The **Vertical Sync Pulse** separates the video fields in the Custom Resolution. It can be either **Positive** or **Negative**. This value is the **Vertical Sync Polarity**.

Example

```
Resources.Resolutions.Resolution1000.VSyncPolarity = N  
Resources.Resolutions.Resolution1000.VSyncPolarity = N
```

```
!Done Resources.Resolutions.Resolution1000.VSyncPolarity = N
```

Default

N

Notes

Only the case-insensitive values N (or n) for **Negative** and P (or p) for **Positive** polarity will be accepted.

In the CORIOdiscover Resolution Editor, the **Pixel Clock** is not affected by any changes to the **Vertical Sync Polarity**. However, the **Vertical Frequency** read-only field varies based on **Vertical Sync Polarity** changes.

Editing CEAIID Property from Command Line

Learn how to set the **CEA ID** (Consumer Electronics Association Digital Television Profile, as defined in CEA-861-D) for a Custom Resolution via the command line.

Command

```
Resources.Resolutions.Resolution1000.CEAID
```

Description

This attribute is to be used only when creating a Custom Resolution as defined in CEA-861-D.

Example

```
Resources.Resolutions.Resolution1000.CEAID = 0  
Resources.Resolutions.Resolution1000.CEAID = 0  
  
!Done Resources.Resolutions.Resolution1000.CEAID = 0
```

Default

0

Notes

This field value must be 0 or a value specified in the CEA Standard Profile, as defined in CEA-861-D.

The CEA identifier information option does not affect the Custom Resolution. It is there strictly for providing attached equipment with information on the resolution. When defining a Custom Resolution, only set this value if you are configuring it to comply with the CEA Profile for that value.



Caution: If the value of **CEA ID** is not 0 and the Custom Resolution does not conform to the CEA Profile for that value, the result is undefined and behavior may not be as expected.

Editing Origin Property from Command Line

Learn how to set the **Origin** for a Custom Resolution via the command line, to provide a string identifying the origin of the Custom Resolution.

Command

```
Resources.Resolutions.Resolution1000.Origin
```

Description

Set the user-readable **Origin** property to something meaningful for you, within the limitations of the permissible characters. For example, if you create a Custom Resolution from the CVT list, it may be useful to have "CVT" in this field; for a CEA Standard Profile it may be useful to have "CEA".

Example

```
Resources.Resolutions.Resolution1000.Origin = Example
Resources.Resolutions.Resolution1000.Origin = Example

!Done Resources.Resolutions.Resolution1000.Origin = Example
```

Default

The default Origin is an empty, zero-length string:

```
Resources.Resolutions.Resolution1000.Origin
Resources.Resolutions.Resolution1000.Origin =

!Done Resources.Resolutions.Resolution1000.Origin
```

Notes

The Origin attribute has the following limitations:

- must be no more than 19 characters
- only valid printable ASCII characters may be used
- must have no spaces (underscore is valid)

This property is not available in the CORIOdiscover Resolution Editor.

Command Line Resolution Options

List Usable Resolutions by Name

Get a list of the usable resolutions for a given slot.

Command

```
Slots.Slot1.Module_Resolutions()
```

(In this case, Slot 1 is used as an example - any valid slot number can be used in that context.)

Description

List all the usable resolutions.

Example

```
Slots.Slot16.Module_Resolutions()  
640x480p60;4:3;  
640x480p72;4:3;  
  
...  
  
1920x1200p50cvt-rb;16:10;  
1920x1200p60cvt-rb;16:10;  
MyResolution;16:6  
!Done Slots.Slot16.Module_Resolutions()
```

Default

A list of all the built-in resolutions.

Notes

These resolutions are for use with input or output modules.

List Resolutions by Index

Get a list of the output resolutions by index (resolution name)

Command

```
Slots.Slot16.Resolutions
```

(In this case, Slot 16 is used as an example - any valid slot number can be used in that context.)

Description

List all the resolutions.

Example

```
Slots.Slot16.Resolutions
Slots.Slot16.Resolutions.Resolution1 = <...>
Slots.Slot16.Resolutions.Resolution2 = <...>
...
Slots.Slot16.Resolutions.Resolution71 = <...>
Slots.Slot16.Resolutions.Resolution72 = <...>
Slots.Slot16.Resolutions.Resolution1000 = <...>
Slots.Slot16.Resolutions.Resolution1001 = <...>
...
Slots.Slot16.Resolutions.Resolution1009 = <...>

!Done Slots.Slot16.Resolutions
```

Default

A list of all the resolutions.

Notes

For use with output modules only.

Read Output Resolution

Read which resolution is currently set for an output.

Command

```
Slots.Slot16.Out1.Resolution
```

(In this case, Slot 16 and Out 1 are used as an example - any valid slot number and output number can be used in that context.)

Description

Reads the resolution currently set for an output.

Example

```
Slots.Slot16.out1.Resolution
```

```
Slots.Slot16.out1.Resolution = NewCustomResolution
```

```
!Done Slots.Slot16.out1.Resolution
```

Default

1280x720p60

Notes

If the properties of the Custom Resolution are changed, then the resolution will be reapplied on the output and the connection to the output device will be renegotiated.

If the **Name** of a Custom Resolution is changed, then the output will return to its default and you will need set the output to the new Custom Resolution **Name**.

If more than one Custom Resolution has the same name, when you set a Custom Resolution of that name to an output, unexpected behavior may result.

Custom Resolutions cannot be applied to an SDI output.

Specific Resolutions by Index

Get information on a specific output resolution by index (resolution name).

Command

```
Slots.Slot16.Resolutions.Resolution1000
```

(In this case, Slot 16 and Resolution 1000 are used as an example - any valid slot number and resolution number can be used in that context.)

Description

Lists the following attributes of the specified Resolution:

- **Name**
- **Aspect**
- **CanFramLock** ("Can Framelock")

Example

For a built-in resolution:

```
Slots.Slot16.Resolutions.Resolution1
Slots.Slot16.Resolutions.Resolution1.Name = 640x480p60
Slots.Slot16.Resolutions.Resolution1.Aspect = 4:3
Slots.Slot16.Resolutions.Resolution1.CanFramelock = No
```

```
!Done Slots.Slot16.Resolutions.Resolution1
```

For a Custom Resolution:

```
Slots.Slot16.Resolutions.Resolution1000
Slots.Slot16.Resolutions.Resolution1000.Name = MyResolution
Slots.Slot16.Resolutions.Resolution1000.Aspect = 4:3
Slots.Slot16.Resolutions.Resolution1000.CanFramelock = No
```

```
!Done Slots.Slot16.Resolutions.Resolution1000
```

Default

The configuration of the specified resolution.

Notes

For use with output modules only.

Set Output Resolution

Set which resolution an output will use.

Command

```
Slots.Slot16.Out1.Resolution = 1280x720p60
```

(In this case, Slot 16, Out 1, and 1280x720p60 are used as an example - any valid slot number, output number, and resolution can be used in that context.)

Description

Sets the resolution to be used for an output.

Example

```
Slots.Slot16.out1.Resolution = Empty1
```

```
Slots.Slot16.out1.Resolution = Empty1
```

```
!Done Slots.Slot16.out1.Resolution = Empty1
```

Default

1280x720p60

Notes

If the properties of the Custom Resolution are changed, then the resolution will be reapplied on the output and the connection to the output device will be renegotiated.

If the Name of a Custom Resolution is changed, then the output will return to its default and you will need set the output to the new Custom Resolution Name.

If more than one Custom Resolution has the same name, when you set a Custom Resolution of that name to an output, unexpected behavior may result.

Custom Resolutions cannot be applied to an SDI output.

Read Input Resolution

Read the reported resolution for an input.

Command

```
Slots.Slot1.In1.Set_Resolution or  
Slots.Slot1.In1.Measured_Resolution  
(In this case, Slot 1 and In 1 are used as an example - any valid slot number and input  
number can be used in that context.)
```

Description

Reads the currently detected resolution on an input.

Example

```
Slots.Slot1.In1.Set_Resolution  
Slots.Slot1.In1.Set_Resolution = NewCustomResolution  
!Done Slots.Slot1.In1.Set_Resolution  
or  
Slots.Slot1.In1.Measured_Resolution  
Slots.Slot1.In1.Measured_Resolution = NewCustomResolution  
!Done Slots.Slot1.In1.Measured_Resolution
```

Default

n/a - the behavior is to show the name of the detected resolution or nothing if no signal is detected.

Notes

Set_Resolution and Measured_Resolution are duplicate commands and produce identical results.

If a Custom Resolution and a built-in resolution are both within the selection tolerance, the Custom Resolution will be selected.

Custom Resolutions cannot be detected on an SDI input.

Command Line - Resolutions

Resolutions are used in the **Slot** menu for both inputs and outputs. However, it is only possible to set a Resolution on an output. Input Resolutions are read-only - the values are set by the incoming video signal.

Note that when detecting input resolutions, if both a Custom Resolution and a built-in Resolution are within the selection tolerance, then the Custom Resolution will be selected.

Use Custom Resolution on an Output

The Resolution used by an output is set using the `Resolution` attribute - see “Set Output Resolution” on page 204.

The steps involved in using a Custom Resolution on an output are:

1. Set up a Custom Resolution with appropriate details for the output you wish to use.
2. Connect a display that supports the signal as described in your Custom Resolution.
3. Set the Custom Resolution for the desired slot and output.

Example

```
Slots.Slot16.out1.Resolution = MyResolution
```

```
Slots.Slot16.out1.Resolution = MyResolution
```

```
!Done Slots.Slot16.out1.Resolution = MyResolution
```

Use Custom Resolution on an Input

The Resolution of an input is detected automatically. If a Custom Resolution and a built-in resolution are both within the selection tolerance, the Custom Resolution will be selected.

The steps involved in using a Custom Resolution on an input are:

Set up a Custom Resolution with appropriate details for the source you wish to use. Connect the source that has the matching signal as described in your Custom Resolution. Check that the Custom Resolution is detected correctly with either the `Measured_Resolution` or `Set_Resolution` as described in “Read Input Resolution” on page 205.

Example

```
Slots.Slot1.In1.Measured_Resolution  
Slots.Slot1.In1.Measured_Resolution = MyResolution
```

```
!Done Slots.Slot1.In1.Measured_Resolution
```


Troubleshooting

Troubleshooting - CORIOdiscover Doesn't See Device


The CORIOdiscover program finds any CORIOmatrix units located on the same subnet (even if the network is just your PC and the CORIOmatrix connected directly by an Ethernet cable).

If you are trying to connect to your CORIOmatrix using the CORIOdiscover application but your CORIOmatrix does not appear in the list of discovered devices, follow these steps to troubleshoot the issue.

1. If possible, verify that the CORIOmatrix you are trying to connect to is running the latest firmware. If the unit is running older firmware, it will not be compatible with the CORIOdiscover application. Install the most recent available firmware on the CORIOmatrix and then connect it to the network again.
2. Ensure that both the computer and the CORIOmatrix are on the same subnet, and that your router is not blocking any UDP ports as these are needed for communications with the device.
3. Check your Windows Firewall settings and make sure that CORIOdiscover is not blocked.

To do this;

- a. Go to **Control Panel > Windows Firewall**.
- b. Choose **Allow a program or feature through Windows Firewall**.

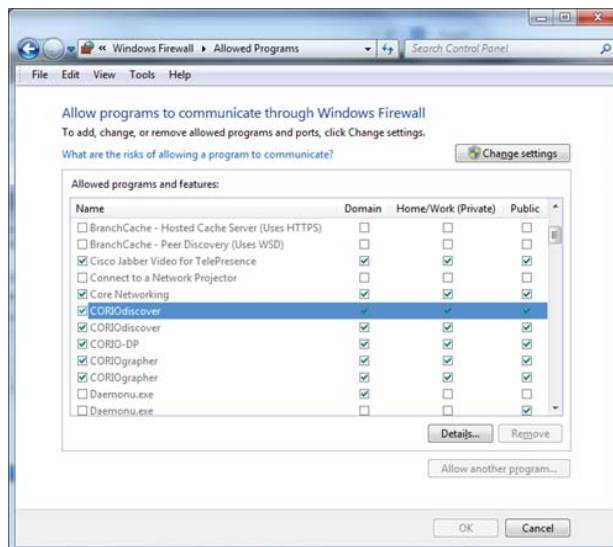

- c. Find CORIOdiscover in the list and add a checkmark to allow it
- d. Click **OK** to save changes.

4. If you are connecting directly to the CORIOmatrix with just an Ethernet cable, make sure your computer's Ethernet port is autosensing (has Auto MDI-X capability) and does not require an Ethernet crossover cable.

Troubleshooting - Doesn't Reconnect After Restore

Normally when you restore your settings from the SD card, the unit will load the settings and restart with the new settings in place. (See “Restore from SD Card” on page 48 for details.)

In some cases, when you are restoring settings from a backup on the SD card, have the unit configured to use a DHCP address and you are using Chrome, Firefox, or Safari, the login page does not appear and instead the browser tells you it cannot access that IP address.

If this happens, the process goes as expected up to the point that the unit restarts:



After sitting at this progress bar for a while, your browser reports that it couldn't connect to the IP address. You may note that the IP address is not the DHCP IP address the unit had been using previously; it is a self-assigned IP address such as 192.168.0.10.

If this occurs, you need to type the DHCP IP address of the CORIOmatrix into the address bar of your browser. Once you point your browser at the correct IP address, you will be able to connect as expected to the unit, which now has restored settings.

Troubleshooting - Slot Name Goes Blank

Slot aliases must be unique strings.

If you change a slot alias to be the same as another slot (for example, rename s1i2 to be "s1i1"), after saving the name, the original slot with that name will now have a blank name field. (In the aforementioned example, the original s1i1 would now have no name.) To resolve the issue, you would then need to rename the blank-named slot to a unique alias.

Troubleshooting - Website Looks Wrong


If you log in to the CORIOmatrix Web UI and find that it doesn't display correctly, there are a number of steps to take to resolve the issue. Try these in order - if the first step does not resolve the issue, go to the next step, and so forth.

1. Make sure you are using a supported browser. See “Supported Browsers” on page 25 for a complete list. Unsupported browsers will perform in unpredictable ways; some may not let you log in at all; some may display the login page but not progress to the Routing page; some may show the routing page but other elements of the interface may not perform correctly.
2. If you are using a supported browser but the Routing page still does not display correctly, reload the page by using the F5 key or the Reload button in the address bar.
3. If a simple refresh does not resolve the issue, force refresh the page by using the Ctrl-F5 combination or hold down the Shift key while pressing the Reload button (Control key plus Reload button in Internet Explorer) in the address bar.
4. If none of the above steps resolves the issue, try using a different supported browser to see if the issue persists.

The above steps resolve the vast majority of login issues. If none of these steps help, please contact tvONE Technical Support for assistance.

Troubleshooting - Windows Security Alert on Login

If you try to log in to the CORIOmatrix Web UI and a Windows Security alert pops up, you may have the incorrect password stored in your web browser.

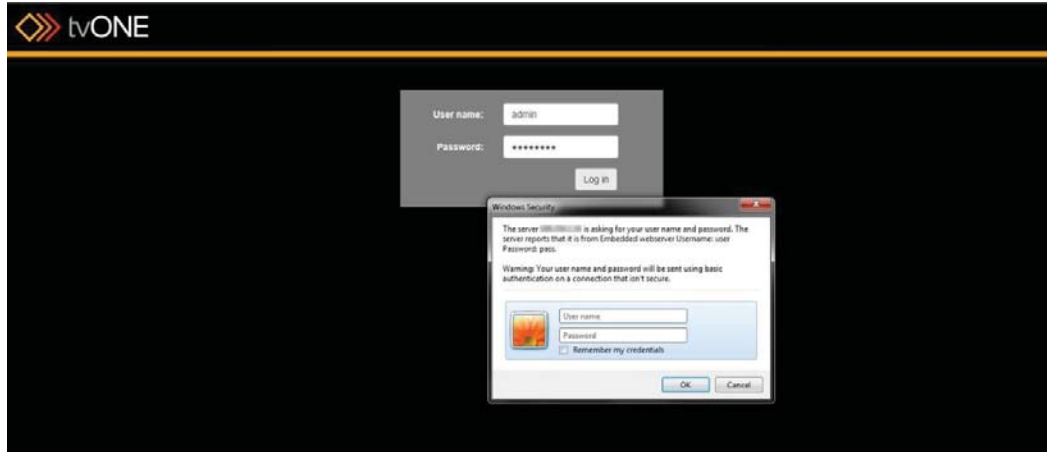

If you experience this issue, log in with the correct username and password, and if you are allowing the browser to save login information (not recommended unless you are on a secure computer), save the retyped, correct password.


Troubleshooting - Output Displays Go Blank After Changing Resolution

If you are changing the resolution of an output, you may find that approximately three seconds after committing the new resolution, all outputs go black for a short time.

This is normal behavior as they are attempting to renegotiate Framelock.

Troubleshooting - No monitor card output

If your CORIOmatrix has a monitor card installed, you have a Monitor button in the top right corner of the Routing page, next to the Routing button:

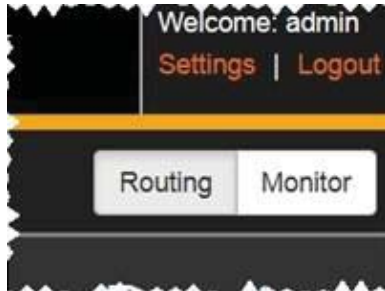

If you have connected a display to your monitor card and are not seeing any output, try these steps, in order, to resolve the issue:

1. Check the web interface to make sure you can see a Monitor button on the routing page, and can access the Monitor page. If this button is not visible, the card may be incorrectly installed or defective as it is not recognised by the system.
2. If the monitor card is present and the Monitor page seems to be working fine, check your cable connection to the display and power to the display to make sure signal is going out.
3. If the display is a known good display and has power, the monitor card is a known good card and is recognized by the system, you may need to change the output settings to something that is compatible with the display. This cannot be done through the web interface, but follow the instructions below to change the output settings.

Changing Monitor Card Output Settings

Pre-work:

Ensure you have a terminal-style application (HyperTerminal or an alternative) in order to access the CORIOmatrix via command line.

Identify which slot contains the monitor card. See “Input and Output Naming Convention” on page 23 for information about slot names and physical locations. Additionally, identify which output on the card is connected to the display.

Determine the default resolution and refresh rate for the monitor you are attempting to connect to.

When you have the necessary information and terminal application installed, follow these steps:

1. Connect to the CORIOmatrix via IP (each application has its own methodology of configuring a connection - for assistance, see the documentation provided with that program).
2. When you are connected, you will receive the following from the CORIOmatrix:

```
// =====  
// CORIOmatrix mini - CORIOmax  
// =====  
// Command Interface Ready  
Please login. Use 'login(username,password)'  
-
```

3. Log in by typing the following:
`login(admin,adminpw)` and press Return or Enter.
(If you have changed the administrator password, use the appropriate password in place of the text `adminpw` above.)
4. In the command line in your terminal application, below the words "`!Info : User admin Logged In`", type the command to change resolution for the appropriate output slot. In the example below, the monitor card is in slot 6 and we are using output 1, changing the resolution to the monitor's default of 720x576p50. Replace the slot and output number and resolution with the appropriate information for your configuration:
`slot6.out1.resolution = 720x576p50`
5. After typing this and pressing return, the system will return a line starting with `!Done`.
6. To save this change, type
`System.SaveAllSettings()`
and press Return or Enter. The system returns "`!Done System.SaveAllSettings()`". At this point you can disconnect from the command-line connection and the monitor card will be using the resolution you just configured.