

USER MANUAL

Conference Cabinet Series



IMPORTANT SAFETY SYMBOLS



The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or death.

The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety reasons.

⏏ Protective grounding terminal

~ Alternating current/voltage

⚡ Hazardous live terminal

ON: Denotes the apparatus is turned on

OFF: Denotes the apparatus is turned off.

WARNING: Describes precautions that should be observed to prevent the danger of injury or death to the operator.

CAUTION: Describes precautions that should be observed to prevent danger of the apparatus.

• Ventilation

Do not block areas of ventilation opening. Failure to do could result in fire. Always install accordance with the manufacturer's instructions.

• Object and Liquid Entry


Objects do not fall into and liquids are not spilled into the inside of the apparatus for safety.

• Power Cord and Plug

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A ground-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, refer to electrician for replacement.

• Power Supply

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user. Unplug this apparatus during lightning storms or when unused for long periods of time.



IMPORTANT SAFETY INSTRUCTIONS

• Read these instructions.

• Keep these instructions.

• Heed all warning.

• Follow all instructions.

• Water & Moisture

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchen sink or a swimming pool, etc.

• Heat

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

• Fuse

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet.

• Electrical Connection

Improper electrical wiring may invalidate the product warranty.

• Cleaning


Clean only with a dry cloth. Do not use any solvents such as benzol or alcohol.

• Servicing


Do not implement any servicing other than those means described in the manual. Refer all servicing to qualified service personnel only.

• Only use accessories/attachments or parts recommended by the manufacturer.


6. Configuration

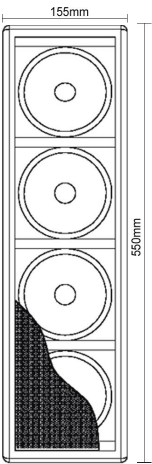


Four inch

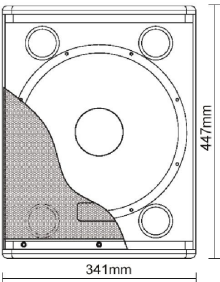


Twelve inch

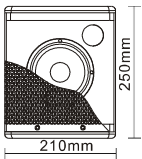


Five inch

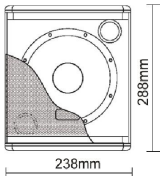

Six inch

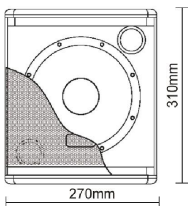

Eight inch

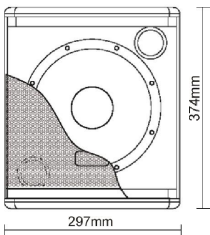

Ten inch

Model	10 inch	12 inch
Type	two way 10"full range cabinet	two way 12"full range cabinet
Frequency response	75Hz~18kHz	60Hz~18kHz
Rated power	200W	250W
Crossover	2500Hz	2200Hz
Sensitivity(1w@1m)	94 dB	96 dB
Rated impedance	8 Ω	8 Ω
Dimension(W*H*D)	297 × 374 × 270(mm)	341 × 447 × 311(mm)
Weight	17.5Kg	22Kg



1. Introduction

This series coaxial cabinet are specially for conference and public address. The mechanical design is unique and suitable for architecture requirement. The cabinet is also sprayed paint for indoors and outdoors applications.

2. Features


This series cabinets are the products with high cost performance, and with transparent high frequency, full mid frequency, powerful low frequency for various application.

3. Application


With excellent tone, big coverage, simple hanging, these cabinets are suitable for indoors conference room, station, public address, supermarket, KaraOK,etc

4. Installation

- 2 way full range cabinet hanging
horizontal and vertical hanging on the wall for conference series coaxial cabinet;

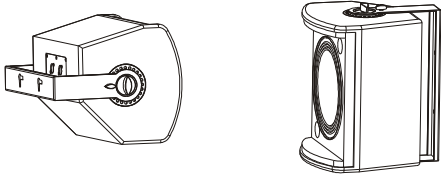

- Fixed hanging
There is a hole on the bottom of the cabinet for it to be put on woofer or on a stand.

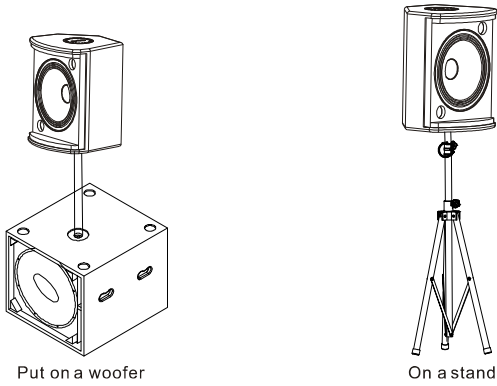

5. Specification

Model	Four inch
Type	4" full range cabinet
Frequency response	150Hz~12kHz
Rated power	60W
Sensitivity(1w@1m)	90 dB
Rated impedance	8 Ω
Dimension(W*H*D)	155 × 550 × 188(mm)
Weight	9.5Kg



Model	Five inch
Type	Two way 5" full range cabinet
Frequency response	180Hz~18KHz
Rated power	80W
Crossover	3500Hz
Sensitivity(1w@1m)	87dB
Rated impedance	8 Ω
Dimension(W*H*D)	210 x 250 x 191(mm)
Weight	7Kg



Model	Six inch	Eight inch
Type	Two way 6" full range cabinet	Two way 8" full range cabinet
Frequency response	120Hz~18kHz	100Hz~18kHz
Rated power	100W	150W
Crossover	3500Hz	3000Hz
Sensitivity(1w@1m)	90dB	92 dB
Rated impedance	8 Ω	8 Ω
Dimension(W*H*D)	238 × 288 × 216.3(mm)	270 × 310 × 245(mm)
Weight	8.5Kg	11.75Kg

