



CDPS-P311RN

HDMI Video/Live Streamer



Operation Manual



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2018 by Cypress Technology.

All Rights Reserved.

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document are trademarks of the companies with which they are associated.

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.
- Please completely disconnect the power when the unit is not in use to avoid wasting electricity.

VERSION HISTORY

REV.	DATE	SUMMARY OF CHANGE
RDV1	2023/01/06	Preliminary release

CONTENTS

1. Introduction.....	1
2. Applications	1
3. Package Contents	2
4. System Requirements.....	2
5. Features.....	3
6. Operation Controls and Functions	4
6.1 Front Panel.....	4
6.2 Rear Panel.....	6
6.3 Serial Pinout and Defaults	7
6.4 WebGUI Control	8
6.4.1 Live Tab	10
6.4.2 Streaming Tab	11
6.4.3 Transmitter Tab.....	13
6.4.4 Audio Mixer Tab.....	14
6.4.5 Video Switch Tab.....	15
6.4.6 EDID Settings Tab	17
6.4.7 Record Settings Tab	19
6.4.8 Time Setting Tab.....	22
6.4.9 User Config Tab.....	23
6.4.10 System Setting Tab	24
6.8 Telnet Control	26
6.9 Serial and Telnet Commands	26
7. Connection Diagram	45
8. Specifications	46
8.1 Technical Specifications	46
8.2 Video Specifications	47
8.3 Audio Specifications	49
8.3.1 Digital Audio	49
8.3.2 Analog Audio	49
8.4 Cable Specifications	50
9. Acronyms	51



1. INTRODUCTION

This HDMI Video/Live Streamer makes online broadcasting of live video, with a locally stored archive, an easy and simple process. Video sources from cameras, PCs, video game consoles, etc. are a breeze to connect for immediate broadcast and recording. Video content up to 4K UHD⁺ is supported and is automatically scaled to a resolution that is more appropriate for efficient streaming. In addition to the standard HDMI input, a VGA input with a paired analog stereo audio input is also available as a source. An HDMI output is provided for local monitoring of the selected input source.

All video content is streamed using high quality encoding with minimal latency making it ideal for live streaming events to a variety of popular online streaming services or within the local network. The video may also be recorded locally (via SD card or USB thumb drive) or to a local network drive while it is being streamed. An audio mixer function is included, allowing an external audio source to be mixed with the embedded audio of your HDMI source (LPCM 2.0 only) for your video stream.

Comprehensive EDID management provides improved compatibility with different sink devices. The intuitive WebGUI provides easy control of your live event stream including source selection, resolution, bitrate and more. Audio functions include volume level adjustment, mute, and mixer source selection. This unit can be controlled and configured via front panel buttons, an intuitive WebGUI, RS-232, or Telnet.

2. APPLICATIONS

- Webcasting
- Social Media Broadcasting
- Live Event Streaming
- Video on Demand Streaming
- Live recording and storage

3. PACKAGE CONTENTS

- 1× HDMI Video/Live Streamer
- 1× 5V/2.6A DC Power Adapter
- 1× Operation Manual

4. SYSTEM REQUIREMENTS

- HDMI or VGA source equipment such as a media player, video game console, PC, or video camera.
- Available streaming server destination such as YouTube or Facebook or a recording storage target such as an SD Card or USB thumb drive.
- HDMI receiving equipment such as an HDTV, monitor or audio amplifier.
- The use of Premium High Speed HDMI cables is highly recommended.
- To view RTSP streams directly on the local network, RTSP stream compatible video player software (such as VLC Media Player or PotPlayer) must be used.

5. FEATURES


- 1 HDMI input and 1 VGA input
- 1 HDMI output (for local source monitoring)
- HDCP 1.x and HDCP 2.2 compliant

Note: HDCP encrypted sources cannot be streamed over the Internet or recorded and will be blacked out

- HDMI input/output supports resolutions up to 4K UHD* (18Gbps, 4K@60Hz 4:4:4, 8-bit)
- VGA input supports resolutions up to 1920×1080@60Hz
- Advanced H.264 video streaming and recording is provided at VGA (640×480), 720p, or 1080p at up to 60fps
- Recorded video can be stored on a locally inserted SD card, USB thumb drive, or to a designated network drive
- Can act as a streaming server (using RTP/RTSP protocols) or streaming client (using the RTMP protocol)
- Audio embedding and mixing support with the analog stereo audio input
- Note: Analog audio can only be mixed with LPCM 2.0 audio from the HDMI source*
- Supports scheduled recording with an internet updated calendar
- Supports basic text overlay over live broadcasts including a countdown timer
- Integrated downscaling function will convert UHD* video content (up to 4K@60Hz) down to 1080p or lower for live video broadcast and recording
- Generates 3 simultaneous streams from the same video source (1080p@60fps, 1080p@30fps, VGA@30fps) for easy system integration at multiple bandwidth targets
- Supports automatic input switching
- Advanced EDID management including Internal, External & User configured EDID selections
- Control via front panel buttons, WebGUI, Telnet, and RS-232

6. OPERATION CONTROLS AND FUNCTIONS

6.1 Front Panel

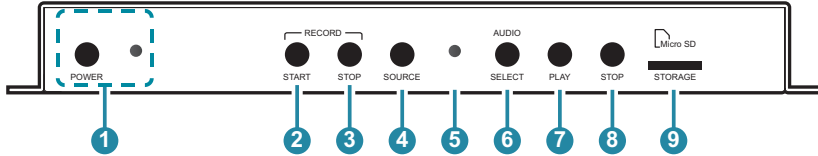

- 1 **POWER Button & LED:** Press this button to power the unit on (green LED) or place it into stand-by mode (red LED).

Note: The Power LED will blink while video recording is active.

- 2 **RECORD START Button:** Press this button to immediately start recording to the designated recording target.

- 3 **RECORD STOP Button:** Press this button to immediately stop any current recording session.

- 4 **SOURCE Button:** Press this button to toggle between the HDMI and VGA inputs. The status LED will change depending on the input selection.

Note: Changing the input source will cause the video stream to restart. Connected stream targets may need to be restarted or reconnected.

- 5 **Status LED:** This multi-function LED indicates the current video source selection, audio mixer state and RTMP streaming client status.

LED State	Description
● RED	Video source is VGA
● BLUE	Video source is HDMI
● PURPLE	Video source is HDMI, Audio Mixer is enabled
Solid (any color)	RTMP streaming client is inactive
Blinking (any color)	RTMP streaming client is active

- 6 AUDIO SELECT Button:** Press this button to enable/disable the Audio Mixer function.

Note: The mixer's settings are configured within the WebGUI.

- 7 PLAY Button:** Press this button to start streaming to the configured target server. The Status LED will blink to indicate the stream is currently active.


Note: The target streaming service controlled by this button is defined in the WebGUI.

- 8 STOP Button:** Press this button to stop streaming to the configured target server. The Status LED will be lit solidly to indicate the stream is stopped.

- 9 Micro SD STORAGE Slot:** Insert a standard Micro SD card for storage of recorded video. (Optional)

*Note: Only SD/SDHC memory cards are supported. Storage media must be formatted as FAT32 or exFAT. Video files are stored in *.mp4 format.*


6.2 Rear Panel

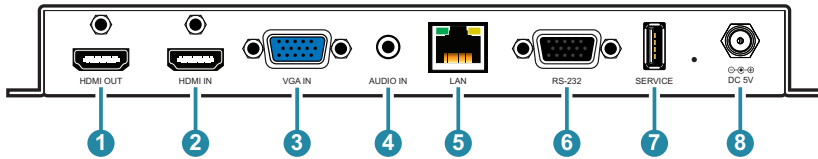

- 1 HDMI OUT Port:** Connect to an HDMI TV, monitor or amplifier for digital video and audio output.
- 2 HDMI IN Port:** Connect to HDMI source equipment such as a media player, game console or set-top box.
Note: HDCP encrypted sources cannot be streamed over the Internet or recorded and will be blacked out.
- 3 VGA IN Port:** Connect to VGA source equipment such as a PC or laptop.
- 4 AUDIO IN Port:** Connect to the stereo analog output of a device such as a CD player or PC.
Note: By default, audio from this port is embedded with the VGA video source.
- 5 LAN Port:** Connect to a network switch or router for transmission and distribution of streamed video as well as to control the unit via Telnet or WebGUI.
Note: The maximum number of simultaneous stream connections is limited by available network bandwidth and the unit's CPU load.
- 6 RS-232 Port:** Connect directly to a PC, laptop or other serial control device to send RS-232 commands to control the unit.
- 7 SERVICE Port:** Attach a standard USB thumb drive or external hard drive for storage of recorded video. (Optional)
*Note: Storage media must be formatted as FAT32 or exFAT. Video files are stored in *.mp4 format.*
- 8 DC 5V Port:** Plug the 5V DC power adapter into this port and connect it to an AC wall outlet for power.

6.3 Serial Pinout and Defaults

Serial Port Default Settings	
Baud Rate	19200
Data Bits	8
Parity Bits	None
Stop Bits	1
Flow Control	None

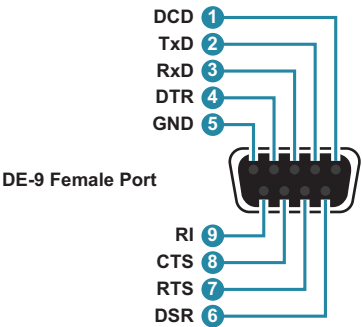


6.4 WebGUI Control

• Device Discovery


Please obtain the “Device Discovery” software from your authorized dealer and save it in a directory where you can easily find it.

Connect the unit and your PC/Laptop to the same active network and execute the “Device Discovery” software. Click on “Find Devices on Internet” and a list of devices connected to the local network will show up indicating their current IP address.

Note: This unit defaults to DHCP mode. The current IP address can be verified via RS-232 if the Device Discovery software is not available.



By clicking on one of the listed devices you will be presented with the network details of that particular device.

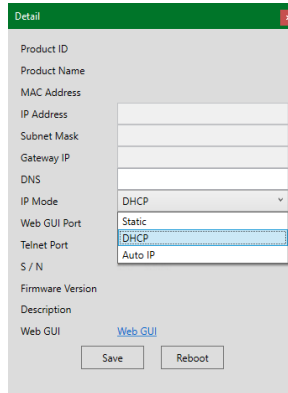


- 1) **IP Mode:** If you choose, you can alter the static IP network settings for the device, or switch the unit into DHCP mode to automatically obtain proper network settings from a local DHCP server. To switch to DHCP mode, please select DHCP from the IP mode drop-down, then click “Save” followed by “Reboot”.
- 2) **WebGUI Hotkey:** Once you are satisfied with the network settings, you may use them to connect via Telnet or WebGUI. The network information window provides a convenient link to launch the WebGUI directly.

- **WebGUI Overview**


After connecting to the WebGUI's address in a web browser, the login screen will appear. Please enter the appropriate user name and password then click "Submit" to log in.

Note: The default user name and password is "admin".

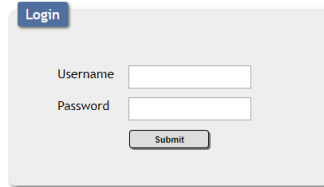

A login form with a blue "Login" button at the top left. Below it are two input fields: "Username" and "Password". At the bottom right is a "Submit" button.

On the left side of the browser you will see the following menu tabs where all primary functions of the unit are controllable via the built in WebGUI. The individual functions will be introduced in the following sections.

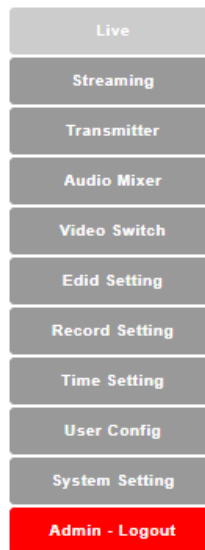


Clicking the red "Logout" tab will automatically log the currently connected user out of the WebGUI and return to login page.

6.4.1 Live Tab

This tab provides a limited framerate preview window of the video stream channel generated by the unit. The video source can be selected here and the stream resolution, framerate and bitrate is also displayed. At the bottom of the tab a connection address for the main video stream is displayed in the format: “rtsp://x.x.x.x/stream” (x.x.x.x= the unit’s current IP address). When 3rd party video player software with RTSP streaming support is used to view streams from this unit, this is the URL that should be used to connect. To view the second streaming channel, change “stream” in the address to “stream2”.

Note: The main stream’s configuration is set on the “Streaming” tab video profile section of the source unit’s transmitter tab.

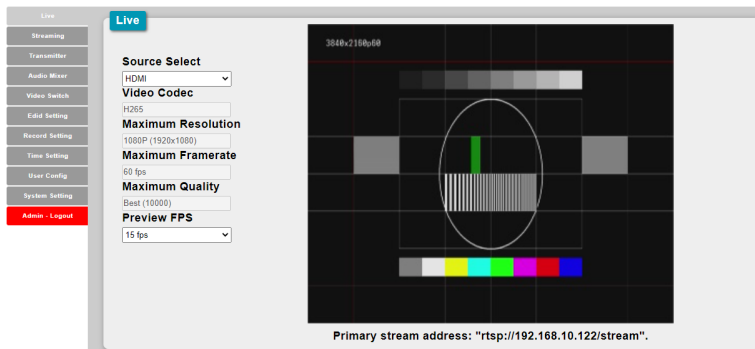

- 1) **Source Select:** Select the video input (HDMI or VGA) to stream.
Note: Changing the input here will change it globally across the unit.
- 2) **Video Codec:** Indicates the video codec used for the video stream.
Note: Currently, only H.265 is supported.
- 3) **Maximum Resolution/Framerate/Quality:** Displays the current settings for the main streaming channel.
- 4) **Preview FPS:** Use the dropdown to set the framerate for this tab’s preview window video.
Note: This setting is for the preview window only and does not affect the main video stream’s framerate.
- 5) **Video Window:** This video window displays the content of the unit’s streaming channel and provides the details of a direct connection address that can be used to view the main stream using 3rd party video player software such as VLC or PotPlayer.

6.4.2 Streaming Tab

This tab provides access to the settings and controls for the streaming channel which is used when streaming directly to a streaming service such as YouTube or Facebook. Channel 1 (Main Stream) or channel 2 (Second Stream) may be selected for broadcast. A live preview of the current video stream is displayed at the bottom of this page. Pressing the “Play” button will make the unit start streaming to the designated target server immediately and change the label of the button to read “Stop”. To stop streaming, press the “Stop” button.

Note: A stream can only be broadcast to a single dedicated service at a time. However, both streaming channels are always available to be viewed directly by connecting to the unit using 3rd party video player software such as VLC or PotPlayer.

Live

Streaming

Transmitter

Audio Mixer

Video Switch

Edit Setting

Record Setting

Time Setting

User Config

System Setting

Admin - Logout

Streaming

Source Select

HDMI

Live Stream Source

Main (Max: 1080p@60)

Main Stream

Maximum Video Resolution

1080P (1920x1080)

Maximum Video Framerate

60 fps

Maximum Video Quality (Kbyte)

Best (8000)

Second Stream

Maximum Video Resolution

1080P (1920x1080)

Maximum Video Framerate

30 fps

Maximum Video Quality (Kbyte)

5000

Stream URL

Save

Stream Key

Save

Play

Countdown Timer

OSD enable

OFF

Default Time(sec)

120

Save

Position


Top-Left

Start/Stop

+30s

-30s

3140x2160p@60

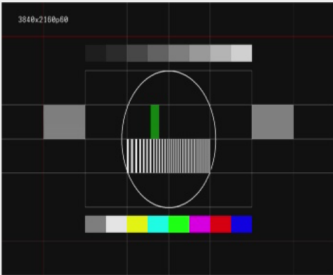


- 1) **Source Select:** Select the video input (HDMI or VGA) to stream.
Note: Changing the input here will change it globally across the unit.
- 2) **Live Stream Source:** Use the dropdown to select which stream to broadcast when “Play” is pressed.
Note: Adjusting the settings for the Main Stream will also affect the settings of locally recorded video.
- 3) **Maximum Video Resolution (Main/Second):** Select the maximum resolution to allow for the specified streaming channel. Available resolutions are: 1080p (1920x1080), 720p (1280x720), VGA (640x480), or CIF (352x288).
Note: The streaming resolution will not exceed the original source’s resolution even if a higher maximum is selected.
- 4) **Maximum Video Framerate (Main/Second):** Select the maximum framerate to allow for the specified streaming channel.
Note: The Second Stream has a maximum framerate of 30fps while the Main Stream can go up to 60fps.
- 5) **Maximum Video Quality (Main/Second):** Select the target bitrate for the specified streaming channel. Available bitrates are: 6000Kbps, 4000Kbps, or 2000Kbps.
- 6) **Stream URL:** Please enter the Stream URL provided by the specified streaming service. This is the address of the specific target streaming server. Type the Stream URL EXACTLY as provided by the streaming service. The URL will start with “rtmp://” or “rtmps://” followed by the specific destination information of the server. Click on “Save” to confirm and store the Stream URL.
- 7) **Stream Key:** Please enter the Stream Key provided by the specified streaming service. This is an encrypted key that provides the streaming server with your unique login and identification credentials. Type the Stream Key EXACTLY as provided by the streaming service. A typical stream key is a very long string of letters, numbers and symbols. Click on “Save” to confirm and store the Stream Key.

8) Countdown Timer

- **OSD Enable:** Enable or disable visibility of the on screen countdown timer.
- **Default Time(sec):** Set the starting time, in seconds, for the on screen countdown timer.
- **Position:** Use the dropdown to select the position of the on screen countdown timer.
- **Start/Stop:** Click this button to start or stop the countdown timer.
- **+30s/-30s:** Click the “+30s” button to add 30 seconds to the currently displayed countdown timer’s time. Click the “-30s” button to subtract 30 seconds.

6.4.3 Transmitter Tab

This tab provides basic control over the unit’s multicast presence on the local network subnet. Generally, these settings should not be changed unless requested/required by your network administrator.

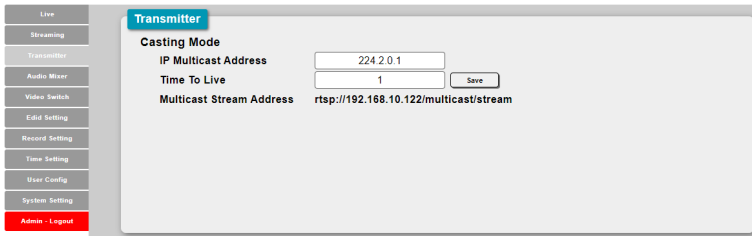


- 1) **IP Multicast Address:** Set the multicast group IP address used by decoders that require it.
Note: It is recommended to select an address between 224.2.0.1 and 224.2.255.255.
- 2) **Time To Live:** Sets the TTL (hop limit) value for the unit’s multicast group.
- 3) **Multicast Stream Address:** Displays the direct connection address that can be used to view the main stream using 3rd party video player software such as VLC or PotPlayer.

6.4.4 Audio Mixer Tab

This tab allows for control over the audio mixer function of this unit. When enabled, it mixes the analog audio and HDMI audio sources together with independently controllable volume levels.


Note: Only LPCM 2.0 audio from the HDMI source is supported by the mixer.

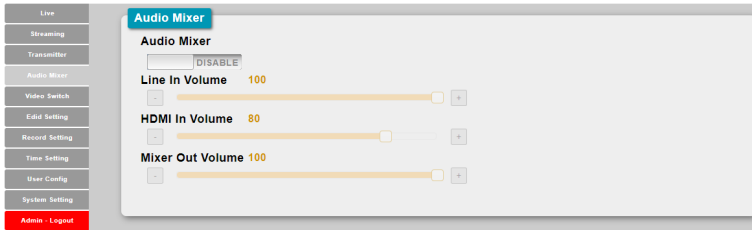


- 1) **Audio Mixer:** Enable or Disable the audio mixer function.
- 2) **Line In Volume:** Adjusts the volume of the analog audio source from 0% to 100%.
- 3) **HDMI In Volume:** Adjusts the volume of the HDMI audio source from 0% to 100%.
- 4) **Mixer Out Volume:** Adjusts the volume of the mixed audio output from 0% to 100%.

6.4.5 Video Switch Tab

This tab provides video/audio routing control as well as control over HDCP behavior, input/output names, Text Screen intermission details, and the Countdown Timer.

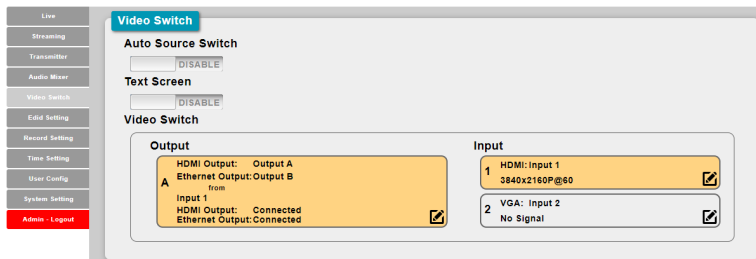

- 1) **Auto Source Switch:** Enable or disable the automatic input switching feature of this unit. When enabled, the unit will automatically switch to the most recently connected/detected input. If the current input's signal is lost, the unit will automatically switch to the other input.
- 2) **Text Screen:** The Text Screen intermission output can be used when the user wants to stream a simple text screen to indicate that there is not currently any live video to view. It may be enabled or disabled here.
Note: Enabling or disabling this feature may disconnect any currently connected streaming clients.
- 3) **Video Switch:** To assign a new video route, please click the Output button and then click on the button of the preferred Input port to route. As you select each button they will change their color to orange. The new route will become active immediately and the routing information displayed on the buttons will change accordingly.
- 4) **Output:** Click on this button to begin routing selection as detailed above. Click the Edit icon (✎) to open the Output Edit window and modify additional output settings.
- 5) **Output Edit:** This window is opened after clicking on the Edit icon within the Output button. It provides a way to rename the outputs as well as configure the countdown timer, intermission text, and the associated OSD settings. Click on "Save" to confirm and activate any changes made to a name or to the countdown timer's default time. All other changes are immediate.

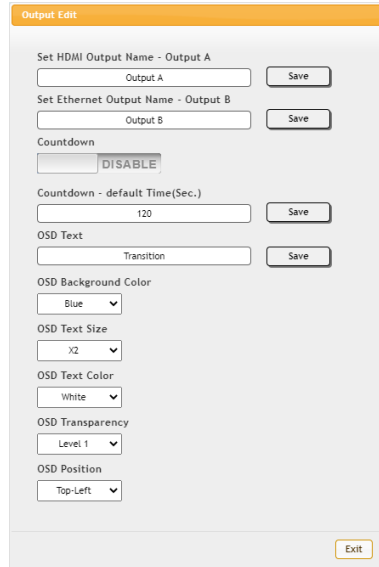

Output Edit

Set HDMI Output Name - Output A

Set Ethernet Output Name - Output B

Countdown

Countdown - default Time(Sec.)

OSD Text

OSD Background Color


OSD Text Size

OSD Text Color

OSD Transparency

OSD Position

- 6) **Input:** Click on either of these buttons to select the source to route to the output, or click the Edit icon () to open the Input Edit window and modify additional input settings.
- 7) **Input Edit:** Rename either Input or modify the HDCP behavior (HDMI Input 1 only) by clicking on the Edit icon () to open the editing window. Click on "Save" to confirm and activate any changes made to a name. Changes made to the HDCP behavior are applied immediately.

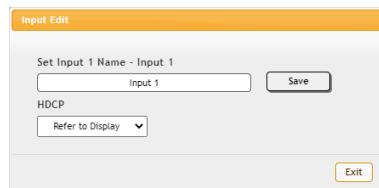

Input Edit

Set Input 1 Name - Input 1


HDCP

Available HDCP settings are:

- **HDCP Support Off :** Completely disables HDCP support on the input.
- **Refer to Source:** HDCP support follows the HDCP mode required by the connected source device.
- **Refer to Display:** HDCP support follows the HDCP mode supported by the connected sink.

6.4.6 EDID Settings Tab

This tab provides the option of six standard EDIDs, one sink sourced EDID and four customer uploaded EDIDs that can be assigned to the HDMI input port. The names of the four customer uploaded EDIDs can be changed if desired.

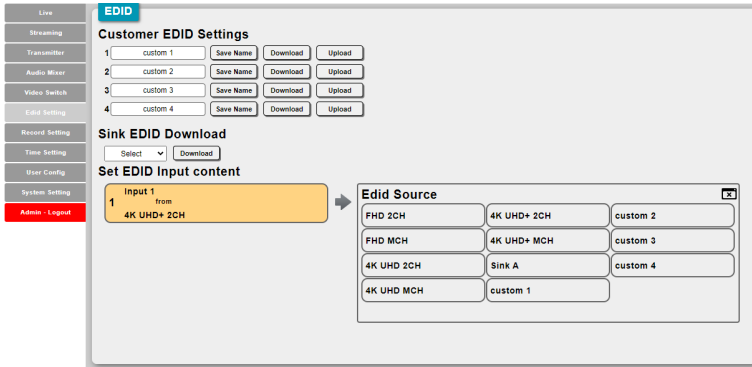

ID	Name	Save Name	Download	Upload
1	custom 1	Save Name	Download	Upload
2	custom 2	Save Name	Download	Upload
3	custom 3	Save Name	Download	Upload
4	custom 4	Save Name	Download	Upload

Select	Download
▼	Download

Input	From
1	4K UHD+ 2CH

Resolution	Format	Custom Name
FHD 2CH	4K UHD+ 2CH	custom 2
FHD MCH	4K UHD+ MCH	custom 3
4K UHD 2CH	Sink A	custom 4
4K UHD MCH	custom 1	

1) Customer EDID Settings

- **Save Name:** To change the name of a customer EDID, type the new name in the space provided, then click on the “Save Name” button.
- **Download:** To save an existing customer EDID to your local PC please press the “Download” button next to the EDID you would like to save. Depending on your browser settings you will either be asked where to save the downloaded file, or the file will be transferred to the default download location on your PC.
- **Upload:** To upload a customer EDID, please click the “Upload” button next to the Customer EDID Settings item you would like to change. An EDID Upload window will appear, allowing you to locate and upload the preferred EDID file (*.bin format) from a local PC. Once the correct file has been selected, please click the “Upload” button in the window, and the file will be transferred to the unit.

- 2) **Sink EDID Download:** To save the EDID from the connected HDMI display to your local PC, select the sink from the dropdown list then press the “Download” button. Depending on your browser settings you will either be asked where to save the downloaded file, or the file will be transferred to the default download location on your PC.

- 3) **Set EDID Input Content:** Click on the input button to expand the EDID Source management section. Select the new EDID source to use, from the choices on the right, and the change will occur immediately.

Note: In most cases, assigning a new EDID to an input will cause the affected input to briefly blink out while the source adapts to the new information.


This unit provides the following 6 default EDIDs:

Unit's default EDIDs	
FHD 2CH	1920×1080p@60Hz (4.95Gbps), 8-bit color, LPCM 2.0
FHD MCH	1920×1080p@60Hz (4.95Gbps), 8-bit color, LPCM 7.1 & Bitstream
UHD 2CH	3840×2160p@30Hz (10.2Gbps), 12-bit Deep Color, LPCM 2.0
UHD MCH	3840×2160p@30Hz (10.2Gbps), 12-bit Deep Color, LPCM 7.1 & Bitstream
UHD+ 2CH	3840×2160p@60Hz (18Gbps), 12-bit Deep Color, LPCM 2.0
UHD+ MCH	3840×2160p@60Hz (18Gbps), 12-bit Deep Color, LPCM 7.1 & Bitstream

Note: In some rare cases it is possible for custom or external EDIDs to cause compatibility issues with certain sources. If this happens, it is recommended to switch to one of the 6 default EDIDs for maximum compatibility.

6.4.7 Record Settings Tab

This tab provides access to the settings and controls for configuring and making a recording of the main broadcast stream to a local or network storage location. When recording is enabled, the stream is saved as a *.mp4 file, encoded with the same settings as the main stream, to one of three possible target destinations: local USB storage, local Micro-SD Card storage, network storage using NFS, or network storage using CIFS. The file will be placed within an automatically named folder structure based on the current date and time of the recording to facilitate easy sorting and file management. It is also possible to set up automatic daily recording times based on a repeating weekly schedule structure.

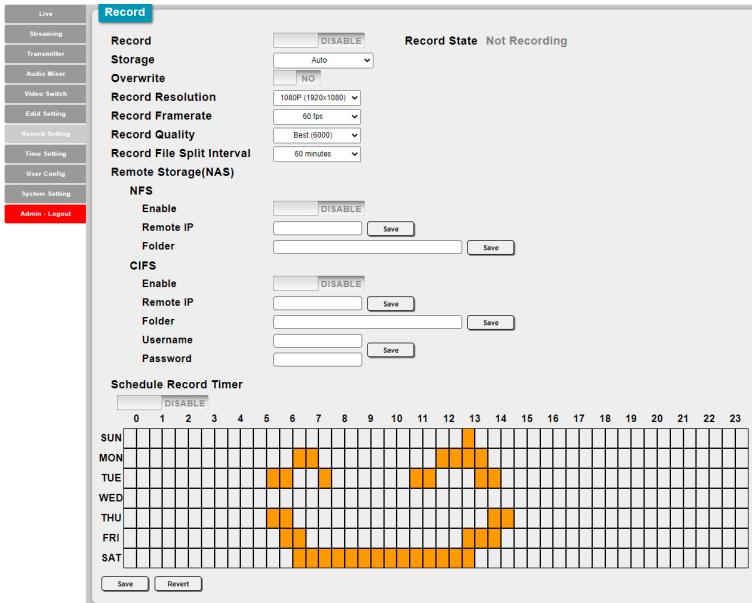

Record **Record State** Not Recording

Storage

Overwrite

Record Resolution

Record Framerate

Record Quality

Record File Split Interval

Remote Storage(NAS)

NFS

Enable

Remote IP

Folder

CIFS

Enable

Remote IP

Folder

Username

Password

Schedule Record Timer

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN																								
MON																								
TUE																								
WED																								
THU																								
FRI																								
SAT																								

- 1) **Record:** Enable or disable recording the main video stream. When enabled, recording will begin immediately to the selected storage location.

Note: HDCP encrypted sources cannot be recorded.

- 2) **Record State:** Displays the current recording state of the unit.

- 3) **Storage:** Use the drop-down to select the storage target to use when recording. Available choices are: Auto, USB (USB storage), SD Card (Micro-SD card), NFS (NFS based network storage), and CIFS (CIFS based network storage). Selecting “Auto” will use the first available valid storage location using the following priority order:
NFS > CIFS > USB > SD Card
- 4) **Overwrite:** Enables or disables the file overwrite function. When enabled, the unit will automatically delete older recordings, when space runs out on the selected storage location, to make room for new recordings.
- 5) **Record Resolution:** Select the maximum resolution to allow for the main streaming channel. Available resolutions are: 1080p (1920x1080), 720p (1280x720), VGA (640x480), or CIF (352x288).
Note: The recording resolution will not exceed the original source’s resolution even if a higher maximum is selected.
- 6) **Record Framerate:** Select the maximum framerate to allow for the main streaming channel. Available framerates are: 25, 30, 50, or 60 frames per second.
- 7) **Record Quality:** Select the target bitrate for the main streaming channel. Available bitrates are: Best (6000Kbps), High (4000Kbps), or Normal (2000Kbps).
- 8) **Record File Split Interval:** Use the dropdown to define the maximum runtime allowed for a single recorded video file. Once the selected time limit is reached, a new, sequentially named, file will be generated to continue recording. The interval can be set from 10 to 120 minutes.
- 9) **Remote Storage (NAS) NFS:** This section provides a way to configure access to a NAS (Network Attached Storage) device using the NFS protocol.
 - **Enable:** Enable or disable access to the defined NFS based network storage server.
 - **Remote IP:** Enter the IP address of the target NFS based NAS device. After entering the information, press the “Save” button.
 - **Folder:** Enter a valid share name on the target server. The share name cannot contain spaces or special characters. This is where the recording folder structure and video files will be created. After entering the information, press the “Save” button.*Note: The target folder on the NFS server must, at a minimum, provide anonymous read, write and delete permissions.*

10) Remote Storage (NAS) CIFS: This section provides a way to configure access to a NAS (Network Attached Storage) device using the CIFS protocol.

- **Enable:** Enable or disable access to the defined CIFS based network storage server.
- **Remote IP:** Enter the IP address of the target CIFS based NAS device. After entering the information, press the “Save” button.
- **Folder:** Enter a valid share name on the target server. The share name cannot contain spaces or special characters. This is where the recording folder structure and video files will be created. After entering the information, press the “Save” button.


Note: The target folder on the CIFS server must, at a minimum, provide read, write and delete permissions for the designated user.

- **Username/Password:** Enter the user name and password required for access to the specified server. After entering both items, press the “Save” button.

11) Schedule Record Timer: Enable or disable the scheduled time recording function. Each hour of each day is divided into two half-hour blocks. Currently selected recording times are indicated by orange blocks. Gray blocks indicate that no recording is currently scheduled. Blocks may be activated or deactivated by clicking on them. To easily select multiple blocks, you may click and drag across the preferred range. After setting the preferred recording blocks, press the “Save” button. To undo changes and return to the previous schedule configuration, press the “Revert” button.

6.4.8 Time Setting Tab

This tab provides a way to set the system's time, date, and time zone. The system time can be set manually, or automatically using a defined SNTP server. If your country uses DST (Daylight Saving Time) you can enable or disable it here and configure the start and end times/dates so that your scheduled events will always occur at the correct times throughout the year.

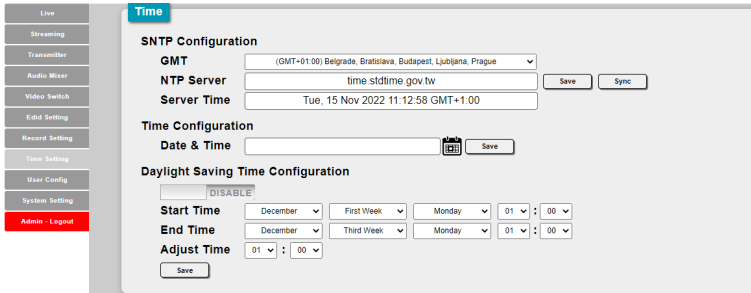

1) SNTP Configuration

- **GMT:** Select the preferred time zone from the options in the dropdown.
- **NTP Server:** Enter the address of the network time server to use for automatic time and date configuration. Click the “Save” button to set and store the address in the unit. Click the “Sync” button to force synchronization of the unit’s time and date with the defined server.

Note: Time synchronization occurs automatically when the unit is first powered on, and every 24 hours afterwards, if an NTP server has already been defined. Synchronization requires a live connection to the internet.

- **Server Time:** Shows the unit’s current time and date.

2) Time Configuration

- **Date & Time:** The unit’s time and date can be manually configured here if an internet connection or NTP server is not available. Click on the Calendar icon (📅) to open the time and date configuration screen and select the preferred values. After entering a new time and date, click the “Save” button to store it in the unit and start the clock running.


- 3) **Daylight Saving Time Configuration:** Enable or disable the use of DST adjustments for the unit's time.

Note: Enabling Daylight Saving Time while outside the configured DST range will result in no change to the current time.

- **Start Time:** Set the month, week, day and time for the start of DST in the current time zone.
- **End Time:** Set the month, week, day and time for the end of DST in the current time zone.
- **Adjust Time:** Set the amount of time to add when DST is active.

6.4.9 User Config Tab


The WebGUI and Telnet username/password are set on this page. Two management levels are available: "Administrator" and "General User". The administrator username ("admin") cannot be changed.

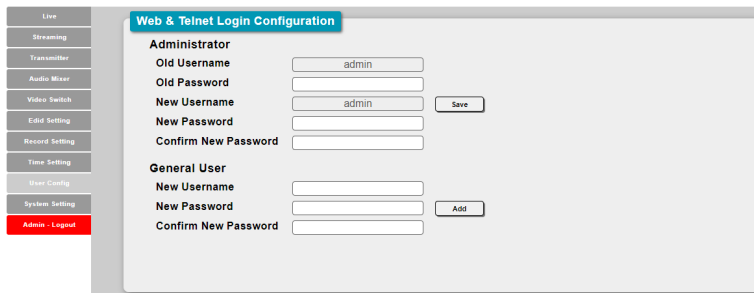

Note: The "Administrator" user has access to all tabs and can change all settings. The "General User" only has access to the "Live" tab to allow easy remote video stream viewing.

6.4.10 System Setting Tab

This tab provides system information, power control, network configuration options, system configuration backup/restore/reset, and firmware update functions.

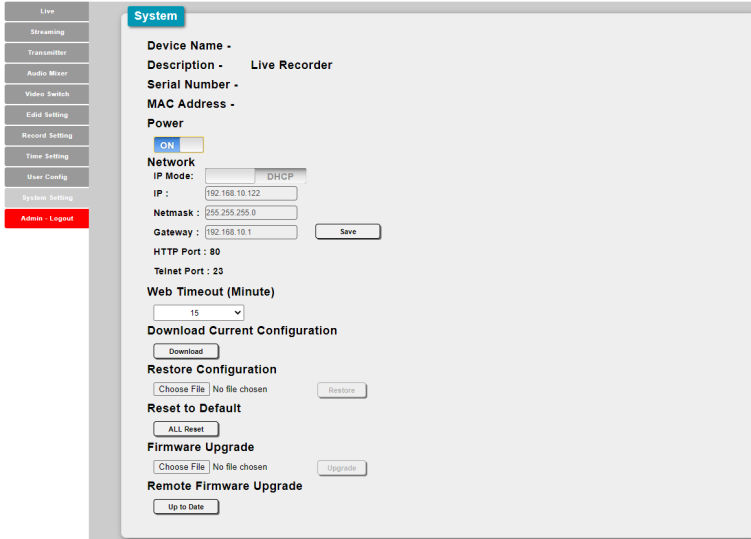

System

Device Name -
Description - Live Recorder
Serial Number -
MAC Address -

Power
ON

Network
IP Mode: DHCP
IP: 192.168.10.122
Netmask: 255.255.255.0
Gateway: 192.168.10.1 Save
HTTP Port: 80
Telnet Port: 23

Web Timeout (Minute)
15

Download Current Configuration
Download

Restore Configuration
Choose File No file chosen Restore

Reset to Default
ALL Reset

Firmware Upgrade
Choose File No file chosen Upgrade

Remote Firmware Upgrade
Up to Date

- 1) **Power:** Press this switch to toggle the unit's power between ON and OFF (stand-by mode).

Note: While in stand-by mode the unit's WebGUI, Telnet and RS-232 controls are still active.

- 2) **Network:** IP mode may be switched between Static IP or DHCP. In Static IP mode the IP, netmask and gateway addresses may be manually set. When in DHCP mode, the unit will attempt to connect to a local DHCP server and obtain IP, netmask and gateway addresses automatically. Please press "Save" after making any changes to the IP configuration or mode.

Note: This unit defaults to DHCP mode. If the IP address is changed then the IP address required for WebGUI/Telnet access will also change accordingly.

- 3) **Web Timeout (Minute):** Select the length of time to wait before logging the user out of the WebGUI due to inactivity. Available range is from 1 to 120 minutes, or disabled.

- 4) **Download Current Configuration:** The current system configuration, including routing and settings, may be saved as an XML file to a PC. Click the “Download” button to save the current system configuration to your local PC.
- 5) **Restore Configuration:** Previously saved system configurations may be restored from a saved XML file. Click the “Choose File” button to locate the saved XML file, then click the “Restore” button.
- 6) **Reset to Default:** Press the “ALL Reset” button to reset the unit to its factory default state. After the reset is complete, the unit will reboot automatically.
- 7) **Firmware Upgrade:** To update the unit’s firmware, click the “Choose File” button to open the file selection window and then select the firmware update file (*.bin format) located on your local PC. After selecting the file, click the “Upgrade” button to begin the firmware update process. After the upgrade is complete, the unit will reboot automatically.
- 8) **Remote Firmware Upgrade:** To update this unit’s firmware using our cloud based firmware server, click the “Up to Date” button and it will connect to the cloud server and automatically find the latest official firmware version. You will be told the new firmware version number, and you can then choose whether you wish to update to that version or not. After the upgrade is complete, the unit will reboot automatically.

Note: The Remote Firmware Upgrade feature requires a live connection to the internet.

6.8 Telnet Control

Before attempting to use Telnet control, please ensure that both the unit and the PC are connected to the same active networks.

Start your preferred Telnet/Console client, or use the built in client provided by most modern computer operating systems. After starting the client, connect by using the current IP address of the unit and port 23 (if the communication port number used by the unit has not been changed previously). This will connect us to the unit we wish to control and commands may now be entered directly.

Note 1: If the IP address of the unit is changed then the IP address required for Telnet access will also change accordingly.

Note 2: This unit defaults to DHCP mode. The current IP address can be verified via RS-232 if the Device Discovery software is not available. The default communication port is 23.

6.9 Serial and Telnet Commands

COMMAND	
Description and Parameters	
help ↵	Show all available commands.
help N1 ↵	Show details about the specified command. N1 = {Command}
? ↵	Show all available commands.
? N1 ↵	Show details about the specified command. N1 = {Command}
get fw ver ↵	Show the unit's current firmware version.
get model name ↵	Show the unit's model name.

COMMAND	
Description and Parameters	
get model type↵	Show the unit's model type.
get command ver↵	Show the unit's command protocol version.
get mac addr↵	Show the unit's MAC address.
get user config↵	List all current user configuration details.
set factory default↵	Reset the unit to its factory defaults.
set factory ipconfig default↵	Reset the unit's IP configuration to the factory defaults.
set factory out route default↵	Reset the unit's routing to the factory defaults.
set system reboot↵	Reboot the unit.
set power N1↵	Power the unit on or place it into standby mode. Available values for N1 : ON [Power on] STANDBY [Standby mode]
get power↵	Show the unit's current power state.
set in N1 name N2↵	Set the name of the specified input. Available values for N1 : 1 [HDMI input] 2 [VGA input] N2 = {name} [32 characters max]

COMMAND					
Description and Parameters					
get in N1 name↵	Show the current name of the specified input. Available values for N1: <table> <tr> <td>1</td><td>[HDMI input]</td></tr> <tr> <td>2</td><td>[VGA input]</td></tr> </table>	1	[HDMI input]	2	[VGA input]
1	[HDMI input]				
2	[VGA input]				
set out N1 name N2↵	Set the name of the HDMI output. Available values for N1: <table> <tr> <td>A</td><td>[HDMI Output]</td></tr> <tr> <td>B</td><td>[Ethernet Output]</td></tr> </table> N2 = {name} [32 characters max]	A	[HDMI Output]	B	[Ethernet Output]
A	[HDMI Output]				
B	[Ethernet Output]				
get out N1 name↵	Show the current name of the specified output. Available values for N1: <table> <tr> <td>A</td><td>[HDMI Output]</td></tr> <tr> <td>B</td><td>[Ethernet Output]</td></tr> </table>	A	[HDMI Output]	B	[Ethernet Output]
A	[HDMI Output]				
B	[Ethernet Output]				
get in name list↵	List the names of all inputs on the unit.				
get out name list↵	List the names of all outputs on the unit.				
set out auto mode N1↵	Set the auto switching behavior of the unit. Available values for N1: <table> <tr> <td>0</td><td>[Disabled]</td></tr> <tr> <td>1</td><td>[Auto Switch]</td></tr> </table>	0	[Disabled]	1	[Auto Switch]
0	[Disabled]				
1	[Auto Switch]				
get out auto mode↵	Show the current auto switching mode of the unit.				
get out auto mode list↵	List all available auto mode options.				

COMMAND**Description and Parameters****get in N1 hactive**↵

Show the horizontal active pixel value of the specified input's current video source.

Available values for **N1**:

- | | |
|---|--------------|
| 1 | [HDMI input] |
| 2 | [VGA input] |

Note: Values can only be read if the input is currently selected.

get in N1 vactive↵

Show the vertical active pixel value of the specified input's current video source.

Available values for **N1**:

- | | |
|---|--------------|
| 1 | [HDMI input] |
| 2 | [VGA input] |

Note: Values can only be read if the input is currently selected.

get in N1 refresh rate↵

Show the refresh rate of the specified input's current video source.

Available values for **N1**:

- | | |
|---|--------------|
| 1 | [HDMI input] |
| 2 | [VGA input] |

Note: Values can only be read if the input is currently selected.

get in N1 interlace↵

Show the interlace state of the specified input's current video source.

Available values for **N1**:

- | | |
|---|--------------|
| 1 | [HDMI input] |
| 2 | [VGA input] |

Note: Values can only be read if the input is currently selected.

get in N1 sync status↵

Show the current sync state of the specified input.

Available values for **N1**:

- | | |
|---|--------------|
| 1 | [HDMI input] |
| 2 | [VGA input] |

Note: Values can only be read if the input is currently selected.

COMMAND
Description and Parameters
get in N1 timing↵ Show the index number of the current resolution detected on the specified input. Available values for N1 : 1 [HDMI input] 2 [VGA input] <i>Note: Values can only be read if the input is currently selected.</i>
get in type list↵ List the port type of all inputs on the unit.
get out type list↵ List the port type of all outputs on the unit.
set all out route N1↵ Route the specified input to all outputs. Available values for N1 : 1 [HDMI input] 2 [VGA input]
get all out route↵ Show the current routing for all outputs.
get in port number↵ Show the total number of inputs on the unit.
get out port number↵ Show the total number of outputs on the unit.
get out A sync status↵ Show the current sync state of the HDMI output.
get out timing list↵ List all available output resolutions with their local index numbers.
set audio out all mute N1↵ Enable or disable muting on all audio outputs. Available values for N1 : ON [Mute enabled] OFF [Mute disabled]

COMMAND	
Description and Parameters	
get audio out A mute↵	Show the current mute state of the HDMI/streaming outputs.
set audio out A route N1↵	Route the specified audio source to the HDMI/streaming outputs. Available values for N1 : 1 [HDMI audio] 2 [Analog audio]
get audio out A route↵	Show the current audio source routed to the HDMI/streaming output.
get audio in type list↵	List all available audio input sources.
get audio out type list↵	List all available audio output destinations.
set audio mixer N1↵	Enable or disable the unit's audio mixer function. Available values for N1 : ON [Mixer enabled] OFF [Mixer disabled]
get audio mixer↵	Show the current state of the unit's audio mixer.
set audio mixer in N1 volume N2↵	Set the audio mixer's input volume level for the specified audio source. Available values for N1 : 1 [HDMI audio] 2 [Analog audio] N2 = 0~100 [Volume level]
get audio mixer in N1 volume↵	Show the audio mixer's current input volume level for the specified audio source. Available values for N1 : 1 [HDMI audio] 2 [Analog audio]

COMMAND																							
Description and Parameters																							
set audio mixer out A volume N1↵	Set the audio mixer's output volume level. N1 = 0~100 [Volume level]																						
get audio mixer out A volume↵	Show the audio mixer's current output volume level.																						
set in 1 edid N1↵	Set the EDID to use on the HDMI input. Available values for N1 : <table> <tr><td>1</td><td>[FHD 2CH]</td></tr> <tr><td>2</td><td>[FHD MCH]</td></tr> <tr><td>3</td><td>[4K UHD 2CH]</td></tr> <tr><td>4</td><td>[4K UHD MCH]</td></tr> <tr><td>5</td><td>[4K UHD+ 2CH]</td></tr> <tr><td>6</td><td>[4K UHD+ MCH]</td></tr> <tr><td>7</td><td>[User 1]</td></tr> <tr><td>8</td><td>[User 2]</td></tr> <tr><td>9</td><td>[User 3]</td></tr> <tr><td>10</td><td>[User 4]</td></tr> <tr><td>11</td><td>[Sink A]</td></tr> </table>	1	[FHD 2CH]	2	[FHD MCH]	3	[4K UHD 2CH]	4	[4K UHD MCH]	5	[4K UHD+ 2CH]	6	[4K UHD+ MCH]	7	[User 1]	8	[User 2]	9	[User 3]	10	[User 4]	11	[Sink A]
1	[FHD 2CH]																						
2	[FHD MCH]																						
3	[4K UHD 2CH]																						
4	[4K UHD MCH]																						
5	[4K UHD+ 2CH]																						
6	[4K UHD+ MCH]																						
7	[User 1]																						
8	[User 2]																						
9	[User 3]																						
10	[User 4]																						
11	[Sink A]																						
get in 1 edid↵	Show the currently selected EDID used on the HDMI input.																						
get in edid list↵	List all available EDID selections.																						
set user N1 edid data N2↵	Upload a new EDID (in hex format) for use as the specified User EDID. N1 = 1~4 [User EDID number] N2 = {EDID data} [Comma delimited hex pairs]																						
get user N1 edid data↵	Show the current contents of the specified User EDID as hex data. N1 = 1~4 [User EDID number]																						
get sink A edid data↵	Show the EDID from the display connected to the HDMI output as hex data.																						

COMMAND	
Description and Parameters	
get in 1 edid data ↵	Show the EDID currently used by the HDMI input as hex data.
get all in edid list ↵	List the EDIDs assigned to all inputs.
get internal N1 edid data ↵	Show the specified Internal EDID as hex data. N1 = 1~6 [Internal EDID number]
set in 1 hdcp mode N1 ↵	Set the HDCP behavior of the HDMI input. Available values for N1 : 0 [Disable HDCP] 1 [Follow source] 2 [Follow display]
get in 1 hdcp mode ↵	Show the current HDCP behavior used by the HDMI input.
get in 1 hdcp status ↵	Show the current HDCP status of the specified input.
get out A hdcp status ↵	Show the current HDCP status of the HDMI output.
set out A osd N1 ↵	Enable or disable the OSD Countdown Timer banner. Available values for N1 : ON [OSD on] OFF [OSD off]
get out A osd ↵	Show the current state of the OSD Countdown Timer banner.
set out A banner text N1 ↵	Set the OSD banner text to use on the HDMI/streaming outputs. N1 = {Banner text} [29 characters max]

COMMAND																			
Description and Parameters																			
get out A banner text↵	Show the current OSD banner text used by the HDMI/streaming outputs.																		
set out A banner font size N1↵	Set the font size for the OSD Countdown Timer banner. Available values for N1: <table> <tr> <td>1</td><td>[Normal size]</td></tr> <tr> <td>2</td><td>[Double size]</td></tr> <tr> <td>3</td><td>[Quadruple size]</td></tr> </table>	1	[Normal size]	2	[Double size]	3	[Quadruple size]												
1	[Normal size]																		
2	[Double size]																		
3	[Quadruple size]																		
get out A banner font size↵	Show the current font size for the OSD Countdown Timer banner.																		
set out A banner font color N1↵	Set the color of the font used by the OSD Countdown Timer banner. Available values for N1: <table> <tr> <td>BLACK</td><td>[Black text color]</td></tr> <tr> <td>WHITE</td><td>[White text color]</td></tr> <tr> <td>RED</td><td>[Red text color]</td></tr> <tr> <td>GREEN</td><td>[Green text color]</td></tr> <tr> <td>BLUE</td><td>[Blue text color]</td></tr> <tr> <td>MAGENTA</td><td>[Magenta text color]</td></tr> <tr> <td>YELLOW</td><td>[Yellow text color]</td></tr> <tr> <td>CYAN</td><td>[Cyan text color]</td></tr> <tr> <td>GRAY</td><td>[Gray text color]</td></tr> </table>	BLACK	[Black text color]	WHITE	[White text color]	RED	[Red text color]	GREEN	[Green text color]	BLUE	[Blue text color]	MAGENTA	[Magenta text color]	YELLOW	[Yellow text color]	CYAN	[Cyan text color]	GRAY	[Gray text color]
BLACK	[Black text color]																		
WHITE	[White text color]																		
RED	[Red text color]																		
GREEN	[Green text color]																		
BLUE	[Blue text color]																		
MAGENTA	[Magenta text color]																		
YELLOW	[Yellow text color]																		
CYAN	[Cyan text color]																		
GRAY	[Gray text color]																		
get out A banner font color↵	Show the current color of the font used by the OSD Countdown Timer banner.																		
get out banner font color list↵	List all available font colors for the OSD Countdown Timer banner.																		
set out A banner font transparency level N1↵	Set the text transparency level for the OSD Countdown Timer banner. <table> <tr> <td>N1 = 1~8</td><td>[Transparency level]</td></tr> </table>	N1 = 1~8	[Transparency level]																
N1 = 1~8	[Transparency level]																		

COMMAND																			
Description and Parameters																			
get out A banner font transparency level↵	Show the current text transparency level for the OSD Countdown Timer banner.																		
set out A osd background color N1↵	Set the color of the background of the OSD Countdown Timer banner. Available values for N1: <table> <tr> <td>BLACK</td><td>[Black text color]</td></tr> <tr> <td>WHITE</td><td>[White text color]</td></tr> <tr> <td>RED</td><td>[Red text color]</td></tr> <tr> <td>GREEN</td><td>[Green text color]</td></tr> <tr> <td>BLUE</td><td>[Blue text color]</td></tr> <tr> <td>MAGENTA</td><td>[Magenta text color]</td></tr> <tr> <td>YELLOW</td><td>[Yellow text color]</td></tr> <tr> <td>CYAN</td><td>[Cyan text color]</td></tr> <tr> <td>GRAY</td><td>[Gray text color]</td></tr> </table>	BLACK	[Black text color]	WHITE	[White text color]	RED	[Red text color]	GREEN	[Green text color]	BLUE	[Blue text color]	MAGENTA	[Magenta text color]	YELLOW	[Yellow text color]	CYAN	[Cyan text color]	GRAY	[Gray text color]
BLACK	[Black text color]																		
WHITE	[White text color]																		
RED	[Red text color]																		
GREEN	[Green text color]																		
BLUE	[Blue text color]																		
MAGENTA	[Magenta text color]																		
YELLOW	[Yellow text color]																		
CYAN	[Cyan text color]																		
GRAY	[Gray text color]																		
get out A osd background color↵	Show the current color of the background of the OSD Countdown Timer banner.																		
get out osd background color list↵	List all available background colors for the OSD Countdown Timer banner.																		
set out A countdown timer N1↵	Set the countdown timer value (in seconds). N1 = 1~36000 [Time in seconds]																		
get out A countdown timer↵	Show the current countdown timer value.																		

COMMAND																	
Description and Parameters																	
set uart 1 baudrate N2↵	Set the baud rate of the RS-232 port. Available values for N1: <table> <tr><td>4800</td><td>[4800 baud]</td></tr> <tr><td>7200</td><td>[7200 baud]</td></tr> <tr><td>9600</td><td>[9600 baud]</td></tr> <tr><td>14400</td><td>[14400 baud]</td></tr> <tr><td>19200</td><td>[19200 baud]</td></tr> <tr><td>38400</td><td>[38400 baud]</td></tr> <tr><td>57600</td><td>[57600 baud]</td></tr> <tr><td>115200</td><td>[115200 baud]</td></tr> </table>	4800	[4800 baud]	7200	[7200 baud]	9600	[9600 baud]	14400	[14400 baud]	19200	[19200 baud]	38400	[38400 baud]	57600	[57600 baud]	115200	[115200 baud]
4800	[4800 baud]																
7200	[7200 baud]																
9600	[9600 baud]																
14400	[14400 baud]																
19200	[19200 baud]																
38400	[38400 baud]																
57600	[57600 baud]																
115200	[115200 baud]																
get uart 1 baudrate↵	Show the current baud rate of the RS-232 port.																
get uart list↵	List all available RS-232 ports.																
set uart 1 reset↵	Reset the unit's RS-232 settings to the factory defaults.																
set ip mode N1↵	Set the IP address assignment mode. Available values for N1: <table> <tr><td>STATIC</td><td>[Static IP mode]</td></tr> <tr><td>DHCP</td><td>[DHCP mode]</td></tr> </table>	STATIC	[Static IP mode]	DHCP	[DHCP mode]												
STATIC	[Static IP mode]																
DHCP	[DHCP mode]																
get ip mode↵	Show the current IP address assignment mode.																
get ipconfig↵	Show the unit's current IP configuration information.																
set ipaddr N1↵	Set the unit's static IP address. N1 = X.X.X.X [X = 0 ~ 255, IP address]																
get ipaddr↵	Show the unit's current IP address.																

COMMAND	
Description and Parameters	
set netmask N1↵	
Set the unit's static netmask.	
N1 = X.X.X.X	[X = 0 ~ 255, netmask]
get netmask↵	
Show the unit's current netmask.	
set gateway N1↵	
Set the unit's static gateway address.	
N1 = X.X.X.X	[X = 0 ~ 255, gateway address]
get gateway↵	
Show the unit's current gateway address.	
set encoder 1 profile N1 resolution N2↵	
Set the maximum resolution allowed for the specified streaming channel profile.	
N1 = 1~4	[Streaming channel profile number]
Available values for N2 :	
1920X1080	[1920×1080 max resolution]
1280X720	[1280×720 max resolution]
640X480	[640×480 max resolution]
352X288	[352×288 max resolution]
get encoder 1 profile N1 resolution↵	
Show the current maximum resolution allowed by the specified streaming channel profile.	
N1 = 1~4	[Streaming channel profile number]
set encoder 1 profile N1 bitrate N2↵	
Set the maximum bitrate (in Kbps) for the specified streaming channel profile.	
N1 = 1~4	[Streaming channel profile number]
N2 = 1~6000	[Max bitrate in Kbps]
get encoder 1 profile N1 bitrate↵	
Show the current maximum bitrate (in Kbps) used by the specified streaming channel profile.	
N1 = 1~4	[Streaming channel profile number]

COMMAND	
Description and Parameters	
set encoder 1 profile N1 framerate N2↵	
Set the maximum frame rate for the specified streaming channel profile.	
N1 = 1~4	[Streaming channel profile number]
N2 = 1~60	[Frames per second]
get encoder 1 profile N1 framerate↵	
Show the current maximum frame rate for the specified streaming channel profile.	
N1 = 1~4	[Streaming channel profile number]
set live stream mode N1↵	
Start or stop live streaming to the pre-set target service.	
Available values for N1 :	
ON	[Start streaming]
OFF	[Stop streaming]
get live stream mode↵	
Show the current state of the live stream to the pre-set target service.	
set live stream url N1↵	
Set the URL used to access the current live streaming target service.	
N1 = {text string}	[Target service Stream URL]
get live stream url↵	
Show the URL used to access the current live streaming target service.	
set live stream key N1↵	
Set the stream key used to authenticate with the current live streaming target service.	
N1 = {text string}	[Target service Stream Key]
get live stream key↵	
Show the stream key used to authenticate with the current live streaming target service.	

COMMAND	
Description and Parameters	
set live encode resolution N1↵	
Set the maximum encoding resolution to allow with the current live streaming target service.	
Available values for N1 :	
1920X1080	[1920×1080 max resolution]
1280X720	[1280×720 max resolution]
640X480	[640×480 max resolution]
352X288	[352×288 max resolution]
get live encode resolution↵	
Show the encoding resolution used with the current live streaming target service.	
set live encode bitrate N1↵	
Set the maximum streaming bitrate (in Kbps) to use with the current live streaming target service.	
N1 = 1~6000	[Max bitrate in Kbps]
get live encode bitrate↵	
Show the frame rate used with the current live streaming target service.	
set record mode N1↵	
Enable or disable recording.	
Available values for N1 :	
ON	[Enable recording]
OFF	[Disable recording]
get record mode↵	
Show the current recording status.	
set record overwrite N1↵	
Enable or disable record overwrite support.	
Available values for N1 :	
ON	[Enable overwrite support]
OFF	[Disable overwrite support]
get record overwrite↵	
Show the current state of record overwrite support.	

COMMAND	
Description and Parameters	
set record media path N1↵	
Set the target media for recording.	
Available values for N1 :	
AUTO	[Automatic selection]
USB	[Local recording to USB port]
SDCARD	[Local recording to SD card slot]
NFS	[Network recording via NFS]
CIFS	[Network recording via CIFS]
get record media path↵	
Show the current recording target media selection.	
set schedule record mode N1↵	
Enable or disable scheduled recording support.	
Available values for N1 :	
ON	[Enable scheduled recording]
OFF	[Disable scheduled recording]
get schedule record mode↵	
Show the current state of scheduled recording support.	
set record resolution N1↵	
Set the maximum resolution to allow when recording to the target media.	
Available values for N1 :	
1920X1080	[1920×1080 max resolution]
1280X720	[1280×720 max resolution]
640X480	[640×480 max resolution]
352X288	[352×288 max resolution]
get record resolution↵	
Show the currently selected recording resolution.	
set record bitrate N1↵	
Set the maximum bitrate (in Kbps) to use when recording to the target media.	
N1 = 1~6000	[Max bitrate in Kbps]
get record bitrate↵	
Show the current maximum recording bitrate (in Kbps).	

COMMAND	
Description and Parameters	
set record framerate N1↵	Set the frame rate to use when recording to the target media. N1 = 1~60 [Frames per second]
get record framerate↵	Show the current frame rate used when recording.
get record state↵	Show the current recording state of the device.
get memory N1 free size↵	Show the current storage space available on the specified storage interface. Available values for N1: 1 [Local USB storage] 2 [Local SD card storage] 3 [Network storage via NFS] 4 [Network storage via CIFS]
set date N1.N2.N3↵	Set the real time clock's year, month, and day (yyyy.mm.dd format). N1 = 2017 ~ 2116 [Year] N2 = 1 ~ 12 [Month] N3 = 1 ~ 31 [Day]
get date↵	Show the real time clock's current date (yyyy.mm.dd format).
set time N1:N2:N3↵	Set the real time clock's time (hh.mm.ss format). N1 = 0 ~ 23 [Hour] N2 = 0 ~ 59 [Minute] N3 = 0 ~ 59 [Second]
get time↵	Show the real time clock's current time (hh.mm.ss format).


COMMAND	
Description and Parameters	
set utc time offset N1:N2↵	Set the unit's UTC time offset value. N1 = 0 ~ 23 [Hour] N2 = -720 ~ 660 [Minute]
get utc time offset↵	Show the unit's UTC time offset value.
set dst mode N1↵	Enable or disable Daylight Saving Time support. Available values for N1 : ON [Enable Daylight Saving Time] OFF [Disable Daylight Saving Time]
get dst mode↵	Show the current state of Daylight Saving Time support.
set dst start month N1↵	Set the Daylight Saving Time start month value. N1 = 1 ~ 12 [Month]
get dst start month↵	Show the current Daylight Saving Time start month value.
set dst start weeks N1↵	Set the Daylight Saving Time start week value. N1 = 1 ~ 6 [Week number]
get dst start weeks↵	Show the current Daylight Saving Time start week value.
set dst start day N1↵	Set the Daylight Saving Time start day value. N1 = 1 ~ 31 [Day]
get dst start day↵	Show the current Daylight Saving Time start day value.

COMMAND
Description and Parameters
set dst start hour N1↵ Set the Daylight Saving Time start hour value. N1 = 0 ~ 23 [Hour]
get dst start hour↵ Show the current Daylight Saving Time start hour value.
set dst end month N1↵ Set the Daylight Saving Time end month value. N1 = 1 ~ 12 [Month]
get dst end month↵ Show the current Daylight Saving Time end month value.
set dst end weeks N1↵ Set the Daylight Saving Time end week value. N1 = 1 ~ 6 [Week number]
get dst end weeks↵ Show the current Daylight Saving Time end week value.
set dst end day N1↵ Set the Daylight Saving Time end day value. N1 = 1 ~ 31 [Day]
get dst end day↵ Show the current Daylight Saving Time end day value.
set dst end hour N1↵ Set the Daylight Saving Time end hour value. N1 = 0 ~ 23 [Hour]
get dst end hour↵ Show the current Daylight Saving Time end hour value.
set dst adjust time hour N1↵ Set the number of hours to add when Daylight Saving Time is active. N1 = 0 ~ 23 [Hour]

COMMAND	
Description and Parameters	
get dst adjust time hour↵	Show the current Daylight Saving Time hour adjustment value.
set dst adjust time minutes N1↵	Set the number of minutes to add when Daylight Saving Time is active. N1 = 0 ~ 59 [Minute]
get dst adjust time minutes↵	Show the current Daylight Saving Time minute adjustment value.

*Note: Commands will not be executed unless followed by a carriage return.
Commands are not case-sensitive.*

7. CONNECTION DIAGRAM

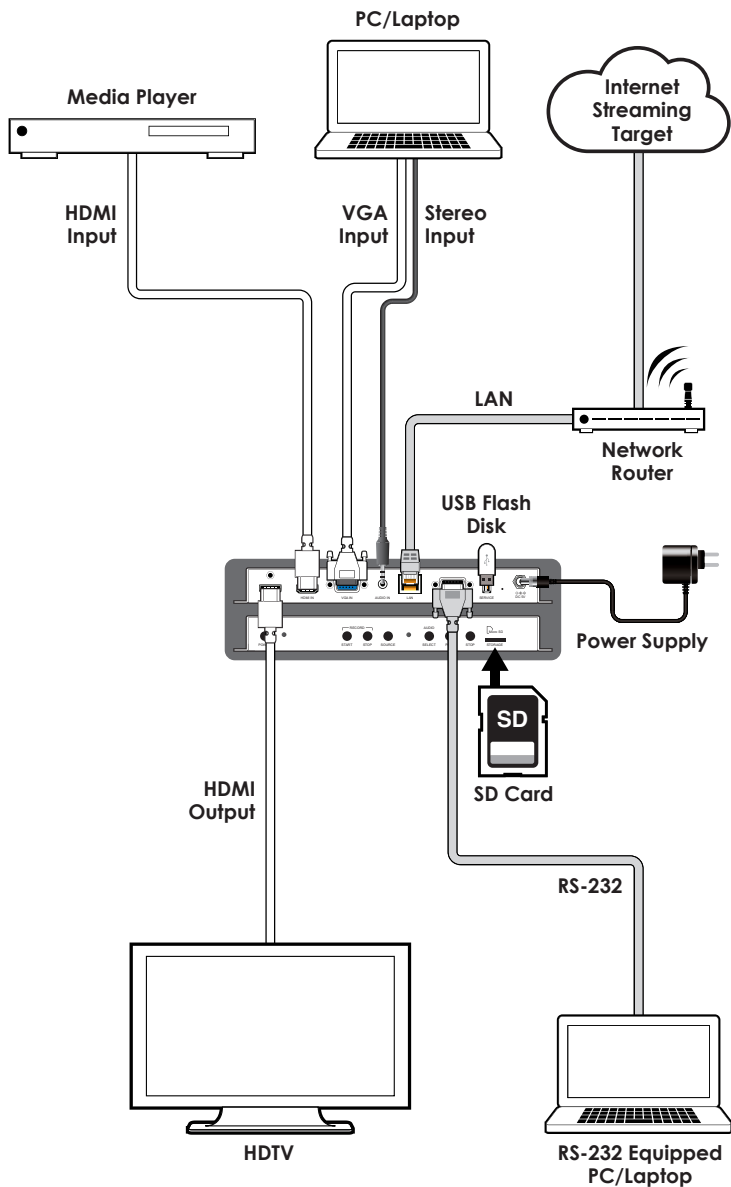

8. SPECIFICATIONS

8.1 Technical Specifications

HDMI Bandwidth	18Gbps
VGA Bandwidth	165MHz
Input Ports	1×HDMI (Type-A) 1×VGA (HD-15) 1×Stereo Audio (3.5mm)
Output Port	1×HDMI (Type-A)
Data Storage	1×Card Slot (SD card)
Control/Streaming Port	1×LAN (RJ-45)
Control Port	1×RS-232 (DE-9)
Service Port	1×USB 2.0 (Type-A)
Baud Rate	19200
Power Supply	5V/2.6A DC (US/EU standards, CE/FCC/UL certified)
ESD Protection (HBM)	±8kV (Air Discharge) ±4kV (Contact Discharge)
Dimensions (W×H×D)	231.5mm×25mm×108mm [Case Only] 231.5mm×25mm×117mm [All Inclusive]
Weight	659g
Chassis Material	Metal (Steel)
Chassis Color	Black
Operating Temperature	0°C – 40°C/32°F – 104°F
Storage Temperature	-20°C – 60°C/-4°F – 140°F
Relative Humidity	20 – 90% RH (Non-condensing)
Power Consumption	12.44W

8.2 Video Specifications

Supported Resolutions (Hz)	Input		Output	
	HDMI	VGA	HDMI	H.264
352×288p@25/30/50/60	×	×	×	✓
720×400p@70/85	×	×	✓	×
640×480p@25/30/50	×	×	×	✓
640×480p@60/72/75/85	60	60	✓	60
720×480i@60	×	×	✓	×
720×480p@60	✓	✓	✓	✓
720×576i@50	×	×	✓	×
720×576p@50	✓	✓	✓	✓
800×600p@56/60/72/75/85	60	60	✓	60
848×480p@60	✓	✓	✓	✓
1024×768p@60/70/75/85	60	60	✓	60
1152×864p@75	×	×	✓	×
1280×720p@25/30	✓	✓	×	✓
1280×720p@50/60	✓	✓	✓	✓
1280×768p@60/75/85	60	60	✓	60
1280×800p@60/75/85	60	60	✓	60
1280×960p@60/85	60	60	✓	60
1280×1024p@60/75/85	60	60	✓	60
1360×768p@60	✓	×	✓	✓
1366×768p@60	✓	✓	✓	✓
1400×1050p@60	×	×	✓	×
1440×900p@60/75	60	60	✓	60
1600×900p@60RB	✓	×	✓	✓
1600×1200p@60	✓	✓	✓	×

Supported Resolutions (Hz)	Input		Output	
	HDMI	VGA	HDMI	H.264
1680×1050p@60	✓	✓	✓	✓
1920×1080i@50/60	×	×	✓	×
1920×1080p@24/25/30	✓	✓	✓	25/30
1920×1080p@50/60	✓	✓	✓	✓
1920×1200p@60RB	×	×	✓	×
2560×1440p@60RB	×	×	✓	×
2560×1600p@60RB	×	×	✓	×
2048×1080p@24/25/30	×	×	✓	×
2048×1080p@50/60	×	×	✓	×
3840×2160p@24/25/30	✓	×	✓	×
3840×2160p@50/60 (4:2:0)	✓	×	✓	×
3840×2160p@24, HDR10	×	×	✓	×
3840×2160p@50/60 (4:2:0),HDR10	×	×	✓	×
3840×2160p@50/60	✓	×	✓	×
4096×2160p@24/25/30	✓	×	✓	×
4096×2160p@50/60 (4:2:0)	✓	×	✓	×
4096×2160p@24, HDR10	×	×	✓	×
4096×2160p@50/60 (4:2:0),HDR10	×	×	✓	×
4096×2160p@50/60	✓	×	✓	×

8.3 Audio Specifications

8.3.1 Digital Audio

HDMI Input / Output	
LPCM	
Max Channels	8 Channels
Sampling Rate (kHz)	32, 44.1, 48, 88.2, 96, 176.4, 192
Bitstream	
Supported Formats	Standard & High-Definition

Streaming Output	
LPCM	
Max Channels	2 Channels
Sampling Rate (kHz)	44.1, 48
Bitstream	
Supported Formats	None

8.3.2 Analog Audio

Analog Input	
Max Audio Level	2Vrms
Impedance	20k Ω
Type	Unbalanced

8.4 Cable Specifications

Cable Length	HD	FHD	4K UHD	4K UHD ⁺	8K UHD
High Speed HDMI Cable					
HDMI Input	5m			2m	×
HDMI Output	5m			2m	×
VGA Cable					
VGA Input	2m		×		
Ethernet Cable					
Cat.5e/6/6A/7	100m		×		

Bandwidth Category Examples:

- **HD Video**
 - 720p@60Hz
 - HDMI transmission rates lower than 3Gbps
 - HD-SDI (SMPTE 292M, 1.485Gbps)
- **FHD Video**
 - 1080p@60Hz
 - HDMI transmission rates between 3Gbps and 5.3Gbps
 - 3G-SDI (SMPTE 424M, 2.970Gbps)
- **4K UHD Video**
 - 4K@24/25/30Hz (8-bit color) & 4K@50/60Hz (4:2:0, 8-bit color)
 - HDMI transmission rates between 5.3Gbps and 10.2Gbps
 - 6G-SDI (SMPTE ST 2081, 6Gbps)
- **4K UHD⁺ Video**
 - 1080p@120Hz (10/12-bit HDR)
 - 4K@50/60Hz (4:4:4, 8-bit) & 4K@50/60Hz (4:2:0, 10/12-bit HDR)
 - HDMI transmission rates between 10.2Gbps and 18Gbps
 - 12G-SDI (SMPTE ST 2082, 12Gbps)
- **8K UHD Video**
 - 4K@120Hz (10/12-bit HDR)
 - 8K@24/25/30Hz (10/12-bit HDR) & 8K@50/60Hz (4:2:0, 8-bit color)
 - HDMI transmission rates between 18Gbps and 48Gbps
 - 24G-SDI (SMPTE ST 2083, 24Gbps)

9. ACRONYMS

ACRONYM	COMPLETE TERM
4K UHD	4K Ultra-High-Definition (10.2Gbps max)
4K UHD⁺	4K Ultra-High-Definition (18Gbps max)
8K UHD	8K Ultra-High-Definition (48Gbps max, without DSC)
8K UHD⁺	8K Ultra-High-Definition (48Gbps max, with DSC)
ADC	Analog-to-Digital Converter
AVoIP	Audio/Video over IP
Cat.5e	Enhanced Category 5 cable
Cat.6	Category 6 cable
Cat.6A	Augmented Category 6 cable
Cat.7	Category 7 cable
dB	Decibel
DHCP	Dynamic Host Configuration Protocol
EDID	Extended Display Identification Data
GbE	Gigabit Ethernet
Gbps	Gigabits per second
GUI	Graphical User Interface
HDCP	High-bandwidth Digital Content Protection
HDMI	High-Definition Multimedia Interface
HDR	High Dynamic Range
IP	Internet Protocol
kHz	Kilohertz
LAN	Local Area Network
LED	Light-Emitting Diode
LPCM	Linear Pulse-Code Modulation
MHz	Megahertz
OSD	On-Screen Display

ACRONYM	COMPLETE TERM
SNR	Signal-to-Noise Ratio
TCP	Transmission Control Protocol
THD+N	Total Harmonic Distortion plus Noise
TMDS	Transition-Minimized Differential Signaling
USB	Universal Serial Bus
VGA	Video Graphics Array
VLAN	Virtual LAN
VoIP	Video over IP
WUXGA (RB)	Widescreen Ultra Extended Graphics Array (Reduced Blanking)
XGA	Extended Graphics Array
Ω	Ohm



CYPRESS TECHNOLOGY CO., LTD.
www.cypress.com.tw
