



VIDEO SWITCHER **USER MANUAL**



QVP MVH41H

Seamless UHD Video Switcher
With Multiview Control

CONTENT

1. FEATURES	3
2. PANEL LAYOUT	3
3. REMOTER	5
4. EDID AND HDCP HANDLE.....	5
5. VIDEO AND AUDIO	6
6. MULTIVIEW.....	6
7. OSD MENU NAVIGATION.....	7
8. SPECIFICATION	8
9. PACKAGE CONTENTS.....	8
10. RS232 COMMAND.....	9
System command.....	9
Switching command, only available on SINGLE mode.....	9
Output command.....	10
Multiview command	10
Audio command	13
EDID command.....	14



WARNING

- Do not expose this device to Rain, Moisture, and Dripping
- Only use accessories specified by the manufacture
- Unplug this device during Lightning Storms
- The manual is for reference only, maybe updated without further notice

Introduction

The 4x Inputs and 1x Output seamless multiview video switcher was developed for the purpose of multiple sources displayed on a single screen and supporting high input and output resolutions.

User can easily manage it via the front buttons, remoter, USB or RS232 commands.

Application Field:

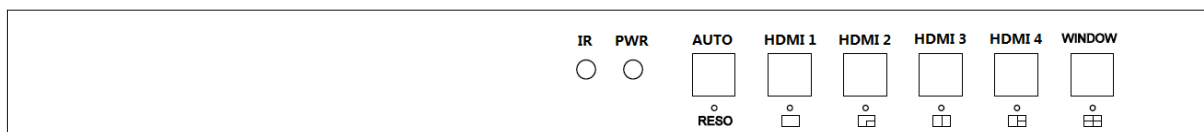
Home Theatre; Video Conference; Security Monitoring; Presentation and Broadcasting; Teaching System; Financial Stock Analysis; Game E-Sports; Medical Display.

1. Features

- 4x HDMI inputs, and 1x HDMI output
- Support HDMI 2.0, HDCP 2.2, support video resolution up to 3840x2160@60
- Support 5 categories of multiview modes, SINGLE, PIP, PBP, 3xWIN, 4xWIN
- Seamless switching on single window display mode
Fast switching on non-single window display modes
- Support volume control and independently audio selection
Support LPCM, AC3, DD+, DTS, DTS-HD, up to 7.1 audio channel
- Support OSD navigation for advanced setting
- Extensive EDID and HDCP control


2. Panel Layout


Front




Name	Description
AUTO, RESO	Press AUTO button to enable or disable auto switching function when work on single window display mode Long press this button for 3 seconds to change the output resolution (When the LED on the front panel goes off and turns on once, it means that the resolution is switched once)
HDMI 1, HDMI 2 HDMI 3, HDMI 4	Press these buttons to direct select HDMI 1, 2, 3, 4 to display. Long press these 4 buttons for 3 seconds to make the switcher directly work on Single, PIP, PBP or 3xWIN multiview mode
WINDOW	Press this button, then the screen will show up one yellow border on window 1. Continue press this button the border will be shown on window 2 or 3... then press one input button such as HDMI 1, and then HDMI 1 will displayed on the current selected window Long press this button for 3 seconds to directly select 4xWIN multiview mode

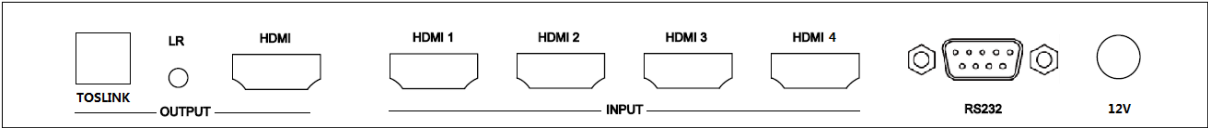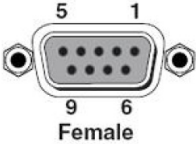Rear




Name	Description
HDMI out	HDMI scaling output up to 3840x2160@60
AUDIO OUTPUT	3.5mm L+R output, 20Hz ~ 20kHz, 1.5Vrms max; Toslink-optical output
INPUTs	HDMI 1, HDMI 2, HDMI 3, HDMI 4
RS232 control	Default baud rate 9600, 8 data bits, 1 stop bit, no parity PIN 2 TX (Matrix → PC) PIN 3 RX (Matrix ←PC) PIN 5 Ground 
12V	12V power adapter to plug in

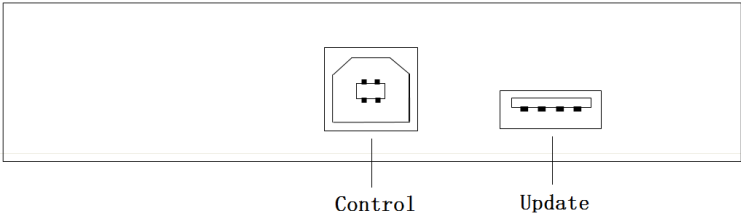Side



There are one USB-A port  and one USB-B port  on the side of the switcher. USB-A port is for firmware upgrade, USB-B port can be used for PC controlling (like RS232-DB9 controlling)

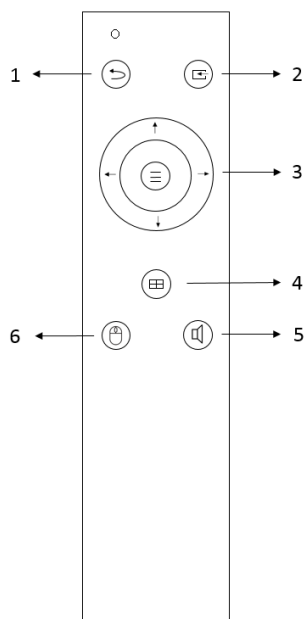3. Remoter



Number	Description
1	Return/Exit
2	Video input selection
3	OSD menu navigation Menu (Enter),UP, DOWN, LEFT,RIGHT
4	Multiview mode selection
5	Audio input selection
6	Reserved

4. EDID and HDCP handle

User can select following EDID modes by RS232 command or OSD menu navigation

Number	EDID mode	Number	EDID mode
1	4K60-2.0CH	10	1600x1200
2	4K60-5.1CH	11	1440x900
3	4K30-2.0CH	12	1360x768
4	4K30-5.1CH	13	1280x1024
5	1080P-2.0CH	14	1024x768
6	1080P-5.1CH	15	AUTO
7	720P	16	4K60-7.1CH
8	1920x1200	17	4K30-7.1CH
9	1680x1050	18	1080P-7.1CH
		19	USER

The HDMI output support 3 HDCP options: FORCE-1.4, FORCE-2.2, FORCE-OFF

User can select it by RS232 command

5. Video and Audio

The switcher support multiple resolution video input up to 3840x2160@60, and support multiple audio format such as LPCM, AC3, DD+, DTS, DTS-HD, up to 7.1 channel pass through function via HDMI cable

User can control the audio volume when the audio input is LPCM format

The switcher support following video output resolution by a powerful scaling engine

Number	Output Resolution	Number	Output Resolution
1	4096x2160p 60Hz	8	1920x1080p 60Hz
2	4096x2160p 50Hz	9	1920x1080p 50Hz
3	3840x2160p 60Hz	10	1360x768p 60Hz
4	3840x2160p 50Hz	11	1280x800p 60Hz
5	3840x2160p 30Hz	12	1280x720p 60Hz
6	3840x2160p 25Hz	13	1280x720p 50Hz
7	1920x1200p60Hz RB	14	1024x768 60Hz

6. Multiview

The Switcher support 5 categories of multiview display modes

SINGLE, PIP, PBP, 3xWIN, 4xWIN

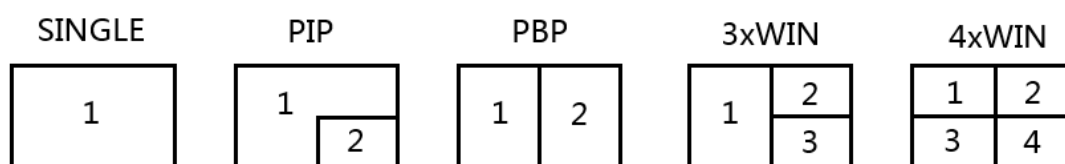
Users can select different operations for different Multiview modes as following:

SINGLE: Inputs selection

PIP: Inputs selection, Display Ratio selection, Sub window size and position selection

PBP, 3xWIN, 4xWIN: Inputs selection, Layout Mode, Display aspect

Multiview window distribution as following



7. OSD Menu Navigation

Total 6 buttons used for OSD navigation, MENU, EXIT, UP, DOWN, LEFT, RIGHT

Menu contents as following:

Output	Resolution	3840x2160p60	3840x2160p60,...
	VKA	BLACKSCREEN,	BLACKSCREEN, BLUESCREEN
	4K-Auto	ON	ON,OFF
	ITC	OFF	ON,OFF
Multiview	Single	Input select	HDMI1, ...
	PIP	Win1 Select	HDMI1,...
		Win2 Select	HDMI1,...
		PIP Position	RightBottom,...
		PIP Size	SMALL,...
	PBP	Win1 Select	HDMI1,...
		Win2 Select	HDMI1,...
		MODE	1, 2
		Aspect	Full, 16:9
	3xWIN	Win1 Select	HDMI1,...
		Win2 Select	HDMI1,...
		Win3 Select	HDMI1,...
		MODE	1, 2
		Aspect	Full, 16:9
	4xWIN	Win1 Select	HDMI1,...
		Win2 Select	HDMI1,...
		Win3 Select	HDMI1,...
		Win4 Select	HDMI1,...
		MODE	1, 2
		Aspect	Full,16:9
AUDIO	Audio Select	WIN1	WIN1,HDMI1,...
	Volume	50	0..100
	AUDIO-MUTE	OFF	ON, OFF

System	Language/语言	English	English, 中文
	EDID	4K60-2.0	4K60-2.0,...
	Baud rate	9600	9600, 19200, 38400,57600, 115200
	Reset		
	FW Version		Read only

Please note, for **ITC** setting, suggest **OFF** for video display and **ON** for PC especially desktop display, default setting is **OFF**

8. Specification

Band Width	594MHz (18Gbps), HDMI 2.0, HDCP2,2
Audio Format	LPCM, AC3, DD+, DTS, DTS-HD Up to 7.1 channel
Input ports	4x HDMI
Output ports	1x HDMI 1x 3.5mm LR audio 1x Toslink digital audio
Power Supply	12V/3A ,12W max
Operating Temperature	0 to +40°C (+32 to +104 °F)
Operating Humidity	10 to 70 % RH (non-condensing)
ESD	Air: ± 8KV, Contact: ± 4KV,
Dimensions	L225 x W100 x H25 mm
Mass (Main Unit)	0.75kg

9. Package Contents

Item	Quantity
Switcher Unit	1
12V/3A power adapter	1
User Manual	1
Remoter	1

10. RS232 command

Note: All the commands begin with SET or GET, end with Carriage Return (CR).

↵ Represents Carriage Return (CR).

All return messages are always end with CR.

System command

Command	Details
GET HELP↵	Get the Commands list
SET RESET↵	Recover to default setting
GET VERSION↵	Get firmware version Return: VERSION w (w is version number)
SET BAUDRATE w↵	w is 9600, 19200, 38400, 57600 or 115200 Return: BAUDRATE w
GET BAUDRATE w↵	Return: BAUDRATE w

Switching command, only available on SINGLE mode



Commands	Details
SET AUTO SWITCH w↵	w is ON or OFF, default OFF
	Return: AUTO SWITCH w
GET AUTO SWITCH↵	Return: AUTO SWITCH w
SET IN SOURCE w↵	w is one of the following: HDMI1, HDMI2, HDMI3, HDMI4 Return: IN SOURCE w
GET IN SOURCE↵	Get current input channel selection information Return: IN SOURCE w
GET IN RESOLUTION↵	Get current input resolution Return: IN RESOLUTION w (w is input resolution)
GET IN STATUS↵	Get status of all input ports x is HDMI1...HDMI4 Return: IN STATUS x VALID(or INVALID) If input port is valid, Return: IN STATUS x InputRes ColorSpace ColorDepth




Output command

Commands	Details
SET OUT RESOLUTION w↵	w is one of the following, default: 1920x1080p60 4096x2160p60, 4096x2160p50, 3840x2160p60, 3840x2160p50, 3840x2160p30, 3840x2160p25, 1920x1200p60RB, 1920x1080p60, 1920x1080p50, 1360x768p60, 1280x800p60, 1280x720p60, 1280x720p50, 1024x768p60, AUTO, USER Return: OUT RESOLUTION w
GET OUT RESOLUTION↵	Get current output resolution setting Return: OUT RESOLUTION w
SET RESO-USER Width	Set user define output resolution
Height↵	Width is horizontal active pixels Height is vertical active lines For user define output resolution,the frame rate is always 60Hz Return: RESO-USER Width Height↵
GET RESO-USER↵	Return: RESO-USER Width Height↵
SET OUT HDCP w↵	w is one of following, default FORCE-OFF FORCE-1.4,FORCE-2.2,FORCE-OFF Return: OUT HDCP w
GET OUT HDCP↵	Return: OUT HDCP w
SET OUT VKA w↵	w is BLUESCREEN or BLACKSCREEN. Default BLACKSCREEN. It is for no signal display Return: OUT VKA w
GET OUT VKA↵	Return: OUT VKA w
SET OUT ITC w↵	w is ON or OFF, default OFF Return: OUT ITC w
GET OUT ITC↵	Return: OUT ITC w

Multiview command

Commands	Details
SET MULTIVIEW w↵	Select one Multiview mode for current display w is one of the following, default SINGLE SINGLE  , PIP  , PBP  , 3xWIN  , 4xWIN  Return: MULTIVIEW w
GET MULTIVIEW↵	Get the current Multiview mode Return: MULTIVIEW w
SET WINDOWx IN y↵	Set user define output resolution
Height↵	Select one input for one display window for the current Multiview mode. x is one of 1, 2, 3 or 4 y is one of HDMI1, HDMI2, HDMI3, HDMI4 Return: WINDOWx IN y

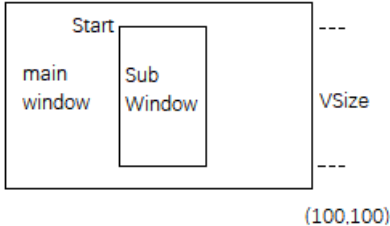GET WINDOWx IN↵	This command to get which is the input source for one display window for the current Multiview mode Return: WINDOWx IN y
SET FREEZE-WINx w	Freeze the display window,x is one of 1, 2, 3,4 or ALL, w is ON or OFF Return: FREEZE-WINx w
GET FREEZE-WINx	x is one of 1, 2, 3 ,4. Return: FREEZE-WINx w (w is ON or OFF)
SET PIP POS w↵	This command to select the PIP sub window position. w is one of the following, default RightBottom LeftTop, LeftBottom, RightTop, RightBottom, USER Return: PIP POS w
GET PIP POS↵	This command to get the PIP sub window position Return: PIP POS w
SET PIP SIZE w↵	This command to select the PIP sub window size. w is one of the following, default LARGE SMALL,MIDDLE, LARGE, USER Return: PIP SIZE w
GET PIP SIZE↵	Return: PIP SIZE w
SET PIP USER HStart VStart HSize VSize↵	Return: PIP USER HStart VStart HSize VSize This command allows users to customize a PIP layout include sub window position and size. This customized PIP layout will replace other pre-defined PIP modes (such as LeftTop,LARGE) and display on the screen After the user enters SET PIP POS or SET PIP SIZE command,the PIP USER will become invalid Please note HStart plus HSize less than or equal to 101 VStart plus VSize less than or equal to 101 (1.1)  Please note HStart plus HSize less than or equal to 101 VStart plus VSize less than or equal to 101
GET PIP USER↵	Return: PIP USER HStart VStart HSize VSize
SET PBP MODE w↵	Set the PBP display mode w is one of 1,2 or 3, default 1 1 2 3  Return: PBP MODE w Please note for PBP mode 3, window2 can capture part of the input image area. It is main used for presenter show when work with conference camera situations The capture area can be defined by SET PBP-PRE-SENDER command

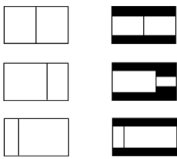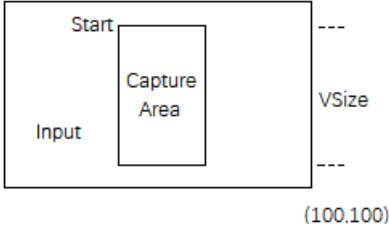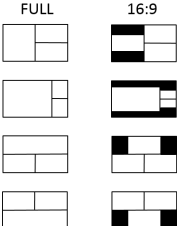GET PBP MODE↵	Return: PBP MODE w
SET PBP ASPECT w↵	Set the PBP window display aspect w is FULL or 16:9, default FULL FULL 16:9  Return: PBP ASPECT w
GET PBP ASPECT↵	Return: PBP ASPECT w
SET PBP-PRESENTER HStart VStart HSize VSize↵	Set window 1 capture area for PBP mode 3 This command only valid when the switcher already work on PBP mode 3 Return: PBP-PRESENTER HStart VStart HSize VSize (1,1) HSize  (100,100) Default HStart 38, VStart 13, HSize 25, VSize 75 Please note HStart plus HSize less than or equal to 101 VStart plus VSize less than or equal to 101
GET PBP-PRESENTER↵	Return: PBP-PRESENTER HStart VStart HSize VSize
SET 3xWIN MODE w↵	Set the 3xWIN display mode w is one of 1,2,3 or 4, default 1 1 2 3 3  Return: 3xWIN MODE w
GET 3xWIN MODE↵	Return: 3xWIN MODE w
SET 3xWIN ASPECT w↵	Set the 3xWIN window display aspect w is FULL or 16:9, default FULL FULL 16:9  Return: 3xWIN ASPECT w
GET 3xWIN ASPECT↵	Return: 3xWIN ASPECT w
SET 4xWIN MODE w↵	Set the 4xWIN display mode w is 1 or 2 , default 1 1 2  Return: 4xWIN MODE w

GET 4xWIN MODE↵	Return: 4xWIN MODE w
SET 4xWIN ASPECT w↵	Set the 4xWIN window display aspect w is FULL or 16:9, default FULL FULL   16:9   Return: 4xWIN ASPECT w
GET 4xWIN ASPECT↵	Return: 4xWIN ASPECT w
GET MULTIVIEW-SYNC↵	Return Multiview layout information
SET SAVE SCENE w↵	Save current display scene w is 1, 2,...20 Return: SAVE SCENE w
SET LOAD SCENE w↵	Load display scene w is 1, 2,...20 Return: LOAD SCENE w

Audio command

Commands	Details
SET AUDIO SOURCE w↵	w is one of the following: WIN1, HDMI1, HDMI2, HDMI3, HDMI4 Return: AUDIO SOURCE w
GET AUDIO SOURCE↵	Return: AUDIO SOURCE w
SET AUDIO VOL+↵	Increase audio out volume Return: AUDIO VOL w (w is the volume value)
SET AUDIO VOL-↵	Decrease audio out volume Return: AUDIO VOL w (w is the volume value)
SET AUDIO VOL w↵	Set audio volume value w is 0,1...,or 100, default 100 For example: SET AUDIO VOL 100 Return: AUDIO VOL w
GET AUDIO VOL↵	Return: AUDIO VOL w
SET AUDIO-MUTE w↵	Mute or unmute audio output Here w is ON or OFF, default OFF Return: AUDIO-MUTE w
GET AUDIO-MUTE↵	Return: AUDIO-MUTE w

EDID command

The following commands are used to set EDID mode for the inputs

Commands	Details
SET IN EDIDMODE w↵	w is one of the following: 4K60-2.0, 4K60-5.1, 4K60-7.1, 4K30-2.0, 4K30-5.1, 4K30-7.1, 1080p60-2.0, 1080p60-5.1, 1080p60-7.1, 1920x1200, 1680x1050, 1600x1200, 1440x900, 1360x768, 1280x1024, 1024x768, 720p, AUTO, USER Default: 4K60-2.0 Return: IN EDIDMODE w
SET EDID-USER w↵	Switcher can only support 256 bytes EDID-USER data. w is 256 bytes EDID data. Return: EDID-USER OK
GET IN EDIDMODE↵	Return: IN EDIDMODE w



QTEx.RU