



# USER MANUAL

## MODEL:

**WP-20CT**

**Wall-Plate HDBaseT Auto  
Switcher/Transmitter**



# Contents

<b>Introduction</b>	<b>1</b>
Getting Started	1
Overview	2
Typical Applications	3
<b>Defining WP-20CT Wall-Plate HDBaseT Auto Switcher/Transmitter</b>	<b>4</b>
<b>Mounting WP-20CT</b>	<b>6</b>
<b>Connecting WP-20CT</b>	<b>8</b>
Connecting to WP-20CT via RS-232	9
Wiring RJ-45 Connectors	9
Connecting USB-C Port Directly to PC	9
<b>Principles of Operation</b>	<b>12</b>
Input Auto-Switching	12
Maestro Built-in Automation Configuration	13
Setting HDBT RS-232 Control Communication	14
<b>Operating and Controlling WP-20CT</b>	<b>17</b>
Browsing WP-20CT Web Pages	18
Switching Input to Output	19
Muting and Adjusting Audio Output	20
Turning Off Video Output	20
Configuring Auto-Switching Mode	21
Defining Signal Timeout Settings	22
Configuring AV Settings	23
Copying EDID	24
Changing Device Name	25
Setting Auto Standby Delay	26
Exporting and Importing a Configuration File	26
Resetting Device	27
Configuring Network Settings	27
Configuring Time and Date	28
Changing Web Pages Access Password	28
Setting Web Pages Auto Logoff Timeout	29
Configuring Device Automation	29
<b>Maintaining Device</b>	<b>34</b>
Upgrading Firmware	34
Monitoring Device Status	34
<b>Technical Specifications</b>	<b>36</b>
Default Communication Parameters	37
Default Control and Automation Settings	37
Default EDID	39
<b>Protocol 3000</b>	<b>42</b>
Understanding Protocol 3000	42
Protocol 3000 Commands	43
Result and Error Codes	52

# Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better!

---

## Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment.
- Review the contents of this user manual.



Go to [www.kramerav.com/downloads/WP-20CT](http://www.kramerav.com/downloads/WP-20CT) to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

## Achieving Best Performance

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables).
- Do not secure the cables in tight bundles or roll the slack into tight coils.
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality.
- Position your Kramer **WP-20CT** away from moisture, excessive sunlight and dust.

## Safety Instructions



### Caution:

- This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.
- For products with relay terminals and GPIO ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.



### Warning:

- Use only the power cord that is supplied with the unit.
- To ensure continuous risk protection, replace fuses only according to the rating specified on the product label which is located on the bottom of the unit.

## Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at [www.kramerav.com/il/quality/environment](http://www.kramerav.com/il/quality/environment).

---

## Overview

Congratulations on purchasing your Kramer **WP-20CT Wall-Plate HDBaseT Auto Switcher/Transmitter**. **WP-20CT** is an intelligent 2x1 automatic wall-plate switcher transmitter over long-reach HDBaseT for 4K USB-C and HDMI™ video signals. **WP-20CT** offers an intelligent switching experience with built-in Maestro room control and the standard priority / last-connected switching function based on active video signal detection.

- High Performance Switcher Transmitter – Professional HDBaseT switcher transmitter for providing long-reach signals over twisted pair copper infrastructures. This switcher transmitter is a standard transmitter that can be connected to any market-available HDBaseT-compliant extension product.
- Simple and Powerful Maestro Room Control – Out-of-the-box configured room control for a typical meeting room setup, and intuitive user interface enables you to control your meeting room elements. Room devices are controlled, locally or remotely via HDBaseT, right out-of-the-box by an extensive range of triggers, including input/output connectivity and routing. By minimizing user intervention, Maestro room control saves meeting prep time and minimizes human error before presentations.
- Automatic Display Operation – Part of the out-of-the-box Maestro configured room automation. Meeting presentation is simplified by automatically turning ON/OFF a CEC-enabled display when the presentation source is plugged in / unplugged with user-defined shut-down delay.
- BYOD Ease and Convenience – Connect any DP-Alt-Mode-capable USB-C device as an AV presentation source, while providing the connected device (if PD-2.0-capable) with up to 60 watts of power.
- Plug & Play Auto Switcher – Automatically plays the switched user device source signal on the connected display according to user-configured preferences, such as priority or last-connected input. When the user manually switches, the auto switching is overridden.
- HDMI™ Signal Switching – HDCP 2.3 compliant, supporting deep color, x.v.Color™, lip sync, HDMI uncompressed audio channels, Dolby TrueHD, DTS-HD, 2K, 4K, and 3D as specified in HDMI 2.0.
- I-EDIDPro™ Kramer Intelligent EDID Processing™ – Intelligent EDID handling, processing, locking and pass-through algorithm ensures plug & play operation for HDMI source and display systems.

- Multi-channel Audio Switching – Up to 8 channels of digital stereo uncompressed signals for supporting studio-grade surround sound.
- Audio De-embedding – The digital audio signal passing-through to the output, is de-embedded, converted to an analog signal and sent to the stereo analog audio output. This enables playing the audio on locally connected speakers, in parallel to playing it on the speakers connected to the AV acceptor device (such as TVs with speakers).
- Bidirectional RS-232 Extension – Serial interface data flows in both directions, allowing data transmission and device control.
- Reliable PoE (Power over Ethernet) Powering – Auto-senses the HDBaseT extension line PoE status, it accepts power from a remote PoE provider such as a PoE matrix, with optional mains powering from connected power adapter.
- Cost-effective Maintenance and Management – Status LED indicators for Power, HDMI, and HDBaseT ports facilitate easy local maintenance and troubleshooting. Local device management using built-in web interface via the USB-C connection. Local firmware upgrade via USB-C and RS-232 connection tool ensure lasting, field-proven deployment.
- Easy Installation – Compactly fits into standard US, EU, and UK 1 gang in-wall box size, supporting decorative integration with room deployed user interfaces such as electrical switches. Wall-plate installation is fast and cost-effective via a single twisted pair cable, providing both video signal and power (PoC) connections.

---

## Typical Applications

WP-20CT is ideal for the following typical applications:

- Podium-mounted switcher in lecture halls, training rooms, auditoriums, and hospitality applications.
- Wall-mounted switcher within any AV distribution system.
- Multimedia and presentation source selection in various enterprise applications.

# Defining WP-20CT Wall-Plate HDBaseT Auto Switcher/Transmitter

This section defines WP-20CT.

US-D Version  
Front

EU/UK Version  
Front

US-D/EU/UK Version  
Rear

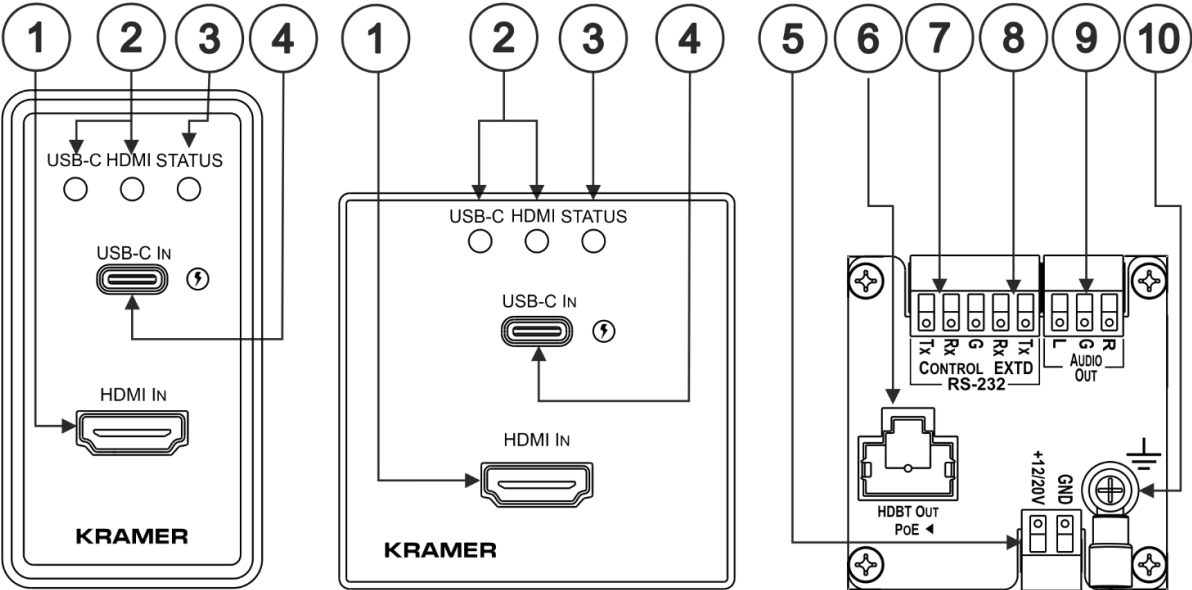


Figure 1: WP-20CT Wall-Plate HDBaseT Auto Switcher/Transmitter Front Panel

#	Feature	Function
1	HDMI™ IN Connector	Connects to an HDMI source.
2	USB-C LED	<ul style="list-style-type: none"> <li>Off – an input source is not connected.</li> <li>Blue – an active signal is detected on the input.</li> <li>Blue, flashing – the source is connected but an active signal is not detected.</li> </ul>
	HDMI LED	
3	STATUS LED	<ul style="list-style-type: none"> <li>Off – the device is not receiving power.</li> <li>Red – the powered device is inactive or booting.</li> <li>Green – the device is active and powered via power supply.</li> <li>Orange – the device is active and powered via PoE.</li> <li>Green or orange (depending on power source), flashing slowly – the device is in the power-save standby mode.</li> <li>Green or orange (depending on power source), fast-flashing – firmware is downloading in the background.</li> </ul>

#	Feature	Function
④	USB-C IN Port	<p>Connect to a USB-C source (that supports DisplayPort Alternate Mode video, USB data and power charging).</p> <ul style="list-style-type: none"> <li>• When powered by a Kramer 20V power supply (optional), charges sources (that support USB Power Delivery 2.0) up to 60W.</li> <li>• Use to access <b>WP-20CT</b> embedded web pages via connected browser.</li> </ul>
⑤	12V/20V Power Supply 2-pin Terminal Block Connector	<p>Connect to the power supply (required for USB charging). Connect GND to GND, +12V/20V to +12/20V.</p> <ul style="list-style-type: none"> <li>• If you need to charge a device via the USB-C port, use Kramer 20V power supply (optional).</li> </ul>
⑥	HDBT OUT PoE ◀ RJ-45 Connector	<p>Connect to the HDBaseT IN port on a PoE-provider receiver (for example, <b>TP-789R</b>) or a receiver (for example, <b>TP-580R</b>).</p> <ul style="list-style-type: none"> <li>• When <b>WP-20CT</b> is connected to a PoE providing receiver, it is not necessary to connect a power supply, unless the USB-C charging feature is used which requires the Kramer 20V power supply.</li> </ul>
⑦	CONTROL RS-232 3-pin Terminal Block Connector (Tx, Rx, and common G)	Connect to a controller to control the device.
⑧	EXTD RS-232 3-pin Terminal Block Connector (Tx, Rx, and common G)	<p>Connect to a controller to extend an RS-232 bi-directional communication signals (even if no A/V signal is extended) over HDBT to the RS-232 port of the remote receiver.</p> <p>Note: applicable only when this port is set to RS-232 extension (see <a href="#">Setting HDBT RS-232 Control Communication</a> on page 14).</p>
⑨	AUDIO OUT 3-pin Terminal Block Connector	Connect to an unbalanced analog audio acceptor.
⑩	Ring Tongue Terminal Grounding Screw	Connect to grounding wire (optional).

# Mounting WP-20CT

This section provides instructions for mounting **WP-20CT**. Before installing, verify that the environment is within the recommended range:



- Operation temperature – 0° to 40°C (32 to 104°F).
- Storage temperature – -40° to +70°C (-40 to +158°F).
- Humidity – 10% to 90%, RHL non-condensing.



Before mounting, connect the HDBaseT cable and power




## Warning:

- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.


## To mount WP-20CT:

Insert the device into the in-wall box (note that first you need to connect the HDBaseT cable and power) and connect the parts as shown in the illustrations below:

### EU/UK Version

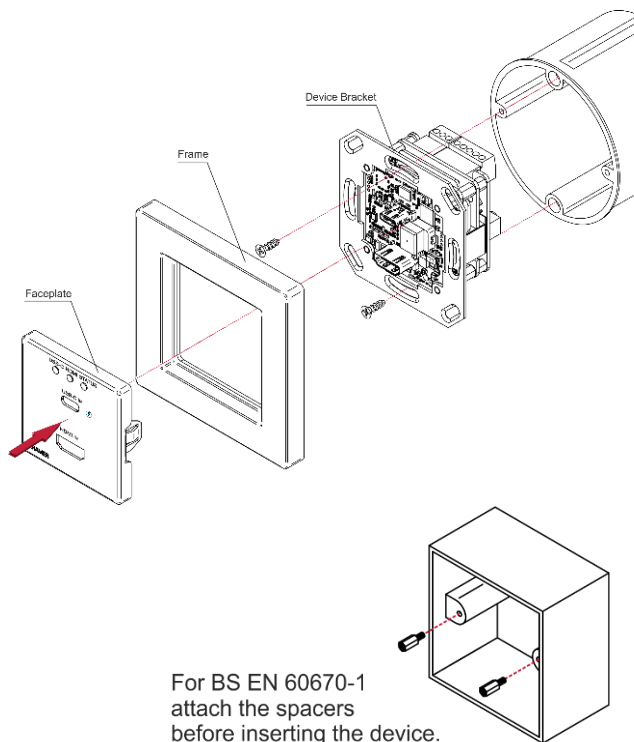

### US-D Version

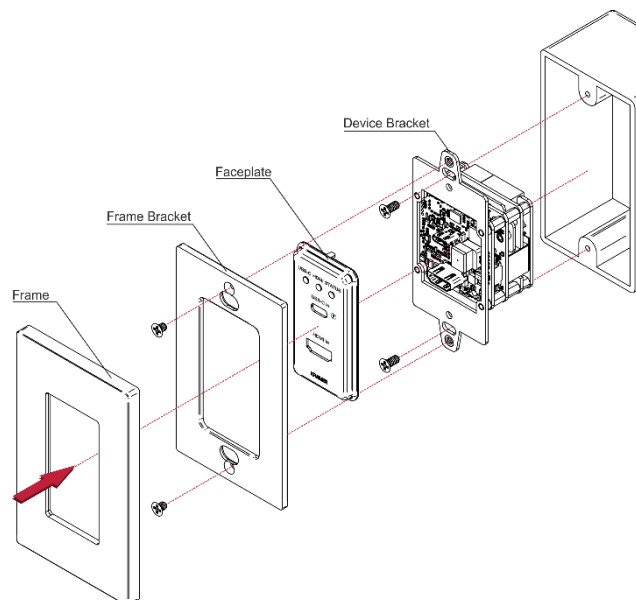

DECORA® design frames are included in US-D models. DECORA® is a registered trademark of Leviton Manufacturing Co., Inc.



We recommend that you use any of the following standard 1 Gang in-wall junction boxes (or their equivalent):

- **US-D:** 1 Gang US electrical junction boxes.
- **EU:** 1 Gang in-wall junction box, with a cut-hole diameter of 68mm and depth that can fit in both the device and the connected cables (DIN 49073).
- **UK:** 1 Gang in-wall junction box, 75x75mm (W, H) and depth that can fit in both the device and the connected cables (BS 4662 or BS EN 60670-1 used with supplied spacers and screws).

# Connecting WP-20CT



Always switch off the power to each device before connecting it to your **WP-20CT**.

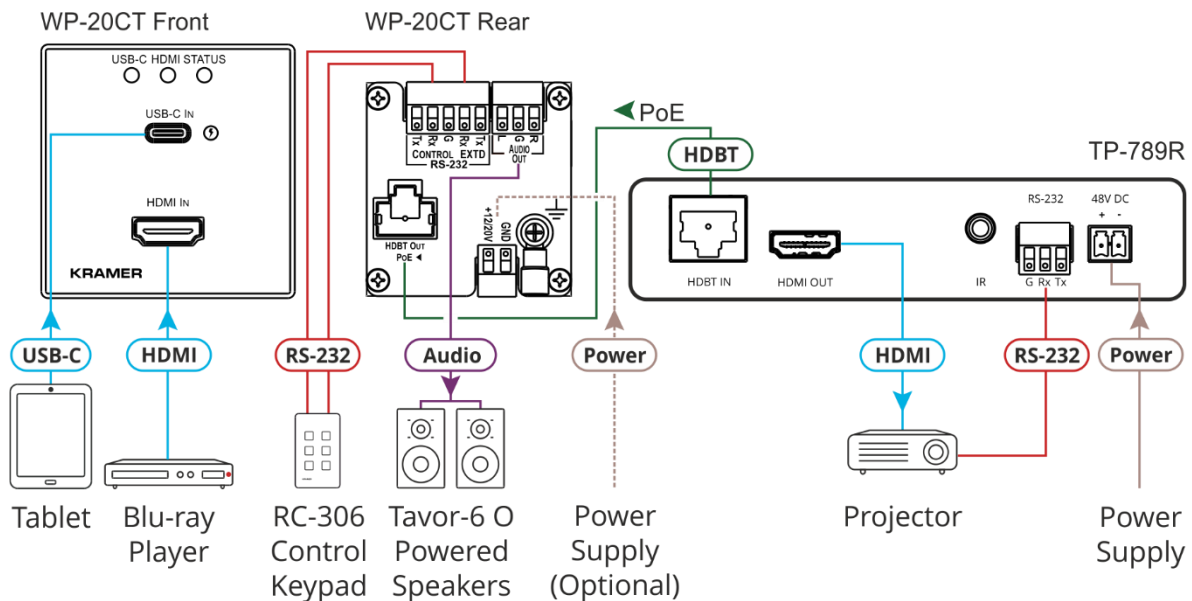


Figure 2: Connecting to the WP-20CT Rear Panel

To connect WP-20CT as illustrated in the example in [Figure 2](#):

1. Connect the HDMI source (for example, a Blu-ray player) to the HDMI IN connector (1).
2. Connect the USB-C source (for example, a tablet) to the USB-C IN connector (4).
3. Connect a controller (for example, RC-306 control keypad) to the Control RS-232 connector (7) to control WP-20CT and to the EXTD RS-232 connector (8) to control a device on the receiver side via serial communication.
4. Connect the HDBaseT OUT connector (6) to the HDBaseT input of a PoE-provider receiver (for example, TP-789R) or a non-PoE receiver (for example, TP-580R).
5. Connect an RS-232-controlled device (for example, a projector) to the receiver HDMI input and RS-232 connector.
6. Connect the included 12V power supply to the 12V/20V connector (6) for powering the unit when connected to a non-PoE receiver.

-OR-

Connect an optional PS-2006-O 20V/6A Kramer power supply to the 12V/20V connector (6) to enable the USB-C charging feature.

## Connecting to WP-20CT via RS-232


You can connect to **WP-20CT** via an RS-232 connection <sup>(13)</sup> using, for example, a PC.

**WP-20CT** features an RS-232 3-pin terminal block connector allowing the RS-232 to control **WP-20CT**.

Connect the RS-232 terminal block on the rear panel of **WP-20CT** to a PC/controller, as follows:

From the RS-232 9-pin D-sub serial port connect:

- Pin 2 to the TX pin on the **WP-20CT** RS-232 terminal block
- Pin 3 to the RX pin on the **WP-20CT** RS-232 terminal block
- Pin 5 to the G pin on the **WP-20CT** RS-232 terminal block

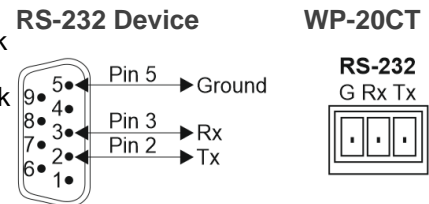


## Wiring RJ-45 Connectors

This section defines the HDBT pinout, using a straight pin-to-pin cable with RJ-45 connectors.



For HDBaseT cables, it is recommended that the cable ground shielding be connected/soldered to the connector shield.

EIA /TIA 568B	
PIN	Wire Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

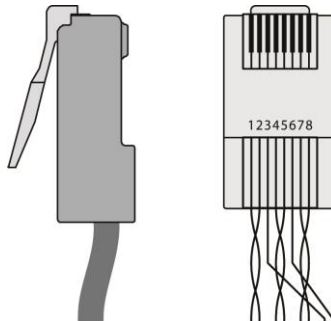

## Connecting USB-C Port Directly to PC

You can connect the USB-C IN port of **WP-20CT** directly to the USB port on your PC using a USB-C to USB-C cable. This enables you to configure and operate the device using the embedded web pages (see [Operating and Controlling WP-20CT](#) on page 17).

After connecting **WP-20CT** to the USB-C port, configure your PC as follows:

1. Click **Start > Control Panel > Network and Sharing Center**.
2. Click **Change Adapter Settings**.
3. Highlight the **ASIX** network adapter to connect to the device and click **Change settings of this connection**.

The Ethernet Properties window for the selected network adapter appears as shown in [Figure 3](#).

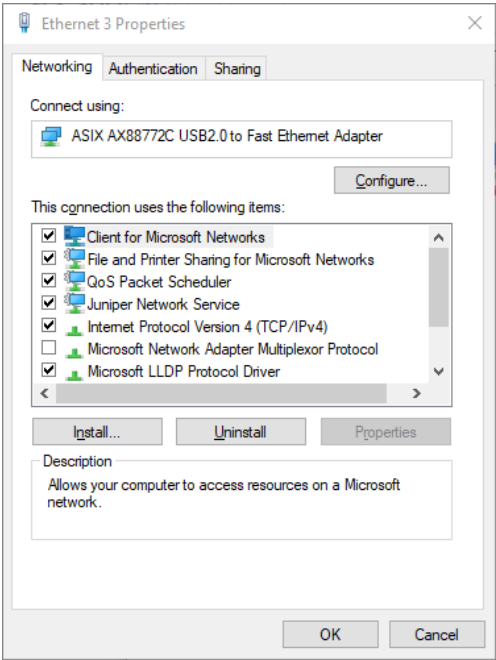


Figure 3: Local Area Connection Properties Window

- 4. Highlight **Internet Protocol Version 4 (TCP/IPv4)** depending on the requirements of your IT system.
- 5. Click **Properties**.

The Internet Protocol Properties window relevant to your IT system appears as shown in [Figure 4](#) or [Figure 5](#).

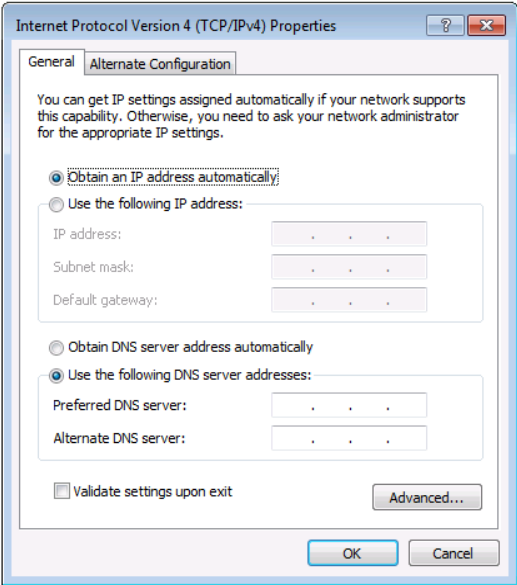


Figure 4: Internet Protocol Version 4 Properties Window

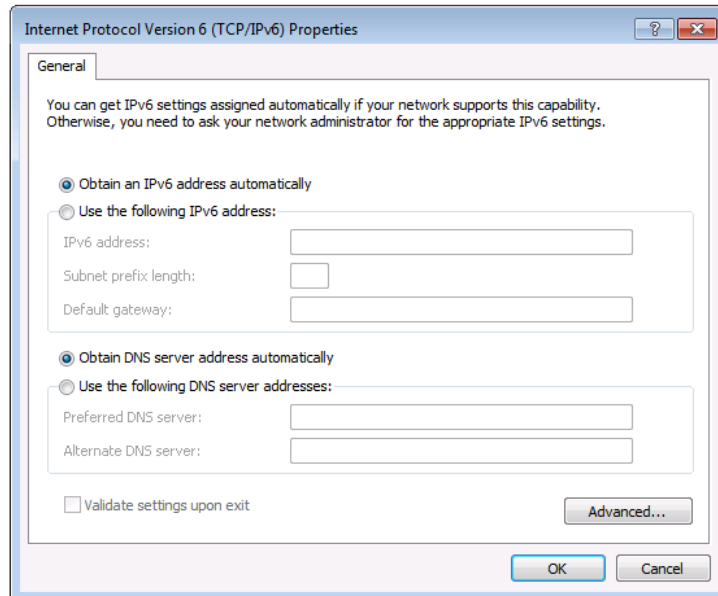


Figure 5: Internet Protocol Version 6 Properties Window

6. Select **Use the following IP Address** for static IP addressing and fill in the IP address and Subnet mask as shown in [Figure 6](#).

You can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.39) that is provided by your IT department.

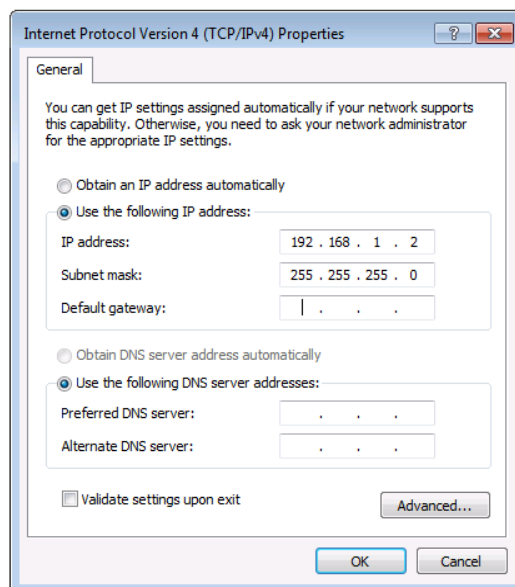


Figure 6: Internet Protocol Properties Window

7. Click **OK**.
8. Click **Close**.
9. Browse to the fallback IP address or default hostname of the device.

# Principles of Operation

---

## Input Auto-Switching

Input selection is set via the web pages (see [Configuring Auto-Switching Mode](#) on page [21](#)) to one of the following modes:

- Manual
- Last connected
- Priority

By default, switching is set to Last connected.



When in Manual mode, note the following:

- Switching to an unconnected input, results in a blank screen on the output.
- Manual switching overrides auto-switch mode.

In manual mode, select an input by:

- Sending RS-232 serial commands control (see [Protocol 3000 Commands](#) on page [43](#)).
- Using the embedded web pages (see [Browsing WP-20CT Web Pages](#) on page [18](#)).

In auto-switching mode, switching selection is performed based on either last connected or priority input:

- In last connected mode, if the signal on the current input is lost, **WP-20CT** automatically selects the last connected input (the delay depends on a configurable timeout).
- In priority mode, when the input sync signal is lost for any reason, the input with a live signal and next in priority is selected automatically, (the delay depending on the configurable signal-lost timeout, (see [Defining Signal Timeout Settings](#) on page [22](#)).

## Maestro Built-in Automation Configuration

**WP-20CT** built-in Maestro automation enables configuring triggers to simply create a sequence of actions that are carried out following trigger activation (see [Configuring Device Automation](#) on page 29).

Thanks to out-of-the-box default configuration, **WP-20CT** is ready to control the following typical room configuration that can be controlled via several Maestro triggers.

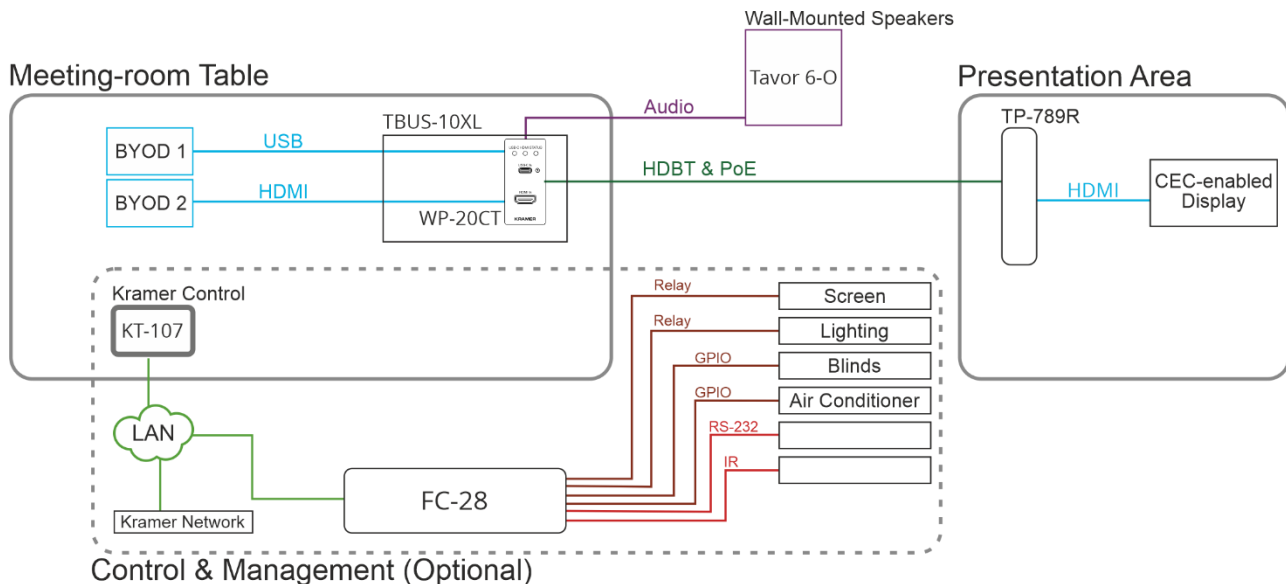


Figure 7: Typical Room Configuration

This room includes a meeting-room table, a presentation area, and so on, as follows:

On the meeting table:	<ul style="list-style-type: none"> <li>• <b>WP-20CT</b> mounted onto a <b>TBUS-10XL</b> table mount.</li> <li>• Various BYOD sources, of which one or two are connected to the <b>WP-20CT</b> HDMI port (for example, a laptop) and/or the USB-C port (for example, a tablet).</li> <li>• A <b>KT-107</b> touch panel supporting Kramer Control controller and connected to the LAN.</li> </ul>
On the Wall:	<ul style="list-style-type: none"> <li>• <b>Tavor 6-O</b> wall-mounted speakers connected to <b>WP-20CT</b>.</li> </ul>
In the presentation area:	<ul style="list-style-type: none"> <li>• <b>TP-789R</b> receiver, connected via HDBT to <b>WP-20CT</b>.</li> <li>• A CEC-enabled display connected to the <b>TP-789R</b> HDMI output.</li> </ul>
In the room:	<ul style="list-style-type: none"> <li>• The window blinds, projector screen, lighting, and air conditioning are connected to GPIO/relay ports on the <b>FC-28</b> IP control gateway.</li> </ul>
LAN connections	<ul style="list-style-type: none"> <li>• <b>KT-107 Kramer Control</b> touch panel controller to <b>FC-28</b> IP control gateway and a <b>Kramer Network</b> management system.</li> </ul>

**WP-20CT**, built-in Maestro configuration enables almost immediate control over these elements for different scenarios, once all the elements in the room are connected (with minimal settings via built-in Maestro automation embedded web pages, such as device-specific IP addresses, see [Configuring Device Automation](#) on page 29).



**KT-107** and **FC-28** (in the optional control and management system) are not included in the built-in Maestro configuration and should be configured separately.

For example, an active input that is detected, is a trigger (First On) for starting a presentation.

Once the input signal is detected, the **Presentation Start**, built-in script, runs a series of actions such as unmuting the audio and video outputs, turning the display ON via CEC, lowering the screen rolling the blinds down, etc.

In this example, the display is turned on via the HDBT CEC channel connection through the **TP-789R** receiver, and audio and video are unmuted by the internal port.

Factory default triggers, Scripts, actions and ports are listed in [Default Control and Automation Settings](#) on page [37](#).

---

## Setting HDBT RS-232 Control Communication

**WP-20CT** supports RS-232 control communication (via HDBT RS-232 channel) with the display that is connected to the receiver in any of the following ways:

- [Setting HDBT RS-232 Communication via the RS-232 EXTD Port](#) on page [14](#).
- [Setting HDBT RS-232 Communication via Maestro](#) on page [15](#).

## Setting HDBT RS-232 Communication via the RS-232 EXTD Port

By default, **WP-20CT** extends RS-232 communication between a controller that is connected to the RS-232 EXTD port and the remote display.

For example, in [Figure 2](#), Kramer **RC-306** is connected to the RS-232 EXTD port so that **RC-306** can serially communicate with the display on the receiver side via HDBT.

### To extend RS-232 communication via local controller:

1. Connect A controller to the RS-232 EXTD port on the rear side of the device.
2. Make sure that the **WP-20CT** is set to RS-232 communication extension via local controller).
  - If it is not, and the device is set to Maestro control, use the following #Route command to reset it to its default state (RS-232 communication extension via local controller): `#ROUTE 3,1,2\x0D` (see `ROUTE` command in [Protocol 3000 Commands](#) on page [43](#)).
3. Send/receive RS-232 commands between the controller, via the HDBT RS-232 channel, and the display on the receiver side.

There is now serial communication between the RS-232 EXTD port and the remote display via HDBT.



# Setting HDBT RS-232 Communication via Maestro

To send RS-232 commands to the display via a script in Maestro:

- 1. Make sure that the baud rate is set to 9600 on far-side terminal (for example, the display that is connected to the receiver).
- 2. Set the RS-232 EXTND mode (local by default) to the Maestro mode, by adding the `#ROUTE 3,1,3\x0D` command to the script under Data.

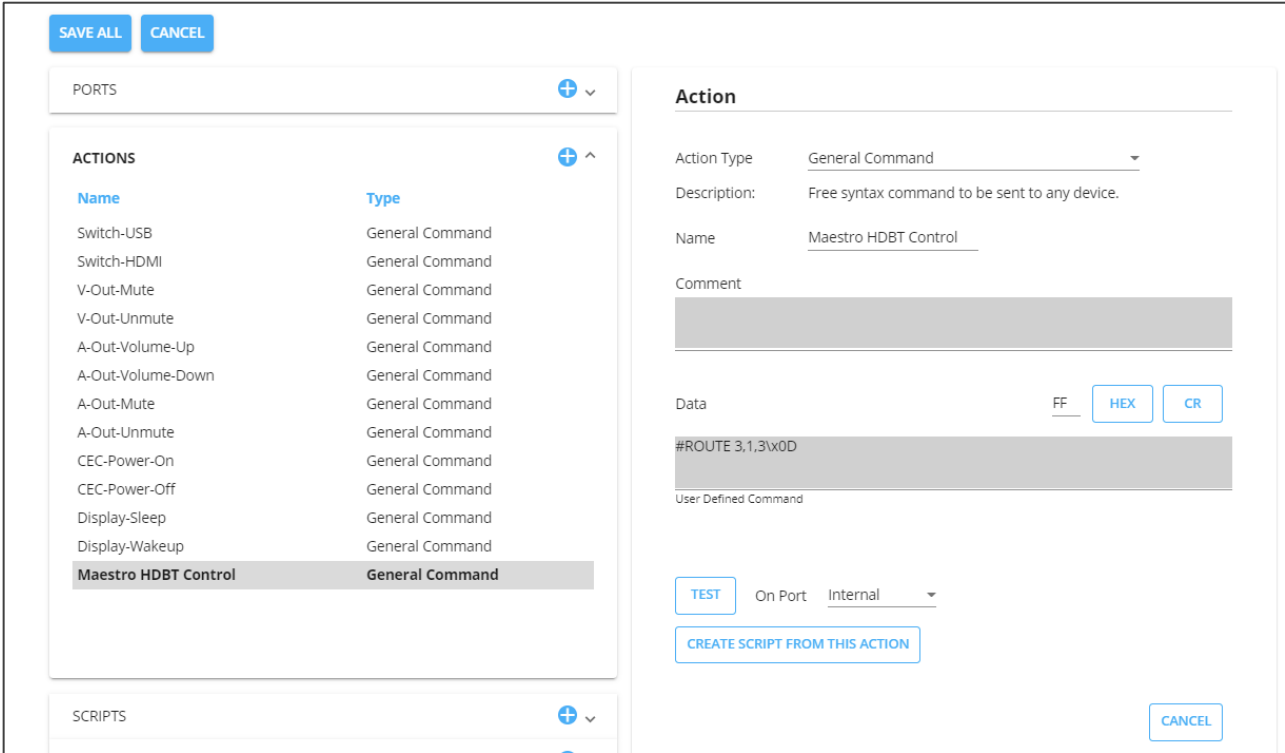


Figure 8: Setting RS-232 Communication to Maestro HDBT Control

Alternatively, you can set Maestro HDBT control mode via P3K IP command (see **ROUTE** command in [Protocol 3000 Commands](#) on page 43).

- 3. Click **SAVE ALL**.

4. Create a script. For example, Display wakeup, and add the Maestro HDBT Control (which defines RS-232 communication via Maestro) as the first action. When the script is ready, click **SAVE ALL**. See [Maestro Built-in Automation Configuration](#) on page 13 for further details.

### Script

Name Turn Display On

Action List + ⌚

=	run	Maestro HDBT Control	ON	Internal	🗑️
=	run	Display-Wakeup	on	HDBT Serial Char	🗑️

(Drag to arrange the Actions on the list)  
(Drag and Drop from Actions to add one)

TEST

CANCEL

Figure 9: Adding Maestro HDBT Control to a Script

RS-232 command and responses can be sent and received between Maestro and the display on the receiver side.

# Operating and Controlling WP-20CT

You can operate **WP-20CT** using the embedded web pages, by connecting to **WP-20CT** with a computer via the USB-C connector (see [Connecting USB-C Port Directly to PC](#) on page [9](#)).

**WP-20CT** enables you to do the following:

- [Browsing WP-20CT Web Pages](#) on page [18](#).
- [Switching Input to Output](#) on page [19](#).
- [Muting and Adjusting Audio Output](#) on page [20](#).
- [Turning Off Video Output](#) on page [20](#).
- [Configuring Auto-Switching Mode](#) on page [21](#).
- [Defining Signal Timeout Settings](#) on page [22](#).
- [Configuring AV Settings](#) on page [23](#).
- [Copying EDID](#) on page [24](#).
- [Changing Device Name](#) on page [25](#).
- [Setting Auto Standby Delay](#) on page [26](#).
- [Exporting and Importing a Configuration File](#) on page [26](#).
- [Resetting Device](#) on page [27](#).
- [Configuring Network Settings](#) on page [27](#).
- [Configuring Time and Date](#) on page [28](#).
- [Changing Web Pages Access Password](#) on page [28](#).
- [Setting Web Pages Auto Logoff Timeout](#) on page [29](#).
- [Configuring Device Automation](#) on page [29](#).

## Browsing WP-20CT Web Pages



If a web page does not update correctly, clear your Web browser's cache.

If security is enabled, the Login window appears.

Figure 10: Embedded Web Pages Login Window

5. Enter the Username (default = Admin) and Password (default = Admin) and click **Sign in**.

The Main > AV Routing page appears.

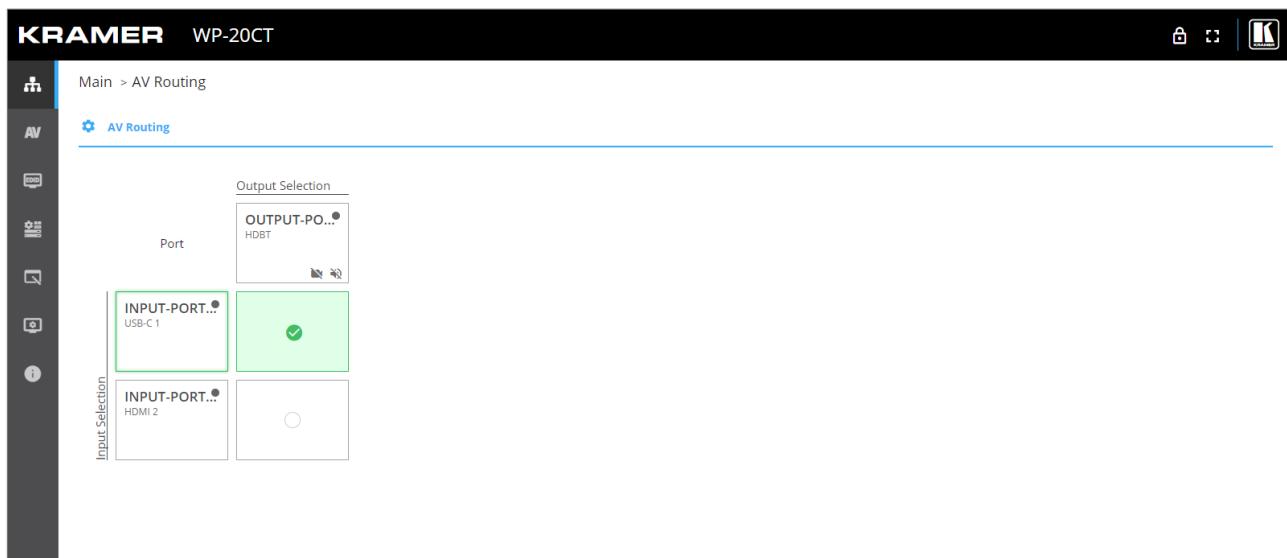


Figure 11: Embedded Web Pages Main > AV Routing Page

6. Click the Navigation Pane on the left side of the screen to access the relevant web page.



Hover over the icons on the navigation pane to hide/show the names of the pages.

## Switching Input to Output

WP-20CT enables you to switch one of the two inputs to the output.

The AV Routing page shows the following information:

- Name of each input and output (to change the name, see [Configuring AV Settings](#) on page 23).
- Connection status of each input and output – The indicator next to the name lights green when an active input or output is connected.
- Switching status – The input that is currently connected to the output shows a green checkmark in the column next to it.

**To switch an input to the output:**

1. Go to the Main > AV Routing page.

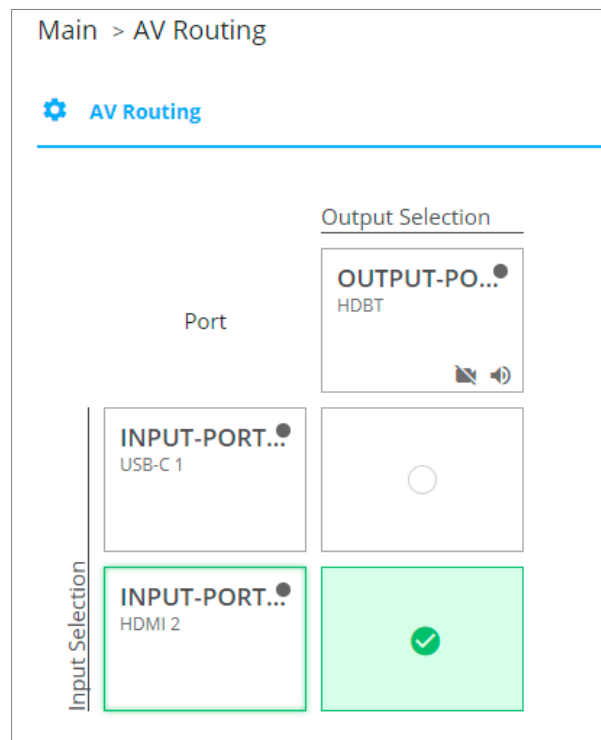


Figure 12: Main > AV Routing Page

2. Click the box next to the input to which you would like to switch the output. A green check appears in the selected box and the input is switched.

---

## Muting and Adjusting Audio Output

WP-20CT enables you to mute the audio output and adjust it from -100dB to +15dB (default = 0dB).

To mute and adjust the audio output:

- On the Main > AV Routing page ([Figure 12](#)), click the audio icon under the output name and mute or adjust the audio as needed.

---

## Turning Off Video Output

WP-20CT enables you to turn off the video output so that the connected display goes blank. The audio output is not affected by this setting.

To turn off the video output:

- On the Main > AV Routing page ([Figure 12](#)), click the video icon under the output name. The video output is turned off and the connected display goes blank.



Click the disabled video icon to turn on the video output.

## Configuring Auto-Switching Mode

WP-20CT enables you to configure how the system automatically decides which input to switch to the output.

To configure auto-switching:

1. Go to the AV Settings > Auto switching tab.

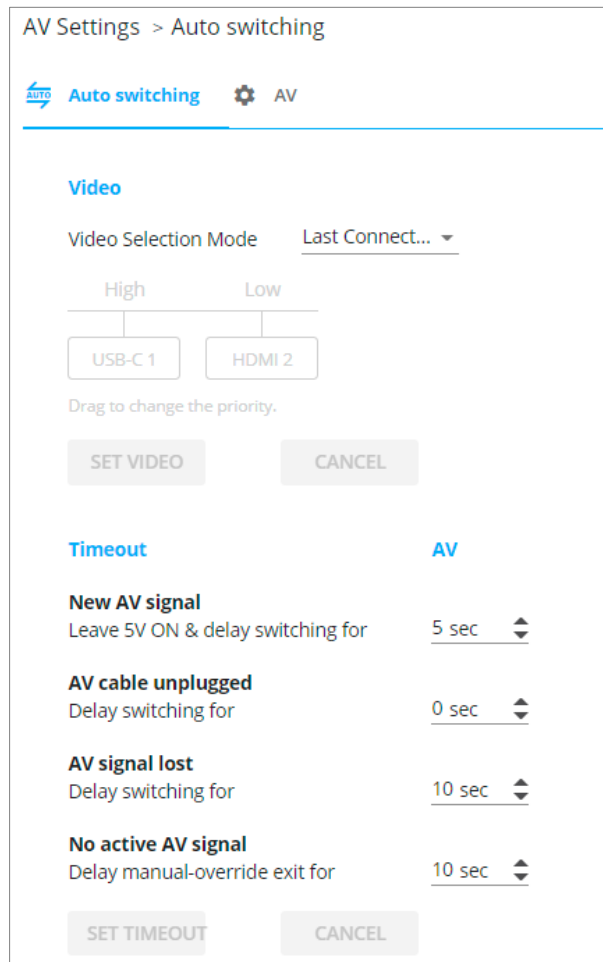


Figure 13: AV Settings > Auto switching Tab

2. Select one of the following auto-switching modes from the Video Selection Mode dropdown:
  - Manual – Switching is only done manually. Auto-switching is disabled.
  - Last Connected (default) – When a new source is connected, automatically switch to that input.
  - Priority – The system first looks to switch to the priority input (default = USB-C input). Drag the input name to change the priority.
3. Click **SET VIDEO**.  
Auto-switching mode is configured.

---

## Defining Signal Timeout Settings

**WP-20CT** enables you to define a time delay before an automatic switching operation is initiated by the system.

### To define timeout settings:

1. Go to the AV Settings > Auto switching tab ([Figure 13](#)).
2. Define timing for the following:
  - New AV signal – When a new AV source is connected to the inactive input, delay switching to this new signal (from 0 to 90 sec, default = 0).
  - AV cable unplugged – When the active input is unplugged, delay switching to the other input (from 0 to 90 sec, default = 0).
  - AV signal lost – When the active input signal is lost without being unplugged (for example when player is on stop), delay switching to the other input (from 5 to 90 sec, default = 10).
  - No active AV signal – In a case where the active input was switched manually, and there is no active signal on that input, the switching back to the other input time is 10 seconds.  
If there is an active signal on the manual selected input, and then this signal is lost, this setting delays switching back to the other input (from 5 to 90 sec, default = 10).
3. Click **SET TIMEOUT**.



## Configuring AV Settings

AV Settings > AV

Auto switching AV

SETTINGS	USB-C Input 1	HDMI Input 2	HDBT Output
Label	<u>INPUT-PORT-1-USBC</u>	<u>INPUT-PORT-2-HDMI</u>	<u>OUTPUT-PORT-1-HDBT</u>
HDCP	<input checked="" type="checkbox"/> Yes	<input checked="" type="checkbox"/> Yes	<input checked="" type="radio"/> Always On <input type="radio"/> Follow Output
Device Color Depth	<input checked="" type="radio"/> Follow Output <input type="radio"/> Force 8 bit		
Force RGB on Output	<input type="button" value="Enable"/> <input type="button" value="Disable"/>		
Device Auto-Unmute on volume change	<input type="button" value="Enable"/> <input type="button" value="Disable"/>		
Auto Sleep Delay	<input type="button" value="Enable"/> <input type="button" value="Disable"/>		
No input signal Delay output 5V power-off for	900 sec <input type="button" value="↑"/> <input type="button" value="↓"/>		
<input type="button" value="SET TIMEOUT"/> <input type="button" value="CANCEL"/>			

Figure 14: AV Settings > AV Tab

**WP-20CT** enables you to configure the following general settings on the AV Settings > AV tab:

- Label – Change the name of an input or output as it appears on the Main (switching) page and EDID Management page.
- HDCP – For the inputs, select the **Yes** (default) /**No** switch to enable/disable HDCP for that input. For the output, select **Always On** keep HDCP enabled or **Follow Input** (default) to define the output HDCP setting according to the active input.
- Device Color Depth – **Follow Output** (default) or **Force 8 bit**.
- Force RGB on Output – **Enable** or **Disable** (default).
- Device Auto-Unmute on volume change – When enabled (default), changing the volume will unmute the device.
- Auto Sleep Delay – When no input signal is detected, the device automatically goes into sleep mode, and output is set to off. When this setting is enabled (default), it delays sleep mode for an amount of time specified in the next setting.
- No input signal (active when Auto Sleep Delay is enabled) – Set the number of seconds (30 to 60,000 seconds; default = 900 seconds) after there is no signal detected, until the device goes into sleep mode. Click **SET TIMEOUT** after defining this setting.

# Copying EDID

WP-20CT enables you to copy an EDID from one of several different sources to the inputs.

To copy the EDID to the inputs:

1. Go to the EDID Management page.

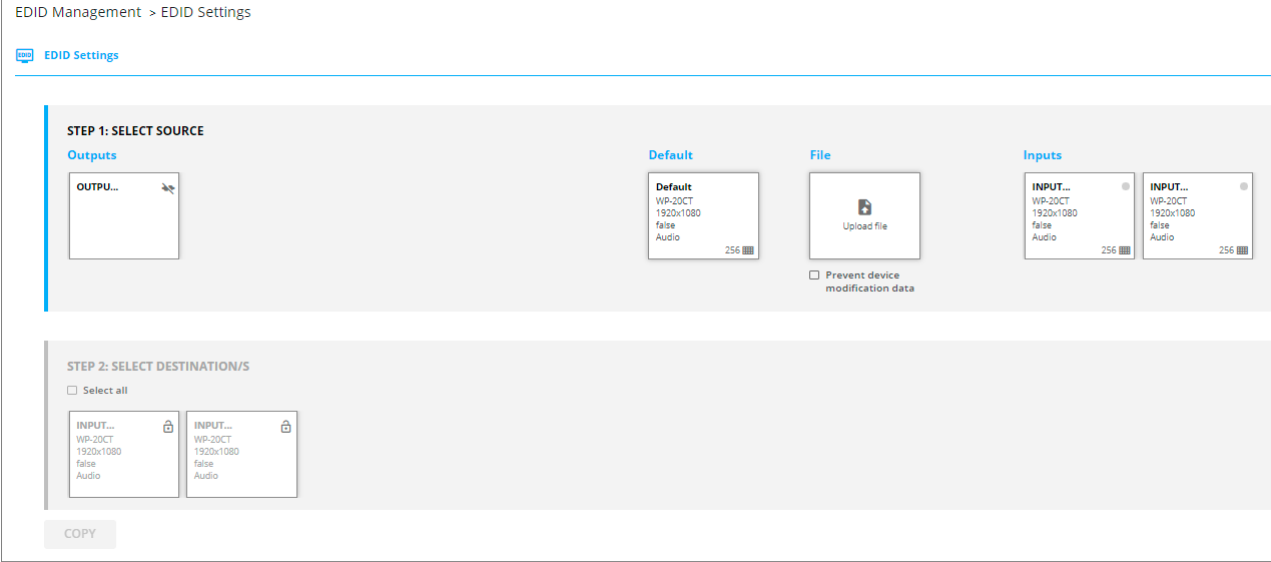


Figure 15: EDID Management Page

2. Under Step 1, select the EDID source.
3. Under Step 2, select one or both of the inputs as the destination for the EDID.
4. Click **Copy**.

The EDID is copied.

# Changing Device Name

WP-20CT enables you to change the DNS name of the device.

To change the device name:

- 1. Go to the Device Settings > General page.

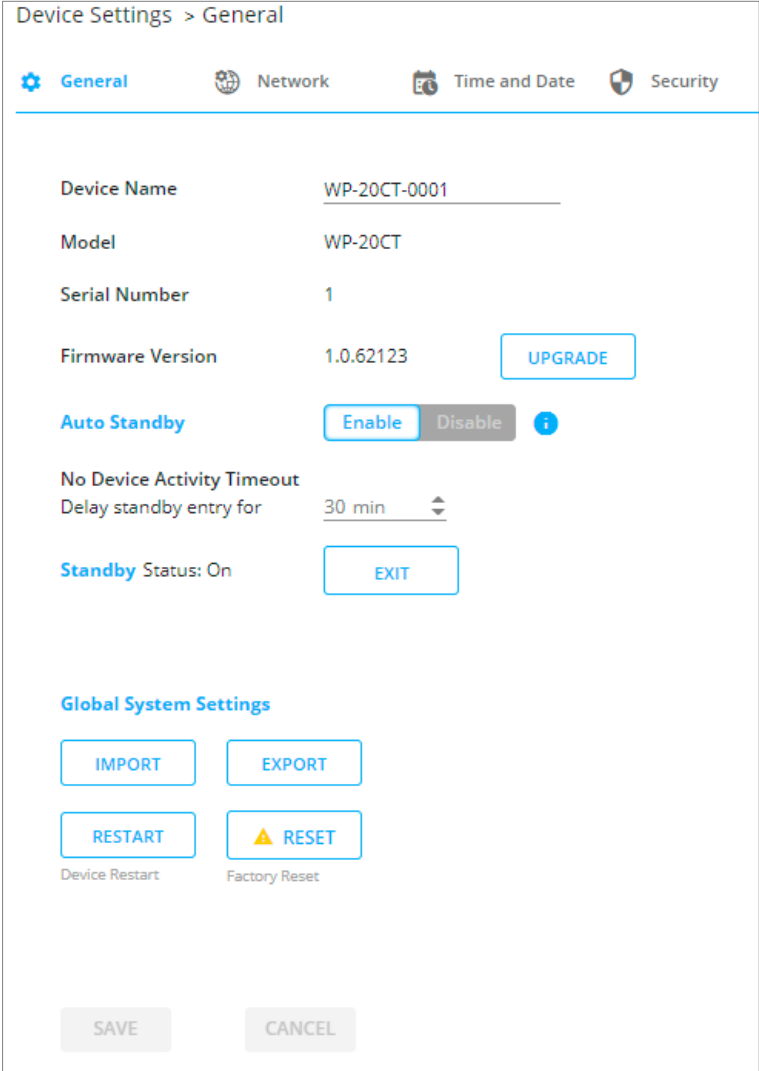


Figure 16: Device Settings > General Page

- 2. Under General Preferences, change the device name and click **SAVE**. The device name is changed.

---

## Setting Auto Standby Delay

**WP-20CT** enables you to set the delay time (up to 900min, never 0; default = 30min) before the device goes into standby mode after a period of no device activity.

**To set auto standby delay time:**

1. Go to the Device Settings > General page ([Figure 16](#)).
2. Under Auto Standby, click **ENABLE**.
3. Under No Device Activity Timeout, set the delay time.
4. Click **Save**.

Auto standby delay time is set.



To manually enter or exit standby mode, next to Standby Status, click **ENTER/EXIT**.

---

## Exporting and Importing a Configuration File

**WP-20CT** enables you to export a configuration file that records all current device settings except the switching configuration. This file can then be imported to the same or different **WP-20CT** device to load the recorded settings.

**To export a configuration file of the current device settings:**

1. Go to the Device Settings > General page ([Figure 16](#)).
2. Under Global System Settings, click **Export**.
3. Select the location on your computer to save the configuration file and click **Save**.

The configuration file is exported and saved.

**To import a configuration file of the current device settings:**

1. Go to the Device Settings > General page ([Figure 16](#)).
2. Under Global System Settings, click **Import**.
3. Select the relevant configuration file and click **Save**.

The configuration file is imported and the device restarts with the settings from the configuration file.

## Resetting Device

Two types of resets can be performed:

- **Restart** – Reboots your device and keeps all your device settings, including the IP address and password.
- **Reset** – Reboots your device and restores all factory settings including input/output definitions, switching configuration, IP address and password.

**To restart the device:**

- Click **Restart** on the Device Settings > General page ([Figure 16](#)).


**To perform a factory reset on the device:**

- Click **Reset** on the Device Settings > General page ([Figure 16](#)).

## Configuring Network Settings

**To configure network settings:**

- Change settings as needed on the Device Settings > Network page.

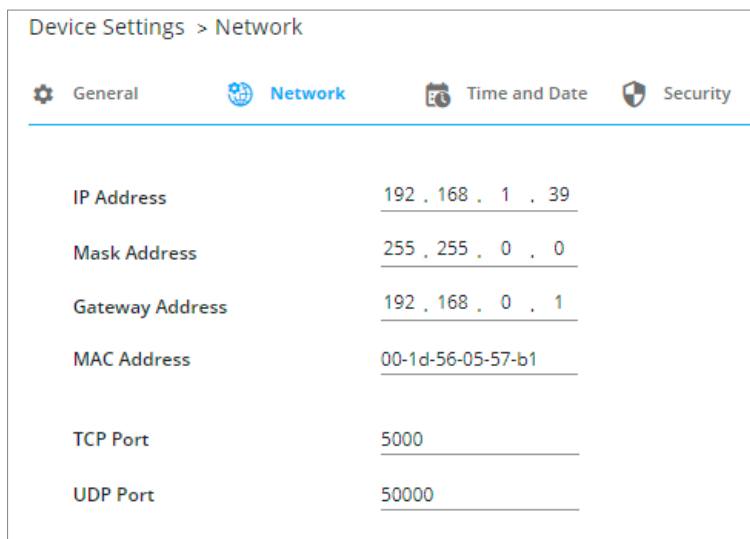

The screenshot displays the 'Device Settings > Network' configuration page. At the top, there are four tabs: 'General', 'Network' (which is selected and highlighted in blue), 'Time and Date', and 'Security'. Below the tabs, the network configuration fields are listed as follows:

IP Address	<u>192 . 168 . 1 . 39</u>
Mask Address	<u>255 . 255 . 0 . 0</u>
Gateway Address	<u>192 . 168 . 0 . 1</u>
MAC Address	<u>00-1d-56-05-57-b1</u>
TCP Port	<u>5000</u>
UDP Port	<u>50000</u>

Figure 17: Device Settings > Network Page

## Configuring Time and Date

To configure time and date settings:

- Change settings as needed on the Device Settings > Time and Date page.

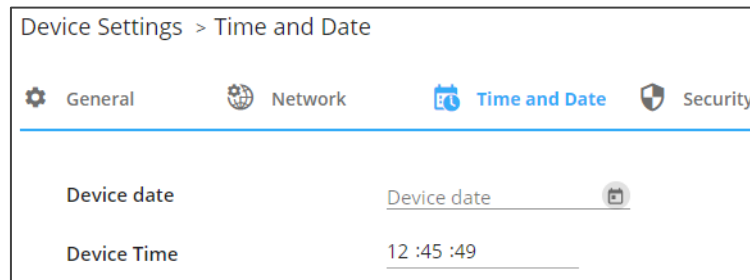


Figure 18: Device Settings > Time and Date Page

## Changing Web Pages Access Password

To change the password for accessing the embedded web pages:

1. Go to the Device Settings > Security page.

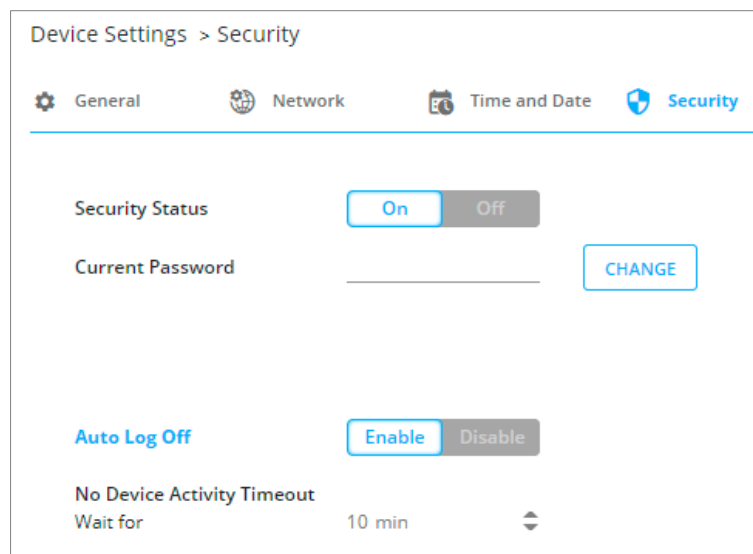


Figure 19: Device Settings > Security Page

2. Under Current Password, enter a new password and click **CHANGE**.  
The new password settings appear.
3. Enter the new password and confirmation password and click **SAVE**.  
The password is changed.

---

## Setting Web Pages Auto Logoff Timeout

**WP-20CT** enables you to set the time delay before being logged out of the web pages if no activity is detected.

To set the web pages timeout:

1. Go to the Device Settings > Security page ([Figure 19](#)).
2. Under Auto Logoff, click **ENABLE** and set the timeout duration (up to 60min, never 0; default = 10min).

The web pages inactivity timeout is set.

---

## Configuring Device Automation

Use the Automation page to configure **Kramer Maestro V1.5** room automation for **WP-20CT**. **Kramer Maestro** is a powerful software tool that enables you to configure trigger-based room control and automation scenarios without the need for complicated programming.

To use Maestro control and automation, you need to define triggers that, upon an event, execute scripts which include a sequence of actions (commands, which can appear in different scenarios) that can be carried out via any defined ports.

Download the **Kramer Maestro** User Manual from the Kramer web site at [www.kramerav.com/downloads/WP-20CT](http://www.kramerav.com/downloads/WP-20CT) to learn how to use **Kramer Maestro**.



Note that all the ports, actions and triggers that are relevant to **WP-20CT** are included in the **Kramer Maestro** interface, as well as ports, actions and triggers that are relevant to other Kramer devices.

# Configuring Ports

Maestro enables configuring the ports used to control specific room devices. For a full list of default ports (see [Ports List](#) on page 37).

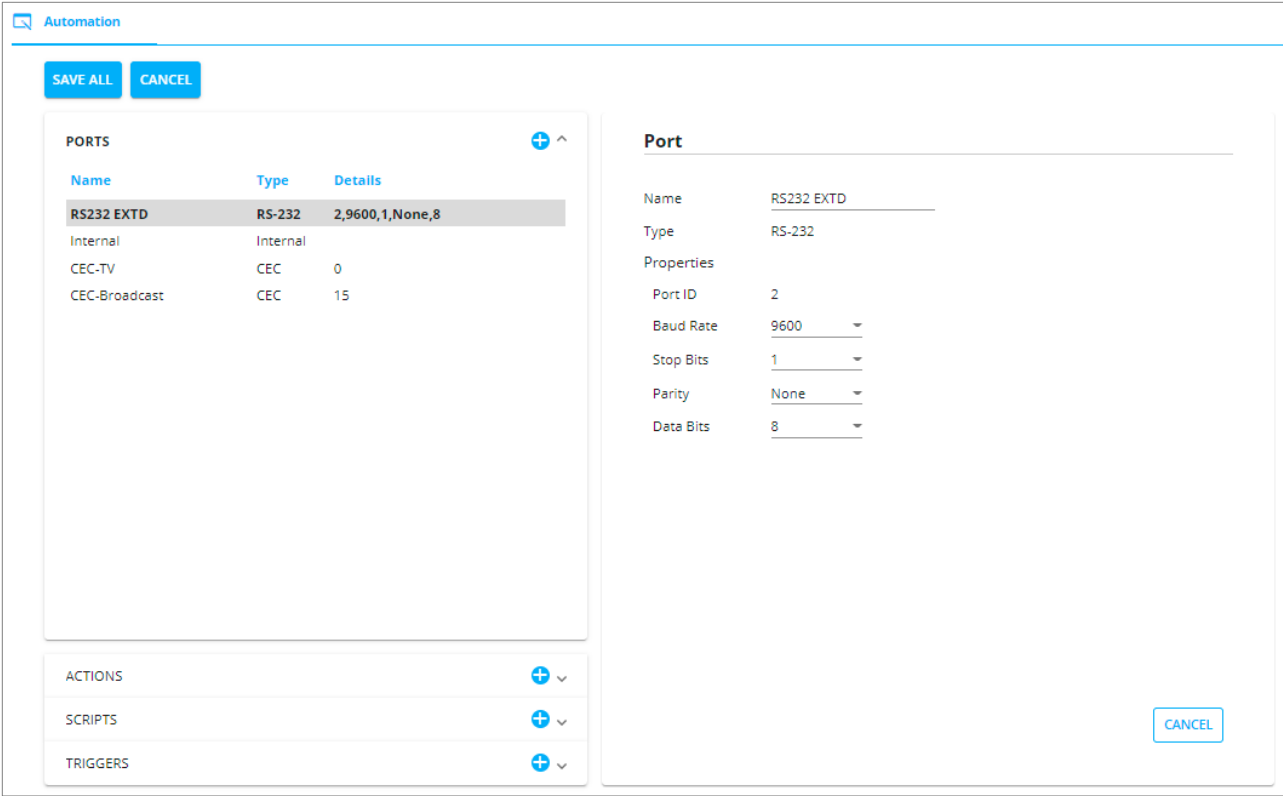


Figure 20: Maestro Page – Ports List



## Configuring Actions

In the Actions tab you can create new commands, and also view and edit the default commands (see [Actions List](#) on page 37) that are device specific.

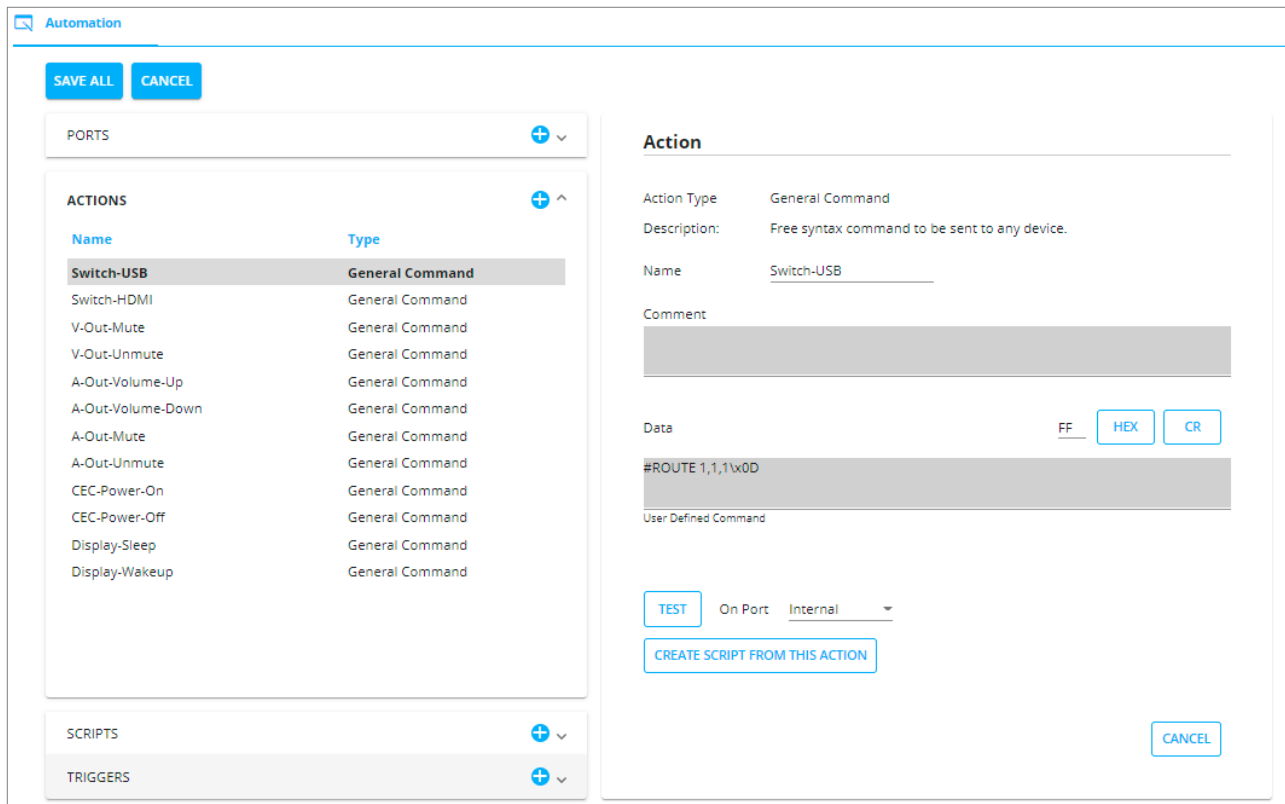


Figure 21: Maestro Page – Actions List

You can add actions by duplicating an action from the list of built-in actions and changing it as required, or by a creating new action altogether (see [www.kramerav.com/downloads/WP-20CT](http://www.kramerav.com/downloads/WP-20CT)).

# Configuring Scripts

A script includes several actions. You can add commands to an existing script, create new scripts or use the available built-in scripts (see [Scripts List](#) on page 38). For example, click the Presentation Start script to view its list of actions.


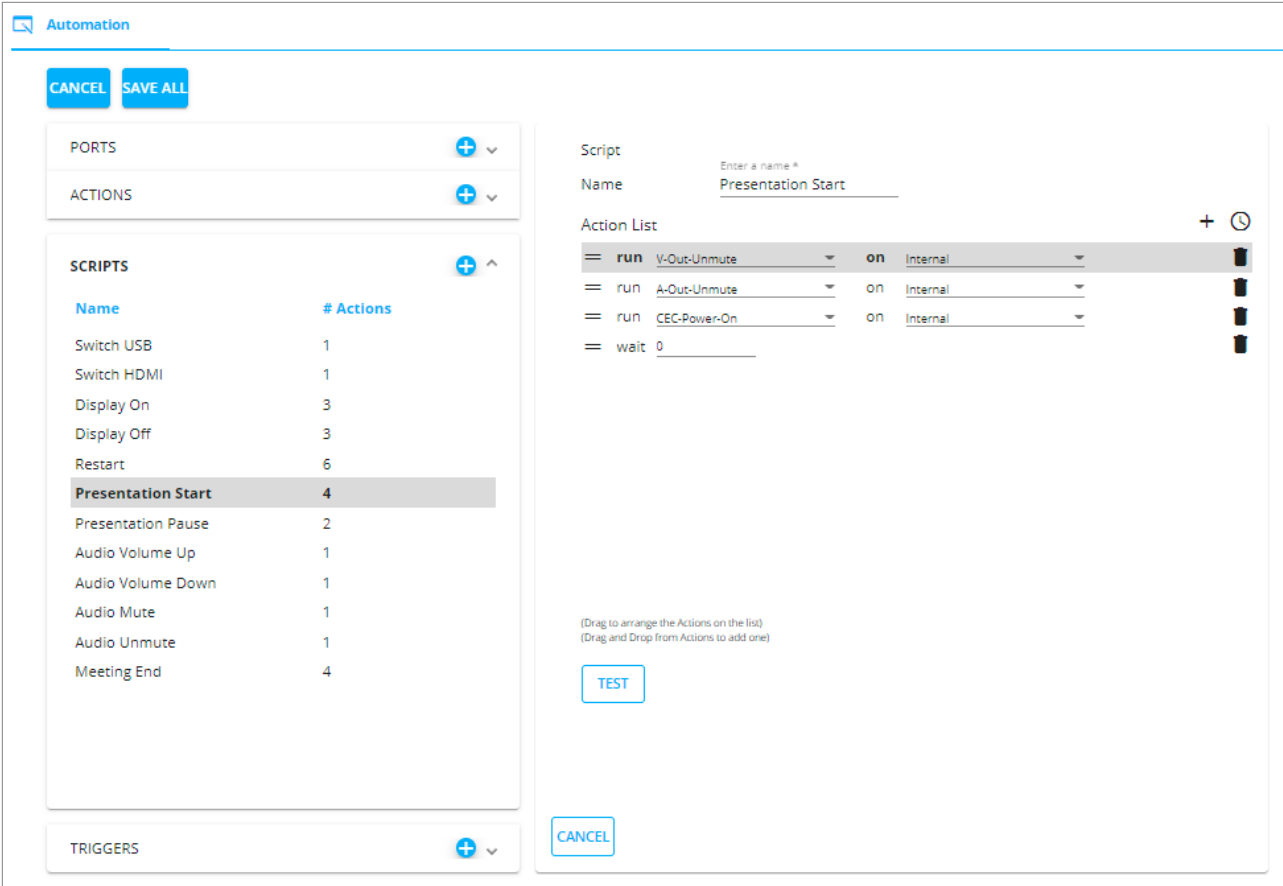


Figure 22: Maestro Page – Scripts List

You can add, delete, or change the order of the actions in the list.

## Configuring Triggers

The trigger is a predefined event that, when activated, causes the script associated to it to run. For example, click the built-in First On trigger that triggers the Presentation Start script so that when an active input signal is detected, the Presentation Start script runs automatically. See list of default triggers in [Triggers List](#) on page 39.

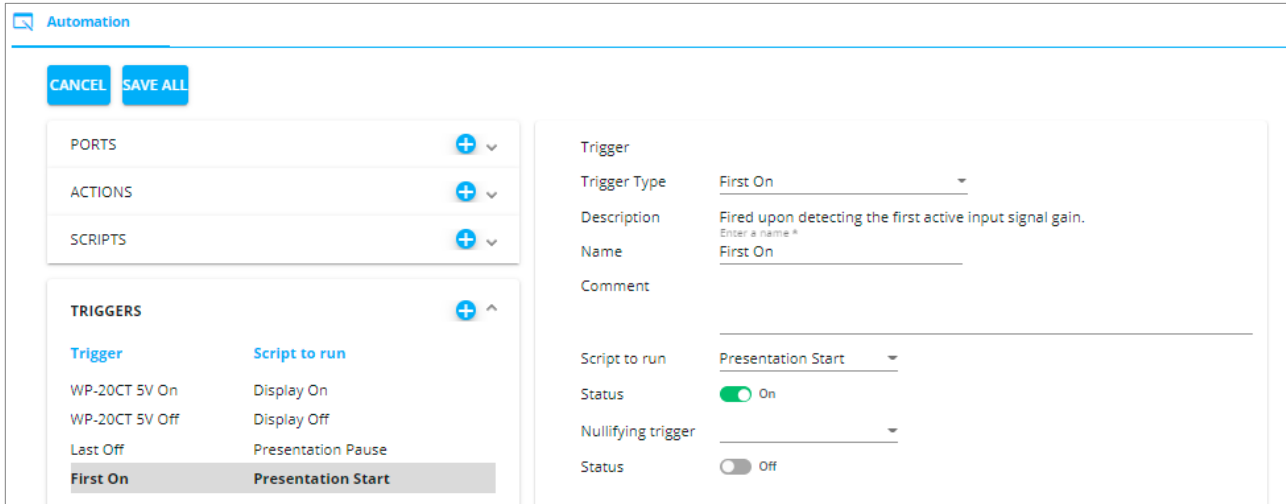

The screenshot shows the 'Automation' page with a 'Triggers List' section. The list includes the following triggers:

Trigger	Script to run
WP-20CT 5V On	Display On
WP-20CT 5V Off	Display Off
Last Off	Presentation Pause
<b>First On</b>	<b>Presentation Start</b>

The configuration panel for the selected 'First On' trigger shows the following details:

- Trigger Type: First On
- Description: Fired upon detecting the first active input signal gain.
- Name: First On
- Comment: (empty)
- Script to run: Presentation Start
- Status: On (toggle)
- Nullifying trigger: (empty)
- Status: Off (toggle)

Figure 23: Automation Page – Triggers List

You can add, delete, or modify a trigger (see [www.kramerav.com/downloads/WP-20CT](http://www.kramerav.com/downloads/WP-20CT)).

# Maintaining Device

WP-20CT enables you to perform the following maintenance activities:

- [Upgrading Firmware](#) on page [34](#).
- [Monitoring Device Status](#) on page [34](#).

## Upgrading Firmware

To upgrade the device firmware:

1. Go to the Device Settings > General page ([Figure 16](#)).
2. Under General Preferences, click **UPGRADE** and open the relevant firmware file and follow the instructions.

## Monitoring Device Status

Go to the Diagnostics page Status tab to monitor overall device status, internal device temperature, and input/output activity status.



For Heat status, when the temperature is in the normal range (up to 85°C), the indication light appears green; when above normal (85° to 90°C), appears orange, when it exceeds temperature limits (over 90°C) the indication light appears red.

## Viewing Status Diagnostics

To view status diagnostics:

1. Go to the Diagnostics > Status. The Diagnostics page appears.

The screenshot displays the 'Diagnostics > Status' page for the Kramer WP-20CT device. The page is divided into several sections:

- Device Status:**
  - Overall:  Inactive
  - Heat:  Normal 31°  °C  °F
- Input Status:**
  - USB-C Signal:  Off
  - HDMI Signal:  Off
- Output Status:**
  - HDBT Link:  Inactive
  - Output signal:  Off
- Log:** A table with two columns: 'Trigger' and 'Time & Date'.
 

Trigger	Time & Date
Manual	2021-12-20 14:52:33
Manual	2021-12-20 14:49:30
Manual	2021-12-19 11:46:40
Manual	2021-12-19 11:10:01
Manual	2021-12-18 18:49:28
Manual	2021-12-17 13:48:15
Manual	2021-12-17 13:47:59
Manual	2021-12-17 13:35:28

Figure 24: Diagnostics – Status Tab

2. Set Heat temperature to Celsius or Fahrenheit.
3. View inputs signal status.

4. View HDBT Link status:
  - **Inactive** indication off – the receiver is connected (linked) to the output.
  - **Inactive** indication on – a receiver is not connected to the output.
5. On the window right-hand side, view the reset log (auto or manual).  
Status diagnostics are viewed.

## Viewing Advanced Diagnostics

### To view status diagnostics:

1. Go to the Diagnostics > Status. The Diagnostics page appears.
2. Click **Advanced** tab. The Advanced tab appears.

Diagnostics > Advanced

Status Advanced

Traffic Counters

CEC

Sent 3

Received 0

REFRESH ALL CLEAR ALL

Log

Time & Date	Event	Description
2021-12-14 12:43:55	Restart	Manually-started
2021-12-14 12:44:06	Restart	End
2021-12-14 12:44:07	HDMI-IN-plug	
2021-12-14 12:44:07	HDMI-IN-signal	On
2021-12-14 12:44:08	Display	Power on
2021-12-14 12:44:10	HDMI-IN-signal	Auto-routed-to-output

EXPORT REFRESH

Figure 25: Diagnostics – Advanced Tab

3. Under Traffic Counters, view the Sent and Received CEC commands to and from the display.
4. Perform the following actions if required:
  - Click to clear the sent / received CEC command counters.
  - Click **CLEAR ALL** to clear both sent and received counters.
  - Click **REFRESH ALL** to refresh counting status view.
5. On the window right-hand side, view the event log and click:
  - REFRESH, to refresh the list.
  - EXPORT, to export the log to text file.

Advanced diagnostics are viewed.

# Technical Specifications

Inputs	1 DP Alt Mode & PD 3.0 USB-C	On a USB type-C connector
	1 HDMI	On HDMI connector
Outputs	1 HDBaseT	On an RJ-45 connector
	1 Unbalanced Stereo Audio	On 3-pin terminal block connector
Ports	1 RS-232	On a 3-pin terminal block for serial link extension
	1 RS-232	On a 3-pin terminal block for device serial control
	1 DC Power Input	On a 2-pin terminal block connector
Video	Max. Data Rate	10.2Gbps (3.4Gbps per graphic channel)
	Max. Resolution	4K@60Hz (4:2:0) 24bpp resolution
	HDMI Support	Deep color, x.v.Color™, lip sync, HDMI uncompressed audio channels, Dolby TrueHD, DTS HD, 2K, 4K, and 3D as specified in HDMI 2.0
	Compliance	HDCP 2.3 & 1.4
Extension line	Up to 40m (130ft)	At 4K @60Hz (4:2:0)
	Up to 70m (230ft)	At full HD (1080p @60Hz 36bpp)
	Note	To achieve specified extension distances, use the recommended Kramer HDBaseT cables.
	Compliance	HDBaseT 1.0
Extended RS-232	Baud rate	300 to 115200
Control RS-232	Baud Rate	115200
Power	Source	12V DC 2A (included) 20V DC 6A (optional) PoE
	Consumption	12V: 0.6A 20V: 3.7A
	Standby Power Savings	12V: ~5W 20V: ~71W
Environmental Conditions	Operating Temperature	0° to +40°C (32° to 104°F)
	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Enclosure	Cooling	Convection
	Type	Aluminum
	Size	1 Gang
Regulatory Compliance (Standards Compliance)	Environmental	RoHs, WEEE, and CE
Accessories	Included	12V Power adapter, multi signal USB-C 1m cable

Specifications are subject to change without notice at [www.kramerav.com](http://www.kramerav.com)

## Default Communication Parameters

RS-232	
Baud Rate:	115,200
Data Bits:	8
Stop Bits:	1
Parity:	None
Command Format:	ASCII
Example (Set the auto switching timeout to 5 seconds in the event of 5V disable when no input signal is detected):	#AV-SW-TIMEOUT 4,5<CR>
IP	
IP Address:	192.168.1.39
Subnet mask:	255.255.255.0
Default gateway:	192.168.1.39
TCP Port #:	5000
UDP Port #	50000
Default username:	Admin
Default password:	Admin
Full Factory Reset	
Embedded Web Pages:	Click <b>Reset</b> on the Device Settings > General page.

## Default Control and Automation Settings

### Ports List

Port Name	Type	Port Properties	Port Description	Comment
CEC-TV	CEC	0		
CEC-Broadcast	CEC	15		
Local-serial Service	RS232	2, 9600, 1, None, 8	Local serial port	For custom use
Device-internal	Internal			

### Actions List

Action Name	Commands List	On Port	Comment
Switch-USB	#ROUTE 1,1,1\x0D	Device-internal	USB web-UI
Switch-HDMI	#ROUTE 1,1,2\x0D		USB web-UI
V-Out-Mute	#VMUTE 1,1\x0D		Display sleep via USB web-UI
V-Out-Unmute	#VMUTE 1,0\x0D		Display wake-up via USB web-UI
A-Out-Volume-Up	#AUD-LVL 1,1,++\x0D		USB web-UI audio output port action
A-Out-Volume-Down	#AUD-LVL 1,1,--\x0D		
A-Out-Mute	#AUD-MUTE 1,1\x0D		
A-Out-Unmute	#AUD-MUTE 1,0\x0D		
CEC-Power-On	0x04	CEC-TV	
CEC-Power-Off	0x36	CEC-Broadcast	
Display-Sleep	#VMUTE 1,1\x0D	Device-internal	
Display-Wakeup	#VMUTE 1,0\x0D		


## Scripts List

Script Name	Actions List	Relevant Ports	Comment
Switch HDMI	Switch-HDMI	Device-internal	Web-UI button
Switch USB	Switch-USB	Device-internal	Web-UI button
Display On	V-Out-Unmute Wait (0) CEC-Power-On	Device-internal, - CEC-TV	Trigger
Display Off	V-Out-Mute Wait (900) CEC-Power-Off	Device-internal, - CEC-Broadcast	Trigger
Restart	Wait 2sec V-Out-Mute A-Out-Mute Wait 1sec CEC-Power-Off Wait 0sec	- Device-internal, Device-internal, - CEC-Broadcast, -	Trigger
Presentation Start	V-Out-Unmute A-Out-Unmute CEC-Power-On Wait 0sec	Device-internal, Device-internal, CEC-TV, -	Trigger
Presentation Pause	V-Out-Mute A-Out-Mute Wait 0sec	Device-internal, Device-internal, -	Trigger
Audio Volume Up	A-Out-Volume-Up	Device-internal	Web-UI button
Audio Volume Down	A-Out-Volume-Down	Device-internal	Web-UI button
Audio Mute	A-Out-Mute	Device-internal	Web-UI button
Audio Unmute	A-Out-Unmute	Device-internal	Web-UI button
Meeting End	V-Out-Mute A-Out-Mute CEC-Power-Off Wait 0sec	Device-internal, Device-internal, CEC-Broadcast, -	Schedule-trigger



## Triggers List

The following triggers are included in the default Maestro automation parameters:

Trigger Name	Description	Triggered Script	Comment
First IN Plugged	1 <sup>st</sup> input connected	Presentation Start	First ON
Last IN Unplugged	Last input disconnected	Presentation Pause	Last Off
5V On (Input detected)	When input activity is detected	Display On	
5V Off (No input detected)	When "delay power off" timeout period expires with no input activity	Display Off	
Power On	Device powered on	Restart	<p>This recommended trigger is NOT included in Maestro default settings to prevent undesired auto-triggering of its associated script. You may set the trigger accordingly upon device installation or later.</p> <p> This script works well when the room is inactive (e.g. at night time, turning off active TVs), but may cause disruption when running during actual meetings.</p>
After Office Hours	Prescheduled event occurred	Meeting End	<p>This recommended trigger is NOT included in Maestro default settings to prevent undesired auto-triggering of its associated script. You can set the trigger accordingly upon device installation or later and customize the After Office Hours duration according to your needs.</p> <p>For example, set After Office Hours Day/Time scheduling to:  Monday-to-Friday: 18:00  Saturday-Sunday: 00:00.</p>

## Default EDID

Model name..... WP-20CT  
Manufacturer..... KMR  
Plug and Play ID..... KMR1200  
Serial number..... 295-883450100  
Manufacture date..... 2018, ISO week 255  
Filter driver..... None  
.....  
EDID revision..... 1.3  
Input signal type..... Digital  
Color bit depth..... Undefined  
Display type..... Monochrome/grayscale  
Screen size..... 520 x 320 mm (24.0 in)  
Power management..... Standby, Suspend, Active off/sleep  
Extension blocs..... 1 (CEA-EXT)  
.....  
DDC/CI..... n/a

Color characteristics  
Default color space..... Non-sRGB  
Display gamma..... 2.20  
Red chromaticity..... Rx 0.674 - Ry 0.319

Green chromaticity..... Gx 0.188 - Gy 0.706  
 Blue chromaticity..... Bx 0.148 - By 0.064  
 White point (default).... Wx 0.313 - Wy 0.329  
 Additional descriptors... None

#### Timing characteristics

Horizontal scan range.... 30-83kHz  
 Vertical scan range..... 56-76Hz  
 Video bandwidth..... 170MHz  
 CVT standard..... Not supported  
 GTF standard..... Not supported  
 Additional descriptors... None  
 Preferred timing..... Yes  
 Native/preferred timing.. 1920x1080p at 60Hz (16:9)  
 Modeline..... "1920x1080" 148.500 1920 2008 2052 2200 1080 1084 1089 1125 +hsync +vsync

#### Standard timings supported

720 x 400p at 70Hz - IBM VGA  
 720 x 400p at 88Hz - IBM XGA2  
 640 x 480p at 60Hz - IBM VGA  
 640 x 480p at 67Hz - Apple Mac II  
 640 x 480p at 72Hz - VESA  
 640 x 480p at 75Hz - VESA  
 800 x 600p at 56Hz - VESA  
 800 x 600p at 60Hz - VESA  
 800 x 600p at 72Hz - VESA  
 800 x 600p at 75Hz - VESA  
 832 x 624p at 75Hz - Apple Mac II  
 1024 x 768i at 87Hz - IBM  
 1024 x 768p at 60Hz - VESA  
 1024 x 768p at 70Hz - VESA  
 1024 x 768p at 75Hz - VESA  
 1280 x 1024p at 75Hz - VESA  
 1152 x 870p at 75Hz - Apple Mac II  
 1280 x 1024p at 75Hz - VESA STD  
 1280 x 1024p at 85Hz - VESA STD  
 1600 x 1200p at 60Hz - VESA STD  
 1024 x 768p at 85Hz - VESA STD  
 800 x 600p at 85Hz - VESA STD  
 640 x 480p at 85Hz - VESA STD  
 1152 x 864p at 70Hz - VESA STD  
 1280 x 960p at 60Hz - VESA STD

#### EIA/CEA-861 Information

Revision number..... 3  
 IT underscan..... Supported  
 Basic audio..... Supported  
 YCbCr 4:4:4..... Not supported  
 YCbCr 4:2:2..... Not supported  
 Native formats..... 1  
 Detailed timing #1..... 1920x1080p at 60Hz (16:10)  
 Modeline..... "1920x1080" 148.500 1920 2008 2052 2200 1080 1084 1089 1125 +hsync +vsync  
 Detailed timing #2..... 1920x1080i at 60Hz (16:10)  
 Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync  
 Detailed timing #3..... 1280x720p at 60Hz (16:10)  
 Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync  
 Detailed timing #4..... 720x480p at 60Hz (16:10)  
 Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync

#### CE audio data (formats supported)

LPCM 2-channel, 16/20/24 bit depths at 32/44/48 kHz

#### CE video identifiers (VICs) - timing/formats supported

1920 x 1080p at 60Hz - HDTV (16:9, 1:1) [Native]  
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)  
 1280 x 720p at 60Hz - HDTV (16:9, 1:1)  
 720 x 480p at 60Hz - EDTV (16:9, 32:27)  
 720 x 480p at 60Hz - EDTV (4:3, 8:9)  
 720 x 480i at 60Hz - Doublescan (16:9, 32:27)  
 720 x 576i at 50Hz - Doublescan (16:9, 64:45)  
 640 x 480p at 60Hz - Default (4:3, 1:1)  
 NB: NTSC refresh rate = (Hz\*1000)/1001

#### CE vendor specific data (VSDB)

IEEE registration number. 0x000C03  
 CEC physical address..... 1.0.0.0  
 Maximum TMDS clock..... 165MHz

#### CE speaker allocation data

Channel configuration.... 2.0  
 Front left/right..... Yes  
 Front LFE..... No



# Protocol 3000

Kramer devices can be operated using Kramer Protocol 3000 commands sent via serial or Ethernet ports.

## Understanding Protocol 3000

Protocol 3000 commands are a sequence of ASCII letters, structured according to the following.

- **Command format:**


Prefix	Command Name	Constant (Space)	Parameter(s)	Suffix
#	Command	_	Parameter	<CR>

- **Feedback format:**

Prefix	Device ID	Constant	Command Name	Parameter(s)	Suffix
~	nn	@	Command	Parameter	<CR><LF>

- **Command parameters** – Multiple parameters must be separated by a comma (,). In addition, multiple parameters can be grouped as a single parameter using brackets ([ and ]).
- **Command chain separator character** – Multiple commands can be chained in the same string. Each command is delimited by a pipe character (|).
- **Parameters attributes** – Parameters may contain multiple attributes. Attributes are indicated with pointy brackets (<...>) and must be separated by a period (.).

The command framing varies according to how you interface with **WP-20CT**. The following figure displays how the # command is framed using terminal communication software (such as Hercules):

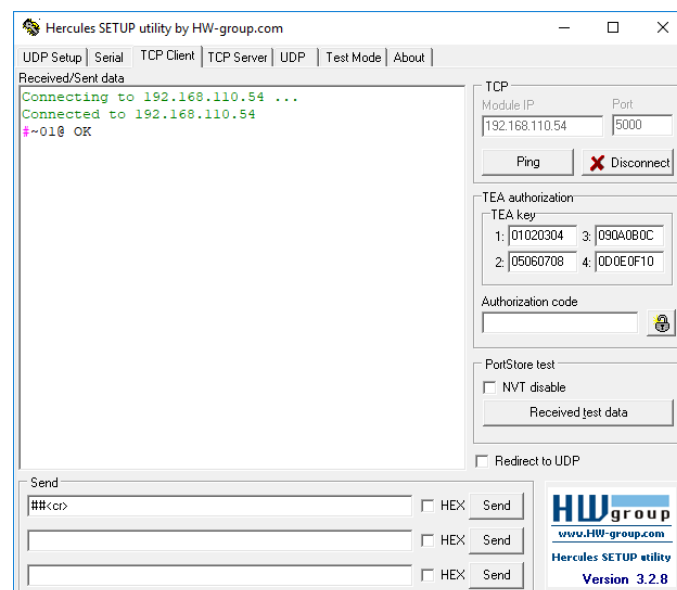

# Protocol 3000 Commands

Function	Description	Syntax	Parameters/Attributes	Example
#	Protocol handshaking.  ① Validates the Protocol 3000 connection and gets the machine number.  Step-in master products use this command to identify the availability of a device.	<b>COMMAND</b> #<CR> <b>FEEDBACK</b> ~nn@_ok<CR><LF>		#<CR>
AUD-LVL	Set volume level.	<b>COMMAND</b> #AUD-LVL_<io_mode>,<io_index>,<vol_level><CR> <b>FEEDBACK</b> ~nn@AUD-LVL_<io_mode>,<io_index>,<vol_level><CR><LF>	<b>io_mode</b> – 1 – Output <b>io_index</b> – 1 <b>vol_level</b> – Volume level -100db to 15dB; ++ (increase current value by 1dB); -- (decrease current value by 1dB)	Set AUDIO OUT level to -50.0dB: #AUD-LVL_1,1,-50.0<CR>
AUD-LVL?	Get volume level.	<b>COMMAND</b> #AUD-LVL?_<io_mode>,<io_index><CR> <b>FEEDBACK</b> ~nn@AUD-LVL_<io_mode>,<io_index>,<vol_level><CR><LF>	<b>io_mode</b> – 1 – Output <b>io_index</b> – 1 <b>vol_level</b> – Volume level -100db to 15dB;	Get AUDIO OUT level: #AUD-LVL?_1,1<CR>
AUD-LVL-RANGE?	Get volume level min and max range.	<b>COMMAND</b> #AUD-LVL-RANGE?_<io_mode>,<io_index><CR> <b>FEEDBACK</b> ~nn@AUD-LVL-RANGE_<io_mode>,<io_index>,<min_val>,<max_val><CR><LF>	<b>io_mode</b> – 1 – Output <b>io_index</b> – 1 <b>min_val</b> – -100db <b>max_val</b> – 15dB	Get AUDIO OUT level range: #AUD-LVL-RANGE?_1,1<CR>
AUD-MUTE	Set audio mute.	<b>COMMAND</b> #AUD-MUTE_<out_index>,<mute_mode><CR> <b>FEEDBACK</b> ~nn@AUD-MUTE_<out_index>,<mute_mode><CR><LF>	<b>out_index</b> – 1 <b>mute_mode</b> – On/Off 0 – Off 1 – On	Set Output 1 to mute: #AUD-MUTE_1,1<CR>
AUD-MUTE?	Set audio mute.	<b>COMMAND</b> #AUD-MUTE_<out_index><CR> <b>FEEDBACK</b> ~nn@AUD-MUTE_<out_index>,<mute_mode><CR><LF>	<b>out_index</b> – 1 <b>mute_mode</b> – On/Off 0 – Off 1 – On	Get Output 1 to mute: #AUD-MUTE_1,1<CR>
AUD-MUTE-PERSIST	Set the auto audio unmute status upon volume change.	<b>COMMAND</b> #AUD-MUTE-PERSIST_<unmute_status><CR> <b>FEEDBACK</b> ~nn@AUD-MUTE-PERSIST_<unmute_status><CR><LF>	<b>unmute_status</b> – 0 – Mute state is not persistent and changes upon volume change 1 – Mute state is persistent upon volume change	Set mute mode to be persistent and not change upon volume change: #AUD-MUTE-PERSIST_1<CR>
AUD-MUTE-PERSIST?	Get the auto audio unmute status.	<b>COMMAND</b> #AUD-MUTE-PERSIST?_<unmute_status><CR> <b>FEEDBACK</b> ~nn@AUD-MUTE-PERSIST_<unmute_status><CR><LF>	<b>unmute_status</b> – 0 – Mute state is not persistent and changes upon volume change 1 – Mute state is persistent upon volume change	Get auto unmute status upon volume change: #AUD-MUTE-PERSIST?_<unmute_status><CR>
AV-SW-MODE	Set input auto switch mode (per output).	<b>COMMAND</b> #AV-SW-MODE_<layer_type>,<out_index>,<connection_mode><CR> <b>FEEDBACK</b> ~nn@AV-SW-MODE_<layer_type>,<out_index>,<connection_mode><CR><LF>	<b>layer_type</b> – Number that indicates the signal type: 1 – Video 2 – Audio <b>out_index</b> – 1 <b>connection_mode</b> – Connection mode 0 – manual 1 – priority switch 2 – last connected switch	Set the input audio switch mode to Manual for HDMI OUT: #AV-SW-MODE_1,1,0<CR>
AV-SW-MODE?	Get input auto switch mode (per output).	<b>COMMAND</b> #AV-SW-MODE?_<layer_type>,<out_index><CR> <b>FEEDBACK</b> ~nn@AV-SW-MODE_<layer_type>,<out_index>,<connection_mode><CR><LF>	<b>layer_type</b> – Number that indicates the signal type: 1 – Video 2 – Audio <b>out_index</b> – 1 <b>connection_mode</b> – Connection mode 0 – manual 1 – priority switch 2 – last connected switch	Get the input audio switch mode for HDMI OUT: #AV-SW-MODE?_1,1<CR>
AV-SW-TIMEOUT	Set auto switching timeout.	<b>COMMAND</b> #AV-SW-TIMEOUT_<switching_mode>,<time_out><CR> <b>FEEDBACK</b> ~nn@AV-SW-TIMEOUT_<switching_mode>,<time_out><CR><LF>	<b>switching_mode</b> – Switching mode 0 – Video signal lost 1 – New video signal detected 4 – Disable 5V on video output if no input signal detected 5 – Video cable unplugged 7 – Video signal lost for signal routed as a result of a manual override action <b>time_out</b> – Timeout in seconds 0 - 60000	Set the auto switching timeout to 5 seconds in the event of 5V disable when no input signal is detected: #AV-SW-TIMEOUT_4,5<CR>
AV-SW-TIMEOUT?	Set auto switching timeout.	<b>COMMAND</b> #AV-SW-TIMEOUT?_<switching_mode><CR> <b>FEEDBACK</b> ~nn@AV-SW-TIMEOUT_<switching_mode>,<time_out><CR><LF>	<b>switching_mode</b> – Switching mode 0 – Video signal lost 1 – New video signal detected 4 – Disable 5V on video output if no input signal detected 5 – Video cable unplugged 7 – Video signal lost for signal routed as a result of a manual override action <b>time_out</b> – Timeout in seconds 0 - 60000	Get the auto switching timeout in the event of 5V disable when no input signal is detected: #AV-SW-TIMEOUT?_4<CR>

Function	Description	Syntax	Parameters/Attributes	Example
BEACON-INFO?	Get beacon information, including IP address, UDP control port, TCP control port, MAC address, model, name.	<b>COMMAND</b> #BEACON-INFO?_<CR> <b>FEEDBACK</b> ~nn@BEACON-INFO_port_id,ip_string,udp_port,tcp_port,mac_address,model,name<CR><LF>	port_id – ID of the Ethernet port ip_string – Dot-separated representation of the IP address udp_port – UDP control port tcp_port – TCP control port mac_address – Dash-separated mac address model – Device model name – Device name	Get beacon information: #BEACON-INFO?_<CR>
BUILD-DATE?	Get device build date.	<b>COMMAND</b> #BUILD-DATE?_<CR> <b>FEEDBACK</b> ~nn@BUILD-DATE_date,time<CR><LF>	date – Format: YYYY/MM/DD where YYYY = Year MM = Month DD = Day time – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Get the device build date: #BUILD-DATE?<CR>
CEC-GW-PORT-ACTIVE	Set the CEC activation state.	<b>COMMAND</b> #CEC-GW-PORT-ACTIVE_direction_type,port_format,port_index,state<CR> <b>FEEDBACK</b> ~nn@CEC-GW-PORT-ACTIVE_direction_type,port_format,port_index,state<CR><LF>'	direction_type – Direction of the port: out port_format – Type of signal on the port: hdbt port_index – The port number: 1 state – Global gateway activation state: o 0 – as a passthrough o 1 – as a gateway	Activate CEC for the HDBaseT port as a passthrough: #CEC-GW-PORT-ACTIVE_i n,hdm1,1,0<CR>
CEC-GW-PORT-ACTIVE?	Get the CEC activation state.	<b>COMMAND</b> #CEC-GW-PORT-ACTIVE?_direction_type,port_format,port_index<CR> <b>FEEDBACK</b> ~nn@CEC-GW-PORT-ACTIVE_direction_type,port_format,port_index,state<CR><LF>'	direction_type – Direction of the port: out port_format – Type of signal on the port: hdbt port_index – The port number: 1 state – Global gateway activation state: o 0 – as a passthrough o 1 – as a gateway	Get the Activate CEC status for the HDBaseT port as a passthrough: #CEC-GW-PORT-ACTIVE_i n,hdm1,1<CR>
CEC-NTFY-ACTIVE	Set CEC notification activity (valid until the next power up).	<b>COMMAND</b> #CEC-NTFY-ACTIVE_cec_ntf<CR> <b>FEEDBACK</b> ~nn@CEC-NTFY-ACTIVE_cec_ntf<CR><LF>	cec_ntf – 0 – Inactive 1 – Active	Enable CEC notification: #CEC-NTFY-ACTIVE_1<CR>
AUD-NTFY-ACTIVE?	Get CEC notification activity status.	<b>COMMAND</b> #CEC-NTFY-ACTIVE?_<CR> <b>FEEDBACK</b> ~nn@CEC-NTFY-ACTIVE_cec_ntf<CR><LF>	cec_ntf – 0 – Inactive 1 – Active	Get CEC notification activity status: #CEC-NTFY-ACTIVE?_<CR>
CEC-MEMBERS?	Get list of CEC logical addresses.	<b>COMMAND</b> #CEC-MEMBERS?_port_index<CR> <b>FEEDBACK</b> ~nn@CEC-MEMBERS_port_index,<1a1>,<1a2>...<CR><LF>	Port_index – 1 1a – 1 to 15	Set gateway members: #CEC-MEMBERS?_1<CR>
CEC-SND	Send CEC command to port.	<b>COMMAND</b> #CEC-SND_port_index,sn_id,cmd_name,cec_len,cec_command<CR> <b>FEEDBACK</b> ~nn@CEC-SND_port_index,sn_id,cmd_name,cec_mode<CR><LF>	port_index – CEC port transmitting the command: 1 sn_id – 1 cmd_name – command name cec_len – 1–16 cec_command – CEC format command (in HEX format, no leading zeros, no '0x' prefix) cec_mode – CEC mode 0 – Sent 1 – Gateway disabled 2 – Inactive CEC-Master 3 – Busy 4 – Illegal Message Parameter 5 – Illegal CEC Address Parameter 6 – Illegal CEC Command 7 – Timeout 8 – Error	Send TV-OFF CEC command to the HDBaseT port: #CEC-SND_1,1,TV-OFF,2,e004<CR>
COUNTER?	Get the sent or received CEC messages count.	<b>COMMAND</b> #COUNTER?_category_id,sub_category_id<CR> <b>FEEDBACK</b> ~nn@COUNTER_category_id,sub_category_id,count<CR><LF>	category_id – CEC messages: 0 Sub_category_id – Type of message: 0 – Sent message 1 – Received message count – Number range: 0-65535	Get the number of sent messages: #COUNTER?_0,0<CR>
COUNTER-CLR	Clear CEC messages.	<b>COMMAND</b> #COUNTER-CLR?_category_id,sub_category_clr<CR> <b>FEEDBACK</b> ~nn@COUNTER-CLR_category_id,sub_category_id,count<CR><LF>	category_id – CEC messages: 0 Sub_category_clr – Type of message to clear: 0 – Clear sent messages 1 – Clear received messages * – Clear all CEC messages	Clear all CEC messages: #COUNTER-CLR?_0,*<CR>

Function	Description	Syntax	Parameters/Attributes	Example
CPEDID	<p>Copy EDID data from the output to the input EEPROM.</p> <p><b>i</b> Destination bitmap size depends on device properties (for 64 inputs it is a 64-bit word).</p> <p>Example: bitmap 0x0013 means inputs 1,2 and 5 are loaded with the new EDID.</p> <p>In certain products Safe_mode is an optional parameter. See the HELP command for its availability.</p>	<p><b>COMMAND</b></p> <pre>#CPEDID_edid_io,src_id,edid_io,dest_bitmap&lt;CR&gt;</pre> <p>or</p> <pre>#CPEDID_edid_io,src_id,edid_io,dest_bitmap,safe_mode&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@CPEDID_edid_io,src_id,edid_io,dest_bitmap&lt;CR&gt;&lt;LF&gt;</pre> <pre>~nn@CPEDID_edid_io,src_id,edid_io,dest_bitmap,safe_mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>edid_io</b> – EDID source type (usually output)</p> <ul style="list-style-type: none"> <li>0 – Input</li> <li>1 – Output</li> <li>2 – Default EDID</li> <li>3 – Custom EDID</li> </ul> <p><b>src_id</b> – Number of chosen source stage</p> <ul style="list-style-type: none"> <li>0 – Default EDID source</li> <li>1 – HDBaseT OUT or USB-C IN</li> <li>2 – HDMI IN</li> </ul> <p><b>edid_io</b> – EDID destination type</p> <ul style="list-style-type: none"> <li>0 – Input</li> </ul> <p><b>dest_bitmap</b> – Bitmap representing destination IDs. Format: XXXX...X, where X is hex digit. The binary form of every hex digit represents corresponding destinations.</p> <ul style="list-style-type: none"> <li>0 – indicates that EDID data is not copied to this destination.</li> <li>1 – indicates that EDID data is copied to this destination.</li> </ul> <p><b>safe_mode</b> – Safe mode (optional parameter)</p> <ul style="list-style-type: none"> <li>0 – device accepts the EDID as is without trying to adjust (default value if no parameter is sent)</li> <li>1 – device tries to adjust the EDID</li> </ul>	<p>Copy the EDID data from the HDBaseT Output to the HDMI Input:</p> <pre>#CPEDID_1,1,0,0x1&lt;CR&gt;</pre>
CS-CONVERT	Set the “force RGB color space” convert mode.	<p><b>COMMAND</b></p> <pre>#CS-CONVERT_out_index,cs_mode&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@CS-CONVERT_out_index,cs_mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>out_index</b> – The port number: 1</p> <p><b>cs_mode</b> – color space mode:</p> <ul style="list-style-type: none"> <li>o 0 – Color space pass (default)</li> <li>o 1 – Enable “force RGB color space” convert mode</li> </ul>	<p>Enable force RGB color space:</p> <pre>#CS-CONVERT_1,1&lt;CR&gt;</pre>
CS-CONVERT?	Get the “force RGB color space” convert mode.	<p><b>COMMAND</b></p> <pre>#CS-CONVERT?_out_index&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@CS-CONVERT?_out_index,cs_mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>out_index</b> – The port number: 1</p> <p><b>cs_mode</b> – color space mode:</p> <ul style="list-style-type: none"> <li>o 0 – Color space pass (default)</li> <li>o 1 – Enable “force RGB color space” convert mode</li> </ul>	<p>Get force RGB color space mode:</p> <pre>#CS-CONVERT?_1&lt;CR&gt;</pre>
DEV-STATE?	Get the device state.	<p><b>COMMAND</b></p> <pre>#DEV-STATE?_dev_state&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@DEV-STATE_dev_state&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>dev_state</b> – device state</p> <ul style="list-style-type: none"> <li>0 – Active</li> <li>1 – Power-on and no connected AV I/O ports (detecting cable connection faults)</li> <li>2 – Power-on and standby (low power; cables are either connected or not)</li> </ul>	<p>Get device status:</p> <pre>#DEV-STATE?_dev_state&lt;CR&gt;</pre>
DISPLAY?	Get output HPD status.	<p><b>COMMAND</b></p> <pre>#DISPLAY?_out_index&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@DISPLAY_out_index,status&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>out_index</b> – Number that indicates the specific output:</p> <ul style="list-style-type: none"> <li>1</li> </ul> <p><b>status</b> – HPD status according to signal validation</p> <ul style="list-style-type: none"> <li>0 – Signal or sink is not valid</li> <li>1 – Signal or sink is valid</li> <li>2 – Sink and EDID is valid</li> </ul>	<p>Get the output HPD status of Output 1:</p> <pre>#DISPLAY?_1&lt;CR&gt;</pre>
EDID-DC	Force removal of deep color on EDID or leaving it as in the original EDID.	<p><b>COMMAND</b></p> <pre>#EDID-DC_in_index,deep_color_state&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@EDID-DC_in_index,deep_color_state&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>in_index</b> – Number that indicates the specific input:</p> <ul style="list-style-type: none"> <li>1 – Input 1</li> <li>2 – Input 2</li> </ul> <p><b>deep_color_state</b> –</p> <ul style="list-style-type: none"> <li>0 – Don't change</li> <li>1 – Remove deep color</li> </ul>	<p>Remove deep color on EDID for input 1.</p> <pre>#EDID-DC_1,1&lt;CR&gt;</pre>
EDID-DC?	Get deep color status on EDID.	<p><b>COMMAND</b></p> <pre>#EDID-DC?_in_index &lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@EDID-DC_in_index,deep_color_state&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>in_index</b> – Number that indicates the specific input:</p> <ul style="list-style-type: none"> <li>1 – Input 1</li> <li>2 – Input 2</li> </ul> <p><b>deep_color_state</b> –</p> <ul style="list-style-type: none"> <li>0 – Don't change</li> <li>1 – Remove deep color</li> </ul>	<p>Get deep color state on EDID for input 2.</p> <pre>#EDID-DC?_2&lt;CR&gt;</pre>
ETH-PORT	<p>Set Ethernet port protocol.</p> <p><b>i</b> If the port number you enter is already in use, an error is returned. The port number must be within the following range: 0-(2<sup>16</sup>-1).</p>	<p><b>COMMAND</b></p> <pre>#ETH-PORT_port_type,port_id&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@ETH-PORT_port_type,port_id&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>port_type</b> – TCP/UDP</p> <p><b>port_id</b> – TCP/UDP port number (0 – 65535)</p>	<p>Set the Ethernet port protocol for TCP to 12457:</p> <pre>#ETH-PORT_TCP,12457&lt;CR&gt;</pre>
ETH-PORT?	<p>Get Ethernet port protocol.</p> <p><b>i</b> If the port number you enter is already in use, an error is returned. The port number must be within the following range: 0-(2<sup>16</sup>-1).</p>	<p><b>COMMAND</b></p> <pre>#ETH-PORT?_port_type&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@ETH-PORT_port_type,port_id&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>port_type</b> – TCP/UDP</p> <p><b>port_id</b> – TCP/UDP port number (0 – 65535)</p>	<p>Get the Ethernet port protocol for UDP:</p> <pre>#ETH-PORT?_UDP&lt;CR&gt;</pre>

Function	Description	Syntax	Parameters/Attributes	Example
FACTORY	<p>Reset device to factory default configuration.</p> <p><b>i</b> This command deletes all user data from the device. The deletion can take some time.</p> <p>Your device may require powering off and powering on for the changes to take effect.</p>	<p><b>COMMAND</b></p> <pre>#FACTORY&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@FACTORY_ok&lt;CR&gt;&lt;LF&gt;</pre>		<p>Reset the device to factory default configuration:</p> <pre>#FACTORY&lt;CR&gt;</pre>
HDBT-STAT?	Get HDBT link status.	<p><b>COMMAND</b></p> <pre>#HDBT-STAT?_io_mode,in_index,status_type&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@HDBT-STAT_io_mode,in_index,status_type,status&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>io_mode</b> – Input/Output</p> <ul style="list-style-type: none"> <li>0 – Input</li> <li>1 – Output</li> </ul> <p><b>io_index</b> – Number that indicates the specific number of inputs or outputs (based on io_mode):</p> <ul style="list-style-type: none"> <li>1 – HDBaseT OUT</li> </ul> <p><b>Status_type</b> – HDBT status:</p> <ul style="list-style-type: none"> <li>0 – Link</li> </ul> <p><b>status</b> – HDBT status:</p> <ul style="list-style-type: none"> <li>0 – No link</li> <li>1 – Link</li> </ul>	<p>Get the HDBT link status:</p> <pre>#HDBT-STAT?_0,1,0&lt;CR&gt;</pre>
HDCP-MOD	<p>Set HDCP mode.</p> <p><b>i</b> Get HDCP working mode on the device input:</p> <p>HDCP supported – HDCP ON [default].</p> <p>HDCP not supported - HDCP OFF.</p> <p>HDCP support changes following detected sink - MIRROR OUTPUT.</p>	<p><b>COMMAND</b></p> <pre>#HDCP-MOD_in_index,mode&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@HDCP-MOD_in_index,mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>in_index</b> – Number that indicates the specific input:</p> <ul style="list-style-type: none"> <li>1 – USB-C IN</li> <li>2 – HDMI IN</li> </ul> <p><b>mode</b> – HDCP mode:</p> <ul style="list-style-type: none"> <li>0 – HDCP Off</li> <li>1 – HDCP On</li> <li>2 – Follow Input</li> <li>3 – HDCP defined according to the connected output</li> </ul>	<p>Set the input HDCP-MODE of HDMI IN to off:</p> <pre>#HDCP-MOD_2,0&lt;CR&gt;</pre>
HDCP-MOD?	<p>Get HDCP mode.</p> <p><b>i</b> Get HDCP working mode on the device input:</p> <p>HDCP supported – HDCP ON [default].</p> <p>HDCP not supported - HDCP OFF.</p> <p>HDCP support changes following detected sink - MIRROR OUTPUT.</p>	<p><b>COMMAND</b></p> <pre>#HDCP-MOD?_in_index&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@HDCP-MOD_in_index,mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>in_index</b> – Number that indicates the specific input:</p> <ul style="list-style-type: none"> <li>1 – USB-C IN</li> <li>2 – HDMI IN</li> </ul> <p><b>mode</b> – HDCP mode:</p> <ul style="list-style-type: none"> <li>0 – HDCP Off</li> <li>1 – HDCP On</li> <li>2 – Follow Input</li> <li>3 – HDCP defined according to the connected output</li> </ul>	<p>Get the input HDCP-MODE of HDMI IN :</p> <pre>#HDCP-MOD?_2&lt;CR&gt;</pre>
HDCP-OUT	<p>Set HDCP mode.</p> <p><b>i</b> Get HDCP working mode on the device input:</p> <p>HDCP supported – HDCP ON [default].</p> <p>HDCP not supported - HDCP OFF.</p> <p>HDCP support changes following detected sink - MIRROR OUTPUT.</p>	<p><b>COMMAND</b></p> <pre>#HDCP-OUT_out_index,mode&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@HDCP-OUT_out_index,mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>out_index</b> – Number that indicates the specific input:</p> <ul style="list-style-type: none"> <li>1 – HDBaset OUT</li> </ul> <p><b>mode</b> – HDCP mode:</p> <ul style="list-style-type: none"> <li>0 – Follow Input</li> <li>1 – HDCP always ON (i.e. output signal is always HDCP-encrypted, regardless of input HDCP)</li> </ul>	<p>Set the output HDCP mode of HDBaseT OUT to follow input:</p> <pre>#HDCP-OUT_1,0&lt;CR&gt;</pre>
HDCP-OUT?	<p>Get HDCP mode.</p> <p><b>i</b> Get HDCP working mode on the device input:</p> <p>HDCP supported – HDCP ON [default].</p> <p>HDCP not supported - HDCP OFF.</p> <p>HDCP support changes following detected sink - MIRROR OUTPUT.</p>	<p><b>COMMAND</b></p> <pre>#HDCP-OUT?_out_index&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@HDCP-OUT_out_index,mode&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>out_index</b> – Number that indicates the specific input:</p> <ul style="list-style-type: none"> <li>1 – HDBaset OUT</li> </ul> <p><b>mode</b> – HDCP mode:</p> <ul style="list-style-type: none"> <li>0 – Follow Input</li> <li>1 – HDCP always ON (i.e. output signal is always HDCP-encrypted, regardless of input HDCP)</li> </ul>	<p>Get the output HDCP-MODE of HDBaseT OUT :</p> <pre>#HDCP-OUT?_1&lt;CR&gt;</pre>



Function	Description	Syntax	Parameters/Attributes	Example
HDCP-STAT?	Get HDCP signal status of a connected device.  ① io_mode =1 – get the HDCP signal status of the sink device connected to the specified output.  io_mode =0 – get the HDCP signal status of the source device connected to the specified input.	<b>COMMAND</b> #HDCP-STAT?_io_mode,in_index<CR> <b>FEEDBACK</b> ~nn@HDCP-STAT_io_mode,in_index,status<CR><LF>	<b>io_mode</b> – Input/Output 0 – Input 1 – Output <b>io_index</b> – Number that indicates the specific number of inputs or outputs (based on io_mode): 1 – HDBaseT OUT or USB-C IN 2 – HDMI IN <b>status</b> – Signal encryption status - valid values On/Off: 0 – HDCP Off 1 – HDCP On	Get the HDCP status of the source device connected to USB-C IN: #HDCP-STAT?_0,1<CR>
HELP	Get command list or help for specific command.	<b>COMMAND</b> #HELP<CR> #HELP_cmd_name<CR> <b>FEEDBACK</b> 1. Multi-line: ~nn@Device_cmd_name,_cmd_name.<CR><LF> To get help for command use: HELP (COMMAND_NAME)<CR><LF> ~nn@HELP_cmd_name:<CR><LF> description<CR><LF> USAGE:usage<CR><LF>	<b>cmd_name</b> – Name of a specific command	Get the command list: #HELP<CR>  To get help for AV-SW-TIMEOUT: HELP_av-sw-timeout<CR>
LABEL	Set input/output label	<b>COMMAND</b> #LABEL_io_mode,io_index,switch,label_txt<CR> <b>FEEDBACK</b> ~nn@LABEL_io_mode,io_index,switch,label_txt<CR><LF>	<b>io_mode</b> – Number that indicates the specific input: 0 – Input 1 – Output <b>io_index</b> – Number that indicates the specific input: <b>For inputs –</b> 1 – USB-C IN 2 – HDMI IN <b>For output</b> 1 – HDBT output <b>switch</b> – 0 <b>label_txt</b> – Custom label string between 1 and 32 (at least one character and not bigger than 32).	Set the HDMI input label on: #LABEL_0,2,0,hdmi<CR>
LABEL?	Get input/output label	<b>COMMAND</b> #LABEL?_io_mode,io_index,switch,label_txt<CR> <b>FEEDBACK</b> ~nn@LABEL_io_mode,io_index,switch,label_txt<CR><LF>	<b>io_mode</b> – Number that indicates the specific input: 0 – Input 1 – Output <b>io_index</b> – Number that indicates the specific input: <b>For inputs –</b> 1 – USB-C IN 2 – HDMI IN <b>For output</b> 1 – HDBT output <b>switch</b> – 0 <b>label_txt</b> – Custom label string between 1 and 32 (at least one character and not bigger than 32). label string	Get the HDMI input label: #LABEL?_0,2,0,hdmi<CR>
LOCK-EDID	Lock last read EDID.	<b>COMMAND</b> #LOCK-EDID_in_index,lock_mode<CR> <b>FEEDBACK</b> ~nn@LOCK-EDID_in_index,lock_mode<CR><LF>	<b>in_index</b> – Number that indicates the specific input: 1 – USB-C IN 2 – HDMI IN <b>lock_mode</b> – On/Off 0 – Off unlocks EDID 1 – On locks EDID	Lock the last read EDID from input 2: #LOCK-EDID_2,1<CR>
LOCK-EDID?	Get EDID Lock status.	<b>COMMAND</b> #LOCK-EDID?_in_index <CR> <b>FEEDBACK</b> ~nn@LOCK-EDID_in_index,lock_mode<CR><LF>	<b>in_index</b> – Number that indicates the specific input: 1 – USB-C IN 2 – HDMI IN <b>lock_mode</b> – On/Off 0 – Off unlocks EDID 1 – On locks EDID	Get input 2 Lock EDID status: #LOCK-EDID?_2<CR>
LOG-TAIL?	Get the list of the N last events.	<b>COMMAND</b> #LOG-TAIL?_last_event<CR> <b>FEEDBACK</b> ~nn@LOG-TAIL_last_event,ok,<list><CR><LF>	<b>last_event</b> – the number of last events to view <N = 1,2,3...>	Get the protocol permission level to Admin: #LOG-TAIL?_8<CR>

Function	Description	Syntax	Parameters/Attributes	Example
LOGIN	<p>Set protocol permission.</p> <p><b>i</b> The permission system works only if security is enabled with the "SECUR" command.</p> <p>LOGIN allows the user to run commands with an End User or Administrator permission level. When the permission system is enabled, LOGIN enables running commands with the User or Administrator permission level. When set, login must be performed upon each connection.</p> <p>It is not mandatory to enable the permission system in order to use the device.</p> <p>In each device, some connections allow logging in to different levels. Some do not work with security at all.</p> <p>Connection may logout after timeout.</p>	<p><b>COMMAND</b></p> <pre>#LOGIN_login_level,password&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@LOGIN_login_level,password_ok&lt;CR&gt;&lt;LF&gt;</pre> <p>or</p> <pre>~nn@LOGIN_err_004&lt;CR&gt;&lt;LF&gt;</pre> <p>(if bad password entered)</p>	<p><b>login_level</b> – Level of permissions required (User or Admin)</p> <p><b>password</b> – Predefined password (by PASS command). Default password is an empty string</p>	<p>Set the protocol permission level to Admin (when the password defined in the PASS command is 33333):</p> <pre>#LOGIN_admin,33333&lt;CR&gt;</pre>
LOGIN?	<p>Get protocol permission state.</p> <p><b>i</b> The permission system works only if security is enabled with the "SECUR" command.</p> <p>LOGIN allows the user to run commands with an End User or Administrator permission level. When the permission system is enabled, LOGIN enables running commands with the User or Administrator permission level. When set, login must be performed upon each connection.</p> <p>It is not mandatory to enable the permission system in order to use the device.</p> <p>In each device, some connections allow logging in to different levels. Some do not work with security at all.</p> <p>Connection may logout after timeout.</p>	<p><b>COMMAND</b></p> <pre>#LOGIN_login_level &lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@LOGIN_login_level,password_ok&lt;CR&gt;&lt;LF&gt;</pre> <p>or</p> <pre>~nn@LOGIN_err_004&lt;CR&gt;&lt;LF&gt;</pre> <p>(if bad password entered)</p>	<p><b>login_level</b> – Level of permissions required (User or Admin)</p> <p><b>password</b> – Predefined password (by PASS command). Default password is an empty string or NO SECURE if authentication is removed.</p>	<p>Get the protocol permission level to Admin:</p> <pre>#LOGIN?_admin&lt;CR&gt;</pre>
LOGOUT	<p>Cancel current permission level.</p> <p><b>i</b> Logs out from End User or Administrator permission levels to Not Secure.</p>	<p><b>COMMAND</b></p> <pre>#LOGOUT&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@LOGOUT_ok&lt;CR&gt;&lt;LF&gt;</pre>		<pre>#LOGOUT&lt;CR&gt;</pre>
MODEL?	<p>Get device model.</p>	<p><b>COMMAND</b></p> <pre>#MODEL?_&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@MODEL_model_name&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>model_name</b> – String of up to 19 printable ASCII chars</p>	<p>Get the device model:</p> <pre>#MODEL?_&lt;CR&gt;</pre>
NAME	<p>Set machine (DNS) name.</p> <p><b>i</b> The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).</p>	<p><b>COMMAND</b></p> <pre>#NAME_machine_name&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NAME_machine_name&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>machine_name</b> – String of up to 15 alpha-numeric chars (can include hyphen, not at the beginning or end)</p>	<p>Set the DNS name of the device to room-442:</p> <pre>#NAME_room-442&lt;CR&gt;</pre>

Function	Description	Syntax	Parameters/Attributes	Example
<b>NAME?</b>	<p>Get machine (DNS) name.</p> <p><b>i</b> The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).</p>	<p><b>COMMAND</b></p> <pre>#NAME?_&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NAME_machine_name&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>machine_name</b> – String of up to 15 alpha-numeric chars (can include hyphen, not at the beginning or end)</p>	<p>Get the DNS name of the device:</p> <pre>#NAME?_&lt;CR&gt;</pre>
<b>NAME-RST</b>	<p>Reset machine (DNS) name to factory default.</p> <p><b>i</b> Factory default of machine (DNS) name is "KRAMER." + 4 last digits of device serial number.</p>	<p><b>COMMAND</b></p> <pre>#NAME-RST&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NAME-RST_ok&lt;CR&gt;&lt;LF&gt;</pre>		<p>Reset the machine name (S/N last digits are 0102):</p> <pre>#NAME-RST_kramer_0102&lt;CR&gt;</pre>
<b>NET-CONFIG</b>	<p>Set a network configuration.</p> <p><b>i</b> Parameters <b>[DNS1]</b> and <b>[DNS2]</b> are optional.</p> <p><b>i</b> For Backward compatibility, the <b>id</b> parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.</p> <p><b>i</b> If the gateway address is not compliant to the subnet mask used for the host IP, the command will return an error. Subnet and gateway compliancy specified by RFC950.</p>	<p><b>COMMAND</b></p> <pre>#NET-CONFIG_netw_id,net_ip,net_mask,gateway,[dns1],[dns2]&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NET-CONFIG_netw_id,net_ip,net_mask,gateway&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>netw_id</b> – 0</p> <p><b>net_ip</b> – Network IP</p> <p><b>net_mask</b> – Network mask</p> <p><b>gateway</b> – Network gateway</p>	<p>Set the device network parameters to IP address 192.168.113.10, net mask 255.255.0.0, and gateway 192.168.0.1:</p> <pre>#NET-CONFIG_0,192.168.113.10,255.255.0.0,192.168.0.1&lt;CR&gt;</pre>
<b>NET-CONFIG?</b>	<p>Get a network configuration.</p> <p><b>i</b> Parameters <b>[DNS1]</b> and <b>[DNS2]</b> are optional.</p> <p><b>i</b> For Backward compatibility, the <b>id</b> parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.</p> <p><b>i</b> If the gateway address is not compliant to the subnet mask used for the host IP, the command will return an error. Subnet and gateway compliancy specified by RFC950.</p>	<p><b>COMMAND</b></p> <pre>#NET-CONFIG_netw_id,net_ip,net_mask,gateway,[dns1],[dns2]&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NET-CONFIG_netw_id,net_ip,net_mask,gateway&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>netw_id</b> – 0</p> <p><b>net_ip</b> – Network IP</p> <p><b>net_mask</b> – Network mask</p> <p><b>gateway</b> – Network gateway</p>	<p>Get the device network parameters:</p> <pre>#NET-CONFIG?_0&lt;CR&gt;</pre>
<b>NET-DHCP?</b>	<p>Get DHCP mode.</p> <p><b>i</b> For Backward compatibility, the <b>id</b> parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.</p>	<p><b>COMMAND</b></p> <pre>#NET-DHCP?_netw_id&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NET-DHCP_netw_id,dhcp_state&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>netw_id</b> – Network ID—the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3....</p> <p><b>dhcp_state</b> –</p> <p>0 – Do not use DHCP. Use the IP set by the factory or using the <b>net-ip</b> or <b>net-config</b> command.</p> <p>1 – Try to use DHCP. If unavailable, use the IP set by the factory or using the <b>net-ip</b> or <b>net-config</b> command.</p>	<p>Get DHCP mode for port 1:</p> <pre>#NET-DHCP?_1&lt;CR&gt;</pre>
<b>NET-GATE</b>	<p>Set gateway IP.</p> <p><b>i</b> A network gateway connects the device via another network and maybe over the Internet. Be careful of security issues. For proper settings consult your network administrator.</p>	<p><b>COMMAND</b></p> <pre>#NET-GATE_ip_address&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NET-GATE_ip_address&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>ip_address</b> – Format: xxx.xxx.xxx.xxx</p>	<p>Set the gateway IP address to 192.168.0.1:</p> <pre>#NET-GATE_192.168.000.001&lt;CR&gt;</pre>
<b>NET-GATE?</b>	<p>Get gateway IP.</p> <p><b>i</b> A network gateway connects the device via another network and maybe over the Internet. Be aware of security problems.</p>	<p><b>COMMAND</b></p> <pre>#NET-GATE?_&lt;CR&gt;</pre> <p><b>FEEDBACK</b></p> <pre>~nn@NET-GATE_ip_address&lt;CR&gt;&lt;LF&gt;</pre>	<p><b>ip_address</b> – Format: xxx.xxx.xxx.xxx</p>	<p>Get the gateway IP address:</p> <pre>#NET-GATE?_&lt;CR&gt;</pre>

Function	Description	Syntax	Parameters/Attributes	Example
NET-IP	Set IP address.  ❗ For proper settings consult your network administrator.	<b>COMMAND</b> #NET-IP_ip_address<CR> <b>FEEDBACK</b> ~nn@NET-IP_ip_address<CR><LF>	ip_address – Format: xxx.xxx.xxx.xxx	Set the IP address to 192.168.1.39: #NET-IP_192.168.001.039<CR>
NET-IP?	Get IP address.	<b>COMMAND</b> #NET-IP?_<CR> <b>FEEDBACK</b> ~nn@NET-IP_ip_address<CR><LF>	ip_address – Format: xxx.xxx.xxx.xxx	Get the IP address: #NET-IP?_<CR>
NET-MAC?	Get MAC address.  ❗ For backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.	<b>COMMAND</b> #NET-MAC?_id<CR> <b>FEEDBACK</b> ~nn@NET-MAC_id,mac_address<CR><LF>	id – Network ID—the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3... mac_address – Unique MAC address. Format: XX-XX-XX-XX-XX-XX where X is hex digit	#NET-MAC?_id<CR>
NET-MASK	Set subnet mask.  ❗ For proper settings consult your network administrator.	<b>COMMAND</b> #NET-MASK_net_mask<CR> <b>FEEDBACK</b> ~nn@NET-MASK_net_mask<CR><LF>	net_mask – Format: xxx.xxx.xxx.xxx	Set the subnet mask to 255.255.0.0: #NET-MASK_255.255.000.000<CR>
NET-MASK?	Get subnet mask.	<b>COMMAND</b> #NET-MASK?_<CR> <b>FEEDBACK</b> ~nn@NET-MASK_net_mask<CR><LF>	net_mask – Format: xxx.xxx.xxx.xxx	Get the subnet mask: #NET-MASK?_<CR>
PASS	Set password for login level.  ❗ The default password is an empty string.	<b>COMMAND</b> #PASS_login_level,password<CR> <b>FEEDBACK</b> ~nn@PASS_login_level,password<CR><LF>	login_level – Level of login to set (End User or Administrator). password – Password for the login_level. Up to 15 printable ASCII chars	Set the password for the Admin protocol permission level to 33333: #PASS_admin,33333<CR>
PASS?	Get password for login level.  ❗ The default password is an empty string.	<b>COMMAND</b> #PASS_login_level <CR> <b>FEEDBACK</b> ~nn@PASS_login_level,password<CR><LF>	login_level – Level of login to set (End User or Administrator). password – Password for the login_level. Up to 15 printable ASCII chars	Get the password for the Admin protocol permission: #PASS?_admin<CR>
PRIORITY	Set input priority.  ❗ WP-577VH – layer parameter is not used.	<b>COMMAND</b> #PRIORITY_layer_type,priority_1,priority_2..priority_4 <CR> <b>FEEDBACK</b> ~nn@PRIORITY_layer_type,priority_1,priority_2..priority_4<CR><LF>	layer_type – Layer Enumeration 1 – Video priority – Priority of inputs (1-2) 1 – USB-C 2 – HDMI	Set the priority to USB-C first and HDMI second, is 1,2: #PRIORITY_1,1,2<CR>
PRIORITY?	Set input priority.	<b>COMMAND</b> #PRIORITY?_layer_type<CR> <b>FEEDBACK</b> ~nn@PRIORITY_layer_type,priority_1,priority_2..priority_4<CR><LF>	layer_type – Layer Enumeration 1 – Video priority – Priority of inputs (1-2) 1 – USB-C 2 – HDMI	Get the input priority: #PRIORITY?_1<CR>
PROT-VER?	Get device protocol version.	<b>COMMAND</b> #PROT-VER?_<CR> <b>FEEDBACK</b> ~nn@PROT-VER_3000:version<CR><LF>	version – XX.XX where X is a decimal digit	Get the device protocol version: #PROT-VER?_<CR>
RESET	Reset device.  ❗ To avoid locking the port due to a USB bug in Windows, disconnect USB connections immediately after running this command. If the port was locked, disconnect, and reconnect the cable to reopen the port.	<b>COMMAND</b> #RESET<CR> <b>FEEDBACK</b> ~nn@RESET_ok<CR><LF>		Reset the device: #RESET<CR>
ROUTE	Set layer routing.  ❗ This command replaces all other routing commands.	<b>COMMAND</b> #ROUTE_layer_type,out_index,in_index<CR> <b>FEEDBACK</b> ~nn@ROUTE_layer_type,out_index,in_index<CR><LF>	layer_type Layer Enumeration 1 – Video 3 – Data out_index 1 – Output in_index – Source id for Video: 1 – USB-C IN 2 – HDMI IN Source id for Data: 2 – RS232EXTD extension mode. 3 – Maestro HDBT control mode	Route video input 2 to the output: #ROUTE_1,1,2<CR>  Connect HDBT to Maestro 'RS232EXTD' (the Far Side Terminal needs to be configured to 9600bps): #ROUTE_3,1,3<CR>

Function	Description	Syntax	Parameters/Attributes	Example
ROUTE?	Get layer routing state.  <i>i</i> This command replaces all other routing commands.	<b>COMMAND</b> #ROUTE?_layer_type,out_index<CR> <b>FEEDBACK</b> ~nn@ROUTE_layer_type,out_index,in_index <CR><LF>	<b>layer_type</b> Layer Enumeration 1 – Video 3 – Data <b>out_index</b> 1 – OUT 1 HDMI <b>in_index</b> – Source id for Video 1 – USB-C IN 2 – HDMI IN Source id for Data: 2 – RS232EXTD extension mode. 3 – Maestro HDBT control mode	Get video routing output: #ROUTE?_1,1<CR>
SECUR	Start/stop security.  <i>i</i> The permission system works only if security is enabled with the "SECUR" command.	<b>COMMAND</b> #SECUR_security_state<CR> <b>FEEDBACK</b> ~nn@SECUR_security_state<CR><LF>	<b>security_state</b> – Security state 0 – OFF (disables security) 1 – ON (enables security)	Enable the permission system: #SECUR_1<CR>
SECUR?	Get security state.  <i>i</i> The permission system works only if security is enabled with the "SECUR" command.	<b>COMMAND</b> #SECUR?_security_state<CR> <b>FEEDBACK</b> ~nn@SECUR_security_state<CR><LF>	<b>security_state</b> – Security state 0 – OFF (disables security) 1 – ON (enables security)	Enable the permission system: #SECUR?_<CR>
SIGNAL?	Get input signal status.	<b>COMMAND</b> #SIGNAL?_in_index<CR> <b>FEEDBACK</b> ~nn@SIGNAL_in_index,status<CR><LF>	<b>in_index</b> – Number that indicates the specific input: 1 – USB-C IN 2 – HDMI IN <b>status</b> – Signal status according to signal validation: 0 – Off 1 – On	Get the input signal lock status of IN 1: #SIGNAL?_1<CR>
SN?	Get device serial number.	<b>COMMAND</b> #SN?_<CR> <b>FEEDBACK</b> ~nn@SN_serial_num<CR><LF>	<b>serial_num</b> – 14 decimal digits, factory assigned	Get the device serial number: #SN?_<CR>
STANDBY	Set standby mode.	<b>COMMAND</b> #STANDBY_value<CR> <b>FEEDBACK</b> ~nn@STANDBY_value<CR><LF>	<b>value</b> – Standby state: 0 – Exit 1 – Enter	Enter standby mode: #STANDBY_1<CR>
STANDBY?	Get standby mode.	<b>COMMAND</b> #STANDBY?_<CR> <b>FEEDBACK</b> ~nn@STANDBY_value<CR><LF>	<b>value</b> – Standby state 0 – Exit 1 – Enter	Get standby mode: #STANDBY?_<CR>
STANDBY-TIMEOUT	Set the delay time before the device goes into standby mode after a period of no device activity.	<b>COMMAND</b> #STANDBY-TIMEOUT_value<CR> <b>FEEDBACK</b> ~nn@STANDBY-TIMEOUT_value<CR><LF>	<b>value</b> – Standby timeout: (up to 900min, never 0; default = 30min)	Set standby timeout after 5 minutes of inactivity: #STANDBY-TIMEOUT_5<CR>
STANDBY-TIMEOUT?	Get the delay time before the device goes into standby mode after a period of no device activity.	<b>COMMAND</b> #STANDBY-TIMEOUT?_<CR> <b>FEEDBACK</b> ~nn@STANDBY-TIMEOUT_value<CR><LF>	<b>value</b> – Standby timeout: (up to 900min, never 0; default = 30min)	Get standby timeout: #STANDBY-TIMEOUT?_<CR>
TIME	Set device time and date.  <i>i</i> The year must be 4 digits.  The device does not validate the day of week from the date.  Time format - 24 hours.  Date format - Day, Month, Year.	<b>COMMAND</b> #TIME_day_of_week,date,data<CR> <b>FEEDBACK</b> ~nn@TIME_day_of_week,date,data<CR><LF>	<b>day_of_week</b> – One of {SUN,MON,TUE,WED,THU,FRI,SAT} <b>date</b> – Format: DD-MM-YYYY. <b>data</b> – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Set device time and date to December 5, 2020 at 2:30pm: #TIME_mon_05-12-2020,14:30:00<CR>
TIME?	Get device time and date.  <i>i</i> The year must be 4 digits.  The device does not validate the day of week from the date.  Time format - 24 hours.  Date format - Day, Month, Year.	<b>COMMAND</b> #TIME?_<CR> <b>FEEDBACK</b> ~nn@TIME_day_of_week,date,data<CR><LF>	<b>day_of_week</b> – One of {SUN,MON,TUE,WED,THU,FRI,SAT} <b>date</b> – Format: YYYY/MM/DD where YYYY = Year MM = Month DD = Day <b>data</b> – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Get device time and date: #TIME?<CR>
VERSION?	Get firmware version number.	<b>COMMAND</b> #VERSION?_<CR> <b>FEEDBACK</b> ~nn@VERSION_firmware_version<CR><LF>	<b>firmware_version</b> – XX.XX.XXXX where the digit groups are: major.minor.build version	Get the device firmware version number: #VERSION?_<CR>

Function	Description	Syntax	Parameters/Attributes	Example
<b>VMUTE</b>	Set enable/disable video on output.  ❗ Video mute parameter 2 (blank picture) is not supported.	<b>COMMAND</b> #VMUTE_ out_index, flag<CR> <b>FEEDBACK</b> ~nn@VMUTE_ out_index, flag<CR><LF>	<b>out_index</b> – Number that indicates the specific output – 1 <b>flag</b> – Video Mute 0 – Video enabled 1 – Video disabled 2 – Blank picture	Disable the video output on output: #VMUTE_1, 0<CR>
<b>VMUTE?</b>	Get video on output status.  ❗ Video mute parameter 2 (blank picture) is not supported.	<b>COMMAND</b> #VMUTE?_ out_index<CR> <b>FEEDBACK</b> ~nn@VMUTE_ out_index, flag<CR><LF>	<b>out_index</b> – Number that indicates the specific output – 1 <b>flag</b> – Video Mute 0 – Video enabled 1 – Video disabled 2 – Blank picture	Get video on output status: #VMUTE?_1<CR>

---

## Result and Error Codes

### Syntax

In case of an error, the device responds with an error message. The error message syntax:

- ~NN@ERR XXX<CR><LF> – when general error, no specific command
- ~NN@CMD ERR XXX<CR><LF> – for specific command
- NN – machine number of device, default = 01
- XXX – error code

## Error Codes

Error Name	Error Code	Description
P3K_NO_ERROR	0	No error
ERR_PROTOCOL_SYNTAX	1	Protocol syntax
ERR_COMMAND_NOT_AVAILABLE	2	Command not available
ERR_PARAMETER_OUT_OF_RANGE	3	Parameter out of range
ERR_UNAUTHORIZED_ACCESS	4	Unauthorized access
ERR_INTERNAL_FW_ERROR	5	Internal FW error
ERR_BUSY	6	Protocol busy
ERR_WRONG_CRC	7	Wrong CRC
ERR_TIMEDOUT	8	Timeout
ERR_RESERVED	9	(Reserved)
ERR_FW_NOT_ENOUGH_SPACE	10	Not enough space for data (firmware, FPGA...)
ERR_FS_NOT_ENOUGH_SPACE	11	Not enough space – file system
ERR_FS_FILE_NOT_EXISTS	12	File does not exist
ERR_FS_FILE_CANT_CREATED	13	File can't be created
ERR_FS_FILE_CANT_OPEN	14	File can't open
ERR_FEATURE_NOT_SUPPORTED	15	Feature is not supported
ERR_RESERVED_2	16	(Reserved)
ERR_RESERVED_3	17	(Reserved)
ERR_RESERVED_4	18	(Reserved)
ERR_RESERVED_5	19	(Reserved)
ERR_RESERVED_6	20	(Reserved)
ERR_PACKET_CRC	21	Packet CRC error
ERR_PACKET_MISSED	22	Packet number isn't expected (missing packet)
ERR_PACKET_SIZE	23	Packet size is wrong
ERR_RESERVED_7	24	(Reserved)
ERR_RESERVED_8	25	(Reserved)
ERR_RESERVED_9	26	(Reserved)
ERR_RESERVED_10	27	(Reserved)
ERR_RESERVED_11	28	(Reserved)
ERR_RESERVED_12	29	(Reserved)
ERR_EDID_CORRUPTED	30	EDID corrupted
ERR_NON_LISTED	31	Device specific errors
ERR_SAME_CRC	32	File has the same CRC – not changed
ERR_WRONG_MODE	33	Wrong operation mode
ERR_NOT_CONFIGURED	34	Device/chip was not initialized

The warranty obligations of Kramer Electronics Inc. ("Kramer Electronics") for this product are limited to the terms set forth below:

### **What is Covered**

This limited warranty covers defects in materials and workmanship in this product.

### **What is Not Covered**

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

### **How Long this Coverage Lasts**

The standard limited warranty for Kramer products is seven (7) years from the date of original purchase, with the following exceptions:

1. All Kramer VIA hardware products are covered by a standard three (3) year warranty for the VIA hardware and a standard three (3) year warranty for firmware and software updates; all Kramer VIA accessories, adapters, tags, and dongles are covered by a standard one (1) year warranty.
2. Kramer fiber optic cables, adapter-size fiber optic extenders, pluggable optical modules, active cables, cable retractors, ring mounted adapters, portable power chargers, Kramer speakers, and Kramer touch panels are covered by a standard one (1) year warranty. Kramer 7-inch touch panels purchased on or after April 1st, 2020 are covered by a standard two (2) year warranty.
3. All Kramer Calibre products, all Kramer Minicom digital signage products, all HighSecLabs products, all streaming, and all wireless products are covered by a standard three (3) year warranty.
4. All Sierra Video MultiViewers are covered by a standard five (5) year warranty.
5. Sierra switchers & control panels are covered by a standard seven (7) year warranty (excluding power supplies and fans that are covered for three (3) years).
6. K-Touch software is covered by a standard one (1) year warranty for software updates.
7. All Kramer passive cables are covered by a lifetime warranty.

### **Who is Covered**

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

### **What Kramer Electronics Will Do**

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product. If a direct or similar replacement product is supplied, the original product's end warranty date remains unchanged and is transferred to the replacement product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

### **What Kramer Electronics Will Not Do Under This Limited Warranty**

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

### **How to Obtain a Remedy Under This Limited Warranty**

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, visit our web site at [www.kramerav.com](http://www.kramerav.com) or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required (RMA number). You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

### **Limitation of Liability**

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

### **Exclusive Remedy**

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW. IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

### **Other Conditions**

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, visit our web site at [www.kramerav.com](http://www.kramerav.com) or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.





**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE



P/N: 2900-301523

Rev: 2



**SAFETY WARNING**

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our website where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All brand names, product names, and trademarks are the property of their respective owners.