



KRAMER ELECTRONICS LTD.

# USER MANUAL

MODEL:

**VS-41 HDCP**  
4x1 DVI Switcher

---

P/N: 2900-000522 Rev 3




## VS-41HDCP Quick Start Guide

This guide helps you install and use your product for the first time. For more detailed information, go to [http://www.kramerelectronics.com/support/product\\_downloads.asp](http://www.kramerelectronics.com/support/product_downloads.asp) to download the latest manual or scan the QR code on the left.

### Step 1: Check what's in the box

- VS-41HDCP 4X1 DVI Switcher
- 1 Power cord
- 4 Rubber feet
- 1 Quick Start sheet
- Kramer RC-IR3 Infrared Remote Control Transmitter with batteries and user manual




Save the original box and packaging materials in case you need to return your VS-41HDCP for service.

### Step 2: Install the VS-41HDCP

Mount the VS-41HDCP in a rack (using the included rack "ears") or attach the rubber feet and place on a table.

### Step 3: Connect the inputs and outputs

Always switch off the power on each device before connecting it to your VS-41HDCP.

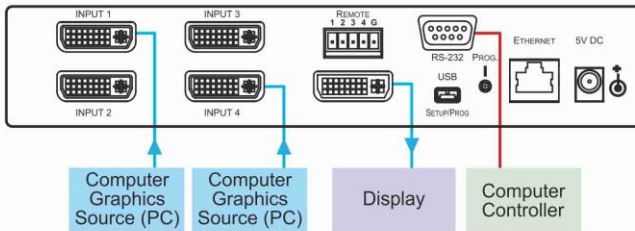

Always use Kramer high-performance cables for connecting AV equipment to the VS-41HDCP.

### Step 4: Connect the power

Connect the 5V DC power adapter to the VS-41HDCP and plug the adapter into the mains electricity.



### Step 5: Operate the VS-41HDCP

Acquire an EDID:

1. Connect the power supply.
2. Connect the new output display.
3. Press the EDID button.
4. Wait for the input buttons to stop flashing in sequence.  
To acquire the default EDID, skip step 2 above.

Operate using the front panel buttons or via the RS-232, remote control contact closure and IR remote control.

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>2</b>
2.1	Achieving the Best Performance	2
2.2	Safety Instructions	2
2.3	Recycling Kramer Products	3
<b>3</b>	<b>Overview</b>	<b>4</b>
<b>4</b>	<b>Defining the VS-41HDCP 4x1 DVI Switcher</b>	<b>5</b>
<b>5</b>	<b>Connecting a VS-41HDCP 4x1 DVI Switcher</b>	<b>6</b>
5.1	Connecting to the VS-41HDCP via RS-232	7
<b>6</b>	<b>Operating the VS-41HDCP</b>	<b>8</b>
6.1	The PC and DVD Modes	8
6.2	Setting the EDID	9
6.3	Controlling via the REMOTE Terminal Block Connector	10
6.4	Controlling the VS-41HDCP via the ETHERNET Port	11
6.5	Operating the VS-41HDCP Using a Web Browser	15
6.6	Log On to the VS-41HDCP Web Pages	15
<b>7</b>	<b>Firmware Upgrade</b>	<b>19</b>
<b>8</b>	<b>Technical Specifications</b>	<b>20</b>
8.1	Default Communication Parameters	20
<b>9</b>	<b>Default EDID</b>	<b>21</b>
<b>10</b>	<b>Kramer Protocol</b>	<b>22</b>
10.1	Switching Protocols	22
10.2	Kramer Protocol 3000	23
10.3	Syntax	32

## Figures

Figure 1:	VS-41HDCP 4x1 DVI Switcher Front Panel	5
Figure 2:	VS-41HDCP 4x1 DVI Switcher Rear Panel	5
Figure 3:	Connecting a VS-41HDCP 4x1 DVI Switcher	7
Figure 4:	Connecting the Contact Closure Remote Control PINs	10
Figure 5:	Local Area Connection Properties Window	12
Figure 6:	Internet Protocol (TCP/IP) Properties Window	12
Figure 7:	The Main Screen	13
Figure 8:	Device Properties Screen	14
Figure 9:	Java Test Page Success Message	15
Figure 10:	The Loading Page	16
Figure 11:	First Time Security Warning	16
Figure 12:	VS-41HDCP Switching Matrix Page	17
Figure 13:	Configurations Page	18

---

# 1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups that are clearly defined by function.

Our 1,000-plus different models now appear in 11 groups that are clearly defined by function: GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Matrix Switchers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters and GROUP 11: Sierra Products.

Congratulations on purchasing your Kramer **VS-41HDCP** *4x1 DVI Switcher*. The **VS-41HDCP** is ideal for:

- Conference room presentations
- Advertising applications
- Rental and staging

---

## 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual



Go to [http://www.kramerelectronics.com/support/product\\_downloads.asp](http://www.kramerelectronics.com/support/product_downloads.asp) to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

### 2.1 Achieving the Best Performance

To achieve the best performance:

- Use only good quality connection cables to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality
- Position your Kramer **VS-41HDCP** away from moisture, excessive sunlight and dust



This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.

### 2.2 Safety Instructions



**Caution:** There are no operator serviceable parts inside the unit

**Warning:** Use only the Kramer Electronics input power wall adapter that is provided with the unit

**Warning:** Disconnect the power and unplug the unit from the wall before installing

## 2.3 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at <http://www.kramerelectronics.com/support/recycling/>.

---

## 3 Overview

The **VS-41HDCP** is a high quality 4x1 switcher for DVI signals that supports a maximum data rate of up to 6.75Gbps and is suitable for resolutions up to UXGA at 60Hz, and for all HD resolutions. It equalizes the signal and switches one of the four inputs to a single DVI output.

In particular, the **VS-41HDCP** features:

- HDCP (High Definition Digital Content Protection) compliance and HDTV compatibility
- Four input selector buttons
- A MUTE button to disconnect the output and a PANEL LOCK button to prevent unwanted tampering with the buttons on the front panel
- A USB connector for setup and programming
- I-EDIDPro™ Kramer Intelligent EDID Processing™ an intelligent EDID handling & processing algorithm that ensures Plug and Play operation for DVI systems.
- Compact size. Two units can be rack mounted side-by-side in a 1U rack space with the optional Kramer **RK-1** rack kit

Control the **VS-41HDCP** using the front panel buttons, or remotely via:

- RS-232 serial commands (using Kramer 2000 and 3000 Protocols) transmitted by a touch screen system, PC, or other serial controller
- The Kramer infrared remote control transmitter
- The ETHERNET
- Remote control contact closure

## 4 Defining the VS-41HDCP 4x1 DVI Switcher

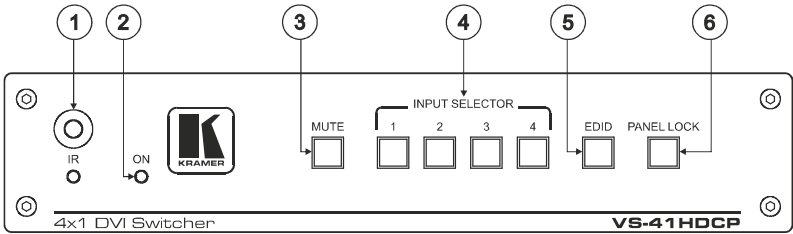


Figure 1: VS-41HDCP 4x1 DVI Switcher Front Panel

#	Feature	Function
1	IR Receiver	The yellow LED lights when receiving signals from the Infrared remote control transmitter
2	ON LED	Lights when receiving power
3	MUTE Button	Press to toggle disconnecting the output
4	INPUT SELECTOR Buttons	Press an INPUT button to select that input (from 1 to 4)
5	EDID Button	Press to acquire the EDID. This button illuminates when configuring the EDID
6	PANEL LOCK Button	Press to toggle disengaging the front panel buttons

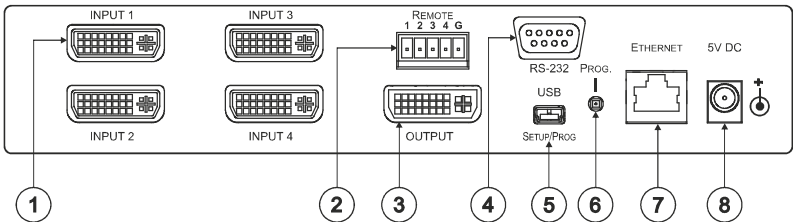


Figure 2: VS-41HDCP 4x1 DVI Switcher Rear Panel

#	Feature	Function
1	INPUT DVI Connectors	Connect to the DVI sources (from 1 to 4)
2	REMOTE Terminal Block Connectors	Connect to a contact closure switch (see <a href="#">Section 6.1</a> )
3	OUTPUT DVI Connector	Connect to the DVI acceptor
4	RS-232 9-pin D-sub Port	Connects to the PC or the RS-232 Remote Controller
5	SETUP/PROG USB Connector	Connect to a computer for firmware upgrade
6	PROG. Button	Push in for "Program" to upgrade to the latest Kramer firmware (see <a href="#">Section 7</a> ), or release for Normal (the factory default)
7	ETHERNET Connector	Connects to the PC or other Ethernet Controller
8	5V DC	+5V DC connector for powering the unit



---

## 5 Connecting a VS-41HDCP 4x1 DVI Switcher



Always switch off the power to each device before connecting it to your **VS-41HDCP**. After connecting your **VS-41HDCP**, connect its power and then switch on the power to each device.

To connect the **VS-41HDCP 4x1 DVI Switcher** (as illustrated in [Figure 3](#)), do the following:

1. Connect up to four computer graphics sources to the inputs (1 to 4).  
You do not have to connect all the DVI sources.
2. Connect the OUTPUT DVI connector to a DVI acceptor (for example, a display).
3. If required, connect a PC and/or controller to the RS-232 port and/or the ETHERNET port (see [Section 6.4](#)).
4. Connect the 5V DC power adapter to the power socket and connect the adapter to the mains electricity (not shown in [Figure 3](#)).
5. If required, acquire the EDID (see [Section 6.1](#)).

Press an INPUT SELECTOR button (from 1 to 4) to choose which DVI input to route to the output.

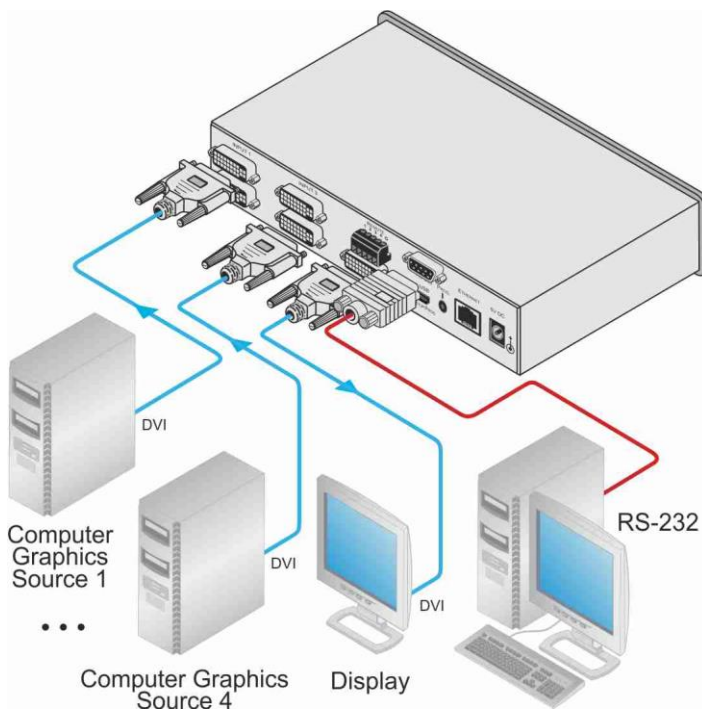


Figure 3: Connecting a VS-41HDCP 4x1 DVI Switcher

## 5.1 Connecting to the VS-41HDCP via RS-232

You can connect to the **VS-41HDCP** via an RS-232 connection using, for example, a PC. Note that a null-modem adapter/connection is not required.

To connect to the **VS-41HDCP** via RS-232:

- Connect the RS-232 9-pin D-sub rear panel port on the **VS-41HDCP** unit via a 9-wire straight cable (only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 need to be connected) to the RS-232 9-pin D-sub port on your PC

---

## 6 Operating the VS-41HDCP

This section describes how to:

- Operate the PC and DVD modes (see Section [Section 6.1](#))
- Acquire the EDID (see [Section 6.2](#))
- Control the machine via the REMOTE terminal block connector (see [Section 6.3](#))
- Control the machine via the ETHERNET port (see [Section 6.4](#))
- Control the machine via the Web pages (see [Section 6.5](#))

### 6.1 The PC and DVD Modes

The **VS-41HDCP** has two operation modes that are specific per input: the PC mode (which is the factory default) and the DVD mode. The PC mode is used when connecting a computer or several computers to one or more of the inputs. The DVD mode is used when connecting a DVD or several DVDs to the inputs.

The PC mode and the DVD mode can be applied to a single input or to several inputs. For example, if you want to connect a computer to INPUT 1, another computer to INPUT 2, and DVD machines to INPUT 3 and INPUT 4, set INPUT 1 and INPUT 2 to the PC mode and INPUT 3 and INPUT 4 to the DVD mode.

To set the inputs to either the PC or DVD mode, do the following:

1. Turn off the POWER.
2. Press the PANEL LOCK button while turning the POWER on again.
3. Keep pressing and holding the PANEL LOCK button for a few seconds and then release it.

The LOCK button blinks.

If an input button illuminates, this indicates that that input is set to the DVD mode.

If an input button is not illuminated, this indicates that that input is set to the PC mode.

4. Toggle between the PC mode (input button not illuminated) and the DVD mode (input button illuminated) by pressing that input.
5. Press the PANEL LOCK button to exit this mode.

The following table summarizes the differences between the PC mode and the DVD mode:

PC Mode	DVD Mode
The input is connected to a computer	The input is connected to a multimedia application, such as a DVD, a set top box and so on
The EDID is available at all times (to prevent computer reset)	The EDID is available only when that input is connected to an output
The input EDID source is the default EDID or an acquired EDID (see <a href="#">Section 6.1</a> )	The input EDID source is acquired directly from the connected output

Note, that even if an input is set to the PC mode, you can connect a DVD player to that input and vice versa, a PC can be connected to an input that was set to the DVD mode.

## 6.2 Setting the EDID

You can acquire or change the EDID (see [Section 6.2.1](#)) or reset the machine to the default EDID (see [Section 6.2.2](#)).

If the connected output (for which EDID has already been acquired) is disconnected, the EDID button blinks and then ceases blinking when reconnecting the same output. When a new output is connected the EDID button blinks to indicate that new EDID information must be acquired.

### 6.2.1 Acquiring / Changing the EDID

You can work with the default EDID or acquire or change an EDID via the connected output. Use the EDID button to acquire the output EDID information.

To acquire or change the EDID of a new output display:

1. Connect the power supply.  
The EDID button blinks.
2. Connect the new output display device.  
The EDID button blinks.
3. Press the EDID button.  
The INPUT buttons blink in sequence until the EDID is acquired.

### 6.2.2 Resetting the Default EDID

To reset the default EDID, disconnect the output and repeat the steps in [Section 6.2.1](#).

## 6.3 Controlling via the REMOTE Terminal Block Connector

The contact closure remote control pins operate in a similar way to the INPUT SELECTOR button. Using the contact closure remote control you can select the DVI input. To do so, momentarily connect the required input pin (IN 1, IN2, IN 3 or IN 4) on the REMOTE terminal block connector to the GND (Ground) pin, as [Figure 4](#) illustrates.



**DO NOT** connect more than one PIN to the GND PIN at the same time.

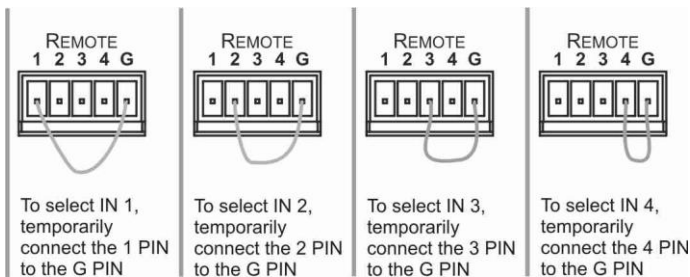


Figure 4: Connecting the Contact Closure Remote Control Pins

## 6.4 Controlling the VS-41HDCP via the ETHERNET Port

You can connect the **VS-41HDCP** via the Ethernet, using a crossover cable (see [Section 6.4.1](#)) for direct connection to the PC or a straight through cable (see [Section 6.4.2](#)) for connection via a network hub or network router.

### 6.4.1 Connecting the ETHERNET Port directly to a PC (Crossover Cable)

You can connect the Ethernet port of the **VS-41HDCP** to the Ethernet port on your PC, via a crossover cable with RJ-45 connectors.



This type of connection is recommended for identification of the factory default IP address of the **VS-41HDCP** during the initial configuration.

After connecting the Ethernet port, configure your PC as follows:

1. Right-click the My Network Places icon on your desktop.
2. Select **Properties**.
3. Right-click Local Area Connection Properties.
4. Select **Properties**.  
The Local Area Connection Properties window appears.
5. Select the Internet Protocol (TCP/IP) and click the **Properties** Button (see [Figure 5](#)).

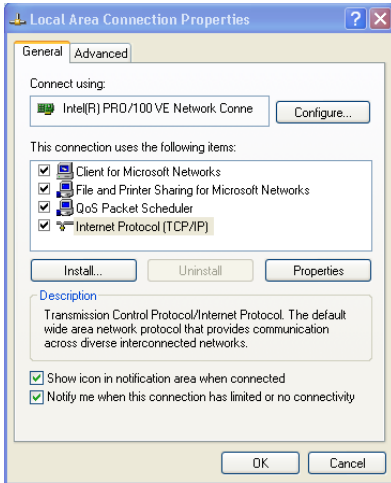


Figure 5: Local Area Connection Properties Window

6. Select Use the following IP Address, and fill in the details as shown in [Figure 6](#).
7. Click **OK**.

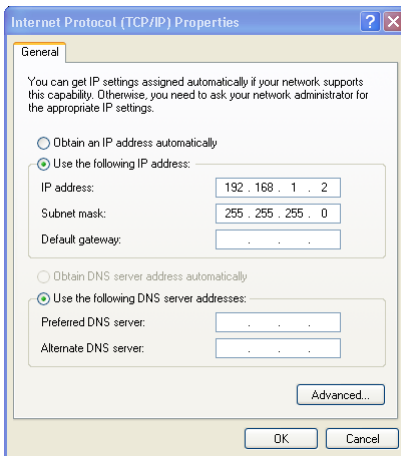


Figure 6: Internet Protocol (TCP/IP) Properties Window

## 6.4.2 Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)

You can connect the Ethernet port of the **VS-41HDCP** to the Ethernet port on a network hub or network router, via a straight-through cable with RJ-45 connectors.

## 6.4.3 Configuring the Ethernet Port

To configure the Ethernet port, download the K-UPLOAD Ethernet configuration software. Extract the file to a folder and create a shortcut on your desktop to the file.

Follow these steps to configure the port:

1. Double click the K-UPLOAD desktop icon.

The main screen appears:

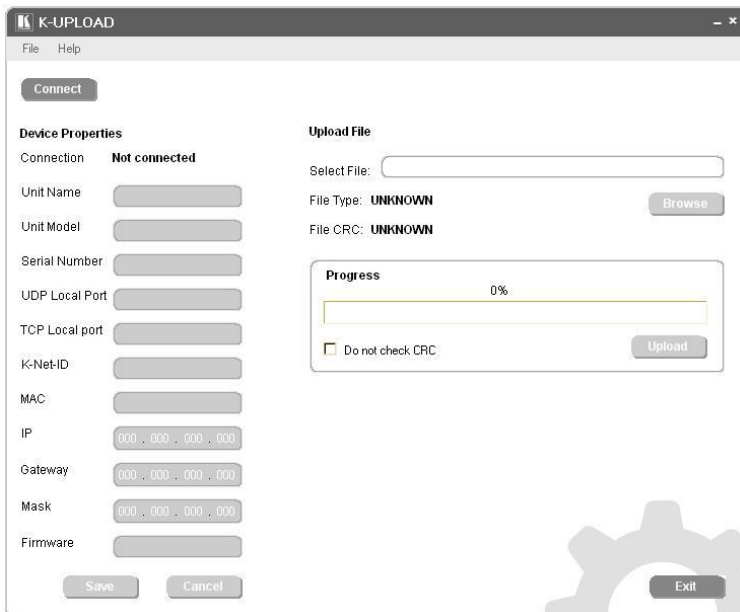


Figure 7: The Main Screen



2. Click the **Connect** button to connect to the machine to select the method to connect to the Ethernet port of the **VS-41HDCP**.

Select:

- Ethernet, if you know the IP address number or the machine name.  
The default name for the machine is KRAMER\_XXXX (the four digits are the last four digits of the machine's serial number)
- Serial, if you are connected via a serial port
- USB, if you are connected via the USB

3. Select the connection method and click **Connect** .

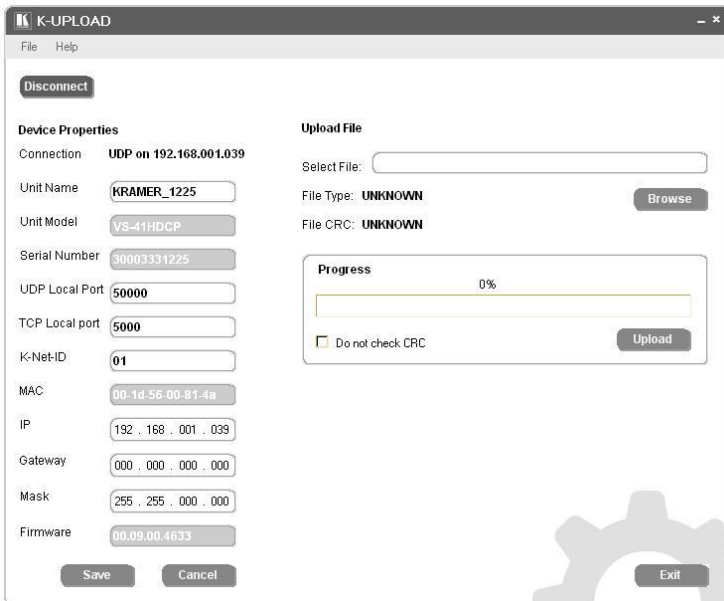


Figure 8: Device Properties Screen

4. If required, make changes and click Save. If not, click Exit.

## 6.5 Operating the VS-41HDCP Using a Web Browser

The embedded Web pages can be used to remotely operate the **VS-41HDCP** using a Web browser and an Ethernet connection.

Before attempting to connect:

- Perform the procedures in [Section 6.4](#).
- Ensure that the Java™ software is installed and functioning correctly on your computer. If not, download it from [www.java.com](http://www.java.com)
- Ensure that your browser is **supported**—Microsoft IE (V6.0 and higher), Google Chrome, Firefox (V3.0 and higher).

To check that Java is installed and running correctly, browse to <http://www.java.com/en/download/help/testvm.xml>

This page runs a test and displays a Java success (see [Figure 9](#)) or failure message.



Figure 9: Java Test Page Success Message

If you do not see the success message, follow the instructions on the page to:

- Load and enable Java
- Enable Javascript in your browser

## 6.6 Log On to the VS-41HDCP Web Pages

To log on to **VS-41HDCP** Web pages:

1. Open your Internet browser.
2. Type the unit's IP number in the Address bar of your browser.

http://192.168.1.39

The **Loading** page appears.

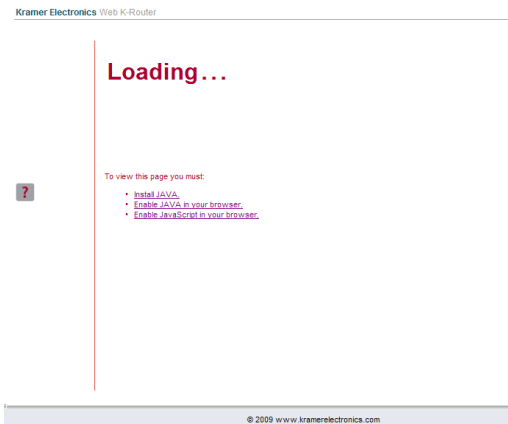


Figure 10: The Loading Page

The first time that you run the program, the Warning-Security screen appears:




Figure 11: First Time Security Warning

3. Click **Run**.

The main switching control Home page is displayed which shows a graphical interpretation of the front panel (see [Figure 12](#)).

The Web pages let you control the **VS-41HDCP** via the Ethernet. The menu appears on the left side of the screen. There are two remote operation Web pages:

- The PANEL main page (see [Section 6.6.1](#))
- The configurations page (see [Section 6.6.2](#))

A description of each Web page is displayed if you hover your mouse over the question mark  that appears on the left side of the screen.

### 6.6.1 The PANEL Main Page

The **VS-41HDCP** main page inputs to the output by clicking the audio and/or video signal indicators (purple and blue, respectively).

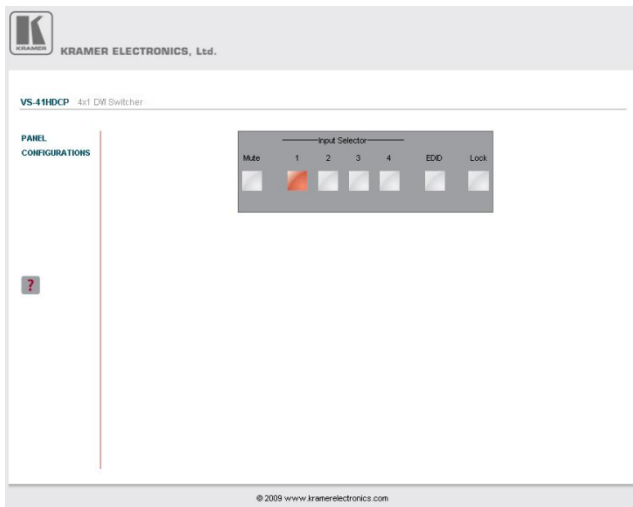


Figure 12: VS-41HDCP Switching Matrix Page

You can perform the following operations via this Web page:

- Select an input to switch to the output by clicking an input selector button
- Acquire the EDID (see [Section 6.1](#))
- Click the Lock button to lock or unlock the front panel
- Click the Mute button to mute the audio signal

## 6.6.2 The CONFIGURATIONS Page

The Configurations page lets you view some Ethernet settings and change others (see [Figure 13](#)). Fields with a white background are editable; fields with a blue background are read-only.

To change the configuration definitions:

1. Click **CONFIGURATIONS**.  
The Configurations Web page appears.
2. Modify the values as required.
3. Click the blue **Submit** button to apply changes or Cancel to abandon them.  
A confirmation window appears asking if you are sure you want to change the network settings.
4. Click **Yes**.  
A window appears informing you that the configuration has been successfully changed.
5. Click **OK**.
6. If the IP address has been changed, close your browser and reload the Web page using the new IP address.

**VS-41HDCP** 4x1 DVI Switcher

---

**PANEL**  
**CONFIGURATIONS**

Name:

Model:

Serial Number:

Firmware version:

MAC Address:

IP Address:

DHCP:

Gateway:

Subnet Mask:

Figure 13: Configurations Page

---

## 7 Firmware Upgrade

For instructions on upgrading the firmware, see the K-UPLOAD guide.

The latest version of firmware and installation instructions can be downloaded from the Kramer Web site at [www.kramerelectronics.com](http://www.kramerelectronics.com).

## 8 Technical Specifications

INPUTS:	4 DVI Connectors
OUTPUT:	1 DVI Connector
MAX. DATA RATE:	6.75Gbps ( 2.25Gbps per graphic channel)
COMPLIANCE WITH HDMI STANDARD:	Supports HDMI and HDCP
RESOLUTION:	Up to 1080p, UXGA
POWER SOURCE:	5V DC, 440mA
CONTROLS:	Front panel buttons, Infrared remote control transmitter, RS-232, contact closure remote control, Ethernet
DIMENSIONS:	22cm x 18cm x 4.5cm (8.6" x 7" x 1.8") W, D, H
WEIGHT:	1.3kg (2.9lbs) approx.
ACCESSORIES:	Power supply
OPTIONS:	Kramer DVI cables, RK-1 rack adapter
Specifications are subject to change without notice Go to our Web site at <a href="http://www.kramerelectronics.com">http://www.kramerelectronics.com</a> to access the list of resolutions	

### 8.1 Default Communication Parameters

<b>EDID</b>			
Passes EDID/HDCP signals between the display and the source			
<b>RS-232</b>			
<b>Protocol 2000</b>		<b>Protocol 3000 (Default)</b>	
Baud Rate:	9600	Baud Rate:	115,200
Data Bits:	8	Data Bits:	8
Stop Bits:	1	Stop Bits:	1
Parity:	None	Parity:	None
Command Format:	HEX	Command Format:	ASCII
Example (Output 1 to Input 1):	0x01, 0x81, 0x81, 0x81	Example (Output 1 to Input 1):	#AV 1>1<CR>
<b>Switching Protocol</b>			
<b>P2000 -&gt; P3000</b>		<b>P3000 -&gt; P2000</b>	
Command:	0x38, 0x80, 0x83, 0x81	Command:	#P2000<CR>
Front Panel:	Press and hold input 1 and input 3 simultaneously	Front Panel:	Press and hold input 1 and input 2 simultaneously
<b>Ethernet</b>			
<b>Default Settings</b>		<b>Reset Settings</b>	
IP Address:	192.168.1.39	Power cycle the unit while holding in the Factory Reset button, located on the rear panel of the unit.	
TCP Port #:	5000		
UDP Port #:	50000		

---

## 9 Default EDID

The factory default EDID is listed below.

### Monitor

Model name..... VS-41HDCP  
Manufacturer..... KRM  
Plug and Play ID..... KRM7300  
Serial number..... 505-707455010  
Manufacture date..... 2009, ISO week 10  
-----  
EDID revision..... 1.3  
Input signal type..... Digital  
Color bit depth..... Undefined  
Display type..... RGB color  
Screen size..... 520 x 320 mm (24.0 in)  
Power management..... Standby, Suspend, Active off/sleep  
Extension blocs..... 1 (CEA-EXT)  
-----  
DDC/CI..... Not supported

### Color characteristics

Default color space..... Non-sRGB  
Display gamma..... 2.20  
Red chromaticity..... Rx 0.674 - Ry 0.319  
Green chromaticity..... Gx 0.188 - Gy 0.706  
Blue chromaticity..... Bx 0.148 - By 0.064  
White point (default).... Wx 0.313 - Wy 0.329  
Additional descriptors... None

### Timing characteristics

Horizontal scan range.... 30-83kHz  
Vertical scan range..... 56-76Hz  
Video bandwidth..... 170MHz  
CVT standard..... Not supported  
GTF standard..... Not supported  
Additional descriptors... None  
Preferred timing..... Yes  
Native/preferred timing.. 1280x720p at 60Hz (16:10)  
Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync

### Standard timings supported

720 x 400p at 70Hz - IBM VGA  
640 x 480p at 60Hz - IBM VGA  
640 x 480p at 75Hz - VESA  
800 x 600p at 60Hz - VESA  
800 x 600p at 75Hz - VESA  
1024 x 768p at 60Hz - VESA  
1024 x 768p at 75Hz - VESA  
1280 x 1024p at 75Hz - VESA  
1280 x 1024p at 60Hz - VESA STD  
1600 x 1200p at 60Hz - VESA STD  
1152 x 864p at 75Hz - VESA STD



---

# 10 Kramer Protocol

You can download our user-friendly *Software for Calculating Hex Codes for Protocol 2000* from the technical support section on our Web site at <http://www.kramerelectronics.com>.

[Section 10.1](#) describes how to switch between Protocol 3000 and Protocol 2000. [Section 10.2](#) defines Protocol 3000 and [Section Error! Reference source not found.](#) defines Protocol 2000.

By default, the **VS-41HDCP** is set to Kramer's Protocol 3000, but it is also compatible with Protocol 2000.

## 10.1 Switching Protocols

You can switch protocols either via the front panel buttons (see [Section 10.1.1](#)) or by sending protocol commands (see [Section 10.1.2](#)).

### 10.1.1 Switching Protocols via the Front Panel Buttons

To switch from Protocol 3000 to Protocol 2000, press and hold the INPUT 1 and INPUT 2 buttons for a few seconds (not as part of the switching operation).

To switch from Protocol 2000 to Protocol 3000, press and hold the INPUT 1 and INPUT 3 buttons for a few seconds.



The Windows®-based Kramer control software operates with Protocol 2000. If the **VS-41HDCP** is set to Protocol 3000, use the front panel buttons to switch to Protocol 2000

### 10.1.2 Switching Protocols via Protocol Commands

To switch from Protocol 3000 to Protocol 2000, send the following command:  
`#P2000<CR>`

To switch from Protocol 2000 to Protocol 3000, send the following command:  
`0x38, 0x80, 0x83, 0x81`

## 10.2 Kramer Protocol 3000

This RS-232/RS-485 communication protocol lets you control the machine from any standard terminal software (for example, Windows® HyperTerminal) with default settings of 115200 baud data rate, no parity, 8 data bits, and 1 stop bit.

### 10.2.1 Protocol 3000 Syntax

Host message format:

Start	Address (optional)	Body	Delimiter
#	<i>Destination_id@</i>	message	<b>CR</b>

Simple command (commands string with only one command without addressing):

start	body	delimiter
#	Command SP Parameter_1,Parameter_2,...	<b>CR</b>

Commands string (formal syntax with commands concatenation and addressing):

# Address@ **Command\_1** Parameter1\_1,Parameter1\_2,... |**Command\_2**  
Parameter2\_1,Parameter2\_2,... |**Command\_3** Parameter3\_1,Parameter3\_2,...  
|...**CR**

Device message format:

Start	Address (optional)	Body	Delimiter
~	Sender_id@	message	CR LF

Device long response (**Echoing command**):

Start	Address (optional)	Body	Delimiter
~	Sender_id@	<b>command</b> SP [ <i>param1 ,param2 ...</i> ] result	CR LF

**CR** = Carriage return (ASCII 13 = 0x0D)

**LF** = Line feed (ASCII 10 = 0x0A)

**SP** = Space (ASCII 32 = 0x20)

## 10.2.2 Command Part Details

### Command:

Sequence of ASCII letters ('A'-'Z', 'a'-'z' and '-').

Command will separate from parameters with at least single space.

### Parameters:

Sequence of Alfa-Numeric ASCII chars ('0'-'9','A'-'Z','a'-'z' and some special chars for specific commands), parameters will be separated by commas.

### Message string:

Every command must to be entered as part of message string that begin with message starting char and end with message closing char, note that string can contain more then one command separated by pipe ("|") char.

### Message starting char:

'#' for host command/query.

'~' for machine response.

Device address (Optional, for Knet):

Knet Device ID follow by '@' char.

Query sign = '?', will follow after some commands to define query request.

Message closing char =

Host messages - Carriage Return (ASCII 13), will be referred to by **CR** in this document.

Machine messages - Carriage Return (ASCII 13) + Line-Feed (ASCII 10), will be referred to by **CRLF**.

Spaces between parameters or command parts will be ignored.

### Commands chain separator char:

When message string contains more than one command, commands will be separated by pipe ("|").

### Commands entering:

If terminal software used to connect over serial \ ethernet \ USB port, that possible to directly enter all commands characters (**CR** will be entered by Enter key, that key send also **LF**), but this char will be ignored by commands parser).

Sending commands from some controllers (like Crestron) require coding some characters in special form (like \X##). Anyway, there is a way to enter all ASCII characters, so it is possible to send all commands also from controller.

(Similar way can use for URL \ Telnet support that maybe will be added in future).

### Commands forms:

Some commands have short name syntax beside the full name to allow faster typing, response is always in long syntax.

### Command chaining:

It is possible to enter multiple commands in same string by '|' char (pipe).

In this case the message starting char and the message closing char will be entered just one time, in the string beginning and at the end.

All the commands in string will not execute until the closing char will be entered.

Separate response will be sent for every command in the chain.

### Input string max length:

64 characters.

### Backward support:

Design note: Transparent support for Protocol 2000 will be implemented by switch Protocol command from Protocol 3000 to Protocol 2000, in Protocol 2000 there is already such a command to switch Protocol to ASCII Protocol (#56 : H38 H80 H83 H81).

Instruction Codes for Protocol 3000			
Command Name	Short Cmd	Command Type	Permission
#		Common-mandatory	End User
Protocol handshaking			
Syntax			
# <code>[CR]</code>			
Response			
- <code>[nn]</code> @ <code>[SP]</code> OK <code>[CR LF]</code>			
Parameters			
Notes			
Use to validate protocol 3000 connection and to get machine number.			

Command Name	Short Cmd	Command Type	Permission
BUILD-DATE		Common-mandatory	End User
Read device build date			
Syntax			
#BUILD-DATE? <code>[CR]</code>			
Response			
- <code>[nn]</code> @BUILD-DATE <code>[SP]</code> date <code>[SP]</code> time <code>[CR LF]</code>			
Parameters			
<b>date</b> – Format: YYYY/MM/DD where YYYY = Year. MM = Month. DD = Day. <b>time</b> – Format: hh:mm:ss where hh = hours. mm = minutes. ss = seconds.			

Command Name	Short Cmd	Command Type	Permission
MODEL?		Common-mandatory	End User
Read device model			
Syntax			
#MODEL? <code>[CR]</code>			
Response			
- <code>[nn]</code> @MODEL <code>[SP]</code> model_name <code>[CR LF]</code>			
Parameters			
<b>model_name</b> – String of printable ASCII chars (up to 19 chars).			

Command Name	Short Cmd	Command Type	Permission
SN?		Common-mandatory	End User
Reset device serial number			
Syntax			
#SN? <code>[CR]</code>			
Response			
- <code>[nn]</code> @SN <code>[SP]</code> serial_number <code>[CR LF]</code>			
Parameters			
<b>serial_number</b> – 11 decimal digits. Assign by Kramer factory.			
Notes			

For new products with 14 digits serial we kept only the last 11.

Command Name	Short Cmd	Command Type	Permission
<b>VERSION?</b>		Common-mandatory	End User
Reset device serial number			
<b>Syntax</b>			
# <b>VERSION?</b> <code>[CR]</code>			
<b>Response</b>			
~ <code>[nn]</code> @ <b>VERSION</b> <code>[SP]</code> firmware_version <code>[CR LF]</code>			
<b>Parameters</b>			
<i>firmware_version</i> – Format: XX.XX.XX.XXXX where the digit groups are: Major.Minor.Build.Revision			

Command Name	Short Cmd	Command Type	Permission
<b>LOCK-FP</b>		Common	End User
Lock front panel			
<b>Syntax</b>			
Option 1: # <b>LOCK-FP</b> <code>[SP]</code> lock_mode <code>[CR]</code>			
Option 2: # <b>LOCK-FP</b> <code>[SP]</code> device_id, lock_mode <code>[CR]</code>			
<b>Response</b>			
Option 1: ~ <code>[nn]</code> @ <b>LOCK-FP</b> <code>[SP]</code> lock_mode <code>[SP]</code> OK <code>[CR LF]</code>			
Option 2: ~ <b>01</b> @ <b>LOCK-FP</b> <code>[SP]</code> device_id,lock_mode <code>[SP]</code> OK <code>[CR LF]</code>			
<b>Parameters</b>			
<i>lock_mode</i> – ‘0’ or ‘off’ to unlock front panel buttons. ‘1’ or ‘on’ to lock front panel buttons.			
<i>device_id</i> – For K-Net controllers, select the buttons panel to lock. Locking is allowed only from the master.			

Command Name	Short Cmd	Command Type	Permission
<b>LOCK-FP?</b>		Common	End User
Get lock state of front panel			
<b>Syntax</b>			
Option 1: # <b>LOCK-FP?</b> <code>[CR]</code>			
Option 2: # <b>LOCK-FP?</b> <code>[SP]</code> device_id <code>[CR]</code>			
<b>Response</b>			
Option 1: ~ <code>[nn]</code> @ <b>LOCK-FP</b> <code>[SP]</code> lock_mode <code>[CR LF]</code>			
Option 2: ~ <b>01</b> @ <b>LOCK-FP</b> <code>[SP]</code> device_id, lock_mode <code>[CR LF]</code>			
<b>Parameters</b>			
<i>lock_mode</i> – ‘OFF’ for unlocked front panel. ‘ON’ for locked front panel.			
<i>device_id</i> – For K-Net controllers, select the buttons panel to get lock state. State is available only from the master.			

Command Name	Short Cmd	Command Type	Permission
<b>NAME?</b>		Common (Ethernet)	End User
Get machine (DNS) name			
<b>Syntax</b>			
# <b>NAME?</b> <sub>CR</sub>			
<b>Response</b>			
- <sub>nn</sub> @ <b>NAME</b> <sub>SP</sub> machine_name <sub>CR LF</sub>			
<b>Parameters</b>			
<b>machine_name</b> – String of up to 14 alpha-numeric chars (can include hyphen, not in beginning or end).			
<b>Notes</b>			
The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).			

Command Name	Short Cmd	Command Type	Permission
<b>AV</b>		Switch	End User
Switch Audio and Video			
<b>Syntax</b>			
# <b>AV</b> <sub>SP</sub> <b>in&gt;out</b> , <b>in&gt;out</b> ,... <sub>CR</sub>			
<b>Response</b>			
- <sub>nn</sub> @ <b>AV</b> <sub>SP</sub> <b>in&gt;out</b> , <b>in&gt;out</b> ,... <sub>CR LF</sub>			
<b>Parameters</b>			
<b>in</b> - input number or '0' to disconnect output			
<b>&gt;</b> = Connection character between in and out parameters			
<b>out</b> = Output number or '*' for all outputs			

Command Name	Short Cmd	Command Type	Permission
<b>VID</b>	V	Switch	End User
Switch Video			
<b>Syntax</b>			
# <b>VID</b> <sub>SP</sub> <b>in&gt;out</b> , <b>in&gt;out</b> ,... <sub>CR</sub>			
<b>Response</b>			
- <sub>nn</sub> @ <b>VID</b> <sub>SP</sub> <b>in&gt;out</b> <sub>CR LF</sub> - <sub>nn</sub> @ <b>VID</b> <sub>SP</sub> <b>in&gt;out</b> <sub>CR LF</sub> ...			
<b>Parameters</b>			
<b>in</b> - input number or '0' to disconnect output			
<b>&gt;</b> = Connection character between in and out parameters			
<b>out</b> = Output number or '*' for all outputs			
<b>Notes</b>			
When AVF switching mode is active, this command also switches Audio and the unit replies with command -AV.			

Command Name	Short Cmd	Command Type	Permission
<b>VID?</b>	V?	Switch	End User
Get Video Switch Stat			
<b>Syntax</b>			
#VID? <input type="text" value="SP"/> <input type="text" value="Out"/> <input type="text" value="CR"/>			
#VID? <input type="text" value="SP"/> * <input type="text" value="CR"/>			
<b>Response</b>			
~ <input type="text" value="nn"/> @VID <input type="text" value="SP"/> in>out <input type="text" value="CR LF"/>			
~ <input type="text" value="nn"/> @VID <input type="text" value="SP"/> in>1 , in>2 , ... <input type="text" value="CR LF"/>			
<b>Parameters</b>			
<i>in</i> - input number or '0' to disconnect output			
'>' = Connection character between in and out parameters			
<i>out</i> = Output number or '*' for all outputs			

Command Name	Short Cmd	Command Type	Permission
<b>ETH-PORT</b>	ETHP	Ethernet	Administrator
Change protocol Ethernet port			
<b>Syntax</b>			
#ETH-PORT <input type="text" value="SP"/> protocol, port <input type="text" value="CR"/>			
<b>Response</b>			
~ <input type="text" value="nn"/> @ETH-PORT <input type="text" value="SP"/> protocol, port <input type="text" value="SP"/> OK <input type="text" value="CR LF"/>			
<b>Parameters</b>			
<i>protocol</i> = TCP or UDP (transport layer protocol)			
<i>port</i> = Ethernet port that accepts Protocol 3000 commands:			
1-65535 = User defined port			
0 - Reset port to factory default (50000 for UDP, 5000 for TCP)			
<b>Notes</b>			
Device may get new setting only after restart or closing current port.			
Some device port 50000 is the default also for TCP			
Resetting port by value 0 may not work in all devices			
For proper settings consult your network administrator			

Command Name	Short Cmd	Command Type	Permission
<b>ETH-PORT?</b>	ETHP?	Ethernet	End User
Get protocol Ethernet port			
<b>Syntax</b>			
#ETH-PORT? <input type="text" value="SP"/> protocol <input type="text" value="CR"/>			
<b>Response</b>			
~ <input type="text" value="nn"/> @ETH-PORT <input type="text" value="SP"/> protocol, port <input type="text" value="CR LF"/>			
<b>Parameters</b>			
<i>protocol</i> = TCP or UDP (transport layer protocol)			
<i>port</i> = Ethernet port that accepts Protocol 3000 commands.			
<b>Notes</b>			
Default Port is 50000 for UDP, 5000 for TCP			
Some device has port 50000 as default also for TCP			

Command Name	Short Cmd	Command Type	Permission
<b>NET-DHCP</b>	NTDH	Ethernet	Administrator
Set DHCP mode			
<b>Syntax</b>			
#NET-DHCP [SP] mode [CR]			
<b>Response</b>			
-nn@ NET-DHCP [SP] mode [SP] OK [CR LF]			
<b>Parameters</b>			
<b>mode</b> - '0' – Don't use DHCP (Use IP set by factory or IP set command). '1' – Try to use DHCP. If unavailable, use IP as above.			
<b>Notes</b>			
Connection of Ethernet to devices with DHCP may take more time in some networks. To allow connecting if randomly assigned IP by DHCP - Give the device DNS name (if available) by the command "NAME". It possible to get assigned IP also by direct connection to USB or RS-232 protocol port if available. For proper settings consult your network administrator			

Command Name	Short Cmd	Command Type	Permission
<b>NET-DHCP?</b>	NTDH?	Ethernet	End User
Get DHCP mode			
<b>Syntax</b>			
#NET-DHCP? [CR]			
<b>Response</b>			
-nn@ NET-DHCP [SP] mode [CR LF]			
<b>Parameters</b>			
<b>mode</b> - '0' – Don't use DHCP (Use IP set by factory or IP set command). '1' – Try to use DHCP. If unavailable, use IP as above.			
<b>Notes</b>			
Connection of Ethernet to devices with DHCP may take more time in some networks. To allow connecting if randomly assigned IP by DHCP - Give the device DNS name (if available) by the command "NAME". It possible to get assigned IP also by direct connection to USB or RS-232 protocol port if available.			

Command Name	Short Cmd	Command Type	Permission
<b>NET-GATE</b>	NTGT	Ethernet	Administrator
Set Gateway IP			
<b>Syntax</b>			
#NET-GATE [SP] ip_address [CR]			
<b>Response</b>			
-nn@ NET-GATE [SP] ip_address [SP] OK [CR LF]			
<b>Parameters</b>			
<b>ip_address</b> – format: xxx.xxx.xxx.xxx			
<b>Notes</b>			
Network gateway allows connecting to the device via another network and maybe over Internet. Be careful of security problems. For proper settings consult your network administrator			



Command Name	Short Cmd	Command Type	Permission
<b>NET-GATE?</b>	NTGT?	Ethernet	End User
Get Gateway IP			
<b>Syntax</b>			
#NET-GATE? <input type="checkbox"/> CR			
<b>Response</b>			
-nn@ NET-GATE <sub>SP</sub> ip_address <input type="checkbox"/> CR LF			
<b>Parameters</b>			
<i>ip_address</i> – format: xxx.xxx.xxx.xxx			
<b>Notes</b>			
Network gateway allowed connecting to device via another network and maybe over Internet. Be careful of security problems.			

Command Name	Short Cmd	Command Type	Permission
<b>NET-IP</b>	NTIP	Ethernet	Administrator
Set device IP address			
<b>Syntax</b>			
#NET-IP <sub>SP</sub> ip_address <input type="checkbox"/> CR			
<b>Response</b>			
-nn@ NET-IP <sub>SP</sub> ip_address <input type="checkbox"/> SP OK <input type="checkbox"/> CR LF			
<b>Parameters</b>			
<i>ip_address</i> – format: xxx.xxx.xxx.xxx			
<b>Notes</b>			
For proper settings consult your network administrator			

Command Name	Short Cmd	Command Type	Permission
<b>NET-IP?</b>	NTIP?	Ethernet	End User
Get device IP address			
<b>Syntax</b>			
#NET-IP? <input type="checkbox"/> CR			
<b>Response</b>			
-nn@ NET-IP <sub>SP</sub> ip_address <input type="checkbox"/> CR LF			
<b>Parameters</b>			
<i>ip_address</i> – format: xxx.xxx.xxx.xxx where x is decimal digit.			

Command Name	Short Cmd	Command Type	Permission
<b>NET-MAC?</b>	NTMC?	Ethernet	End User
Get MAC address			
<b>Syntax</b>			
#NET-MAC? <input type="checkbox"/> CR			
<b>Response</b>			
-nn@NET-MAC <sub>SP</sub> mac_address <input type="checkbox"/> CR LF			
<b>Parameters</b>			
<i>mac_address</i> – Unique MAC address. Format: XX-XX-XX-XX-XX-XX where X is hex digit.			

Command Name	Short Cmd	Command Type	Permission
<b>NET-MASK</b>	NTMSK	Ethernet	Administrator
Set device subnet mask			
<b>Syntax</b>			
#NET-MASK [SP] net_mask [CR]			
<b>Response</b>			
-nn@NET-MASK [SP] net_mask [SP] OK [CR LF]			
<b>Parameters</b>			
net_mask – format: xxx.xxx.xxx.xxx			
<b>Notes</b>			
Subnet mask limit Ethernet connection within local network. For proper settings consult your network administrator			

Command Name	Short Cmd	Command Type	Permission
<b>NET-MASK?</b>	NTMSK?	Ethernet	End User
Get device subnet mask			
<b>Syntax</b>			
#NET-MASK? [CR]			
<b>Response</b>			
-nn@NET-MASK [SP] net_mask [CR LF]			
<b>Parameters</b>			
net_mask – format: xxx.xxx.xxx.xxx			
<b>Notes</b>			
Subnet mask limit Ethernet connection within local network. For proper settings consult your network administrator			

Command Name	Short Cmd	Command Type	Permission
<b>P2000</b>		Common	End User
Switch to protocol 2000			
<b>Syntax</b>			
#P2000? [CR]			
<b>Response</b>			
-nn@P2000 [SP] OK [CR LF]			
<b>Parameters</b>			
<b>Notes</b>			
Available only for devices that support Protocol 2000 Protocol 2000 has a command to switch back to ASCII protocol (like Protocol 3000)			

This RS-232/RS-485 communication protocol uses four bytes of information as defined below.

For RS-232, a null-modem connection between the machine and controller is used. The default data rate is 9600 baud, with no parity, 8 data bits and 1 stop bit.

**Note:** Compatibility with Kramer's Protocol 2000 does not mean that a machine uses all of the commands below. Each machine uses a sub-set of Protocol 2000, according to its needs.

## 10.3 Syntax

MSB								LSB
1st Byte	DESTINATION		INSTRUCTION					
0	D	N5	N4	N3	N2	N1	N0	
7	6	5	4	3	2	1	0	
2nd Byte	INPUT							
1	I6	I5	I4	I3	I2	I1	I0	
7	6	5	4	3	2	1	0	
3rd Byte	OUTPUT							
1	O6	O5	O4	O3	O2	O1	O0	
7	6	5	4	3	2	1	0	
4th Byte	MACHINE NUMBER							
1	OVR	X	M4	M3	M2	M1	M0	
7	6	5	4	3	2	1	0	

1st Byte: Bit 7 – Defined as 0  
 D – DESTINATION:  
     0 – Sends information to the switchers (from the PC)  
     1 – Sends information to the PC (from the switcher)  
 N5...N0 – INSTRUCTION

The 6-bit INSTRUCTION defines the function performed by the switcher(s). If a function is performed using the machine's keyboard, these bits are set with the INSTRUCTION NO. performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value set in N5...N0).

2nd Byte: Bit 7 – Defined as 1  
 I6...I0 – INPUT

When switching (i.e. instruction codes 1 and 2), the 7-bit INPUT is set as the input number to be switched. If switching is done using the machine's front panel, these bits are set with the INPUT NUMBER switched. For other operations, these bits are defined according to the table.

3rd Byte: Bit 7 – Defined as 1  
 O6...O0 – OUTPUT

When switching (i.e. instruction codes 1 and 2), the 7-bit OUTPUT is set as the output number to be switched. If switching is done using the machine's front panel, these bits are set with the OUTPUT NUMBER switched. For other operations, these bits are defined according to the table.

4th Byte: Bit 7 – Defined as 1  
 Bit 5 – Don't care  
 OVR – Machine number override  
 M4...M0 – MACHINE NUMBER

This byte is used to address machines in a system by their machine numbers. When several machines are controlled from a single serial port, they are usually configured together and each machine has an individual machine number. If the OVR bit is set, then all machine numbers accept (implement) the command and the addressed machine replies. When a single machine is controlled over the serial port, always set M4...M0 to 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1.



All the values in the table are decimal, unless otherwise stated

Instruction Codes for Protocol 2000				
Instruction		Definition for Specific Instruction		Notes
#	Description	Input	Output	
0	RESET VIDEO	0	0	1
1	SWITCH INPUT	Set equal to video input which is to be switched (0 = disconnect)	Set equal to video output which is to be switched (0 = to all the outputs)	2
5	REQUEST STATUS OF A VIDEO OUTPUT	Set as SETUP #	Equal to output number whose status is required	4, 3
16	ERROR / BUSY	For invalid / valid input (i.e. OUTPUT byte = 4 or OUTPUT byte = 5), this byte is set as the input #	0 - error 1 - invalid instruction 2 - out of range 3 - machine busy 4 - invalid input 5 - valid input 6 - RX buffer overflow	9, 25
30	LOCK FRONT PANEL	0 - Panel unlocked 1 - Panel locked	0	2
31	REQUEST WHETHER PANEL IS LOCKED	0	0	16
56	CHANGE TO ASCII	0	Kramer protocol 3000	19
61	IDENTIFY MACHINE	1 - video machine name 2 - audio machine name 3 - video software version 4 - audio software version	0 - Request first 4 digits 1 - Request first suffix 2 - Request second suffix 3 - Request third suffix 10 - Request first prefix 11 - Request second prefix 12 - Request third prefix	13
62	DEFINE MACHINE	1 - number of inputs 2 - number of outputs 3 - number of setups	1 - for video 2 - for audio	14

NOTES on the above table:

**NOTE 1** - When the master switcher is reset, (e.g. when it is turned on), the reset code is sent to the PC. If this code is sent to the switchers, it will reset according to the present power-down settings.

**NOTE 2** - These are bidirectional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if the HEX code

01            85            88            83

was sent from the PC, then the switcher (machine 3) will switch input 5 to output 8. If the user switched input 1 to output 7 via the front panel keypad, then the switcher will send HEX codes:

41            81            87            83

to the PC.

When the PC sends one of the commands in this group to the switcher, then, if the instruction is valid, the switcher replies by sending to the PC the same four bytes that it was sent (except for the first byte, where the DESTINATION bit is set high).

**NOTE 3** - SETUP # 0 is the present setting. SETUP # 1 and higher are the settings saved in the switcher's memory, (i.e. those used for Store and Recall).

**NOTE 4** - The reply to a "REQUEST" instruction is as follows: the same instruction and INPUT codes as were sent are returned, and the OUTPUT is assigned the value of the requested parameter. The replies to instructions 10 and 11 are as per the definitions in instructions 7 and 8 respectively. For example, if the present status of machine number 5 is breakaway setting, then the reply to the HEX code

0B	80	80	85
----	----	----	----

would be HEX codes

4B	80	81	85
----	----	----	----

**NOTE 9** - An error code is returned to the PC if an invalid instruction code was sent to the switcher, or if a parameter associated with the instruction is out of range (e.g. trying to save to a setup greater than the highest one, or trying to switch an input or output greater than the highest one defined). This code is also returned to the PC if an RS-232 instruction is sent while the machine is being programmed via the front panel. Reception of this code by the switcher is not valid.

NOTE 10 – This code is reserved for internal use.

**NOTE 13** - This is a request to identify the switcher/s in the system. If the OUTPUT is set as 0, and the INPUT is set as 1, 2, 5 or 7, the machine will send its name. The reply is the decimal value of the INPUT and OUTPUT. For example, for a 2216, the reply to the request to send the audio machine name would be (HEX codes):

7D	96	90	81
----	----	----	----

(i.e. 128dec+ 22dec for 2nd byte, and 128dec+ 16dec for 3rd byte).

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number after it. For example, for version 3.5, the reply to the request to send the version number would be (HEX codes):

7D	83	85	81
----	----	----	----

(i.e. 128dec+ 3dec for 2nd byte, 128dec+ 5dec for 3rd byte).

If the OUTPUT is set as 1, then the ASCII coding of the lettering following the machine's name is sent. For example, for the VS-7588YC, the reply to the request to send the first suffix would be (HEX codes):

7D	D9	C3	81
----	----	----	----

(i.e. 128dec+ ASCII for "Y"; 128dec+ ASCII for "C").

**NOTE 14** - The number of inputs and outputs refers to the specific machine which is being addressed, not to the system. For example, if six 16X16 matrices are configured to make a 48X32 system (48 inputs, 32 outputs), the reply to the HEX code

3E	82	81	82
----	----	----	----

(ie. request the number of outputs)

would be HEX codes

7E	82	90	82
----	----	----	----

ie. 16 outputs

**NOTE 16** - The reply to the "REQUEST WHETHER PANEL IS LOCKED" is as in NOTE 4 above, except that here the OUTPUT is assigned with the value 0 if the panel is unlocked, or 1 if it is locked.

**NOTE 19** – After this instruction is sent, the unit will respond to the ASCII command set defined by the OUTPUT byte. The ASCII command to operate with the HEX command set must be sent in order to return to working with HEX codes.

**NOTE 25** – For units which detect the validity of the video inputs, Instruction 16 will be sent whenever the unit detects a change in the state of an input (in real-time).

For example, if input 3 is detected as invalid, the unit will send the HEX codes

10	83	84	81
----	----	----	----

If input 7 is detected as valid, then the unit will send HEX codes

10	87	85	81.
----	----	----	-----

## LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

### What is Covered

This limited warranty covers defects in materials and workmanship in this product.

### What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

### How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

### Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

### What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

### What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

### How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

### Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

### Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

### Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.



For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

**We welcome your questions, comments, and feedback.**

Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com)

E-mail: [info@kramerel.com](mailto:info@kramerel.com)

CE



**SAFETY WARNING**

Disconnect the unit from the power supply before opening and servicing

P/N: 2900-000522



Rev: 3

